

***ARMY TM 9-6115-641-10 AIR FORCE TO 35C2-3-456-11**


TECHNICAL MANUAL

OPERATOR'S MANUAL

FOR

**GENERATOR SET, SKID MOUNTED, TACTICAL QUIET,
5 kW, 60 Hz, MEP-802A
(NSN: 6115-01-274-7387) (EIC: VG2)**

**GENERATOR SET, SKID MOUNTED, TACTICAL QUIET,
5 kW, 400 Hz, MEP-812A
(NSN: 6115-01-274-7391) (EIC: VN2)**

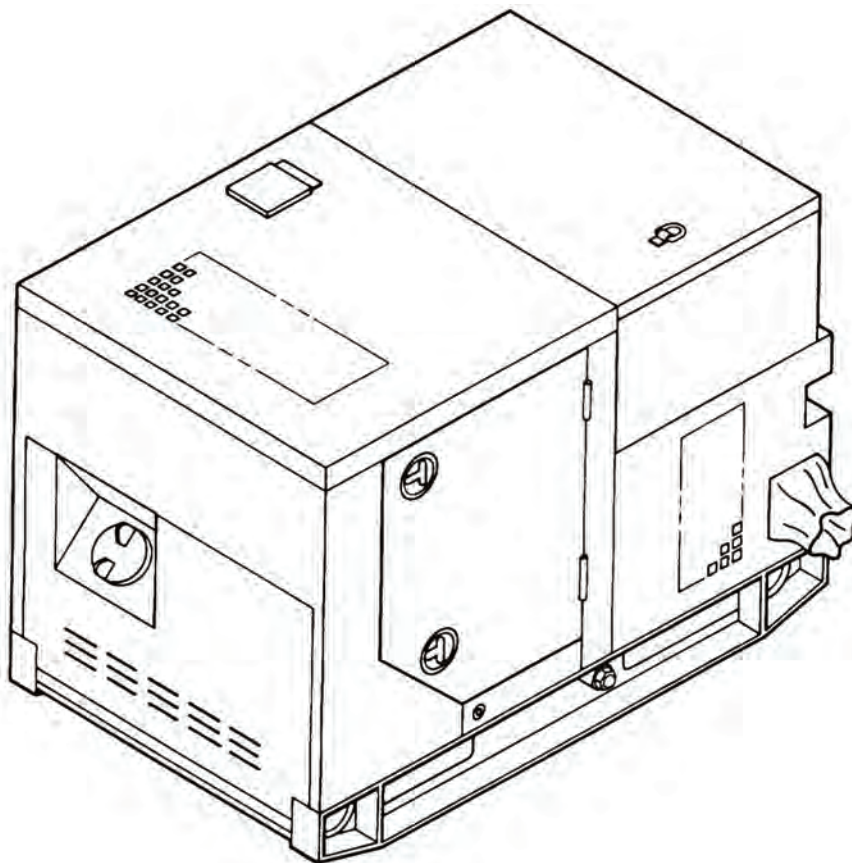

***SUPERSEDURE NOTICE.** TM 9-6115-641-10 supersedes TM 9-6115-641-10 dated 30 December 1992, including all changes.

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENTS OF THE ARMY
AND THE AIR FORCE
15 OCTOBER 2009**

WARNING SUMMARY

FIRST AID

For First Aid information, refer to FM 4-25.11.



5

5 SAFETY STEPS TO FOLLOW IF SOMEONE IS THE VICTIM OF ELECTRICAL SHOCK:

1

DO NOT TRY TO PULL OR GRAB THE INDIVIDUAL.

2

IF POSSIBLE, TURN OFF THE ELECTRICAL POWER.

3

IF YOU CANNOT TURN OFF THE ELECTRICAL POWER, PULL, PUSH OR LIFT THE PERSON TO SAFETY USING A DRY WOODEN POLE OR A DRY ROPE OR SOME OTHER INSULATING MATERIAL.

4

SEND FOR HELP AS SOON AS POSSIBLE.

5

AFTER THE INJURED PERSON IS FREE OF CONTACT WITH THE SOURCE OF ELECTRICAL SHOCK, MOVE THE PERSON A SHORT DISTANCE AWAY AND IMMEDIATELY START ARTIFICIAL RESUSCITATION.

This Warning Summary provides a summary of all critical safety information in this manual. The Summary contains all warnings used throughout this manual.

Prior to starting any procedure, the WARNINGS included in the text and at the beginning of each maintenance procedure must be reviewed and understood.

The WARNINGS located in the generator set technical manuals and the trailer technical manuals must also be considered.

This manual describes physical and chemical processes that may require the use of chemicals, solvents, paints, or other commercially available material. Users of the manual should obtain the material safety data sheets (Occupational Safety and Health Act (OSHA) Form 20 or equivalent) from the manufacturers or suppliers of materials to be used. Users must be completely familiar with manufacturer/supplier information and adhere to their procedures, recommendations, warnings, and cautions for safe use, handling, storage, and disposal of these materials.

WARNING SUMMARY - Continued

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when this generator set is in operation. SHUT DOWN generator set and make sure it is free of any power source before attempting any repair or maintenance on the set, or when connecting or disconnecting load cables. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Shut down generator set before performing inspection of wiring. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. Never attempt to start the generator set unless it is properly grounded. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Ensure nuts on ground terminals are properly secured creating a good ground. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. DO NOT touch live voltage connections. Never attempt to connect or disconnect load cables or paralleling cables while the generator set is running. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when this generator set is in operation. Ensure engine control and DEAD CRANK switches are set to OFF, negative battery cable is disconnected, and unit is completely shut down and free of any power source before attempting any troubleshooting or maintenance on unit. Failure to comply may cause injury or death to personnel.

WARNING

Dangerous voltage exists on live circuits. Always observe precautions and never work alone. Failure to comply with this warning can cause injury or death to personnel.

WARNING SUMMARY - Continued

WARNING

DC voltages are present at generator set electrical components even with generator set shutdown. Avoid grounding yourself when touching electrical components. Failure to follow this warning can result in personal injury.

WARNING

Power is available when the main contactor is open. Avoid accidental contact. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Slave receptacle (NATO connector) is electrically live at all times and is unfused. The Battery Disconnect Switch does not remove power from the slave receptacle. NATO slave receptacle has 24 VDC even when Battery Disconnect Switch is set to OFF. This circuit is only dead when the batteries are fully disconnected. Disconnect the batteries before performing maintenance on the slave receptacle. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Diesel fuel is flammable and toxic to eyes, skin, and respiratory tract. Skin and eye protection are required when working in contact with diesel fuel. Avoid repeated or prolonged contact. Provide adequate ventilation. Operators are to wash exposed skin and change chemical soaked clothing promptly if exposed to fuel. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Fuels used in the generator set are flammable. Do not smoke or use open flames when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

WARNING

Fuels used in the generator set are flammable. When filling the fuel tank, maintain metal-to-metal contact between filler nozzle and fuel tank opening to eliminate static electrical discharge. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

WARNING

Cooling system operates at high temperature and pressure. Contact with high pressure steam and/or liquids can result in burns and scalding. Shut down generator set, and allow system to cool before performing checks, services and maintenance, or wear gloves and additional protective clothing and goggles as required. Failure to comply with this warning can cause injury or death to personnel.

WARNING

In extreme cold weather, skin can stick to metal. Avoid contacting metal items with bare skin in extreme cold weather. Failure to comply with this warning can cause injury to personnel.

WARNING SUMMARY - Continued

WARNING

Operating the generator set exposes personnel to a high noise level. Hearing protection must be worn when operating or working near the generator set when the generator set is running. Failure to comply with this warning can cause hearing damage to personnel.

WARNING

Exhaust discharge contains deadly gases including carbon monoxide. DO NOT operate generator set in enclosed areas unless exhaust discharge is properly vented outside. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Hot exhaust gases can ignite flammable materials. Allow room for safe discharge of hot gases and sparks. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Top housing panels and exhaust system can get very hot. Shut down generator set, and allow system to cool before performing checks, services and maintenance. Failure to comply with this warning can cause severe burns and injury to personnel.

WARNING

Top housing panels and exhaust system can get very hot. When performing DURING PMCS, wear gloves and additional protective clothing as required. Failure to comply with this warning can cause severe burns and injury to personnel.

WARNING

Exercise extreme caution when performing DURING PMCS checks inside engine compartment. Avoid contact with moving or hot engine parts. Failure to comply with this warning can cause injury or death to personnel.

WARNING

When running, winterization heater has hot metal surfaces that will burn flesh on contact. Shut down generator set and allow heater to cool before performing maintenance. Wear gloves and additional protective clothing as required. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Batteries give off a flammable gas. Do not smoke or use open flame when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

WARNING

Battery acid can cause burns to unprotected skin. Wear safety goggles and chemical gloves and avoid acid splash while working on batteries. Failure to comply with this warning can cause injury to personnel.

WARNING SUMMARY - Continued

WARNING

Solvent used to clean parts is potentially dangerous to personnel and property. Clean parts in a well-ventilated area. Avoid inhalation of solvent fumes. Wear goggles and rubber gloves to protect eyes and skin. Wash exposed skin thoroughly. Do not smoke or use near open flame or excessive heat. Failure to comply with this warning can cause injury to personnel, and damage to the equipment.

WARNING

Do not remove the Bonding Jumper between GND and N unless the Weapon System requires an ungrounded system. Failure to comply can cause death or serious injury to personnel. Refer to applicable Weapon System TM for specific guidance on power and connection requirements.

LIST OF EFFECTIVE PAGES / WORK PACKAGES

NOTE: This manual supersedes TM 9-6115-641-10 dated 30 December 1992, including all changes. Zero in the "Change No." column indicates an original page or work package.

Date of issue for the original manual is:

Original 15 OCTOBER 2009

TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 24 AND TOTAL NUMBER OF WORK PACKAGES IS 16, CONSISTING OF THE FOLLOWING:

| Page / WP No. | Change No. | Page / WP No. | Change No. |
|-------------------------|------------|---------------|------------|
| Front Cover | 0 | | |
| Blank | 0 | | |
| Warning summary (6 pgs) | 0 | | |
| i - iii | 0 | | |
| Chp 1 title page | 0 | | |
| Index | 0 | | |
| WP 0001 (4 pgs) | 0 | | |
| WP 0002 (10 pgs) | 0 | | |
| WP 0003 (8 pgs) | 0 | | |
| Chp 2 title page | 0 | | |
| Index | 0 | | |
| WP 0004 (6 pgs) | 0 | | |
| WP 0005 (16 pgs) | 0 | | |
| WP 0006 (4 pgs) | 0 | | |
| WP 0007 (4 pgs) | 0 | | |
| Chp 3 title page | 0 | | |
| Index | 0 | | |
| WP 0008 (2 pgs) | 0 | | |
| WP 0009 (10 pgs) | 0 | | |
| Chp 4 title page | 0 | | |
| Index | 0 | | |
| WP 0010 (8 pgs) | 0 | | |
| WP 0011 (10 pgs) | 0 | | |
| WP 0012 (10 pgs) | 0 | | |
| Chp 5 title page | 0 | | |
| Index | 0 | | |
| WP 0013 (2 pgs) | 0 | | |
| WP 0014 (6 pgs) | 0 | | |
| WP 0015 (2 pgs) | 0 | | |
| WP 0016 (2 pgs) | 0 | | |
| INDEX-1 - INDEX-6 | 0 | | |
| Inside back cover | 0 | | |
| Back cover | 0 | | |

***ARMY TM 9-6115-641-10
AIR FORCE TO 35C2-3-456-11**

**HEADQUARTERS,
DEPARTMENTS OF THE ARMY AND THE AIR FORCE
WASHINGTON, D.C., 15 OCTOBER 2009**

TECHNICAL MANUAL

OPERATOR'S MANUAL

**GENERATOR SET, SKID MOUNTED, TACTICAL QUIET,
5 kW, 60 Hz, MEP-802A
(NSN: 6115-01-274-7387) (EIC: VG2)**

**GENERATOR SET, SKID MOUNTED, TACTICAL QUIET,
5 kW, 400 Hz, MEP-812A
(NSN: 6115-01-274-7391) (EIC: VN2)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Reports, as applicable by the requiring Service, should be submitted as follows:

- a. (A) Army - Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) located in the back of this manual, directly to: Commander, U.S. Army CECOM Life Cycle Management Command (LCMC) Fort Monmouth, ATTN: AMSEL-LC-LEO-E-CM, Fort Monmouth, NJ 07703-5006. You may also send in your recommended changes via electronic mail or by fax. Our fax number is 732-532-1556, DSN 992-1556. Our e-mail address is MONM-AMSELLEOPUBSCHG@conus.army.mil. Our online web address for entering and submitting DA Form 2028 is <http://edm.monmouth.army.mil/pubs/2028.html>.
- b. (F) Air Force - By Air Force AFTO Form 22 (Technical Manual (TM) Change Recommendation and Reply) in accordance with TO 00-5-1.

A reply will be furnished to you.

***SUPERSEDURE NOTICE.** TM 9-6115-641-10 supersedes TM 9-6115-641-10 dated 30 December 1992, including all changes.

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

| | Page No. WP Sequence No. |
|---|---|
| HOW TO USE THIS MANUAL | |
| Chapter 1 - Operator General Information, Equipment Description and Theory of Operation | |
| General Information | WP 0001 |
| Table 1. Model Numbers and Equipment Names..... | 0001-1 |
| Figure 1. Generator Set, Skid Mounted, 5 kW, Tactical Quiet..... | 0001-2 |
| Equipment Description and Data | WP 0002 |
| Figure 1. Generator Set Components. | 0002-4 |
| Figure 2. Location of Major Winterization Kit Components. | 0002-6 |
| Table 1. Leading Particulars, Generator Set. | 0002-7 |
| Table 2. Winterization Kit Heater Operating Data. | 0002-9 |
| Theory of Operation | WP 0003 |
| Figure 1. Engine Starting System..... | 0003-2 |
| Figure 2. Fuel System. | 0003-3 |
| Figure 3. Engine Cooling System. | 0003-4 |
| Figure 4. Engine Lubrication System..... | 0003-5 |
| Figure 5. Air Intake and Exhaust System. | 0003-6 |
| Figure 6. Output Supply System..... | 0003-7 |
| Chapter 2 - Operator Instructions | |
| Description and Use of Operator Controls and Indicators | WP 0004 |
| Figure 1. Operator's Controls and Indicators..... | 0004-2 |
| Table 1. Control Panel Controls and Indicators..... | 0004-2 |
| Table 2. Load Terminal, AC Voltage Reconnection Switch and VM-AM Transfer Switch Selection..... | 0004-4 |
| Figure 2. Malfunction Indicator Panel. | 0004-4 |
| Table 3. Malfunction Indicator Panel. | 0004-5 |
| Figure 3. Frequency Adjust Control..... | 0004-5 |
| Table 4. Frequency Adjust Control. | 0004-5 |
| Operation Under Usual Conditions | WP 0005 |
| Figure 1. Grounding Connections..... | 0005-3 |
| Table 1. Load Terminal, AC Voltage Reconnection Switch and VM-AM Transfer Switch Selection..... | 0005-3 |
| Figure 2. Installation of Load Cables. | 0005-4 |
| Figure 3. Operating Instructions Plates (Front and Right Side)..... | 0005-9 |
| Figure 4. Operating Instructions Plates (Rear and Left Side)..... | 0005-10 |
| Figure 5. Operating Instructions Plate - Sample..... | 0005-11 |
| Figure 6. Generator Set Identification Plates (DAAK01-88-D-0080). | 0005-11 |
| Figure 7. Generator Set Identification Plates (DAAK01-94-D-0036). | 0005-11 |
| Figure 8. Generator Set Identification Plates (DAAK01-97-D-0034). | 0005-12 |
| Figure 9. Set Rating Identification Plates - Sample. | 0005-12 |
| Figure 10. Item Unique Identification (IUID) Plates - Sample..... | 0005-12 |
| Figure 11. Voltage Connection Caution Plate. | 0005-13 |
| Figure 12. Grounding Stud Plate. | 0005-13 |
| Figure 13. NATO Slave Receptacle Plate. | 0005-13 |

TABLE OF CONTENTS - Continued

| | Page No. |
|--|-------------------------------|
| | <u>WP Sequence No.</u> |
| Figure 14. Diagnostics Plate..... | 0005-13 |
| Figure 15. Convenience Receptacle Plate. | 0005-14 |
| Figure 16. External Fuel Plate Supply. | 0005-14 |
| Figure 17. Battery Connection Instruction Plate. | 0005-14 |
| Figure 18. Generator Identification Plate..... | 0005-14 |
| Figure 19. Frequency Adjust Plate. | 0005-15 |
| Figure 20. Lifting and Tiedown Diagram Plate. | 0005-15 |
| Figure 21. Fuel System Diagram Plate..... | 0005-16 |
| Operation Under Unusual Conditions | WP 0006 |
| Emergency..... | WP 0007 |
| Chapter 3 - Operator Troubleshooting Procedures | |
| Troubleshooting Index | WP 0008 |
| Troubleshooting Procedures..... | WP 0009 |
| Figure 1. Heater Function Codes Plate. | 0009-10 |
| Chapter 4 - Operator Maintenance Instructions | |
| PMCS Introduction..... | WP 0010 |
| Figure 1. Generator Set Components. | 0010-6 |
| Figure 2. Location of Major Winterization Kit Components. | 0010-7 |
| Figure 3. Operator PMCS Routing Diagram for Winterization Kit..... | 0010-8 |
| PMCS, Including Lubrication Instructions | WP 0011 |
| Table 1. Preventive Maintenance Checks and Service. | 0011-1 |
| Generator Set Servicing and Inspection | WP 0012 |
| Figure 1. Air Cleaner Element Replacement. | 0012-4 |
| Table 1. Coolant. | 0012-6 |
| Table 2. Diesel Fuel..... | 0012-7 |
| Figure 2. Draining Fuel Filter/Water Separator..... | 0012-9 |
| Chapter 5 - Supporting Information | |
| References..... | WP 0013 |
| Components of End Item (COEI) and Basic Issue Items (BII) Lists..... | WP 0014 |
| Table 1. Components of End Item List. | 0014-1 |
| Figure 1. Technical Manual TM 9-6115-641-10. | 0014-3 |
| Figure 2. Lubrication Order LO 9-6115-641-12. | 0014-4 |
| Table 2. Basic Issue Items List..... | 0014-4 |
| Additional Authorization List (AAL) | WP 0015 |
| Table 1. Additional Authorization List. | 0015-1 |
| Expendable and Durable Items List | WP 0016 |
| Table 1. Expendable and Durable Items List..... | 0016-1 |
| Index | INDEX-1 |

HOW TO USE THIS MANUAL

Manual Overview

This manual is designed to help you operate and maintain the MEP-802A and MEP-812A Tactical Quiet Generator (TQG) Sets. Warning pages are located in the front of this manual. Read all warnings before operating or doing any maintenance on the equipment.

The major elements of this manual are chapters and work packages. Each chapter has one or more work packages. The Table of Contents, beginning on page ii, is provided for quick reference to the subjects covered by each chapter and work package. Each chapter also has a chapter index. The chapter index lists the work packages in the chapter.

An alphabetical index is at the end of the manual. That index is for use in locating specific items of information.

Chapters

This manual has chapters and each chapter is divided into work packages. Each work package is divided into descriptive paragraphs. The paragraphs have specific information about the generator sets and their major components.

Work Package Numbering

This manual is prepared in functionally divided individual task packages (work packages (WP)) in the logical order of work sequence. Work packages may contain a scope of tasks, initial setups, descriptive information, operating tasks and maintenance tasks. These data types are further divided into paragraphs, procedural steps, tables, listings, warnings, cautions and notes, and supporting illustrations.

The WPs are standalone general information, operating, maintenance, and supporting information units containing all information required for directing task performance.

Work Packages are numbered using four (4) digits starting with 0001 (that is, work package 1). Inserted work packages are indicated by a decimal point and a number. For example, 0001.1 indicates the first work package inserted between work package 0001 and work package 0002. This permits adding one or more WPs between any two existing WPs during any revision cycle. Page numbers within each work package are indicated by -1, -2, -3 (that is, 0001-1 indicates work package 1, page 1).

WARNING

Warning highlights an essential operating or maintenance procedure, practice, condition, statement, etc, which, if not strictly observed, could result in injury to, or death of, personnel or long term health hazards.

CAUTION

Highlights an essential operating or maintenance procedure, practice, condition, statement, etc., which, if not strictly observed, could result in damage to, or destruction of, equipment or loss of mission effectiveness.

NOTE

Highlights an essential operating or maintenance procedure, condition, or statement.

Chapter 1 - Operator General Information, Equipment Description, and Theory of Operation

Chapter 1 provides an introduction to the generator sets. It is divided into three WPs, as follows:

WP 0001 - General Information

This WP provides general information about this manual and the related forms and records. Instructions are provided for making equipment improvement recommendations. Coverage includes a reference to the TM that contains instructions on destruction of materiel to prevent enemy use.

WP 0002 - Equipment Description and Data

This WP describes generator set capabilities, characteristics, and features. It provides basic equipment data and shows the locations of major generator set components. Descriptions of the major components are also provided.

WP 0003 - Theory of Operation

This WP provides functional descriptions of the generator sets.

Chapter 2 - Operator Instructions

Chapter 2 provides instructions for operating the generator sets. The chapter is divided into four WPs, as follows:

WP 0004 - Description and Use of Operator's Controls and Indicators

This WP describes and illustrates the controls and indicators to ensure proper operation of the generator sets.

WP 0005 - Operation Under Usual Conditions

This WP contains instructions for preparing the generator sets for use and operating them under normal conditions. Coverage includes instructions for connecting load cables to the generator sets. This section also covers preparation of the generator sets for movement to a new worksite.

WP 0006 - Operation Under Unusual Conditions

This WP provides detailed instructions for operation of the generator sets under unusual conditions.

WP 0007 - Emergency

This WP provides emergency information.

Chapter 3 - Operator Troubleshooting Procedures

Chapter 3 includes a troubleshooting index, troubleshooting procedures, and corrective actions that are to be performed by the operator.

WP 0008 - Troubleshooting Index

This WP provides an index of malfunctions and symptoms for troubleshooting procedures.

WP 0009 - Troubleshooting Procedures

This WP provides troubleshooting procedures and corrective actions that are to be performed by the operator.

Chapter 4 - Operator Maintenance Instructions

Chapter 4 covers maintenance of the generator sets to be performed by the operator. Its purpose is to provide you with the information that you need to keep the generator sets in good operating condition.

WP 0010 and WP 0011 - Preventive Maintenance Checks and Services (PMCS), including Lubrication Instructions

This section contains detailed instructions that the operator must perform BEFORE, DURING, and AFTER preventive maintenance checks and services. Coverage includes all operator PMCS for the generator sets.

WP 0012 - Generator Set Servicing and Inspection

This WP refers the operator to the preventive maintenance checks and services required by WP 0011.

Chapter 5 - Supporting Information

Chapter 5 provides supporting information.

WP 0013 - References

This WP lists all publications referenced in the various chapters of the technical manual. The listing includes the title and document number of each publication.

WP 0014 - Components of End Item (COEI) and Basic Issue Items (BII) Lists Work Packages

This WP lists the items usually packaged separately but needed for installation and operation of the generator sets.

WP 0015 - Additional Authorization List (AAL)

This WP lists additional items you are authorized for support of the generator sets.

WP 0016 - Expendable and Durable Items List

This WP lists expendable/durable supplies and materials needed to operate and maintain the generator sets.

Alphabetical Index

An alphabetical index at the back of this technical manual provides a listing of subjects covered, cross-referenced to the applicable page number.

HOW TO FIX A GENERATOR SET MALFUNCTION

Determining the Cause

Finding the cause of a malfunction, troubleshooting, is the first step in fixing the generator set and returning it to operation. Follow these simple steps to determine the root of the problem:

1. Turn to the Table of Contents in this manual.
2. Locate "Troubleshooting Procedures" under Chapter 3. Turn to the page indicated.
3. Follow the instructions in the references listed in Chapter 3.

Preparing for a Task

Be sure that you understand the entire maintenance procedure before beginning any maintenance task. Make sure that all parts, materials, and tools are handy. Read all steps before beginning. Prepare to do the task as follows:

1. Carefully read the entire task before starting. It tells you what you will need and what you have to know to start the task. **DO NOT START THE TASK UNTIL:**
 - a. You know what is needed
 - b. You have everything you need
 - c. You understand what to do
2. If parts are listed, they can be drawn from technical supply. Before you start the task, check to make sure you

can get the needed parts.

3. If expendable/durable supplies or materials are needed, get them before starting the task. Refer to WP 0016 for the correct nomenclature and NSN.

How to Do the Task

Before starting, read the entire task. Be sure that you understand the entire procedure before you begin the task. As you read, remember the following:

1. PAY ATTENTION TO WARNINGS, CAUTIONS, AND NOTES.
2. Use the List of Abbreviations and Acronyms in WP 0001 if you do not understand the special abbreviations and acronyms used in this manual.
3. The following are standard maintenance practices. Instructions about these practices are usually not included in task steps. When standard maintenance practices do not apply, the task steps will tell you.
 - a. Tag electrical wiring before disconnecting it.
 - b. Discard used preformed packing, retainers, gaskets, cotter pins, lockwashers, and similar items. Install new parts to replace the discarded.

CHAPTER 1

**OPERATOR GENERAL INFORMATION, EQUIPMENT
DESCRIPTION AND THEORY OF OPERATION**

FOR

**5 kW GENERATOR SET (60 Hz AND 400 Hz),
SKID MOUNTED, TACTICAL QUIET**

CHAPTER 1

OPERATOR GENERAL INFORMATION, EQUIPMENT DESCRIPTION AND THEORY OF OPERATION

WORK PACKAGE INDEX

| <u>Title</u> | <u>WP Sequence No.</u> |
|--------------------------------------|------------------------|
| GENERAL INFORMATION | 0001 |
| EQUIPMENT DESCRIPTION AND DATA | 0002 |
| THEORY OF OPERATION | 0003 |

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****GENERAL INFORMATION****SCOPE****Type of Manual**

This manual contains operation and operator maintenance instructions for the Tactical Quiet (TQ), 5 kW 60 and 400 Hz Generator Sets (Figure 1), herein referred to as generator set. Included are descriptions of major components and their functions in relation to other components. See Table 1 below for a list of model numbers and equipment names for the generator sets.

Table 1. Model Numbers and Equipment Names.

| Model Number | Equipment Name |
|---------------------|--|
| MEP-802A | Generator Set, Skid Mounted, Diesel Powered, Tactical Quiet, 5 kW 60 Hz |
| MEP-812A | Generator Set, Skid Mounted, Diesel Powered, Tactical Quiet, 5 kW 400 Hz |

Purpose of Equipment

The generator set provides tactical quiet AC power. The generator set is easily transported, operated, and maintained.

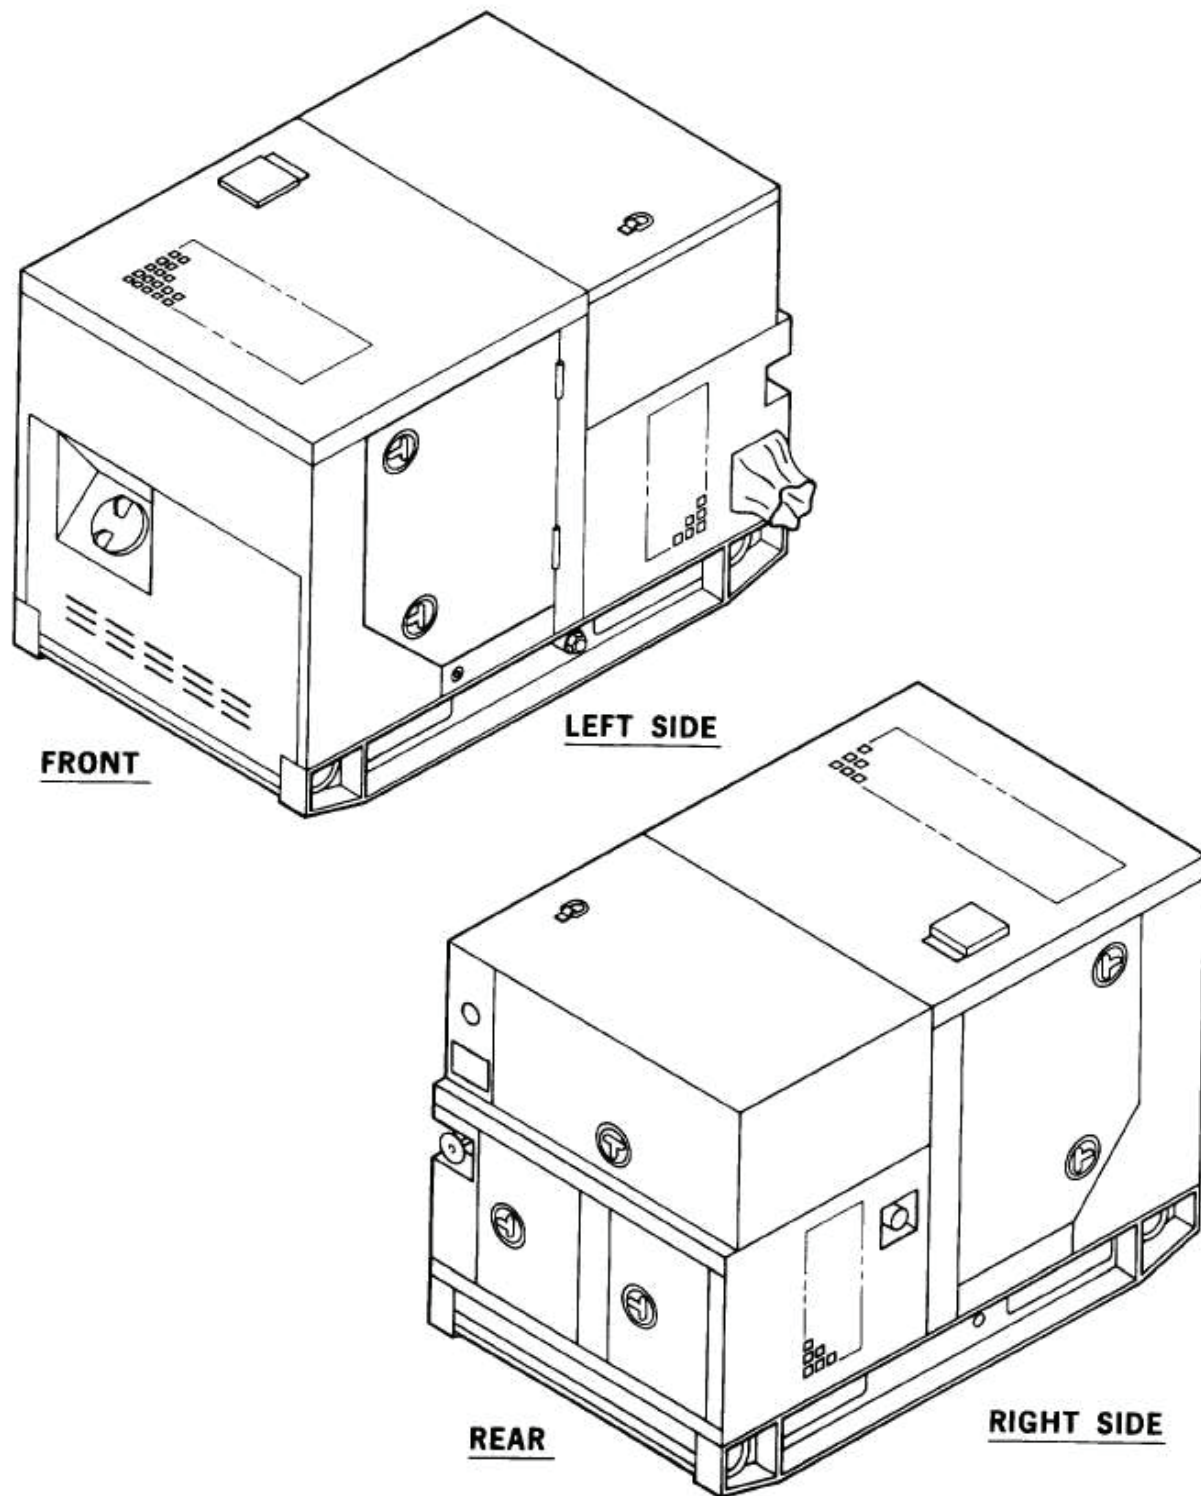


Figure 1. Generator Set, Skid Mounted, 5 kW, Tactical Quiet.

MAINTENANCE FORMS, RECORDS, AND REPORTS

(A) Department of the Army forms and procedures used for equipment maintenance will be those prescribed by (as applicable) DA PAM 750-8, The Army Maintenance Management System (TAMMS) Users Manual; DA PAM 738-751, Functional Users Manual for the Army Maintenance Management Systems - Aviation (TAMMS-A); or AR 700-138, Army Logistics Readiness and Sustainability.

(F) Maintenance forms and records used by Air Force personnel are prescribed in AFI 21-101 and the applicable TO 00-20 Series Technical Orders.

REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR)

(A) If your generator set needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. If you have Internet access, the easiest and fastest way to report problems or suggestions is to go to <https://aeps.ria.army.mil/aepspublic.cfm> (scroll down and choose the "Submit Quality Deficiency Report" bar). The Internet form lets you choose to submit an Equipment Improvement Recommendation (EIR), a Product Quality Deficiency Report (PQDR) or a Warranty Claim Action (WCA). You may also submit your information using an SF 368 (Product Quality Deficiency Report). You can send your SF 368 via e-mail, regular mail, or facsimile using the addresses/facsimile numbers specified in DA PAM 750-8, The Army Maintenance Management System (TAMMS) Users Manual. We will send you a reply.

(F) USAF Deficiency Reporting and Investigating System, TO 00-35D-54, Appendix A procedures will be used for electronic submission. Submit mailed SF 368 forms to:

Robins AFB WRALC/LGMTC 375 Perry Street Robins AFB, GA 31098-1865

CORROSION PREVENTION AND CONTROL (CPC)

CPC of Army material is of continuing concern. It is important that any corrosion problems with the equipment be reported so that the problem can be corrected and improvements can be made to prevent the problem in future items. Although corrosion is typically associated with rusting of metals, it can also include deterioration of other materials, such as rubber and plastic. Unusual cracking, softening, swelling, or breaking of these materials may be a corrosion problem. If a corrosion problem is identified, it shall be reported using Standard Form 368, Product Quality Deficiency Report. Use of key words such as corrosion, rust, deterioration, or cracking will ensure that the information is identified as a CPC problem. The form should be submitted to the address specified in DA PAM 750-8, The Army Maintenance Management System (TAMMS) Users Manual.

DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

Destruction of Army materiel to prevent enemy use shall be in accordance with TM 750-244-3.

PREPARATION FOR STORAGE OR SHIPMENT

For information on Preparation for Storage or Shipment, refer to WP 0005, Preparation for Movement.

WARRANTY INFORMATION

Generator sets MEP-802A/MEP-812A manufactured under contract number DAAK01-97-D-0034 and W1SP7T-08-DA005 are warranted by Engineered Electric Company (Fermont), for a period of 36 months or 1800 operating hours, whichever occurs first. Refer to Warranty Technical Bulletin TB 9-6115-641-24. The warranty starts on the date found in block 23, DA Form 2408-9, in the logbook. Report all defects in material or workmanship to your supervisor, who will take appropriate action through your Maintenance Shop.

LIST OF ABBREVIATIONS / ACRONYMS

| <u>Term</u> | <u>Definition</u> |
|--------------------|--|
| AAL | Additional Authorization List |
| BII | Basic Issue Item |
| BOI | Basis Of Issue |
| CAGE | Commercial And Government Entity |
| CAGEC | Commercial And Government Entity Code |
| COEI | Components Of End Item |
| CPC | Corrosion Prevention And Control |
| CTA | Common Table Of Allowance |
| DMWR | Depot Maintenance Work Requirement |
| DOD | Department Of Defense |
| EIR | Equipment Improvement Recommendation |
| FGC | Functional Group Code |
| Hz | Hertz |
| JTA | Joint Table Of Allowances |
| kg | Kilogram |
| kPa | Kilopascals |
| kVA | Kilovolt-ampere |
| kW | Kilowatt |
| lbf-ft | Foot Pound-Force |
| M | Meter (Metric Measure) |
| MTOE | Modified Table Of Organization And Equipment |
| N·m | Newton-Meter |
| NATO | North Atlantic Treaty Organization |
| NHA | Next Higher Assembly |
| NIIN | National Item Identification Number |
| NSN | National Stock Number |
| P/N | Part Number |
| PMCS | Preventive Maintenance Checks And Services |
| SMR | Source, Maintenance, And Recoverability |
| TAMMS | The Army Maintenance Management System |
| UOC | Usable On Code |
| °C | Degrees Celsius |
| °F | Degrees Fahrenheit |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****EQUIPMENT DESCRIPTION AND DATA**

EQUIPMENT CHARACTERISTICS, CAPABILITIES, AND FEATURES

Generator sets MEP-802A/MEP-812A (Figure 1) are fully enclosed, self-contained, skid-mounted, portable units. They are equipped with controls, instruments and accessories necessary for operation. The generator sets consist of a diesel engine, brushless generator, excitation system, speed governing system, fuel system, 24 VDC starting system, control system and fault system.

NOTE

All locations (index numbers) referenced in Figure 1 are given facing the control box side (rear) of the generator set.

The Winterization Kit (NSN 6115-01-476-8973) is designed to be mounted in 5 kW Tactical Quiet Generator (TQG) Sets where extreme cold temperatures are anticipated. The kit contains a coolant heater that allows the generator set to operate to -50 °F (-45.6 °C). The kit heater pump circulates the generator set coolant through the heater pump, heats the coolant and then returns the coolant back through the radiator of the generator set. This cycle continues in high heat mode until the temperature reaches 176 °F (80 °C). The heater then switches into a low heat mode. If the coolant temperature drops to 158 °F (70 °C) the heater will automatically switch to the high heat mode.

The Winterization Kit contains a coolant heater that heats the coolant and allows the generator set to operate to -50 °F (-45.6 °C).

The heater burns fuel from the generator set fuel tank to heat the coolant that is pumped back through the engine block. The kit consists of a heater and coolant pump, a control unit, an ON-OFF switch, a fuel pump and line, coolant circulating lines, bypass valve, a wiring harness and mounting hardware to ensure operation to -50 °F (-45.6 °C).

LOCATION AND DESCRIPTION OF MAJOR COMPONENTS**Oil Filter (1)**

The oil filter is located in the engine compartment on the left side. The filter removes impurities from the engine lubricating oil.

Dipstick (2)

The dipstick is located in the engine compartment on the left side. The dipstick shows the lubricating oil level in the engine crankcase.

Fuel Filter/Water Separator (3)

The fuel filter/water separator is located to the rear of the engine compartment on the left side. The element removes impurities and water from the diesel fuel.

AC Generator (4)

The AC generator is a single bearing, drip-proof, synchronous, brushless, three phase, fan-cooled generator. The generator is coupled directly to the rear of the diesel engine.

Dead Crank Switch (5)

The Dead Crank switch is located in the engine compartment on the left side. For maintenance purposes, the switch allows the engine to be cranked without starting.

Engine (6)

The generator is powered by a two cylinder, four cycle, fuel injected, naturally-aspirated, liquid-cooled diesel engine which occupies the front half of the generator set. The engine is also equipped with a fuel filter/water separator, oil filter, and an air cleaner assembly. Protection devices automatically stop the engine during conditions of high coolant temperature, low oil pressure, no fuel, or over-voltage.

Batteries (7)

Two batteries are required, one on each side of the generator set. The batteries are electrolyte serviceable, lead acid, 12 volt type, connected in series. After starting, the generator set is capable of operating with batteries removed. A diode and a fuse, located behind the control panel assembly, protect the generator set if the batteries are incorrectly connected.

Water Pump (8)

The water pump is located in the engine compartment on the front of the engine. The pump circulates the engine coolant through the engine block and the radiator.

Radiator (9)

The radiator is located at the front of the generator set. It acts as a heat exchanger for the engine coolant.

Fuel Tank (10)

The 5 gallon (18.9 liters) fuel tank is located in the front of the generator set below the engine and between the skid base side members. The fuel tank is a fuel reservoir and has sufficient capacity to enable the generator set to operate for at least 8 hours without refueling.

Air Cleaner Assembly (11)

The air cleaner assembly is located on the right side behind the engine. It consists of a dry-type, disposable paper element and canister. The air cleaner assembly features a dust collector which traps large dust particles. The air cleaner assembly has a restriction indicator which will indicate red when the air filter element requires servicing.

Muffler (12)

The muffler and exhaust tubing are connected to the exhaust manifold on the engine. The exhaust exits from the top of the generator set housing. Gases are exhausted upward.

Fan Belt (13)

The fan belt is located in the engine compartment on the front of the engine. The belt drives the fan, water pump, and battery charging alternator.

Battery Charging Alternator (14)

The battery charging alternator is located on the right side of the engine. It is capable of maintaining the batteries in a state of full charge in addition to providing the required 24 VDC control power.

Starter (15)

The starter is located on the right side of the engine. The electric starter mechanically engages the engine flywheel in order to start the diesel engine.

NATO Slave Receptacle (16)

The NATO slave receptacle is located on the right side (rear) of the generator set. It is used for slave starting.

Skid Base (17)

The skid base supports the generator set. It has fork lift access openings and cross members for short distance movement. The skid base has provisions in the bottom for installation of the generator set on a trailer.

Load Output Terminal Board (18)

The load output terminal board is located at the rear of the generator set. Four output terminals are located on the board. They are marked L1, L2, L3 and L0. A fifth terminal, marked GND, is located next to the output terminals and serves as equipment ground for the generator set. A removable, solid copper bar is connected between the L0 and GND terminals.

Control Panel Assembly (19)

The generator set control panel assembly is located at the rear of the generator set and contains controls and instruments for operating the engine and the generator.

Frequency Adjust Control (20)


The Frequency adjust control is located at the rear left side of generator set. It is used to adjust the generator frequency output.

Malfunction Indicator Panel (21)

The malfunction indicator panel is located to the left of the control panel assembly. It indicates malfunctions of the generator set components.

Convenience Receptacle (22)

The convenience receptacle is a 10 Amp, 120 VAC receptacle used to operate small plug in type equipment. It is protected by a Ground Fault Circuit Interrupter located below the malfunction indicator, an overload circuit breaker located inside the control box, and an in-line fuse on generator sets. The convenience receptacle power is available at all times during operation of the generator set.

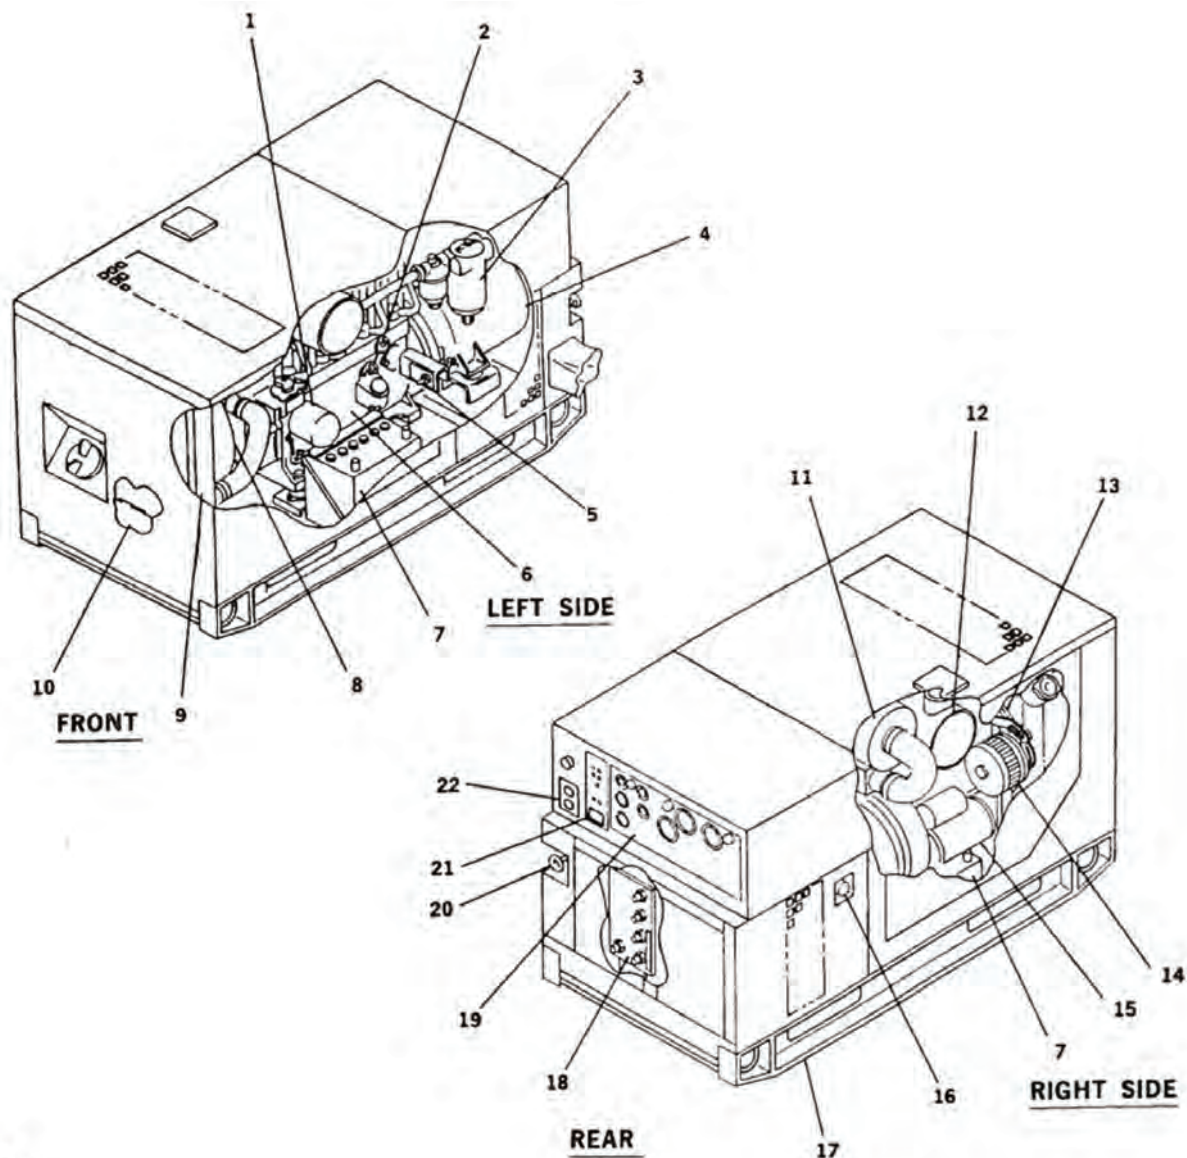**Legend**

- | | | |
|--------------------------------|---------------------------------|---------------------------------|
| 1. Oil Filter | 9. Radiator | 17. Skid Base |
| 2. Dipstick | 10. Fuel Tank | 18. Load Output Terminal Board |
| 3. Fuel Filter/Water Separator | 11. Air Cleaner Assembly | 19. Control Panel Assembly |
| 4. AC Generator | 12. Muffler | 20. Frequency Adjust control |
| 5. Dead Crank Switch | 13. Fan Belt | 21. Malfunction Indicator Panel |
| 6. Engine | 14. Battery Charging Alternator | 22. Convenience Receptacle |
| 7. Batteries | 15. Starter | |
| 8. Water Pump | 16. NATO Slave Receptacle | |

Figure 1. Generator Set Components.

Winterization Kit

A fuel-burning heater pre-heats engine coolant permitting generator set Operation to -50 °F (-45.6 °C). Figure 2 illustrates the major components of the Winterization kit and shows their locations on the 5 kW TQG Set.

Location and Description of Winterization Kit Major Components

A fuel-burning heater pre-heats engine coolant permitting generator set Operation to -50 °F (-45.6 °C).

Control Unit (1)

Controls heater operations.

Heater (2)

Heats coolant for operation in extreme cold temperatures.

Fuel Pump (3)

Pumps fuel from the generator set fuel tank to the heater.

Fuel Lines (4)

Provides a means of transporting fuel to heater.

Coolant Pump (5)

Circulates coolant from generator set through the heater.

Coolant Lines (6)

Provides a means of transporting coolant for circulation.

Switch/Lamp (7)

Switches heater on or off / lamp indicates heater function codes.

Wiring Harness (8)

Electrically connects Winterization Kit components.

Exhaust Hose (9)

Provides a means of exhausting combustion gases from heater.

Air Inlet Hose (10)

Provides intake air to Winterization Kit heater.

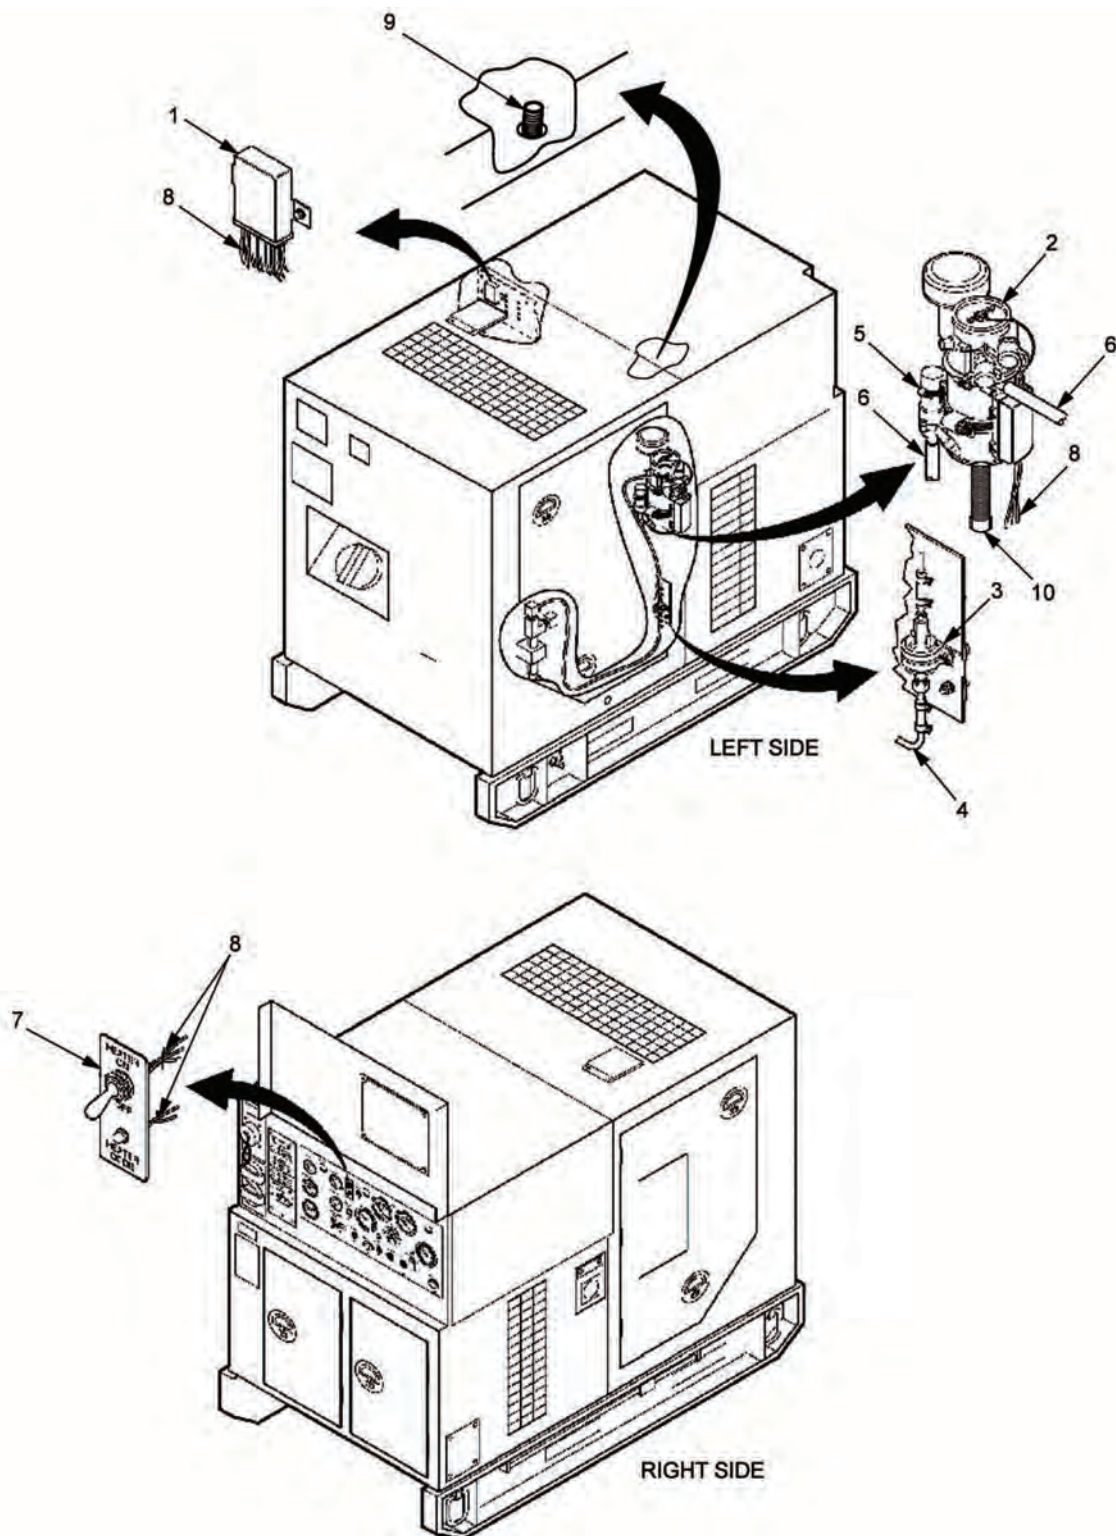


Figure 2. Location of Major Winterization Kit Components.

DIFFERENCES BETWEEN MODELS

The differences between models of the generator sets covered in this manual are as follows: Model MEP-802A is equipped with a 60 Hz generator. Model MEP-812A is equipped with a 400 Hz generator.

EQUIPMENT DATA

For a list of Leading Particulars refer to Table 1.

Table 1. Leading Particulars, Generator Set.

| | |
|--------------------------------------|--|
| 1. Generator Set: | |
| Model Numbers | |
| 5 kW, 60 Hz Tactical Quiet | MEP-802A |
| 5 kW, 400 Hz Tactical Quiet | MEP-812A |
| National Stock Numbers | |
| 5 kW, 60 Hz Tactical Quiet | NSN 6115-01-274-7387 |
| 5 kW, 400 Hz Tactical Quiet | NSN 6115-01-274-7391 |
| Overall Length | |
| MEP-802A | 50.6 in. (128.6 cm) |
| MEP-812A | 50.6 in. (128.6 cm) |
| Overall Width | |
| MEP-802A | 32 in. (81.28 cm) |
| MEP-812A | 32 in. (81.28 cm) |
| Overall Height | |
| MEP-802A | 37 in. (93.98 cm) |
| MEP-812A | 37 in. (93.98 cm) |
| Dry Weights (less Basic Issue Items) | |
| MEP-802A | 800 lb. (362.8 kg.) |
| MEP-812A | 825 lb. (374.2 kg.) |
| Wet Weights | |
| MEP-802A | 868 lb. (393.7 kg.) |
| MEP-812A | 878 lb. (398.2 kg.) |
| 2. Engine: | |
| Manufacturer | Onan |
| Model | DN2M-1 |
| Type | Two cylinder, four cycle, naturally-aspirated diesel |
| Displacement | 57 cu. in. (0.9 liters) |
| Altitude Degradation | |
| 4000 ft (1220 m) to 8000 (2440 m) | 3.5% per 1000 ft (305 m) |

Table 1. Leading Particulars, Generator Set. - Continued

| | |
|--|---|
| Firing Order | 1,2 |
| Cold Weather Starting Aid System Use | When temperature is +40 °F (4 °C) or below |
| Valve Tappet Clearance Adjustment | None Required |
| 3. Cooling System: | |
| Type | Pressurized radiator and pump |
| Capacity | 6.2 qts. (5.9 liters) |
| Normal Operating Temperature | 170-200 °F (77-93 °C) |
| Temperature Indicating System Voltage Rating | 24 VDC |
| 4. Lubricating System: | |
| Type | Full flow, circulating pressure |
| Oil Pump Type | Positive displacement gear |
| Normal Operating Pressure | 25-60 psi (172-414 kPa) |
| Oil Filter Type | Full flow, spin-on, replaceable element |
| Lubricating System Capacity | 3.2 qts. (3.0 liters) |
| Pressure Indicating System Voltage Rating | 24 VDC |
| 5. Fuel System: | |
| Type of Fuel | DF-1, DF-2, DF-A, JP4, JP5, JP8 |
| Fuel Tank Capacity | 5 gal. (18.9 liters) |
| Fuel Consumption Rate: | 60 Hz: .55 gal. (2.1 liters) per hour 400 Hz: .61 gal. (2.3 liters) per hour |
| Auxiliary Fuel Pump: | |
| Voltage Rating | 24 VDC |
| Delivery Pressure | 5.0-6.5 psi (34.5-65.5 kPa) range |
| Fuel Level Switch: | |
| Type | Float |
| Current | 3.0 amp at 6 to 32 VDC |
| 6. Engine Starting System: | |
| Batteries | Two 12 volt, connected in series |
| Starter: | |
| Manufacturer | Onan |
| Model | 191-1550 |
| Voltage Rating | 24 VDC |
| Drive Type | Gear Reduction |
| Battery Charging Alternator: | |
| Manufacturer | Prestolite |
| Model | 8EM3005CA and 8MR3005CA |

Table 1. Leading Particulars, Generator Set. - Continued

| | |
|----------------------------------|---|
| Rating | 18 amps at 24 VDC |
| Protective Fuse | 30 amps |
| 7. AC Generator: | |
| Manufacturer | Onan |
| Type (MEP-802A/MEP-812A) | Rotating field synchronous |
| Load Capacity | 5kW |
| Current Ratings: | 60Hz: 400Hz: |
| 120/240 volt connection | 26 amps 26 amps |
| 120/208 volt connection | 17 amps 17 amps |
| 120 volt connection | 52 amps 52 amps |
| Power Factor | 0.8 |
| Cooling | Fan cooled |
| Drive Type | Direct coupling |
| Duty Classification | Continuous |
| 8. Protection Devices: | |
| Low Oil Pressure Switch: | |
| Trip Pressure | 15 ± 3 psi (103.4 ± 20.7 kPa) |
| Voltage Rating | 24 VDC |
| Current Rating | 5 amps |
| Coolant High Temperature Switch: | |
| Trip Temperature | 225 ± 5 °F (107 + 3 °C) |
| Voltage Rating | 12-120 VDC |
| Current Rating | 2 amps |
| Overvoltage: | |
| Trip Point Conditions | 153 ± 3 VAC for not less than 200 milliseconds (120 VAC coil winding) |
| Trip Point | No more than 1.25 seconds after trip conditions exist |

Tabulated data for the heater is located in Table 2.

Table 2. Winterization Kit Heater Operating Data.

| | |
|-----------------------|------------------|
| National Stock Number | 6115-01-476-8973 |
| Overall Length | 10.787 inches |
| Overall Width | 5.984 inches |
| Overall Height | 7.815 inches |
| Weight | 15 lbs. |
| Heater | |

Table 2. Winterization Kit Heater Operating Data. - Continued

| | |
|-------------------------|---|
| Manufacturer | Active Gear |
| Model | D5W |
| Heating | Water Coolant |
| Capacity | High: 17,000 BTU/Hr. Low: 4250 BTU/Hr. |
| Rated Voltage | 24 VDC |
| Operating Voltage Range | 20-28 VDC |
| Current at 24 VDC | Start: 20 Amps/Hr. Running High: 1.8 Amps/Hr. Running Low: 1.2 Amps/Hr. |
| Fuel | Diesel |
| Fuel Consumption | High: 0.06 Gal/Hr. Low: 0.04 Gal/Hr. |
| Coolant Pump Flow | 250 Gal/Hr. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****THEORY OF OPERATION**

INTRODUCTION

This WP contains functional descriptions of the generator set and explains how the controls and indicators interact with the system.

ENGINE STARTING SYSTEM

The Engine Starting System (Figure 1), consists of two 12-volt batteries connected in series, a starter, a 24 volt battery charging alternator, a magnetic pickup (for sensing engine speed) and the related switches and relays required for control of the starting system. For engine cranking, battery power is supplied to the starter motor through the starter solenoid which in turn is controlled by the cranking relay. The starter then engages the engine flywheel causing the engine to turn over. For engine starting, the DEAD CRANK switch must be in the NORMAL position, the DC Control power circuit breaker must be pushed in, the EMERGENCY STOP SWITCH must be in the OUT position, and the MASTER SWITCH is moved to the START position. The cranking relay is then controlled by a circuit consisting of the crank disconnect relay and crank disconnect switch. As the engine accelerates to the preset speed (sensed by the magnetic pickup), the crank disconnect switch opens and de-energizes the cranking relay to stop and disengage the starter. The starting sequence may also be stopped by moving the MASTER SWITCH to OFF. The engine may be cranked without starting by use of the DEAD CRANK switch. With the DEAD CRANK switch in the CRANK position, the cranking relay, starter solenoid and starter motor are energized without activating any other starting or control function.

The batteries are charged by the battery charging alternator that is belt driven by the engine. Generator set control system power is also supplied by the battery charging alternator. The BATTERY CHARGE ammeter indicates the charge/discharge rate of the batteries, from -10 AMPS to +20 AMPS, in 5 AMPS increments. Normal operating indication depends on the state of charge in the batteries. A low charge, such as exists immediately after engine starting, will cause a high reading (needle moves toward CHARGE area). When the charge in the batteries has been restored, the indicator moves near zero (0).

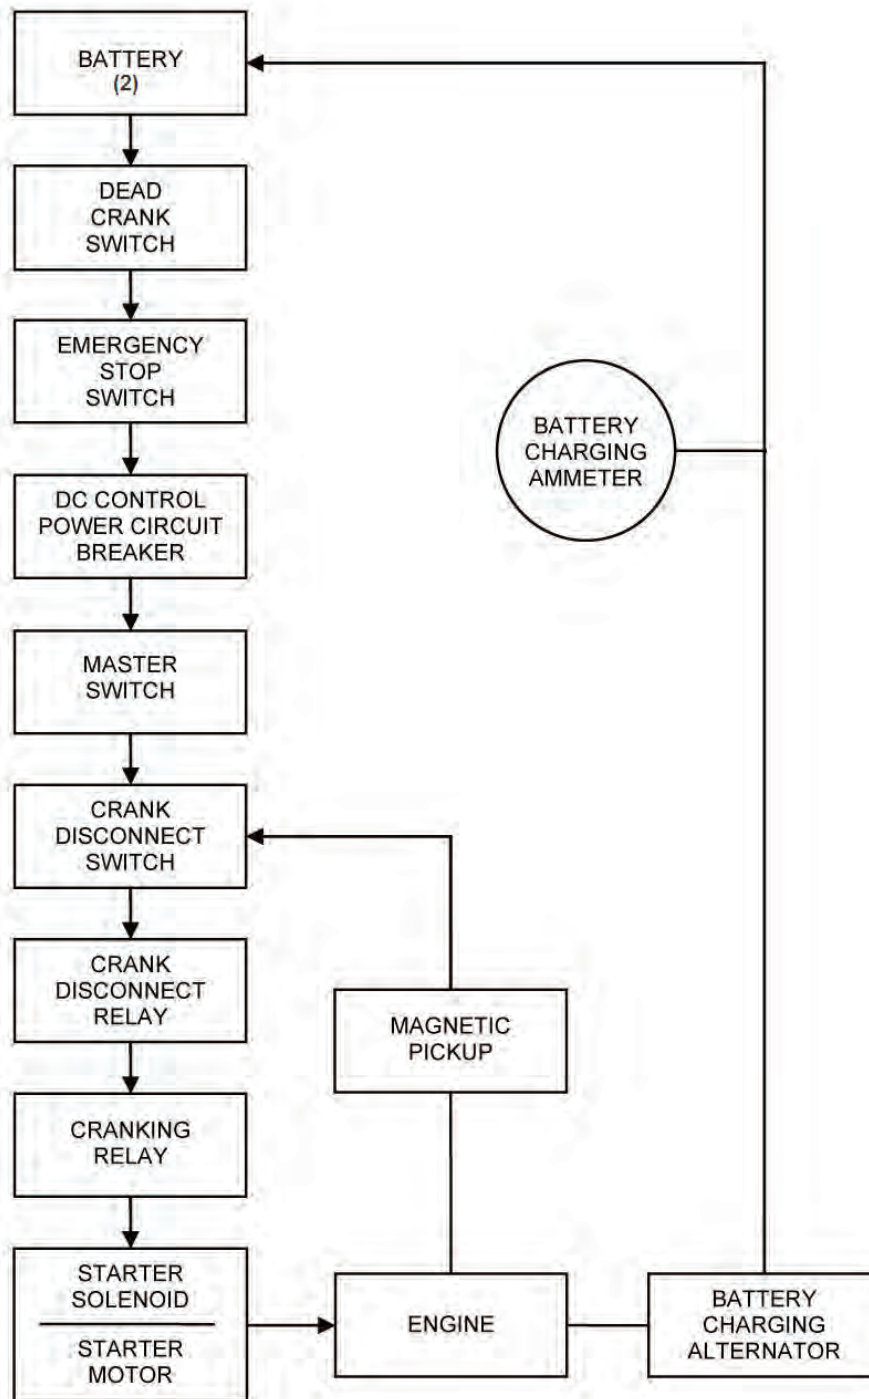


Figure 1. Engine Starting System.

FUEL SYSTEM

The Fuel System (Figure 2), consists of piping, fuel tank, fuel filter, electrically driven transfer pump, fuel filter/water separator, two injection pumps and two injectors, one for each cylinder. Fuel is drawn from the fuel tank by the transfer pump when the MASTER SWITCH is in the PRIME & RUN position. After reaching the transfer pump, fuel passes through a fuel filter/water separator where water and small impurities are removed. The fuel then goes to the injection pumps where it is pressurized and pushed into the injectors. Through the injectors fuel enters the diesel engine combustion chamber, where it is mixed with air and ignited. The fuel that is not used is returned to the fuel tank via an excess fuel return line.

The Auxiliary Fuel System consists of an external fuel supply, piping, fuel filter, a 24 VDC auxiliary fuel pump and a fuel level float switch. When the MASTER SWITCH is set on PRIME & RUN AUX FUEL it actuates the auxiliary fuel pump and transfers fuel from the external fuel supply to the generator fuel tank. The fuel level float switch shuts off the auxiliary fuel pump when the generator fuel tank is full and reactivates the pump as the level drops. The FUEL LEVEL indicator indicates fuel level of generator fuel tank from (E) empty to (F) full in quarter tank increments.

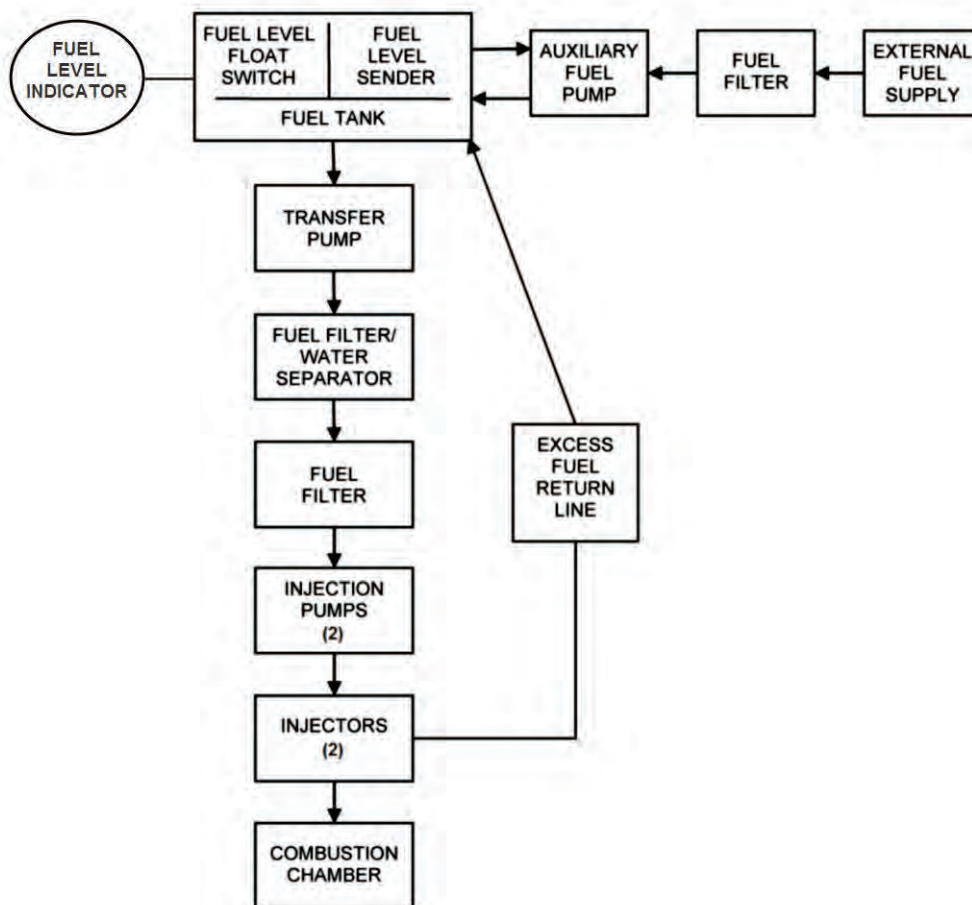


Figure 2. Fuel System.

ENGINE COOLING SYSTEM

The Engine Cooling System (Figure 3) consists of a radiator, hoses, thermostat, water pump, a belt driven fan, and cooling jackets. The water pump forces coolant through passages (cooling jackets) in the engine block and cylinder head where the coolant absorbs heat from the engine. When the engine reaches normal operating temperature, the thermostat opens and the heated coolant flows through the upper radiator hose assembly into the radiator. The cooling fan circulates air through the radiator where the coolant temperature is reduced.

A coolant high temperature switch provides automatic shut down in the event that coolant temperature exceeds 225 ± 5 °F (107 ± 3 °C). The COOLANT TEMP indicator indicates the engine coolant temperature, from 120 °F to 240 °F (48 °C to 115 °C).

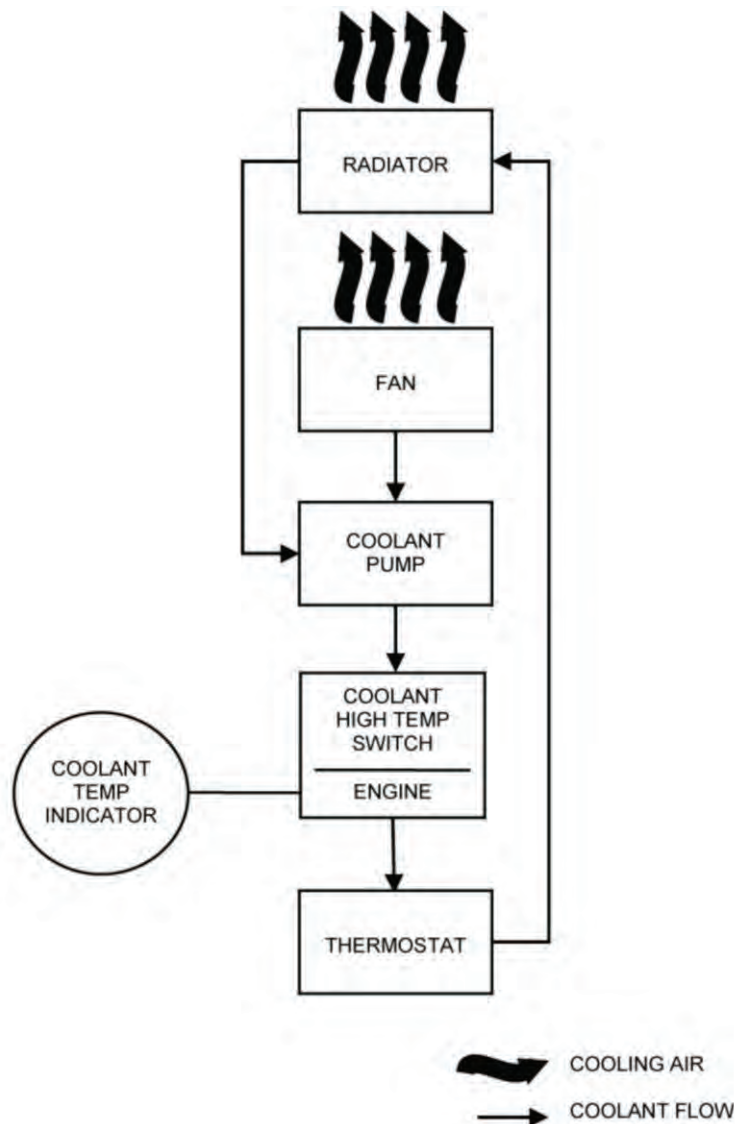


Figure 3. Engine Cooling System.

LUBRICATION SYSTEM

The Lubrication System (Figure 4) consists of an oil sump, dipstick pump, oil pressure sender, and filter. The oil sump is a reservoir for engine lubricating oil. The dipstick indicates oil level in the sump. A pump draws oil from the sump and through a screen removing large impurities. The oil then passes through a spin-on type filter where

small impurities are removed. From the filter, oil enters the engine and is distributed to the engine's internal moving parts.

After passing through the engine, the oil returns to the oil sump. The OIL PRESSURE indicator indicates oil pressure sensed by the oil pressure sender in the engine. The engine will shut off automatically if the oil pressure drops to a dangerously low level. The oil level can be checked when the engine is not operating.

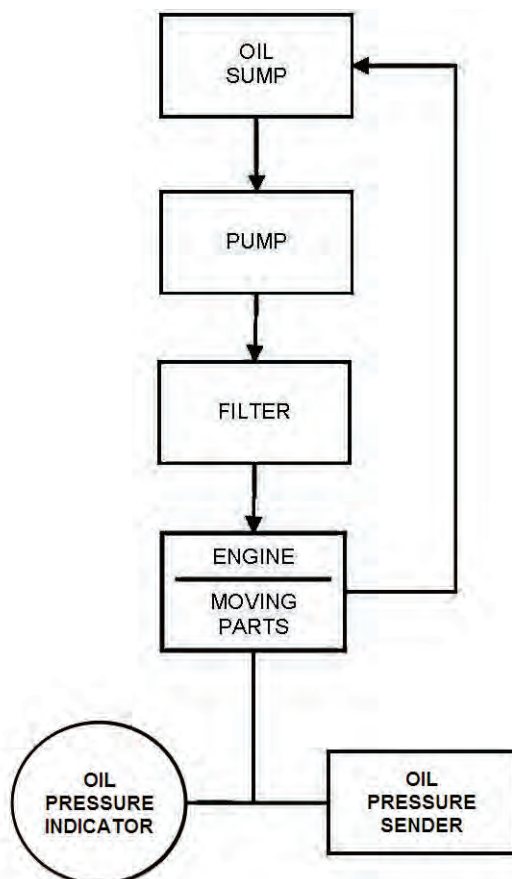


Figure 4. Engine Lubrication System.

AIR INTAKE AND EXHAUST SYSTEM

The Air intake and Exhaust System (Figure 5), consists of an air cleaner assembly, intake manifold, exhaust manifold and muffler. Ambient air is drawn into the air cleaner assembly where it passes through the air cleaner element. Airborne dirt is removed and trapped in the element. A restriction indicator, located on the air cleaner assembly housing, displays red when the air cleaner element should be serviced. Filtered air is drawn out of the air cleaner assembly through air intake tubes to the air intake manifold where it passes into the engine and is mixed with fuel from the injectors.

The engine exhaust gases are expelled into the exhaust manifold. The exhaust manifold channels the gases into the muffler that deadens the sound of the exhaust gases. The gases pass from the muffler through the muffler outlet and are vented upward from the generator set housing.

Cold outside temperatures make starting the engine difficult. To improve engine starting, a cold weather starting aid has been provided that features two preheaters. The preheaters warm up the air intake manifold when the MASTER SWITCH is in the PREHEAT position.

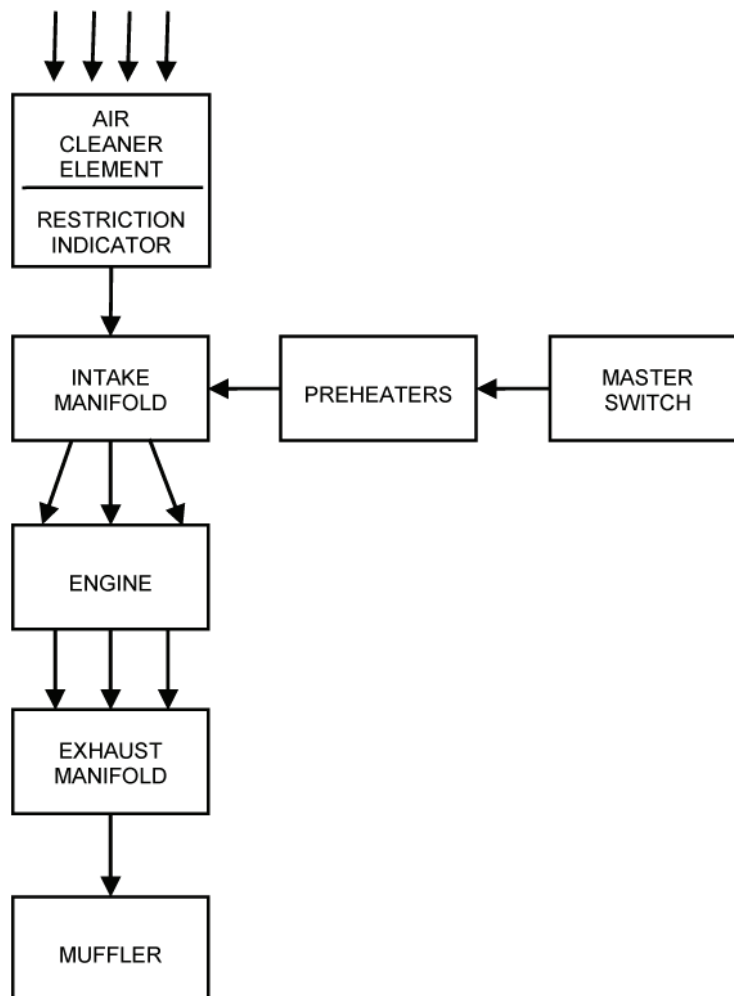


Figure 5. Air Intake and Exhaust System.

OUTPUT SUPPLY SYSTEM

The Output Supply System (Figure 6) consists primarily of the generator, the output load terminal board, the AC voltage reconnection switch, VM-AM transfer switch and the AC circuit interrupter relay.

Power created by the generator is supplied through the voltage reconnection switch and the AC circuit interrupter relay to the output load terminals on the output load terminal board.

The voltage reconnection switch allows configuration of the generator set for the following voltage ranges: 120-volt, single phase, 2 wire; 120/240-volt, single phase, 3 wire; and 120/208-volt, 3-phase, 4 wire.

The AC CIRCUIT INTERRUPTER switch closes and opens the AC circuit interrupter relay. This enables or interrupts the power flow between the voltage reconnection switch and the output load terminals. The AC circuit interrupter relay is also opened automatically during any of the specified set faults. The voltage regulator senses AC generator output voltage and provides control voltage to the AC generator exciter to maintain the desired AC generator output voltage. The position of the VM-AM transfer switch selects the output load terminals from which current and voltage are measured and are indicated on the ammeter (PERCENT RATED CURRENT) and AC volt meter (VOLTS AC).

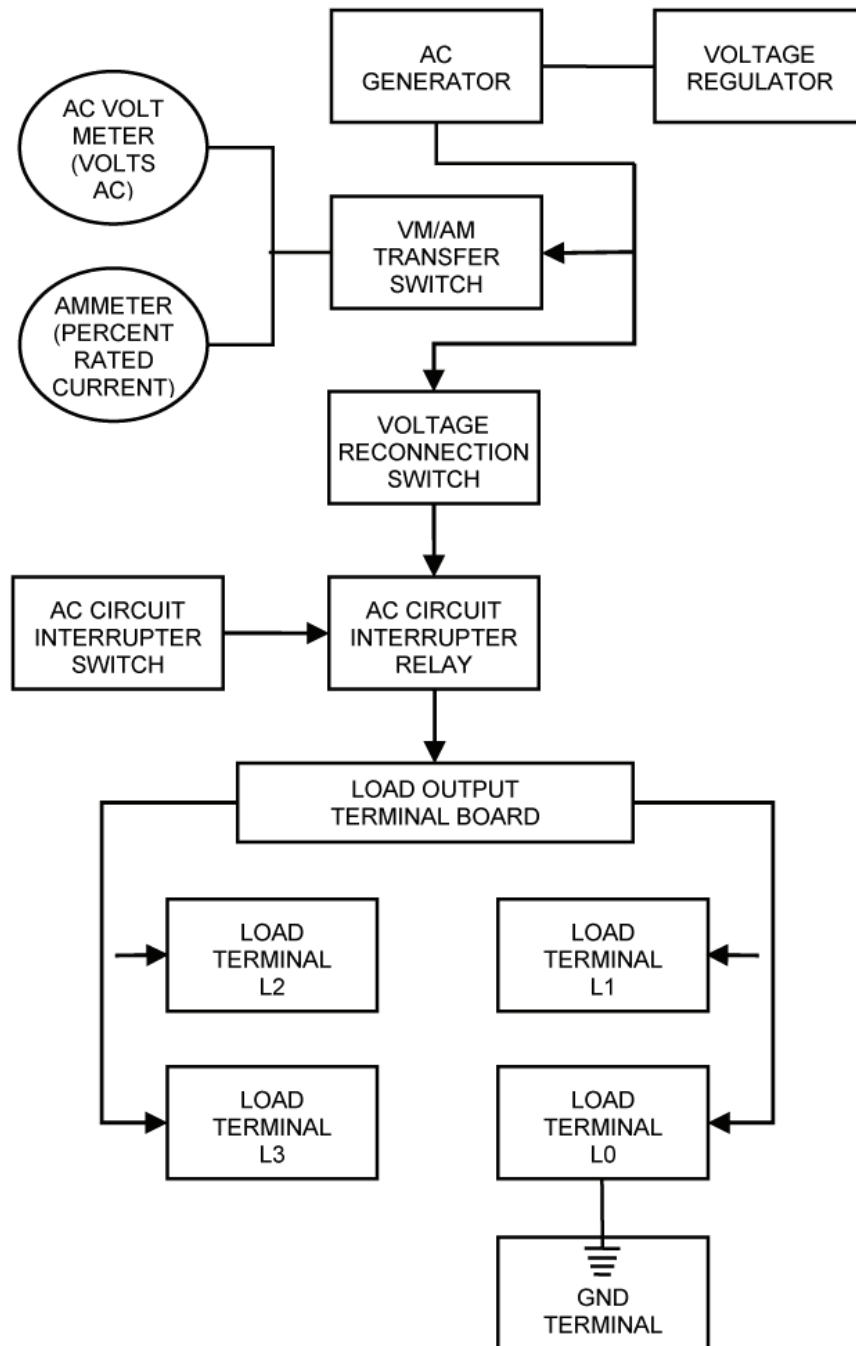


Figure 6. Output Supply System.

END OF WORK PACKAGE

CHAPTER 2

OPERATOR INSTRUCTIONS

FOR

5 kW GENERATOR SET (60 Hz AND 400 Hz),
SKID MOUNTED, TACTICAL QUIET

CHAPTER 2
OPERATOR INSTRUCTIONS

WORK PACKAGE INDEX

| <u>Title</u> | <u>WP Sequence No.</u> |
|---|------------------------|
| DESCRIPTION AND USE OF OPERATOR CONTROLS AND INDICATORS | 0004 |
| OPERATION UNDER USUAL CONDITIONS | 0005 |
| OPERATION UNDER UNUSUAL CONDITIONS..... | 0006 |
| EMERGENCY | 0007 |

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET**
DESCRIPTION AND USE OF OPERATOR CONTROLS AND INDICATORS

GENERAL

This WP describes and illustrates the controls and indicators to ensure proper operation of the generator set.

CONTROL PANEL ASSEMBLY

The control panel assembly contains most of the operating controls and indicators for the generator set. Figure 1 shows the control panel assembly layout and Table 1 describes each control and indicator.

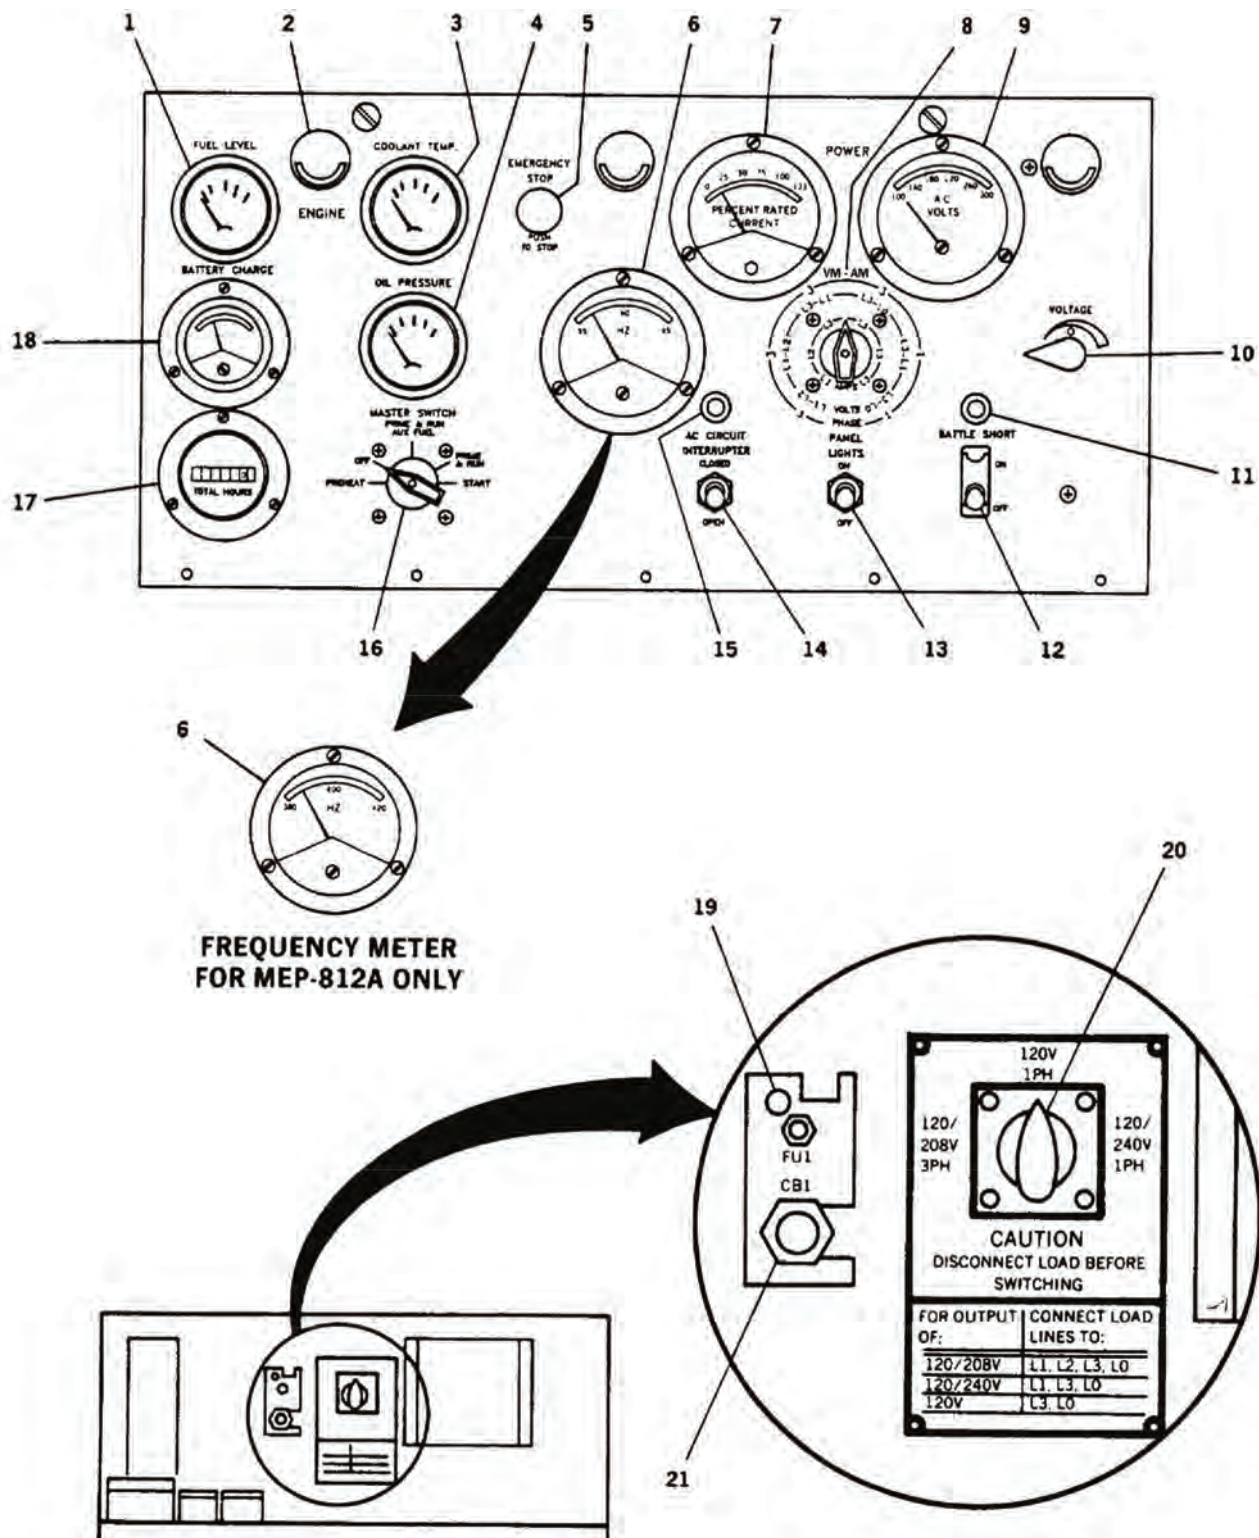


Figure 1. Operator's Controls and Indicators.

Table 1. Control Panel Controls and Indicators.

| Key | Control or Indicator | Function |
|-----|---|---|
| 1 | FUEL LEVEL indicator | Indicates fuel level. |
| 2 | Panel lights | Illuminates control panel. |
| 3 | COOLANT TEMP indicator | Indicates engine coolant temperature. |
| 4 | OIL PRESSURE indicator | Indicates oil pressure. |
| 5 | EMERGENCY STOP pushbutton | Shuts down generator set. |
| 6 | FREQUENCY meter (HERTZ) | Indicates generator set output frequency. |
| 7 | Ammeter (PERCENT RATED CURRENT) | Indicates generator set load current as a percent of rated current. |
| 8 | VM-AM transfer switch | Allows selection of current and voltage readings between output load terminals, see Table 2. |
| 9 | AC Voltmeter (VOLTS AC) | Indicates output voltage of generator set. |
| 10 | VOLTAGE adjust potentiometer | Adjusts generator set voltage. |
| 11 | BATTLE SHORT light | Amber light indicates battle short switch on. |
| 12 | BATTLE SHORT switch | Bypasses protective devices. |
| 13 | PANEL LIGHTS switch | Activates or deactivates panel lights. |
| 14 | AC CIRCUIT INTERRUPTER switch | Opens and closes AC circuit interrupter relay. |
| 15 | AC CIRCUIT INTERRUPTER light | Green light indicates AC circuit interrupter relay is closed. |
| 16 | MASTER SWITCH | PREHEAT - Energizes heater plugs. |
| | | OFF - De-energizes all circuits, except panel lights. |
| | | PRIME & RUN AUX FUEL - Energizes generator set run circuits with fuel pump operating and with auxiliary fuel pump system activated. |
| | | PRIME & RUN - Energizes generator set run circuits with fuel pump operating and auxiliary fuel system de-energized. |
| | | START - Energizes starter. |
| 17 | Time meter (TOTAL HOURS) | Indicates total engine operating hours. |
| 18 | BATTERY CHARGE ammeter | Indicates charge/discharge rate of batteries. |
| 19 | BATTERY CHARGER FUSE (FU1) (located behind control panel) | Protects battery charging alternator. |
| 20 | AC Voltage Reconnection Switch (located behind control panel) | Selects 120/208 VAC, three-phase; 120 VAC, single phase; or 120/240 VAC, single phase output at load terminal board. |
| 21 | DC CONTROL POWER circuit breaker (CB1) (located behind control panel) | Energizes or de-energizes DC circuits. |

Table 2. Load Terminal, AC Voltage Reconnection Switch and VM-AM Transfer Switch Selection.

| RECONNECTION SWITCH POSITION | TERMINALS | VM-AM TRANSFER SWITCH POSITION | VOLTAGE READING | CURRENT READING (TERMINAL) |
|------------------------------|-------------------------------------|--|--|----------------------------|
| 120/208V 3PH | L1, L2, L3, L0 | L1 - L2 3 PHASE L2 - L3 3 PHASE L3 - L1 3 PHASE L3 - L0 3 PHASE | 208 VOLTS 208 VOLTS 208 VOLTS 120 VOLTS | L1 L2 L3 L3 |
| 120V 1PH | L3 - L0 | L3 - L0 1 PHASE | 120 VOLTS | L3 |
| 120/240V 1PH | L3 - L1 L3 - L0 OR L1 - L0 | L3 - L1 1 PHASE L3 - L0 1 PHASE L1 - L0 1 PHASE | 240 VOLTS 120 VOLTS 120 VOLTS | L3 L3 L1 |

MALFUNCTION INDICATOR PANEL

The malfunction indicator panel (Figure 2) is located to the left of the control panel. It contains a series of lights which indicate a generator set failure or abnormal operating condition. Table 3 describes each indicator light.

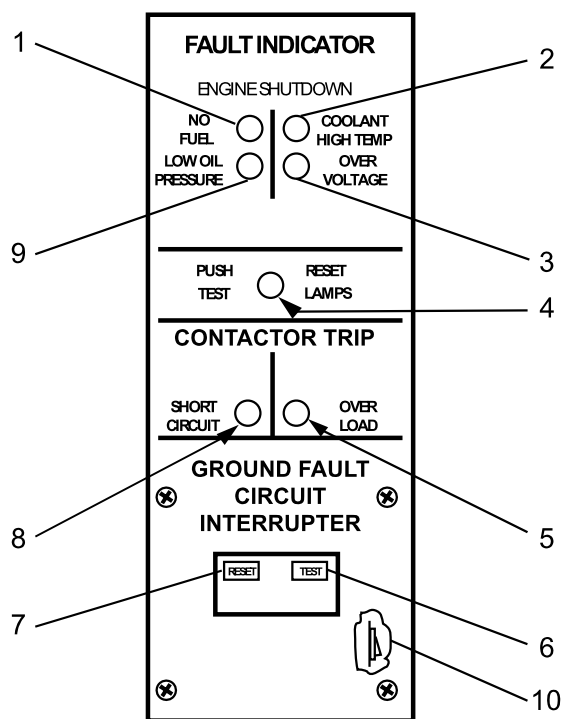
**Figure 2. Malfunction Indicator Panel.**

Table 3. Malfunction Indicator Panel.

| Key | Control or Indicator | Function |
|-----|---|--|
| 1 | NO FUEL indicator | Lights when fuel level in fuel tank is below preset level. |
| 2 | COOLANT HIGH TEMP indicator | Lights when engine coolant temperature exceeds $225^{\circ}\text{F} \pm 5^{\circ}\text{F}$ ($107^{\circ}\text{C} \pm 3^{\circ}\text{C}$). |
| 3 | OVERVOLTAGE indicator | Lights when voltage in 120 volt generator coil exceeds 153 ± 3 volts. |
| 4 | PUSH TEST RESET LAMPS | Tests and resets fault indicator lamps. |
| 5 | OVER LOAD indicator | Lights when current in any phase exceeds 110 percent of rated current. |
| 6 | GROUND FAULT CIRCUIT INTERRUPTER TEST Pushbutton | Tests GROUND FAULT CIRCUIT INTERRUPTER. |
| 7 | Ground Fault Circuit Interrupter PUSH TO RESET Pushbutton | Push to reset GROUND FAULT CIRCUIT INTERRUPTER after test or ground fault has occurred. Reset button will be red if Ground Fault Circuit Interrupter has been tripped. |
| 8 | SHORT CIRCUIT indicator | Lights when generator set output in any phase exceeds 425 ± 25 percent of rated current. |
| 9 | LOW OIL PRESSURE indicator | Lights when engine lubrication systems pressure is less than 15 ± 3 psi (103.4 ± 20.7 kPa) during engine operation. |
| 10 | Convenience Receptacle Overload Circuit Breaker (10-amp in-line fuse on generator sets) | Circuit breaker trips when load on convenience receptacle exceeds 10 amps (fuse blows on generator sets). |

FREQUENCY ADJUST CONTROL

The frequency adjust control (Figure 3) is to the left and below the control panel. Table 4 describes each part and its function.

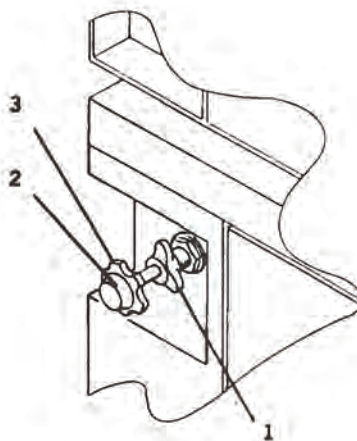
**Figure 3. Frequency Adjust Control.**

Table 4. Frequency Adjust Control.

| Key | Control | Function |
|------------|-------------------------|---|
| 1 | Locking Ring | Turn locking ring counterclockwise to unlock frequency adjust control. Turn locking ring clockwise to lock frequency adjust control at desired setting. |
| 2 | Frequency adjust button | Press frequency adjust button and pull frequency adjust knob to increase frequency. Press frequency adjust button and push frequency adjust knob to decrease frequency. This enables a rapid adjustment of frequency. |
| 3 | Frequency adjust knob | Turn knob clockwise to increase frequency and counterclockwise to decrease frequency. This provides a fine adjustment in frequency. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****OPERATION UNDER USUAL CONDITIONS**

INITIAL SETUP:**Tools and Special Tools**

None

Personnel Required

1

Materials/Parts

Ground rod assembly, ground conductor/cable

References

FM 5-424 (WP 0013)

FM 20-31 (WP 0013)

Table 1 and Figure 1 (WP 0004)

Table 1 (WP 0011)

Equipment Condition

Ready for Operation

Engine Stopped (Refer to Stopping Procedure)

GENERAL

This WP provides information and guidance for generator set operation under normal conditions; refer to FM 20-31 (Electric Generation in the Field).

ASSEMBLY AND PREPARATION FOR USE**Installation of Ground Rod****WARNING**

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. Never attempt to start the generator set unless it is properly grounded. Failure to comply with this warning can cause injury or death to personnel.

1. Insert ground cable (Figure 1, Item 2) through slot on load output terminal board terminal marked GND (1). Tighten terminal nut.
2. Connect coupling (5) to ground rod (4) and screw driving stud (3) into coupling (5). Make sure that driving stud (3) seats on ground rod (4).
3. Drive ground rod into ground until coupling is just above surface.
4. Remove driving stud and install another section of ground rod.

5. Install another coupling (5) and driving stud (3). Drive ground rod down until new coupling is just above ground surface.
6. Repeat steps 4 and 5 until ground rod has been driven eight feet or deeper, providing an effective ground.
7. Connect clamp (6) and ground cable (2) to ground rod (4) and tighten clamp screw.

Installation of Load Cables

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. DO NOT touch live voltage connections. Never attempt to connect or disconnect load cables while the generator set is running. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Dangerous voltage exists on live circuits. Always observe precautions and never work alone. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when this generator set is in operation. SHUT DOWN generator set and make sure it is free of any power source before attempting any repair or maintenance on the set, or when connecting or disconnecting load cables. Failure to comply with this warning can cause injury or death to personnel.

CAUTION

Do not connect the load cables to the convenience receptacle. Failure to observe this caution can result in damage to the generator set.

1. Shut down generator set.
2. Select required output terminals from Table 1.
3. Open output load terminal door.

WARNING

Do not remove the Bonding Jumper between GND and N unless the Weapon System requires an ungrounded system. Failure to comply can cause death or serious injury to personnel. Refer to applicable Weapon System TM for specific guidance on power and connection requirements.

4. Ensure that jumper is securely fastened between L0 and ground.
5. Using terminal nut wrench (Figure 2, Item 3) loosen terminal nuts (1) on terminals (2) selected in Step 2.
6. Insert ends of load cables through load cable exit. Then insert ends of cables into slots of load terminal studs (2).
7. Tighten load terminal nuts (1).
8. Secure wrench (3) in bracket inside load terminal door, and close door.

CAUTION

When using single phase connections, always attempt to balance loads between terminals (do not connect all loads between one terminal and L0). Failure to observe this caution can result in damage to the generator set.

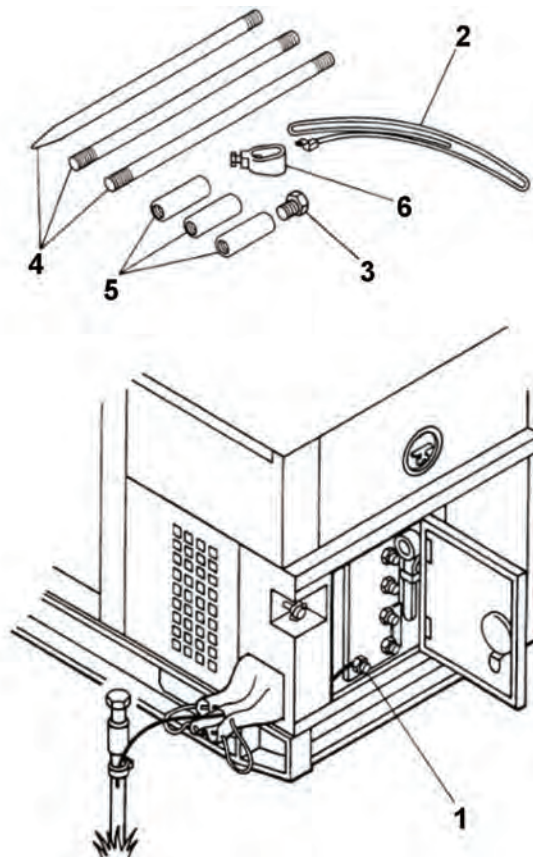


Figure 1. Grounding Connections.

Table 1. Load Terminal, AC Voltage Reconnection Switch and VM-AM Transfer Switch Selection.

| RECONNECTION SWITCH POSITION | TERMINALS | VM-AM TRANSFER SWITCH POSITION | VOLTAGE READING | CURRENT READING (TERMINAL) |
|------------------------------|-------------------------------------|--|--|----------------------------|
| 120/208V 3PH | L1, L2, L3, L0 | L1 - L2 3 PHASE L2 - L3 3 PHASE L3 - L1 3 PHASE L3 - L0 3 PHASE | 208 VOLTS 208 VOLTS 208 VOLTS 120 VOLTS | L1 L2 L3 L3 |
| 120V 1PH | L3 - L0 | L3 - L0 1 PHASE | 120 VOLTS | L3 |
| 120/240V 1PH | L3 - L1 L3 - L0 OR L1 - L0 | L3 - L1 1 PHASE L3 - L0 1 PHASE L1 - L0 1 PHASE | 240 VOLTS 120 VOLTS 120 VOLTS | L3 L3 L1 |

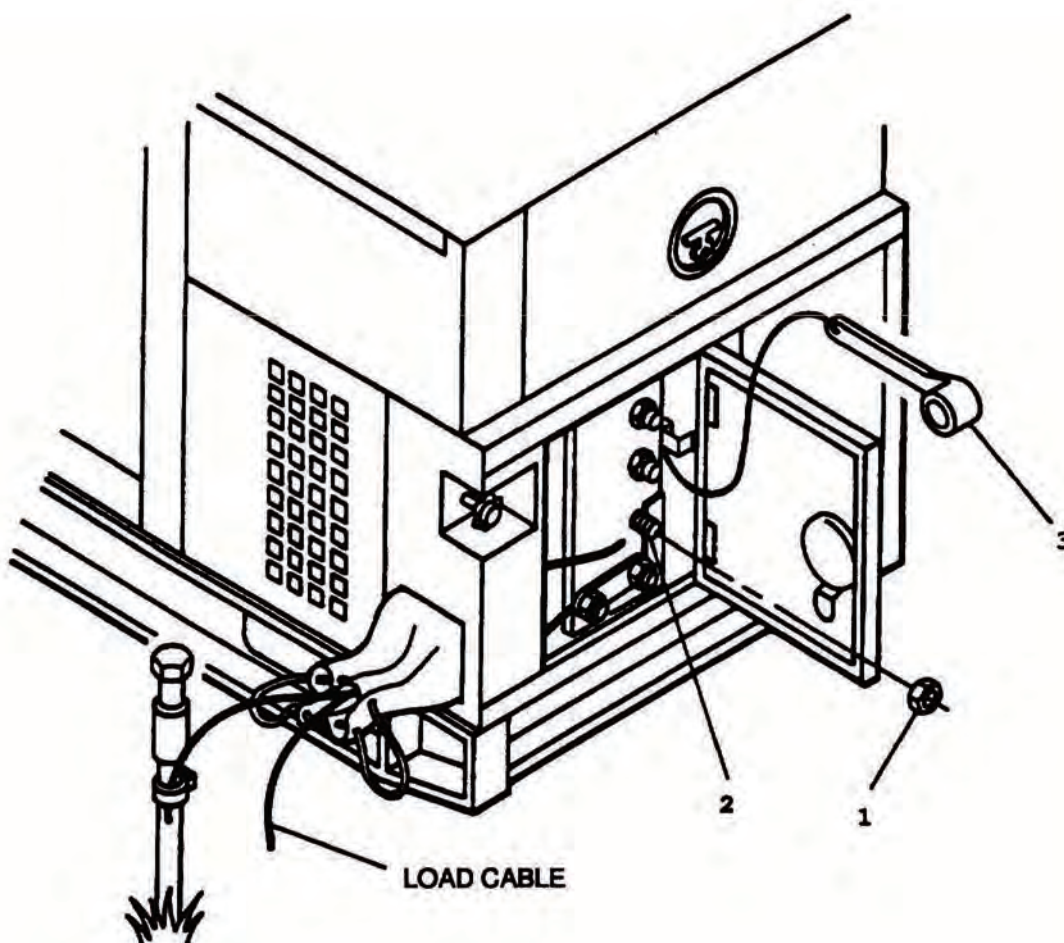


Figure 2. Installation of Load Cables.

END OF TASK

INITIAL ADJUSTMENTS, BEFORE USE AND SELF-TEST

Initial Adjustments

1. Place DEAD CRANK switch in NORMAL position.
2. Push DC CONTROL POWER circuit breaker in.
3. Ensure AC voltage reconnection switch is positioned to match voltage requirements.

END OF TASK

Before Use

Perform all BEFORE PMCS, refer to WP 0011, Table 1.

1. Place VM-AM transfer switch in a position corresponding to output terminal load connections, refer to WP 0004, Table 1.
2. Pull out EMERGENCY STOP pushbutton.

END OF TASK

Self Test

1. Place MASTER SWITCH to PRIME AND RUN position.
2. Press PUSH TEST RESET LAMPS pushbutton on malfunction indicator panel. Ensure all indicator lights are lit. When PUSH TEST RESET LAMPS pushbutton is released, all lights should go out.
3. Press BATTLE SHORT press-to-test light on the control panel assembly. Ensure indicator light is lit. When press-to-test light is released, light should go out.
4. Press AC CIRCUIT INTERRUPTER press-to-test light on the control panel assembly. Ensure indicator light is lit. When press-to-test light is released, light should go out.

END OF TASK

OPERATING PROCEDURES

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. Never attempt to start the generator set unless it is properly grounded. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. DO NOT touch live voltage connections. Never attempt to connect or disconnect load cables while the generator set is running. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Exhaust discharge contains deadly gases including carbon monoxide. DO NOT operate generator set in enclosed areas unless exhaust discharge is properly vented outside. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Hot exhaust gases can ignite flammable materials. Allow room for safe discharge of hot gases and sparks. Failure to comply with this warning can cause injury or death to personnel.

Starting Procedure**WARNING**

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. Never attempt to start the generator set unless it is properly grounded. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Operating the generator set exposes personnel to a high noise level. Hearing protection must be worn when operating or working near the generator set when the generator set is running. Failure to comply with this warning can cause hearing damage to personnel.

CAUTION

Do not crank engine in excess of fifteen seconds. Allow starter to cool at least fifteen seconds between attempted starts. Failure to observe this caution could result in damage to the starter.

NOTE

At temperatures below 40 °F (4 °C) it may be necessary to use the Cold Weather Starting Aid.

NOTE

Ensure all generator set access doors, except control panel access door, are closed.

1. In cold weather conditions, place MASTER SWITCH to PREHEAT position for approximately 30 seconds.
2. Rotate MASTER SWITCH to START position.
3. Hold MASTER SWITCH in START position until oil pressure reaches at least 25 psi (172 kPa), voltage has increased to its approximate rated value, and engine has reached stable operating speed.
4. Release MASTER SWITCH to PRIME AND RUN position.
5. If operating with an auxiliary fuel source, rotate MASTER SWITCH to PRIME AND RUN AUX FUEL position.

NOTE

Under normal conditions warm up engine without load for five minutes. (If required, load can be applied immediately.)

6. Check COOLANT TEMP [170-200 °F (77-93 °C)] and OIL PRESSURE [25-60 psi (172-414 kPa)] indicators for normal readings.
7. Using VOLTAGE adjust potentiometer (WP 0004, Figure 1, Item 10) and Frequency Adjust Control (WP 0002, Figure 1, Item 20 and WP 0004, Figure 3), adjust voltage and frequency to rated values.
8. Press GROUND FAULT CIRCUIT INTERRUPTER TEST pushbutton. Ensure indicator window is clear. Press RESET pushbutton and ensure indicator is red.
9. Place AC CIRCUIT INTERRUPTER switch to CLOSED position.
10. Ensure frequency and voltage are still at required values. Adjust if necessary.
11. Rotate VM-AM transfer switch to each phase position while observing ammeter (PERCENT RATED CURRENT meter). If more than rated load is indicated in any phase, reduce load.
12. Perform all DURING OPERATION PMCS requirements in accordance with WP 0011, Table 1.

END OF TASK

Stopping Procedure

1. Place AC CIRCUIT INTERRUPTER switch in OPEN position. Disconnect all cords from convenience receptacle.
2. Allow generator set to operate five minutes with no load applied.
3. Place MASTER SWITCH in OFF position.

4. Perform all AFTER OPERATION PMCS requirements in accordance with WP 0011, Table 1.
5. Place DEAD CRANK switch to OFF position.

END OF TASK**USE OF THE CONVENIENCE RECEPTACLE****WARNING**

Power is available when the main contactor is open. Avoid accidental contact. Failure to comply with this warning can cause injury or death to personnel.

CAUTION

The maximum power rating for the convenience receptacle is 10 Amps. Continuous operation above 10 Amps can result in damage to the generator set.

1. Start the generator set if it is not operating. Refer to Starting Procedure.
2. Ensure the load does not exceed the maximum rating.
3. Reset the Ground Fault Circuit Interrupter.
4. Plug appropriate connector into convenience receptacle.

END OF TASK**DECALS AND INSTRUCTIONS PLATES**

There are identification and instruction plates on the generator set. Figure 3 through Figure 21 show the location and contents of each plate on the generator set.

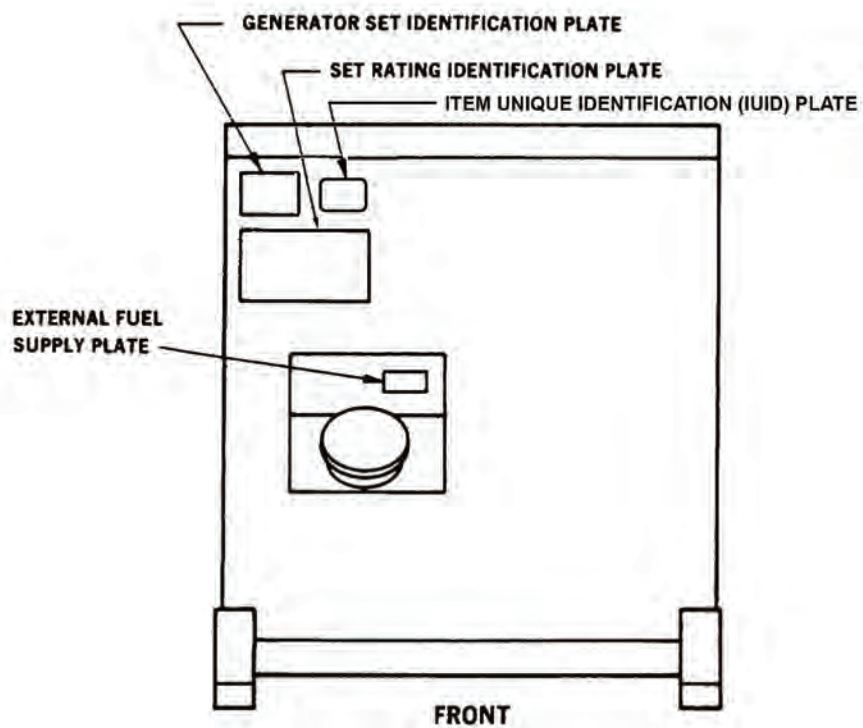
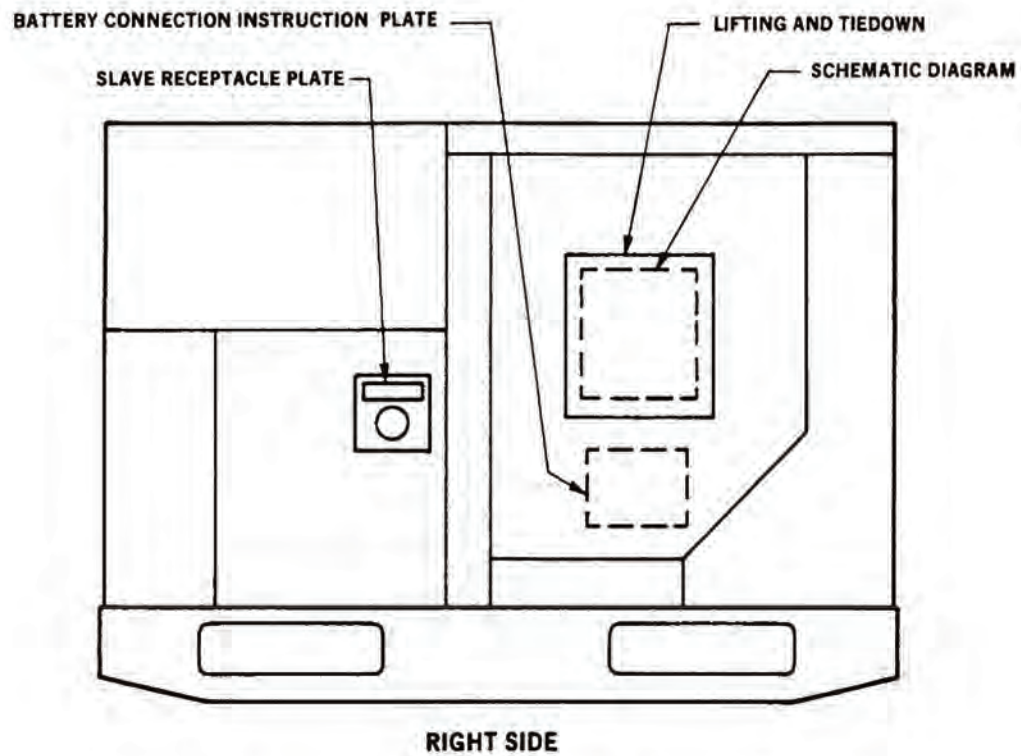


Figure 3. Operating Instructions Plates (Front and Right Side).

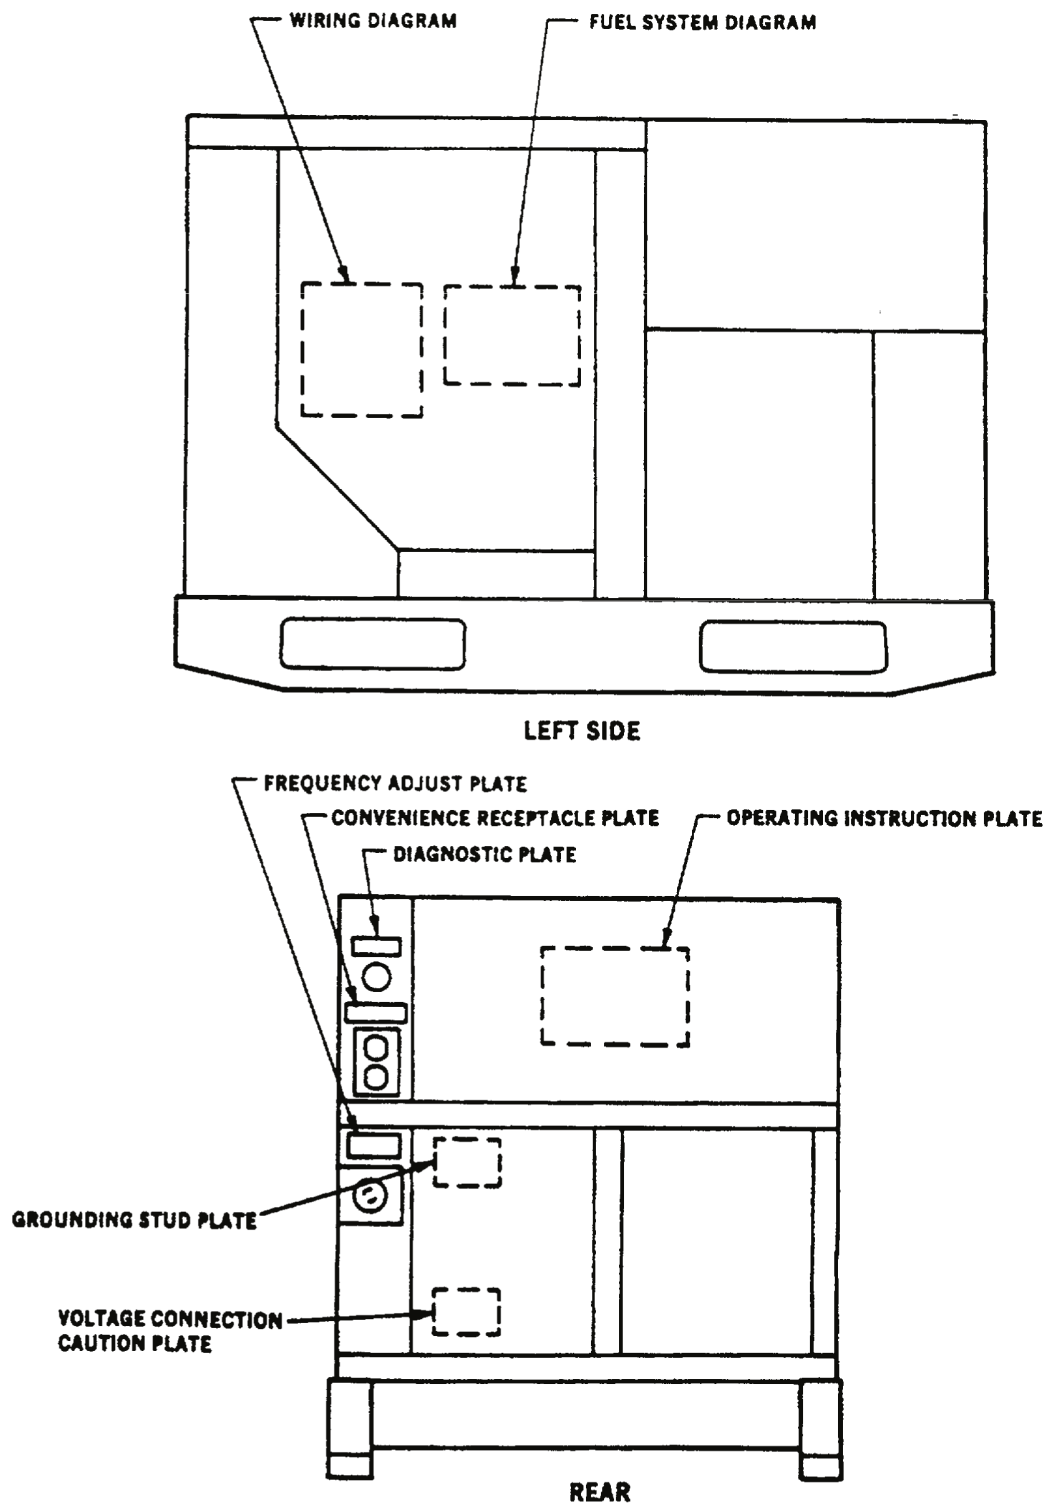


Figure 4. Operating Instructions Plates (Rear and Left Side).

| OPERATING INSTRUCTIONS | | SERVICE INSTRUCTIONS | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|------------------|-----------------------|---------|--|---------------------|-------------|---------------------|------------------|-----------------|-----------------|-----------------|------------------|--------------|-----------------|-----------------|-----------------|--------------|-----------------|-----------------|-----------|--------------|-----------------|--|--|---|-----------|--|-----------------|--|----------------|--|-----------|------|-----|----------|-----------------------|-------|---|-----|-----|-----|-----|-----|---------|------|------|------|------|------|
| <p>WARNING:</p> <p>A. TO AVOID SHOCK HAZARD SET FRAME MUST BE GROUNDED. CONNECT AFG. NO. 8 WIRE OR LARGER FROM GROUND TERMINAL (GND) TO EARTH GROUND.</p> <p>B. BATTERY NEGATIVE TERMINAL IS CONNECTED TO GROUND.</p> <p>C. IDLING OF THE ENGINE AT SPEEDS LOWER THAN THOSE ATTAINABLE THROUGH THE CONTROLS MAY RESULT IN DAMAGE TO ELECTRICAL COMPONENTS.</p> <p>1. PRESTART CHECKS</p> <p>A. CHECK RADIATOR WORKING, ENGINE LUBE OIL, FUEL, AND BATTERY ELECTROLYTE LEVEL.</p> <p>B. CHECK FUEL-WATER SEPARATOR. DRAIN WATER IF PRESENT.</p> <p>C. PLACE CONTROL SWITCHES TO OFF OR EQUIVALENT POSITION.</p> <p>2. NORMAL START (TEMPERATURE ABOVE -25° F)</p> <p>A. CRANK THE ENGINE BY PLACING THE MASTER SWITCH IN THE START POSITION. DO NOT CRANK FOR CONTINUOUS PERIODS LONGER THAN 15 SECONDS.</p> <p>B. AT TEMPERATURES BELOW APPROXIMATELY 40° F IT MAY BE NECESSARY TO USE THE AIR INTAKE MANIFOLD HEATER. HOLD THE MASTER SWITCH IN THE PRE-HEAT POSITION FOR APPROXIMATELY 30 SECONDS PRIOR TO STEP C.</p> | <p>C. HOLD MASTER SWITCH IN START POSITION UNTIL OIL PRESSURE BUILDS UP TO AT LEAST 25 PSI THEN RELEASE TO PRIME & RUN POSITION.</p> <p>D. ADJUST VOLTAGE AND FREQUENCY TO PROPER VALUES. IF NECESSARY, RESET FAULT INDICATOR LIGHTS.</p> <p>E. UNDER NORMAL CONDITIONS RUN ENGINE AT NO LOAD FOR 3 MINUTES FOR WARM UP. IF REQUIRED LOAD CAN BE APPLIED IMMEDIATELY.</p> <p>F. CLOSE THE AC CIRCUIT INTERRUPTER BY PLACING THE AC CIRCUIT INTERRUPTER SWITCH IN THE CLOSE POSITION.</p> <p>3. STOPPING THE SET</p> <p>A. REMOVE LOAD BY PLACING THE AC CIRCUIT INTERRUPTER SWITCH IN OPEN POSITION.</p> <p>B. STOP UNIT BY PLACING MASTER SWITCH IN OFF POSITION.</p> <p>4. REFER TO APPLICABLE TECHNICAL MANUAL FOR ADDITIONAL INFORMATION ON MAINTENANCE AND TROUBLESHOOTING PROCEDURES.</p> | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">FUEL AND OIL</th> <th colspan="2" style="text-align: center;">COOLANT</th> </tr> <tr> <th style="text-align: center;">AMBIENT TEMPERATURE</th> <th style="text-align: center;">DIESEL FUEL</th> <th style="text-align: center;">AMBIENT TEMPERATURE</th> <th style="text-align: center;">RADIATOR COOLANT</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">+20°F TO +120°F</td> <td style="text-align: center;">W-F-800 OR DF-2</td> <td style="text-align: center;">+40°F TO +120°F</td> <td style="text-align: center;">WATER ML-A-53508</td> </tr> <tr> <td style="text-align: center;">0°F TO +20°F</td> <td style="text-align: center;">W-F-800 OR DF-1</td> <td style="text-align: center;">-25°F TO +120°F</td> <td style="text-align: center;">WATER A-A-62624</td> </tr> <tr> <td style="text-align: center;">-25°F TO 0°F</td> <td style="text-align: center;">W-F-800 OR DF-1</td> <td style="text-align: center;">-25°F TO +120°F</td> <td style="text-align: center;">A-A-62624</td> </tr> <tr> <td style="text-align: center;">-25°F TO 0°F</td> <td style="text-align: center;">W-F-800 OR DF-A</td> <td></td> <td></td> </tr> </tbody> </table> | FUEL AND OIL | | COOLANT | | AMBIENT TEMPERATURE | DIESEL FUEL | AMBIENT TEMPERATURE | RADIATOR COOLANT | +20°F TO +120°F | W-F-800 OR DF-2 | +40°F TO +120°F | WATER ML-A-53508 | 0°F TO +20°F | W-F-800 OR DF-1 | -25°F TO +120°F | WATER A-A-62624 | -25°F TO 0°F | W-F-800 OR DF-1 | -25°F TO +120°F | A-A-62624 | -25°F TO 0°F | W-F-800 OR DF-A | | | <p style="text-align: center;">SYSTEM CAPACITY</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">FUEL TANK</th> <th colspan="2" style="text-align: center;">LUBRICATING OIL</th> <th colspan="2" style="text-align: center;">COOLING SYSTEM</th> </tr> <tr> <th style="text-align: center;">CRANKCASE</th> <th style="text-align: center;">FULL</th> <th style="text-align: center;">LOW</th> <th style="text-align: center;">CAPACITY</th> <th style="text-align: center;">RADIATOR AND OVERFLOW</th> <th style="text-align: center;">BLOCK</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">5</td> <td style="text-align: center;">3.2</td> <td style="text-align: center;">2.4</td> <td style="text-align: center;">.28</td> <td style="text-align: center;">5.0</td> <td style="text-align: center;">2.2</td> </tr> <tr> <td style="text-align: center;">GALLONS</td> <td style="text-align: center;">QTS.</td> <td style="text-align: center;">QTS.</td> <td style="text-align: center;">QTS.</td> <td style="text-align: center;">QTS.</td> <td style="text-align: center;">QTS.</td> </tr> </tbody> </table> <p style="font-size: small;">NOTE: FOR OPERATION USING J#4, J#5, OR J#6 FUEL REFER TO APPLICABLE OPERATING INSTRUCTION MANUAL.</p> | FUEL TANK | | LUBRICATING OIL | | COOLING SYSTEM | | CRANKCASE | FULL | LOW | CAPACITY | RADIATOR AND OVERFLOW | BLOCK | 5 | 3.2 | 2.4 | .28 | 5.0 | 2.2 | GALLONS | QTS. | QTS. | QTS. | QTS. | QTS. |
| FUEL AND OIL | | COOLANT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| AMBIENT TEMPERATURE | DIESEL FUEL | AMBIENT TEMPERATURE | RADIATOR COOLANT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| +20°F TO +120°F | W-F-800 OR DF-2 | +40°F TO +120°F | WATER ML-A-53508 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0°F TO +20°F | W-F-800 OR DF-1 | -25°F TO +120°F | WATER A-A-62624 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -25°F TO 0°F | W-F-800 OR DF-1 | -25°F TO +120°F | A-A-62624 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| -25°F TO 0°F | W-F-800 OR DF-A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FUEL TANK | | LUBRICATING OIL | | COOLING SYSTEM | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| CRANKCASE | FULL | LOW | CAPACITY | RADIATOR AND OVERFLOW | BLOCK | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | 3.2 | 2.4 | .28 | 5.0 | 2.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| GALLONS | QTS. | QTS. | QTS. | QTS. | QTS. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Figure 5. Operating Instructions Plate - Sample.

| US DEPARTMENT OF DEFENSE NATO STANDARD OTAN | |
|---|---|
| GENERATOR SET DIESEL ENGINE 5KW 60HZ | |
| MODEL MEP-802A | NSN 6115-01-274-7387 |
| SER NO RZB | REG NO. |
| TM 9-6115-641-10 | NAVFAC 9-6115-641-10 |
| TO 35C2-3-456-11 | TM - |
| VOLTS 120V 1PH, 120/240V 1PH, 120/208V 3PH | |
| AMPS 52, 26, 17 | PF 0.8 |
| DRY WT 800 [LB] | LG 50.6 [IN] W 32 [IN] HGT 37 [IN] |
| DATE MFD | CONTR NO DAAK01-88-D-0080 |
| WARRANTY | DATE INSP |
| MFD BY LIBBY CORP | INSP STAMP |
| 30554-88-20063-01 | |

| US DEPARTMENT OF DEFENSE NATO STANDARD OTAN | |
|---|---|
| GENERATOR SET DIESEL ENGINE 5KW 400HZ | |
| MODEL MEP-812A | NSN 6115-01-274-7391 |
| SER NO RZB | REG NO. |
| TM 9-6115-641-10 | NAVFAC 9-6115-641-10 |
| TO 35C2-3-456-11 | TM - |
| VOLTS 120V 1PH, 120/240V 1PH, 120/208V 3PH | |
| AMPS 52, 26, 17 | PF 0.8 |
| DRY WT 825 [LB] | LG 50.6 [IN] W 32 [IN] HGT 37 [IN] |
| DATE MFD | CONTR NO DAAK01-88-D-0080 |
| WARRANTY | DATE INSP |
| MFD BY LIBBY CORP | INSP STAMP |
| 30554-88-20063-02 | |

Figure 6. Generator Set Identification Plates (DAAK01-88-D-0080).

| US DEPARTMENT OF DEFENSE NATO STANDARD OTAN | |
|---|---|
| GENERATOR SET DIESEL ENGINE 5KW 60HZ | |
| MODEL MEP-802A | NSN 6115-01-274-7387 |
| SER NO FZ | REG NO. |
| TM 9-6115-641-10 | NAVFAC 9-6115-641-10 |
| TO 35C2-3-456-11 | TM - |
| VOLTS 120V 1PH, 120/240V 1PH, 120/208V 3PH | |
| AMPS 52, 26, 17 | PF 0.8 |
| DRY WT 800 [LB] | LG 50.6 [IN] W 32 [IN] HGT 37 [IN] |
| DATE MFD | CONTR NO DAAK01-94-D-0036 |
| WARRANTY | DATE INSP |
| MFD BY FERMONT DIV | INSP STAMP |
| 30554-88-20063-01 | |

| US DEPARTMENT OF DEFENSE NATO STANDARD OTAN | |
|---|---|
| GENERATOR SET DIESEL ENGINE 5KW 400HZ | |
| MODEL MEP-812A | NSN 6115-01-274-7391 |
| SER NO FZ | REG NO. |
| TM 9-6115-641-10 | NAVFAC 9-6115-641-10 |
| TO 35C2-3-456-11 | TM - |
| VOLTS 120V 1PH, 120/240V 1PH, 120/208V 3PH | |
| AMPS 52, 26, 17 | PF 0.8 |
| DRY WT 825 [LB] | LG 50.6 [IN] W 32 [IN] HGT 37 [IN] |
| DATE MFD | CONTR NO DAAK01-94-D-0036 |
| WARRANTY | DATE INSP |
| MFD BY FERMONT DIV | INSP STAMP |
| 30554-88-20063-02 | |

Figure 7. Generator Set Identification Plates (DAAK01-94-D-0036).

US DEPARTMENT OF DEFENSE
NATO STANDARD OTAN

GENERATOR SET DIESEL ENGINE 5KW 60HZ

MODEL MEP-802A NSN 6115-01-274-7387
SER NO FZ REG NO.
TM 9-6115-641-10 NAVFAC 9-6115-641-10
TO 35C2-3-456-11 TM -
VOLTS 120V 1PH, 120/240V 1PH,
120/208V 3PH
AMPS 52, 26, 17 PF 0.8
DRY WT 800 LG 50.6 W 32 HGT 37
DATE MFD CONTR NO DAAK01-97-D-0034
WARRANTY DATE INSP
MFD BY FERMONT DIV INSP STAMP
30554-88-20063-01

US DEPARTMENT OF DEFENSE
NATO STANDARD OTAN

GENERATOR SET DIESEL ENGINE 5KW 400HZ

MODEL MEP-812A NSN 6115-01-274-7391
SER NO FZ REG NO.
TM 9-6115-641-10 NAVFAC 9-6115-641-10
TO 35C2-3-456-11 TM -
VOLTS 120V 1PH, 120/240V 1PH,
120/208V 3PH
AMPS 52, 26, 17 PF 0.8
DRY WT 825 LG 50.6 W 32 HGT 37
DATE MFD CONTR NO DAAK01-97-D-0034
WARRANTY DATE INSP
MFD BY FERMONT DIV INSP STAMP
30554-88-20063-02

Figure 8. Generator Set Identification Plates (DAAK01-97-D-0034).

GENERATOR SET, DIESEL FUELED
TACTICAL QUIET
MODE III (60 HERTZ), SIZE 5 (5 KW)

| KW CAPACITY | | | PF | FREQ | FUEL | OUTPUT VOLTAGE | VOLTAGE ADJUST RANGE | PHASE | CURRENT CAPACITY AMPS |
|---------------|-------------------|------------------|-----|------|-------------|----------------|----------------------|-------|-----------------------|
| 120 DEG F S/L | 95 DEG F 4000 FT | 95 DEG F 8000 FT | | | | | | | |
| 5.0 | 5.0 | 4.3 | .80 | 60 | DF1/DF2/DFA | 120/208 | 205-220 | 3 | 17 |
| 5.0 | 5.0 | 4.3 | .80 | 60 | DF1/DF2/DFA | 120/240 | 228-252 | 1 | 26 |
| 5.0 | 5.0 | 4.3 | .80 | 60 | DF1/DF2/DFA | 120 | 114-126 | 1 | 52 |
| 5.0 | 5.0 | 4.3 | .80 | 60 | JP5/JP8 | 120/208 | 205-220 | 3 | 17 |
| 5.0 | 5.0 | 4.3 | .80 | 60 | JP5/JP8 | 120/240 | 228-252 | 1 | 26 |
| 5.0 | 5.0 | 4.3 | .80 | 60 | JP5/JP8 | 120 | 114-126 | 1 | 52 |
| KW CAPACITY | | | PF | FREQ | FUEL | OUTPUT VOLTAGE | VOLTAGE ADJUST RANGE | PHASE | CURRENT CAPACITY AMPS |
| 100 DEG F S/L | 100 DEG F 3000 FT | | | | | | | | |
| 4.2 | 4.2 | - | .80 | 60 | JP4 | 120/208 | 205-220 | 3 | 14 |
| 4.2 | 4.2 | - | .80 | 60 | JP4 | 120/240 | 228-252 | 1 | 21 |
| 4.2 | 4.2 | - | .80 | 60 | JP4 | 120 | 114-126 | 1 | 43 |

30554-88-20160-01

GENERATOR SET, DIESEL FUELED
TACTICAL QUIET
MODE II (400 HERTZ), SIZE 5 (5 KW)

| KW CAPACITY | | | PF | FREQ | FUEL | OUTPUT VOLTAGE | VOLTAGE ADJUST RANGE | PHASE | CURRENT CAPACITY AMPS |
|---------------|-------------------|------------------|-----|------|-------------|----------------|----------------------|-------|-----------------------|
| 120 DEG F S/L | 95 DEG F 4000 FT | 95 DEG F 8000 FT | | | | | | | |
| 5.0 | 5.0 | 4.3 | .80 | 400 | DF1/DF2/DFA | 120/208 | 205-220 | 3 | 17 |
| 5.0 | 5.0 | 4.3 | .80 | 400 | DF1/DF2/DFA | 120/240 | 228-252 | 1 | 26 |
| 5.0 | 5.0 | 4.3 | .80 | 400 | DF1/DF2/DFA | 120 | 114-126 | 1 | 52 |
| 5.0 | 5.0 | 4.3 | .80 | 400 | JP5/JP8 | 120/208 | 205-220 | 3 | 17 |
| 5.0 | 5.0 | 4.3 | .80 | 400 | JP5/JP8 | 120/240 | 228-252 | 1 | 26 |
| 5.0 | 5.0 | 4.3 | .80 | 400 | JP5/JP8 | 120 | 114-126 | 1 | 52 |
| KW CAPACITY | | | PF | FREQ | FUEL | OUTPUT VOLTAGE | VOLTAGE ADJUST RANGE | PHASE | CURRENT CAPACITY AMPS |
| 100 DEG F S/L | 100 DEG F 3000 FT | | | | | | | | |
| 4.2 | 4.2 | - | .80 | 400 | JP4 | 120/208 | 205-220 | 3 | 14 |
| 4.2 | 4.2 | - | .80 | 400 | JP4 | 120/240 | 228-252 | 1 | 21 |
| 4.2 | 4.2 | - | .80 | 400 | JP4 | 120 | 114-126 | 1 | 43 |

30554-88-20160-02

Figure 9. Set Rating Identification Plates - Sample.

(17V) 93742

(1P) MEP-802A

(S) FZ

(17V) 93742

(1P) MEP-812A

(S) RZ

Figure 10. Item Unique Identification (IUID) Plates - Sample.

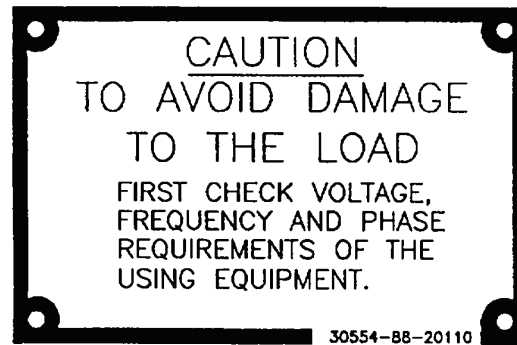


Figure 11. Voltage Connection Caution Plate.

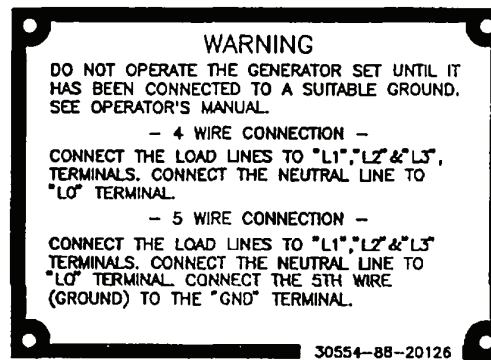


Figure 12. Grounding Stud Plate.



Figure 13. NATO Slave Receptacle Plate.

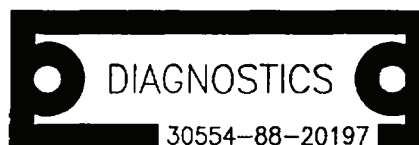


Figure 14. Diagnostics Plate.

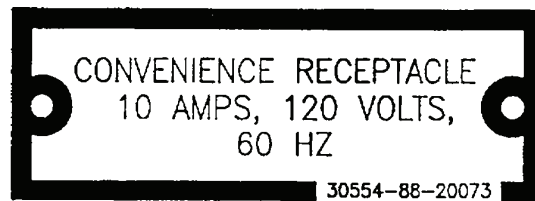


Figure 15. Convenience Receptacle Plate.



Figure 16. External Fuel Plate Supply.

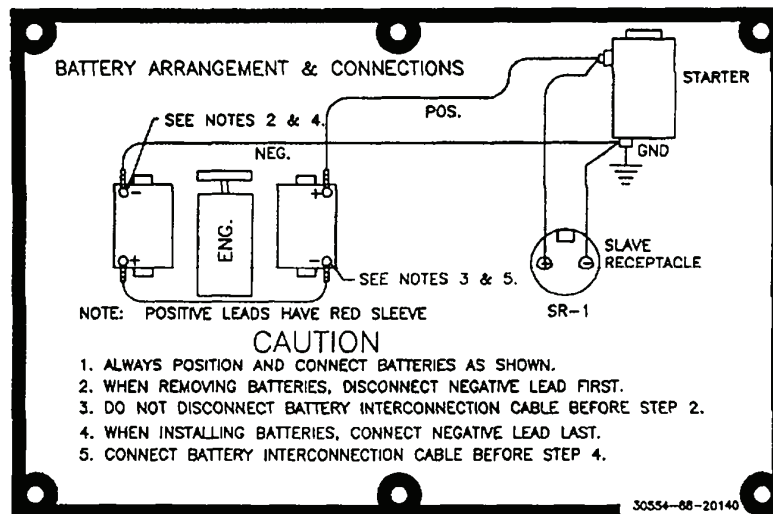


Figure 17. Battery Connection Instruction Plate.

| | | | |
|--------------------------|---|-------------|----------|
| US DEPARTMENT OF DEFENSE | | | |
| NOM | GENERATOR, ALTERNATING CURRENT, SYNCHRONOUS BRUSHLESS | | |
| MAKE | MILITARY DESIGN | | |
| MODEL | 88-20038 | | |
| SER NO. | | NO OF WIRES | 12 |
| VOLTS | 120V | AMPS | 17.4/8.7 |
| KW | 5 | KVA | 6.25 |
| | | PF | 0.8 |
| HERTZ | 60 | PH | 1, 3 |
| | | RPM | 1800 |
| MFD BY | ONAN CORPORATION | | |
| 30554-88-20064-01 | | | |

| | | | |
|--------------------------|---|-------------|----------|
| US DEPARTMENT OF DEFENSE | | | |
| NOM | GENERATOR, ALTERNATING CURRENT, SYNCHRONOUS BRUSHLESS | | |
| MAKE | MILITARY DESIGN | | |
| MODEL | 88-20039 | | |
| SER NO. | | NO OF WIRES | 12 |
| VOLTS | 120V | AMPS | 17.4/8.7 |
| KW | 5 | KVA | 6.25 |
| | | PF | 0.8 |
| HERTZ | 400 | PH | 1, 3 |
| | | RPM | 2000 |
| MFD BY | ONAN CORPORATION | | |
| 30554-88-20064-02 | | | |

Figure 18. Generator Identification Plates.

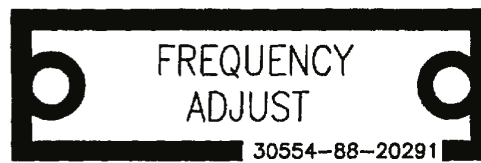


Figure 19. Frequency Adjust Plate.

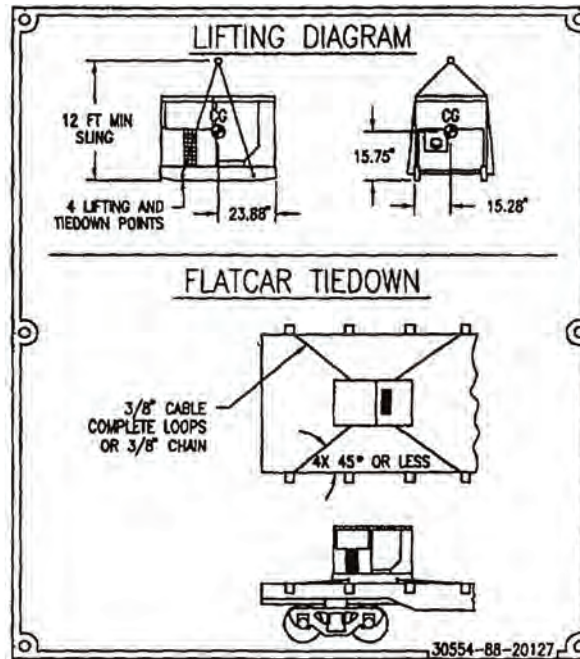


Figure 20. Lifting and Tiedown Diagram Plate.

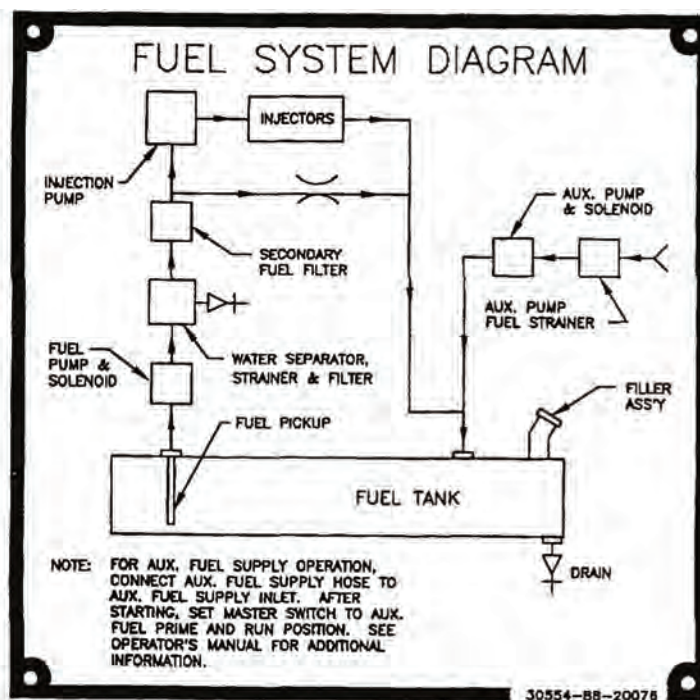


Figure 21. Fuel System Diagram Plate.

PREPARATION FOR MOVEMENT

1. Shut down generator set. Refer to Stopping Procedure.
2. Disconnect load cables.
3. When using auxiliary fuel line, disconnect line, drain excess fuel from line and store line in storage box.
4. Disconnect ground cable and remove ground rods. Store ground rod in holding clip on right side of skid base. Store cable and couplings in storage box.
5. Secure all generator set access doors and panels.
6. For initial set up after movement, refer to Installation of Ground Rod for assembly and preparation for use.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****OPERATION UNDER UNUSUAL CONDITIONS**

INITIAL SETUP:**Tools and Special Tools**

None

Materials/Parts

Antifreeze Coolant

Personnel Required

1

References

N/A

Equipment ConditionReady for Operation

UNUSUAL ENVIRONMENT / WEATHER**Operation in Extreme Cold Weather Below -25 °F (-31 °C)**

The generator set operates in ambient temperatures as low as -25 °F (-31 °C) without special winterization equipment. To ensure satisfactory operation under extreme cold weather the following steps must be taken:

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. DO NOT touch live voltage connections. Never attempt to connect or disconnect load cables while the generator set is running. Failure to comply with this warning can cause injury or death to personnel.

WARNING

In extreme cold weather, skin can stick to metal. Avoid contacting metal items with bare skin in extreme cold weather. Failure to comply with this warning can cause injury to personnel.

1. Keep generator set and surrounding area as free of ice and snow as practical.
2. Keep fuel tank full to protect against moisture, condensation and accumulation of water.
3. Ensure that proper grade diesel fuel is used.
4. Keep batteries free from corrosion and in a well charged condition.

END OF TASK

Operation in Extreme Heat Above 120 °F (49 °C)

1. Check vents and radiator air passages frequently for obstructions.
2. Check coolant temperature indicator frequently for any indication of overheating.
3. Allow sufficient space for fuel expansion when filling fuel tank.
4. Keep generator clean and free of dirt. Clean obstructions from generator intake and outlet screens.
5. Clean external surface of engine when generator set is not operating.

END OF TASK**Operation in Dusty or Sandy Areas**

1. If possible, provide a shelter for generator set. Use available natural barriers to shield generator set from blowing dust or sand.
2. Wet down dusty and sandy surface areas around generator set frequently if water is available.
3. Keep all access doors closed, as much as possible, to prevent entry of dust and sand into housing assembly.
4. Wipe dust and sand frequently from the generator set external surface and components. Wash exterior surfaces frequently with clean water when generator set is not operating.
5. Service engine air cleaner assembly frequently to compensate for intake of additional dust or sand. Refer to WP 0012, Service of Air Cleaner Assembly.
6. Drain sediment frequently from fuel filter/water separator. When servicing fuel tank be careful to prevent dust or sand from entering fuel tank.
7. Change engine oil and oil filter frequently.
8. Store oil and fuel in dust-free containers.
9. Ensure that generator set ground connections are free of dust and sand and connections are tight before starting the unit.

END OF TASK**Operation Under Rainy or Humid Conditions****CAUTION**

Failure to remove waterproof material before operating generator set could result in equipment damage.

1. If possible, provide a shelter for generator set. Cover generator set with canvas or other waterproof material when it is not being operated.
2. Provide adequate drainage to prevent water from accumulating on operation site.
3. Keep all generator set access doors closed, as much as possible, to prevent entry of water into housing assembly.
4. Drain water frequently from fuel filter/water separator.

WARNING

Dangerous voltage exists on live circuits. Always observe precautions and never work alone. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DC voltages are present at generator set electrical components even with generator set shutdown. Avoid grounding yourself when touching electrical components. Failure to follow this warning can result in personal injury.

5. Remove moisture from generator set components before and after each operating period.
6. Keep fuel tank full to protect against moisture, condensation and accumulation of water.

END OF TASK**Operation in Salt Water Areas****CAUTION**

Failure to remove waterproof material before operating generator set could result in equipment damage.

1. If possible, provide a shelter for the generator set. Locate generator set so that radiator faces into prevailing winds. Use natural barriers or, if possible, construct a barrier to protect generator set from salt water. Cover generator set with canvas or other waterproof material when it is not being operated.
2. Keep all generator access doors closed, as much as possible, to prevent entry of salt water into housing assembly.
3. Wash exterior surfaces frequently with clean water when generator set is not operating.
4. Check wiring connections for corrosion and wire insulation for signs of deterioration.

END OF TASK**Operation at High Altitudes**

The generator set will operate at elevations up to 4000 feet (1219.1 meters) above sea level without special adjustment or reduction in load. At elevations greater than 4000 feet (1219.1 meters) above sea level, the kilowatt rating is reduced approximately 3.5 percent for each additional 1000 feet (304.8 meters).

END OF TASK**INTERIM NUCLEAR, BIOLOGICAL, AND CHEMICAL (NBC) DECONTAMINATION PROCEDURES****Operation While in Contaminated Areas**

The generator set is capable of being operated by personnel wearing nuclear, biological, or chemical (NBC) protective clothing without special tools or supporting equipment. Refer to FM 3-11.5, NBC Decontamination for information on decontamination procedures. Specific procedures for the generator set are the following:

1. Control panel indicators sealing gasket, rubber sleeves, and rope draw cords at output terminal access ports, control panel door gaskets, access door gaskets, rubber tubing, and belts within the engine compartment, coverings for electrical conduits, external water drain tubing, and retaining cords for slave receptacle covers will absorb and retain chemical agents. Replacement of these items is the recommended method of

decontamination.

2. Lubricants, fuel, coolant, or battery fluids may be present on the external surfaces of the generator set or components due to leaks or normal operation. These fluids will absorb NBC agents. The preferred method of decontamination is removal of these fluids using conventional decontamination methods in accordance with FM 3-11.5.
3. Continued decontamination of external generator set surfaces with super-tropical bleach (STB)/decontamination solution number 2 (DS2) will degrade clear plastic indicator coverings to a point where reading indicators will become impossible. This problem will become more evident for soldiers wearing protective masks. Therefore, the use of STB or DS2 decontamination in these areas should be minimized. Indicators should be decontaminated with warm soapy water.
4. External surfaces of the control panel assembly that are marked with painted or stamped lettering will not withstand repeated decontamination with STB or DS2 without degradation of this lettering. Therefore, the recommended method of decontamination for these areas is with warm soapy water.
5. Areas that will entrap contaminants, making efficient decontamination extremely difficult, include the following:
 - a. Exposed heads of screws.
 - b. Areas adjacent to and behind exposed wiring conduits.
 - c. Hinged areas or access doors.
 - d. Retaining chains for external receptacle covers.
 - e. Areas around the tie-down/lifting rings, crevices around access doors, external screens covering ventilation areas, the external oil drain valve, and areas adjacent to the external fuel drain valve.
 - f. Areas behind knobs and switches on the control panel, externally mounted equipment specification data plates, external receptacle covers, access doors, access door locking mechanisms, recessed wells for access door handles, fuel cap, load terminal board, slave receptacles, and frequency adjustment controls.
 - g. Replacement of these items, if available, is the preferred method of decontamination. Conventional methods of decontamination should be used on these areas, while stressing the importance of thoroughness and the probability of some degree of continuing contact and vapor hazard.
6. In an NBC contaminated environment, the generator set should be operated with all access doors closed to reduce the effects of contamination.
7. The use of overhead shelters or chemical protective covers is recommended as an additional means of protection against contamination in accordance with FM 3-11.5. However, if using covers, care should be taken to provide adequate space for air flow and exhaust.
8. For additional NBC information, refer to FM 3-11.3 and FM 3-11.4. Other services use applicable publications for NBC.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE****5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****EMERGENCY****INITIAL SETUP:****Tools and Special Tools**

None

Materials/Parts

Coolant (WP 0016, Table 1, Item 8)

Oil (WP 0016, Table 1, Item 4)

Gloves

Cloth (WP 0016, Table 1, Item 7)

Fuel

Personnel Required

1

References

Generator Set Servicing and Inspection (WP 0012)

LO 9-6115-641-12

Operation Under Usual Conditions (WP 0005)

Troubleshooting Procedures (WP 0009)

NATO SLAVE RECEPTACLE START OPERATION**WARNING**

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. DO NOT touch live voltage connections. Never attempt to connect or disconnect load cables while the generator set is running. Failure to comply with this warning can cause injury or death to personnel.



WARNING

Slave receptacle (NATO connector) is electrically live at all times and is unfused. The Battery Disconnect Switch does not remove power from the slave receptacle. NATO slave receptacle has 24 VDC even when Battery Disconnect Switch is set to OFF. This circuit is only dead when the batteries are fully disconnected. Disconnect the batteries before performing maintenance on the slave receptacle. Failure to comply with this warning can cause injury or death to personnel.

General

The NATO slave receptacle can be used to start the generator set when batteries are discharged.

NATO Slave Emergency Starting Procedure

1. Connect one end of NATO slave cable to fully charged 24 VDC system and other end to discharged generator set's NATO slave receptacle. Start discharged generator set.
2. For generator set starting procedures, refer to WP 0005, Starting Procedure.
3. Remove NATO slave cable after generator set starts.

END OF TASK

EMERGENCY STOPPING

General

Depressing the EMERGENCY STOP pushbutton will stop the generator set.

NOTE

The generator set cannot be restarted without resetting the EMERGENCY STOP pushbutton and turning MASTER SWITCH to the OFF position.

END OF TASK

OPERATION USING BATTLE SHORT SWITCH

CAUTION

Continued operation using the BATTLE SHORT switch can result in damage to the generator set.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

NOTE

If any emergency situation requires continued operation of the generator set, the BATTLE SHORT switch is used to override all the safety devices except the short circuit devices and EMERGENCY STOP function.

NOTE

BATTLE SHORT switch must be OFF to start generator set.

1. Start generator set if set is not running. Refer to WP 0005, Starting Procedure.
2. Lift cover on BATTLE SHORT switch and position switch to ON.

END OF TASK

END OF WORK PACKAGE

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

CHAPTER 3

OPERATOR TROUBLESHOOTING PROCEDURES

FOR

5 kW GENERATOR SET (60 Hz AND 400 Hz),
SKID MOUNTED, TACTICAL QUIET

CHAPTER 3
OPERATOR TROUBLESHOOTING PROCEDURES

WORK PACKAGE INDEX

| <u>Title</u> | <u>WP Sequence No.</u> |
|---------------------------------|------------------------|
| TRUBLESHOOTING INDEX | 0008 |
| TRUBLESHOOTING PROCEDURES | 0009 |

OPERATOR MAINTENANCE

5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET
TROUBLESHOOTING INDEX

| <u>Malfunction/Symptom</u> | <u>Troubleshooting Procedure</u> |
|--|--------------------------------------|
| Engine fails to crank. | 0009-2 |
| Engine cranks but fails to start. | 0009-2 |
| Engine starts but stops when MASTER SWITCH is released from START position. | 0009-2 |
| Engine stops suddenly. | 0009-3 |
| Engine runs erratically or misfires. | 0009-3 |
| Engine does not develop full power. | 0009-3 |
| Engine knocks. | 0009-4 |
| Blue or white exhaust smoke. | 0009-4 |
| Black exhaust smoke. | 0009-4 |
| Low oil pressure. | 0009-5 |
| COOLANT TEMPERATURE indicator indicates engine overheating. | 0009-6 |
| BATTERY CHARGE ammeter shows low or no charge. | 0009-6 |
| BATTERY CHARGE ammeter shows excessive charging after prolonged operation. | 0009-7 |
| AC voltmeter (VOLTS AC) indicates low voltage. | 0009-7 |
| AC voltmeter (VOLTS AC) indicates correct voltage, but frequency meter (HERTZ) is off scale. | 0009-7 |
| AC voltmeter (VOLTS AC) fluctuates. | 0009-7 |
| Frequency meter (HERTZ) fluctuates. | 0009-8 |
| AC CIRCUIT INTERRUPTER light fails to light when AC CIRCUIT INTERRUPTER switch is closed. | 0009-8 |
| No voltage at the Convenience Receptacle. | 0009-8 |
| Winterization Kit | 0009-8 |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****TROUBLESHOOTING PROCEDURES**

INITIAL SETUP:**Tools and Special Tools**

NATO Slave Cable

Materials/Parts

None

Personnel Required

1

ReferencesOperation Under Usual Conditions (WP 0005)

GENERAL

This WP lists common malfunctions you may find during operation of the generator set. You should perform the tests/inspections and corrective actions in the order listed.

This manual cannot list all malfunctions that may occur, nor all tests or inspections and corrective actions. If a malfunction is not listed or is not corrected by listed corrective actions, notify your supervisor.

NOTE

Air Force users may perform maintenance only as authorized.

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when this generator set is in operation. Make sure generator set is completely shut down and free of any power source before attempting any repair or maintenance on the set, or when connecting or disconnecting load cables. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when the generator set is in operation. Never attempt to start the generator set unless it is properly grounded. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Shut down generator set before performing inspection of wiring. Failure to comply with this warning can cause injury or death to personnel.

ENGINE**SYMPTOM**

Engine fails to crank.

MALFUNCTION

Check that DEAD CRANK switch is in the NORMAL position.

CORRECTIVE ACTION

Place switch in NORMAL position.

MALFUNCTION

Check that DC CONTROL POWER circuit breaker is energized (in).

CORRECTIVE ACTION

If DC CONTROL POWER circuit breaker is de-energized (out), go to next malfunction.

MALFUNCTION

Check that Emergency Stop Switch is out.

CORRECTIVE ACTION

Reset Emergency stop switch to Normal.

MALFUNCTION

Defect in Engine Starting/Electrical System.

CORRECTIVE ACTION

Check battery connections. If loose or corroded, notify next higher maintenance level.

SYMPTOM

Engine cranks but fails to start.

MALFUNCTION

Cold ambient temperature.

CORRECTIVE ACTION

If ambient temperature is below 40 °F (4 °C) turn MASTER SWITCH to PREHEAT position for a maximum of 30 seconds prior to cranking engine. Refer to WP 0005, Starting Procedure.

MALFUNCTION

Check for dirty air cleaner element.

CORRECTIVE ACTION

Service air cleaner assembly. Refer to WP 0012, Service of Air Cleaner Assembly.

MALFUNCTION

Check for dirty fuel filter/water separator.

CORRECTIVE ACTION

Service fuel filter/water separator. Refer to WP 0012, Service of Air Cleaner Assembly. If engine still fails to start, notify next higher maintenance level.

SYMPTOM

Engine starts but stops when MASTER SWITCH is released from START position.

MALFUNCTION

Check for proper starting procedure.

CORRECTIVE ACTION

Hold MASTER SWITCH in START position until 25 psi (172 kPa) is reached. Refer to WP 0005, Starting Procedure.

MALFUNCTION

Check to see if any FAULT INDICATOR lights are lit.

CORRECTIVE ACTION

NO FUEL light is lit. Refer to WP 0012, Inspection of Fuel Tank. If any other lights are lit, notify next higher maintenance level.

SYMPTOM

Engine stops suddenly.

MALFUNCTION

Check to see if any FAULT INDICATOR lights are lit.

CORRECTIVE ACTION

NO FUEL light is lit. Refer to WP 0012, Inspection of Fuel Tank. If any other lights are lit, go to next malfunction.

MALFUNCTION

Check that DC CONTROL POWER circuit breaker is energized (in).

CORRECTIVE ACTION

If DC CONTROL POWER circuit breaker is de-energized (out), notify next higher maintenance level.

SYMPTOM

Engine runs erratically or misfires.

MALFUNCTION

Check for dirty air cleaner element.

CORRECTIVE ACTION

Service air cleaner assembly. Refer to WP 0012, Service of Air Cleaner Assembly.

MALFUNCTION

Check for contaminated fuel.

CORRECTIVE ACTION

Service fuel filter/water separator. Refer to WP 0012, Service of Air Cleaner Assembly.

MALFUNCTION

Check for improper type of fuel.

CORRECTIVE ACTION

If improper fuel is suspected, refer to WP 0012, Table 2, notify next higher maintenance level.

SYMPTOM

Engine does not develop full power.

MALFUNCTION

Check for dirty air cleaner element.

CORRECTIVE ACTION

Service air cleaner assembly. Refer to WP 0012, Service of Air Cleaner Assembly.

MALFUNCTION

Check for contaminated fuel.

CORRECTIVE ACTION

Service fuel filter/water separator. Refer to WP 0012, Service of Air Cleaner Assembly.

MALFUNCTION

Check for restricted exhaust system.

CORRECTIVE ACTION

Make sure exhaust opening is free from obstructions. If no obstructions are found, notify next higher maintenance level.

MALFUNCTION

Check for improper type of fuel.

CORRECTIVE ACTION

If improper type of fuel is suspected, refer to WP 0012, Table 2, notify next higher maintenance level.

SYMPTOM

Engine knocks.

MALFUNCTION

Check for low lubrication oil level.

CORRECTIVE ACTION

If necessary add oil, refer to LO 9-6115-641-12.

MALFUNCTION

Check for loose parts or foreign objects in engine compartment.

CORRECTIVE ACTION

If no loose parts or foreign objects are found, go to next malfunction.

MALFUNCTION

Check for improper type of fuel.

CORRECTIVE ACTION

If improper type of fuel is suspected, refer to WP 0012, Table 2, notify next higher maintenance level.

SYMPTOM

Blue or white exhaust smoke.

MALFUNCTION

Check for improper type of fuel.

CORRECTIVE ACTION

If improper type of fuel is suspected, refer to WP 0012, Table 2, notify next higher maintenance level.

SYMPTOM

Black exhaust smoke.

MALFUNCTION

Check for improper type of fuel.

CORRECTIVE ACTION

If improper type of fuel is suspected, refer to WP 0012, Table 2, notify next higher maintenance level.

MALFUNCTION

Check for dirty air cleaner element.

CORRECTIVE ACTION

Service air cleaner assembly. Refer to WP 0012, Service of Air Cleaner Assembly.

MALFUNCTION

Check for generator set overload.

CORRECTIVE ACTION

Check for generator set overload by checking the ammeter (PERCENT RATED CURRENT) on the control panel assembly. Refer to WP 0004, Figure 1. If unable to adjust, notify next higher maintenance level.

SYMPTOM

Low oil pressure.

MALFUNCTION

Check for low lubrication oil level.

CORRECTIVE ACTION

If necessary add oil. Refer to LO 9-6115-641-12.

MALFUNCTION

Check for high coolant temperature, above 200 °F (93 °C). Refer to WP 0004, Figure 1 .

CORRECTIVE ACTION

If coolant temperature is high, go to next malfunction.

MALFUNCTION

Check coolant level.

CORRECTIVE ACTION

If low, add coolant. Refer to WP 0012, Service of Cooling System. If full, go to next malfunction.

MALFUNCTION

Check for obstruction in air intake system.

CORRECTIVE ACTION

If obstructions are found, remove debris. If no obstructions are found, go to next malfunction.

MALFUNCTION

Check for loose fan belt.

CORRECTIVE ACTION

If loose, notify next higher maintenance level.

SYMPTOM

COOLANT TEMPERATURE indicator indicates engine overheating.

MALFUNCTION

Check for generator set overload.

CORRECTIVE ACTION

Check for generator set overload by checking the ammeter (PERCENT RATED CURRENT) on the control panel assembly. Refer to WP 0004, Figure 1. If unable to adjust, notify next higher maintenance level.

MALFUNCTION

Check coolant level.

CORRECTIVE ACTION

If low, add coolant. Refer to WP 0012, Service of Cooling System. If full, go to next malfunction.

MALFUNCTION

Check for low lubrication oil level.

CORRECTIVE ACTION

If necessary add oil. Refer to LO 9-6115-641-12. If full, go to next malfunction.

MALFUNCTION

Check for obstruction in air intake system.

CORRECTIVE ACTION

If obstructions are found, remove debris. If no obstructions are found, go to next malfunction.

MALFUNCTION

Check for loose fan belt.

CORRECTIVE ACTION

If loose, notify next higher maintenance level.

BATTERY**SYMPTOM**

BATTERY CHARGE ammeter shows low or no charge.

MALFUNCTION

Check BATTERY CHARGER FUSE.

CORRECTIVE ACTION

If BATTERY CHARGER FUSE (WP 0004, Figure 1) is blown, notify next higher maintenance level.

MALFUNCTION

Check fan belt.

CORRECTIVE ACTION

If fan belt is loose, notify next higher maintenance level.

MALFUNCTION

Check for loose or broken wires.

CORRECTIVE ACTION

Check for loose or broken wires at the back of the battery charging alternator (WP 0002, Figure 1) and BATTERY CHARGE ammeter (WP 0004, Figure 1). If wires are loose or broken, notify next higher maintenance level.

SYMPTOM

BATTERY CHARGE ammeter shows excessive charging after prolonged operation.

MALFUNCTION

Check batteries for low electrolyte level.

CORRECTIVE ACTION

If low, refer to WP 0012, Service of Batteries.

If level is correct, go to next malfunction.

MALFUNCTION

Check battery connections.

CORRECTIVE ACTION

If loose or corroded, notify next higher maintenance level.

SYMPTOM

AC voltmeter (VOLTS AC) indicates low voltage.

MALFUNCTION

Check that VM-AM transfer switch position corresponds to readings on the AC voltmeter (VOLTS AC). Refer to WP 0005, Table 1 .

CORRECTIVE ACTION

Set VOLTAGE adjust potentiometer.

MALFUNCTION

Check for loose or broken wires at back of VM-AM transfer switch, VOLTAGE adjust potentiometer, and AC voltmeter (VOLTS AC).

CORRECTIVE ACTION

If wires are loose or broken, notify next higher maintenance level.

SYMPTOM

AC voltmeter (VOLTS AC) indicates correct voltage, but frequency meter (HERTZ) is off scale.

MALFUNCTION

Check FREQUENCY adjust control.

CORRECTIVE ACTION

Set FREQUENCY adjust control.

MALFUNCTION

Check for loose or broken wires at back of FREQUENCY adjust control.

CORRECTIVE ACTION

If wires are loose or broken, notify next higher maintenance level.

SYMPTOM

AC voltmeter (VOLTS AC) fluctuates.

MALFUNCTION

Check back of AC voltmeter (VOLTS AC) for loose or broken wires.

CORRECTIVE ACTION

If wires are loose or broken, notify next higher maintenance level.

SYMPTOM

Frequency meter (HERTZ) fluctuates.

MALFUNCTION

Check back of frequency meter (HERTZ) for loose or broken wires.

CORRECTIVE ACTION

If wires are loose or broken, notify next higher maintenance level.

SYMPTOM

AC CIRCUIT INTERRUPTER light fails to light when AC CIRCUIT INTERRUPTER switch is closed.

MALFUNCTION

Test AC CIRCUIT INTERRUPTER light by depressing.

CORRECTIVE ACTION

If light fails to light, refer to next higher maintenance level.

MALFUNCTION

Check load cables for proper connection.

CORRECTIVE ACTION

For proper connection of the load cables, refer to WP 0005, Installation of Load Cables. If correct, go to next malfunction.

MALFUNCTION

Ensure load does not exceed generator rating.

CORRECTIVE ACTION

If load is high, decrease load. If load is correct, refer to next higher maintenance level.

SYMPTOM

No voltage at the Convenience Receptacle.

MALFUNCTION

Open control panel and inspect circuit breaker on side of Ground Fault Circuit Interrupter device.

CORRECTIVE ACTION

If tripped, reset device. Check fuse on black wire of Ground Fault Circuit Interrupter on generator sets, contract number DAAK01-88-D-0080.

MALFUNCTION

Check the Ground Fault Circuit Interrupter.

CORRECTIVE ACTION

If the indicator is BLACK, reset by pressing the reset button. If the indicator is ORANGE, refer to next higher maintenance level.

TROUBLESHOOTING PROCEDURES : Winterization

GENERAL

This section lists common malfunctions you may find during operation of the generator set with the Winterization Kit installed and the generator set is running. You should perform the tests/inspections and corrective actions in the order listed. The troubleshooting symptom index cannot list all faults that may occur, nor all the tests or inspections and corrective actions. If a malfunction is not listed or cannot be corrected by listed corrective actions, notify your supervisor.

Code Light Troubleshooting

The indicator light near the heater switch is designed to blink on codes sequences to signal malfunctions in the system. (Refer to WP 0009, Code Light Pulses).

Code Light Pulses

The indicator light near the heater ON-OFF switch will blink in different sequences of long and short to indicate malfunctions. A plate (Figure 1) mounted on the generator control panel access door lists the malfunctions and shows each sequence of pulses. If you see any of these series of pulses, notify the next-higher level of maintenance.

NOTE

Before performing troubleshooting procedures, turn off heater and attempt restart.

SYMPTOM INDEX, WINTERIZATION KIT

NOTE

When the heater is switched on, the light will perform one of the sequences of light pulses shown visually on the Function Codes Plate mounted inside the generator control panel cover (Figure 1). Before each symptom, this index lists in parentheses the light sequence associated with it.

- (long dash, short dash, long dash) - Start, glow period
- (continuous dash) - Normal Function
- (long dash, long dash) - Purge Cycle and Restart
- (dash, dash) - Heater Restart attempted During Purge Cycle
- (dash, 5 dots, dash) - Warning: Power supply
- (10 dots) -Overheating
- (dot, dot) - Flame Sensor Short-circuit
- (2 dots, 2 dots) - Flame Cutout-LOW
- (3 dots, 3 dots) - Flame Cutout-HIGH
- (4 dots, 4 dots) - Glow Plug Defect
- (dash, dash) - Burner Motor Defect
- (dash, dot, dash, dot) - Under voltage
- (dash, 2 dots, dash, 2 dots) - Over voltage
- (dash, 3 dots, dash, 3 dots) - Non-start
- (2 dots, dash, 2 dots, dash) - Temperature Sensor Defective

- (3 dots, dash, 3 dots, dash) - Fuel pump short circuit
 (2 dots, dash, 3 dots, dash, dot) - Temperature switch defective
 (4 dashes) - Control unit defective
 (dot, dash, 3 dots, dash, 2 dots) - Connection error

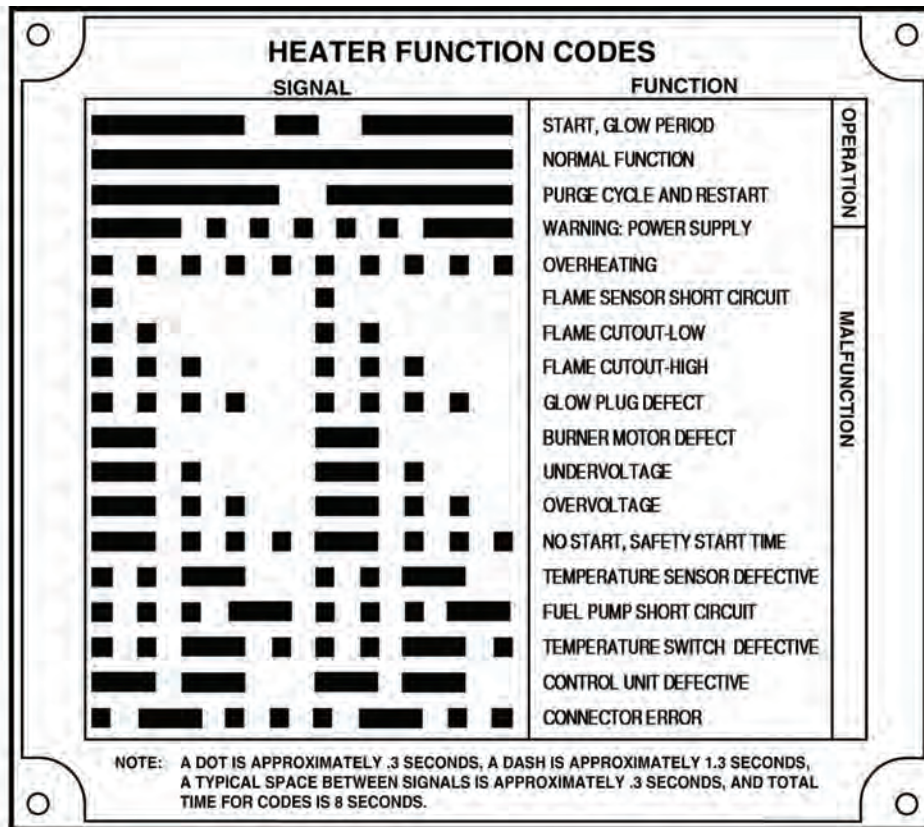


Figure 1. Heater Function Codes Plate.

END OF WORK PACKAGE

CHAPTER 4

OPERATOR MAINTENANCE INSTRUCTIONS

FOR

5 kW GENERATOR SET (60 Hz AND 400 Hz),
SKID MOUNTED, TACTICAL QUIET

CHAPTER 4
OPERATOR MAINTENANCE INSTRUCTIONS

WORK PACKAGE INDEX

| <u>Title</u> | <u>WP Sequence No.</u> |
|--|------------------------|
| PMCS INTRODUCTION..... | 0010 |
| PMCS, INCLUDING LUBRICATION INSTRUCTIONS | 0011 |
| GENERATOR SET SERVICING AND INSPECTION | 0012 |

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****PMCS INTRODUCTION**

GENERAL

To ensure that the generator set is ready for operation at all times, it must be inspected so that defects can be discovered and corrected before they result in serious damage or failure.

PMCS, BEFORE Operations

Always keep in mind the CAUTIONS and WARNINGS. Perform your BEFORE PMCS.

PMCS, DURING Operations

Always keep in mind the CAUTIONS and WARNINGS. Perform your DURING PMCS.

PMCS, AFTER Operations

Be sure to perform your AFTER PMCS.

If Your Equipment Fails to Operate

If your equipment does not perform as required, refer to Chapter 3 under Troubleshooting for possible problems. Report any malfunctions or failures on the proper DA Form 2404, or refer to DA PAM 750-8.

PMCS PROCEDURES**NOTE**

For general location of the items to be inspected listed on WP 0011, Table 1 refer to Figure 1 and Figure 2 .

Purpose of PMCS Table

Preventive Maintenance Checks and Services, WP 0011, Table 1 lists the inspections and care of your equipment required to keep it in good operating condition.

Warnings, Cautions, and Notes

Always observe the WARNINGS, CAUTIONS, and NOTES appearing in your PMCS Table. Warnings and cautions appear before applicable procedures. You must observe WARNINGS to prevent serious injury to yourself and others. You must observe CAUTIONS to prevent your equipment from being damaged. You must observe NOTES to ensure procedures are performed properly.

Explanation of Table Entries

The PMCS Table is divided into five columns. Each column is explained in the following paragraphs.

Item No. Column

Numbers in this column are for reference. When completing DA Form 2404 (Equipment Inspection and Maintenance Worksheet), or DD Form 5988E, include the item number for the check/service indicating a fault. Item numbers also appear in the order that you must do checks and services for the intervals listed.

Interval Column

This column tells you when you must do the procedure in the procedure column. BEFORE procedures must be done before you operate the equipment for its intended mission. DURING procedures must be done during the time you are operating the equipment for its intended mission. AFTER procedures must be done immediately after you have operated the equipment. Perform WEEKLY procedures at the listed interval.

Location, Item to Check/Service Column

This column lists the location and the item to be checked or serviced.

Procedure Column

This column gives the procedure for checking or servicing the item listed in the location, item to check/service column. You must perform the procedure to know if the generator set is ready or available for its intended mission or operation. You must do the procedure at the time stated in the interval column. If you do not have the tools, or if the procedures indicate, complete a DA Form 2404 and submit it to the next higher level of maintenance.

Not Fully Mission Capable if: Column

Information in this column tells you what faults will keep the generator set from being capable of performing its primary mission. If you make checks or services that show faults listed in this column, do not operate the generator set.

Other Table Entries

Be sure to observe all special information and notes that appear in your table.

Special Instructions

Preventive maintenance is not limited to performing the checks and services listed in the PMCS Table. Covering unused receptacles, stowing unused accessories and performing other routine procedures such as equipment inventory, cleaning components, and touch-up painting are not listed in the table. These are things you should do any time you see that they need to be done. If a routine check is listed in the PMCS Table, it is because experience has shown that problems may occur with this item. Take along tools and cleaning cloths needed to perform the required checks and services. Use the information in the following paragraphs to help you identify problems at any time and to help identify potential problems BEFORE and DURING checks and services.

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when this generator set is in operation. Make sure generator set is completely shut down and free of any power source before attempting any repair or maintenance on the set, or when connecting or disconnecting load cables. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Solvent used to clean parts is potentially dangerous to personnel and property. Clean parts in a well-ventilated area. Avoid inhalation of solvent fumes. Wear goggles and rubber gloves to protect eyes and skin. Wash exposed skin thoroughly. Do not smoke or use near open flame or excessive heat. Failure to comply with this warning can cause injury to personnel, and damage to the equipment.

CAUTION

Keep cleaning solvents, fuels and lubricants away from rubber or soft plastic parts. They will deteriorate material.

1. Keep the generator set clean. Dirt, grease, and oil get in the way and may cover up a serious problem. Use cleaning solvent to clean metal services.
2. Use soap and water to clean rubber or plastic parts and material.
3. Check all bolts, nuts, and screws to make sure they are not loose, missing, bent, or broken. Do not try to check them with a tool, but look for chipped paint, bare metal, or rust around bolt heads. If you find one loose, report it to the next-higher level of maintenance.
4. Inspect welds for loose or chipped paint, rust, or gaps where parts are welded together. If a broken weld is found, report it to the next-higher level of maintenance.
5. Inspect electrical wires, connectors, terminals, and receptacles for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors. Examine terminals and receptacles for serviceability. If deficiencies are found, report them to the next-higher level of maintenance.
6. Inspect hoses and fluid lines. Look for wear, damage, and leaks. Make sure that clamps and fittings are tight. Wet spots and stains around a fitting or connector can mean a leak. If a leak comes from a loose connector or if something is broken or worn out, report it to the next-higher level of maintenance.

END OF TASK

FLUID LEAKAGE

It is necessary for you to know how fluid leakage affects the status of the 5 kW Generator Set. Following are types/classes of leakage you need to know to be able to determine the status of the 5 kW Generator Set. Learn these leakage definitions and remember - when in doubt, notify your supervisor. Equipment operation is allowed with minor leakage (Class I or II). Consideration must be given to fluid capacity in the item/system being checked/inspected. When in doubt, notify your supervisor.

When operating with Class I or II leaks, continue to check fluid levels as required in the PMCS.

Class III leaks should be reported immediately to your supervisor.

Leakage Definitions

Leakage Class

Leakage Definitions

| | |
|-----------|---|
| Class I | Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops. |
| Class II | Leakage of fluid great enough to form drops, but not enough to cause drops to drip from the item being checked/inspected. |
| Class III | Leakage of fluid (other than fuel) greater than three drops per minute that fall from the item being checked/inspected. |

Operation of Generator Set with Minor Leaks

CAUTION

Equipment operation is allowable with minor leakage (Class I or II) of any fluid except fuel. Fluid capacity must be considered before deciding to continue operation of the equipment with minor leaks. When operating with Class I or II leaks, fluid level must be checked more often than required by the PMCS table. Parts without fluid will stop working and/or cause equipment damage.

1. Consider the equipment's capacity for the fluid that is leaking. If the capacity is small, the fluid level may soon become too low for continued operation. If in doubt, notify your supervisor.
2. Check the fluid level more often than required in the PMCS Table. Add fluid as needed.
3. All leaks should be reported to the next higher level of maintenance.

END OF TASK

Removal of Assemblies/Equipment to Perform PMCS

There is no requirement to remove assemblies/equipment prior to performing the PMCS.

Winterization Kit

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

High voltage is produced when this generator set is in operation. Make sure the generator set is completely shut down and free of any power source before attempting any repair or maintenance on the set, or when connecting or disconnecting load cables. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Solvent used to clean parts is potentially dangerous to personnel and property. Clean parts in a well-ventilated area. Avoid inhalation of solvent fumes. Wear goggles and rubber gloves to protect eyes and skin. Wash exposed skin thoroughly. Do not smoke or use near open flame or excessive heat. Failure to comply with this warning can cause injury to personnel, and damage to the equipment.

WARNING

When running, winterization heater has hot metal surfaces that will burn flesh on contact. Shut down generator set and allow heater to cool before performing maintenance. Wear gloves and additional protective clothing as required. Failure to comply with this warning can cause injury or death to personnel.

CAUTION

Keep cleaning solvents, fuels and lubricants away from rubber or soft plastic parts. They will deteriorate material.

1. Keep it clean. Dirt, grease, and oil get in the way and may cover up a serious problem. Use cleaning solvents to clean metal services.
2. Use soap and water to clean rubber or plastic parts and material.
3. Check all bolts, nuts, and screws to make sure they are not loose, missing, bent, or broken. Do not try to check them all with a tool, but look for chipped paint, bare metal, or rust around bolt heads. If you find one loose, tighten it or report it to the next-higher level of maintenance.
4. Inspect welds. Look for loose or chipped paint, rust, or gaps where parts are welded together. If a broken weld is found, report it to the next-higher level of maintenance.
5. Inspect electrical wires, connectors, terminals, and receptacles. Look for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors and make sure wires are in good condition. Examine terminals and receptacles for serviceability. If deficiencies are found, report them to the next-higher level of maintenance.
6. Inspect hoses and fluid lines. Look for wear, damage, and leaks. Make sure that clamps and fittings are tight. Wet spots and stains around a fitting or connector can mean a leak. If a leak comes from a loose connector or if something is broken or worn out, report it to the next-higher level of maintenance.


END OF TASK

Order in Which PMCS Will Be Done

Figure 3 shows the order in which you are to perform your PMCS on the Winterization Kit. Figure 3 shows a generator set to which a kit has been added. The number callouts on Figure 3 do not match the Item No. in WP 0011, Table 1.


NOTE

Be sure Generator Set PMCS is completed first in accordance with these procedures.

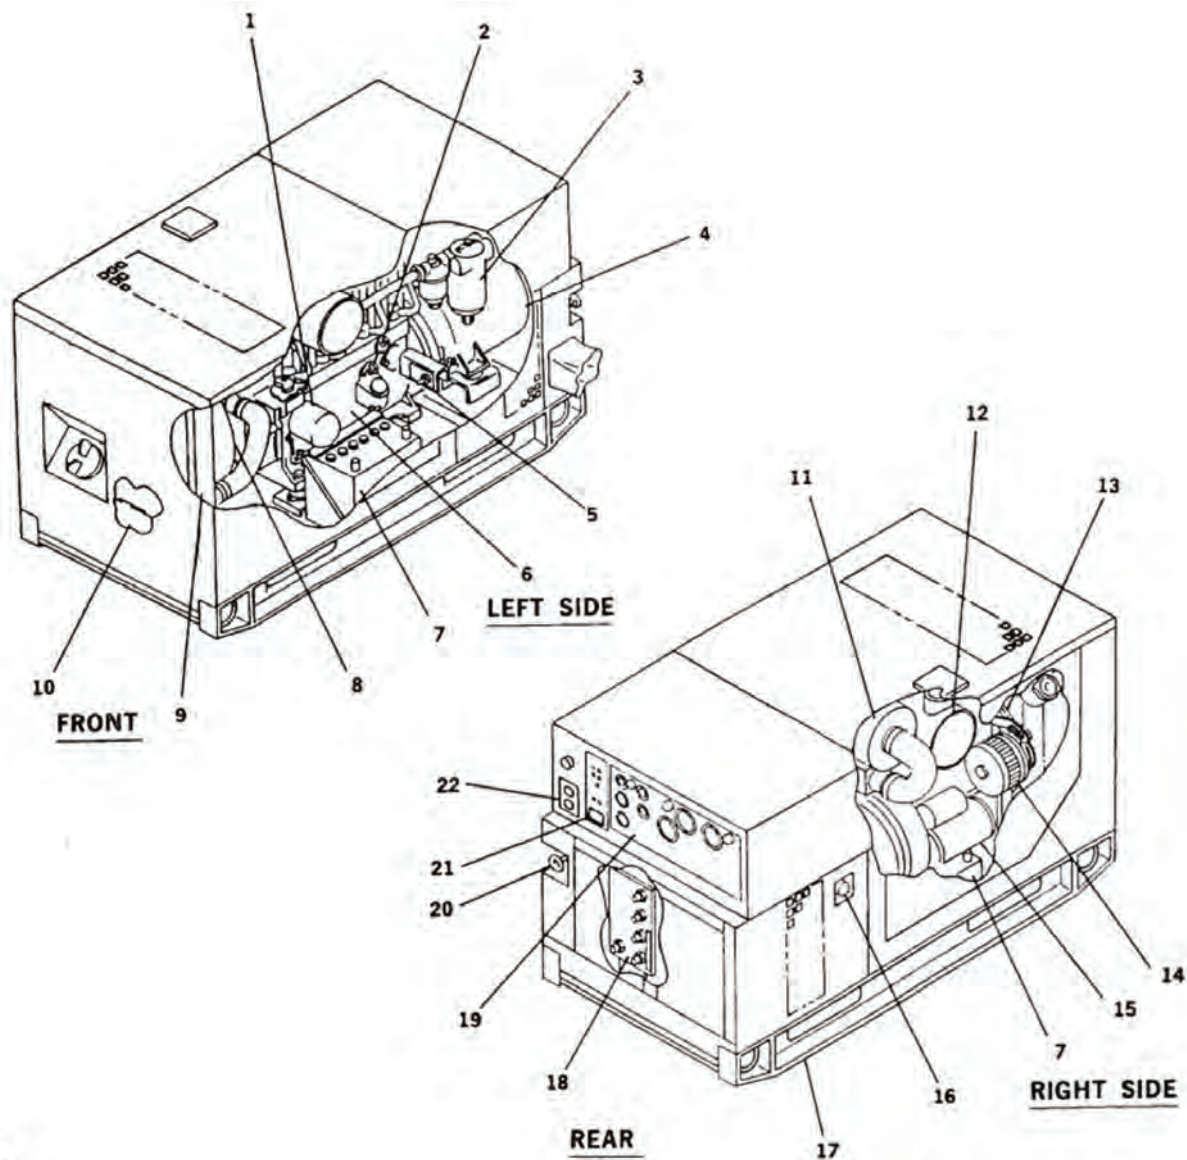**Legend**


- | | | |
|--------------------------------|---------------------------------|---------------------------------|
| 1. Oil Filter | 9. Radiator | 17. Skid Base |
| 2. Dipstick | 10. Fuel Tank | 18. Load Output Terminal Board |
| 3. Fuel Filter/Water Separator | 11. Air Cleaner Assembly | 19. Control Panel Assembly |
| 4. AC Generator | 12. Muffler | 20. Frequency Adjust control |
| 5. Dead Crank Switch | 13. Fan Belt | 21. Malfunction Indicator Panel |
| 6. Engine | 14. Battery Charging Alternator | 22. Convenience Receptacle |
| 7. Batteries | 15. Starter | |
| 8. Water Pump | 16. NATO Slave Receptacle | |

Figure 1. Generator Set Components.

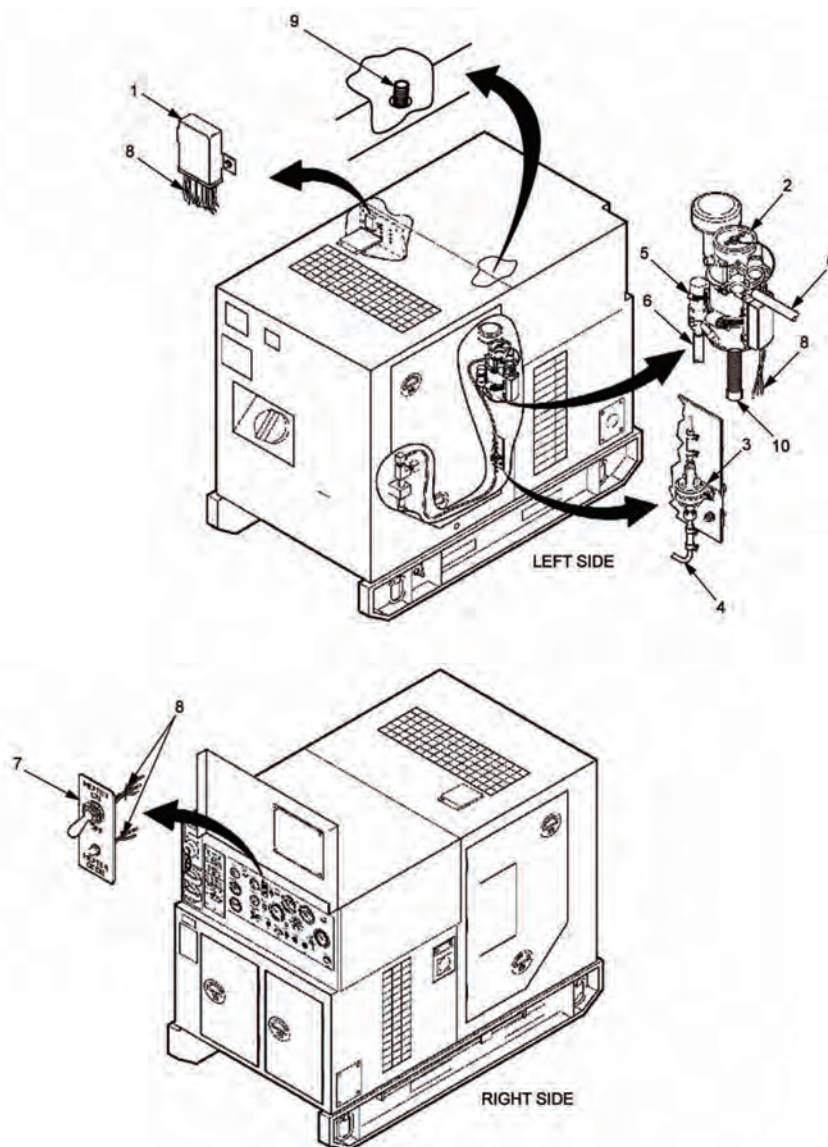**LEGEND**

1. Control Unit
2. Heater
3. Fuel Pump
4. Fuel Lines
5. Coolant Pump
6. Coolant Lines
7. Switch/Lamp
8. Wiring Harness
9. Exhaust Hose
10. Air Inlet Hose

Figure 2. Location of Major Winterization Kit Components.

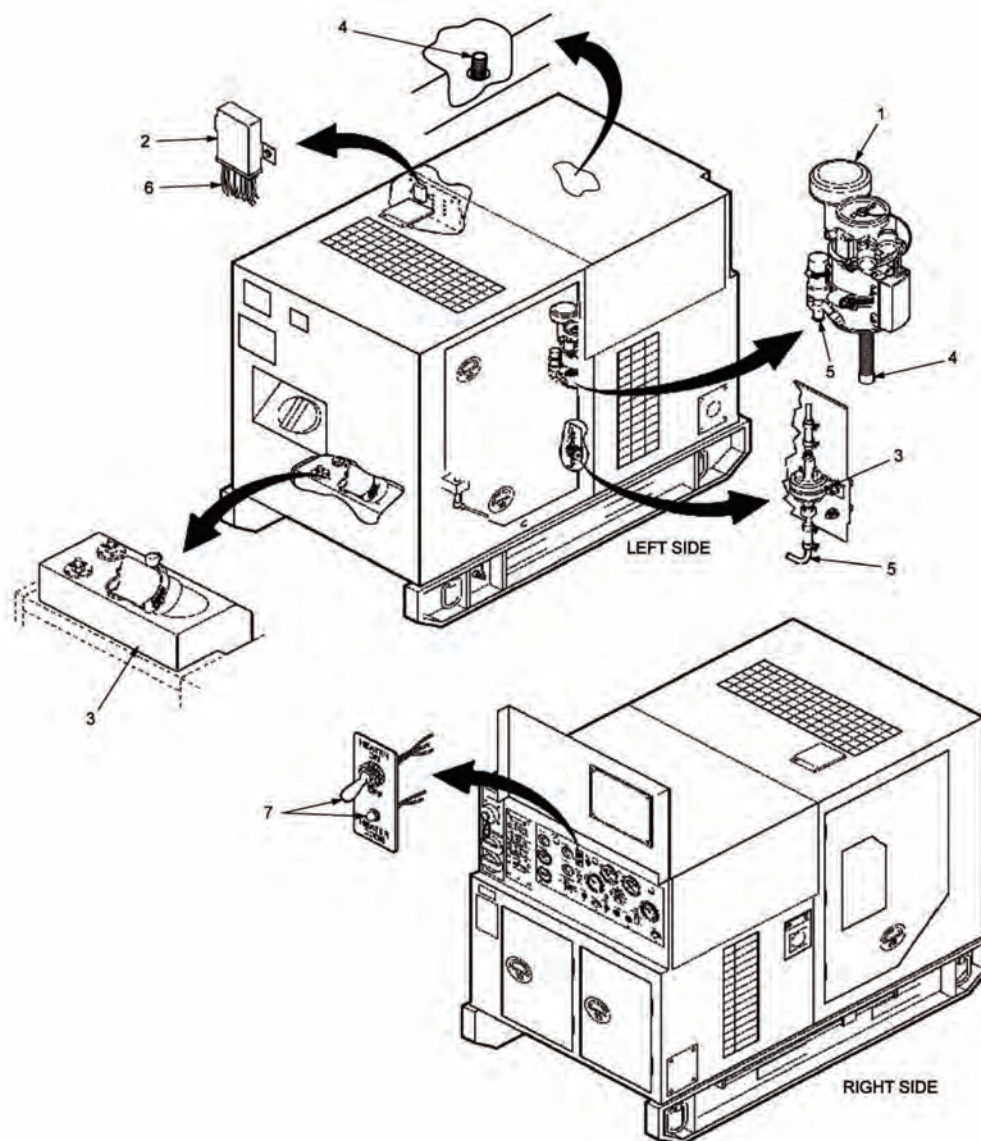**LEGEND**

1. Heater
2. Control Unit
3. Fuel Pump
4. Air Inlet Hose
5. Coolant Pump
6. Wiring Harness
7. Fuel Line
8. Switch/Lamp

Figure 3. Operator PMCS Routing Diagram for Winterization Kit.

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET
PMCS, INCLUDING LUBRICATION INSTRUCTIONS**

INITIAL SETUP:**Tools and Special Tools**

None

Materials/Parts

Expendable and Durable Items List (WP 0016)

Personnel Required

1

Equipment ConditionReady for Operation

LUBRICATION ORDER

Refer to Lubrication Order LO 9-6115-641-12 for lubrication information.

WARNING

In extreme cold weather, skin can stick to metal. Avoid contacting metal items with bare skin in extreme cold weather. Failure to comply with this warning can cause injury to personnel.

GENERATOR SET EXTERIOR**NOTE**

The generator set can be operated continuously at any load from no load up to and including rated load. However, at light loads (less than 25% of set rating), an oily residue (unburned fuel oil) may occasionally be noticed in the exhaust system outlet and around connection joints in the exhaust system. This residue is caused by the inability of the fuel injection system to consistently meter the small amount of fuel required to operate at these low load levels and is not a defect in the fuel system. The oily residue could affect engine performance and create a cosmetic problem on and around the generator set. Operation at rated load will burn off this oily residue. The length of time required at rated load depends on the amount of residue. The muffler may also need to be removed and cleaned if excessive build up occurs. This oily residue can be prevented by increasing the electrical load on the set.

NOTE

If the equipment must be kept in continuous operation, check and service only those items that can be checked and serviced without disrupting operations. Complete all checks and services when equipment is shut down.

Table 1. Preventive Maintenance Checks and Service.

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|--|----------|--------------------------------|---|--|
| 1 | BEFORE | HOUSING | a. Check door panels, hinges, and latches for damaged, loose, or corroded items. b. Inspect air intake and exhaust grills for debris. | Cannot secure door. |
| 2 | BEFORE | IDENTIFICATION PLATES | Check to ensure identification plates are secure. | |
| 3 | BEFORE | SKID BASE | Inspect skid base for cracks and/or corrosion. | Skid base is cracked or shows signs of structural damage. |
| 4 | BEFORE | ACOUSTICAL MATERIALS | Ensure that acoustical materials are free of damage and not missing. | |
| <p style="text-align: center;">WARNING</p> <p>Operating the generator set exposes personnel to a high noise level. Hearing protection must be worn when operating or working near the generator set when the generator set is running. Failure to comply with this warning can cause hearing damage to personnel.</p> <p style="text-align: center;">WARNING</p> <p>Fuels used in the generator set are flammable. Do not smoke or use open flames when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.</p> | | | | |
| 5 | BEFORE | ENGINE ASSEMBLY | Inspect for loose, damaged, or missing hardware. | Any loose, damaged, or missing hardware. |
| 6 | BEFORE | FUEL SYSTEM | Inspect for leaks, damage, loose, or missing hardware. | Any fuel leaks, damage, loose or missing parts. |
| 7 | BEFORE | FUEL FILTER/WATER SEPARATOR | a. Inspect for leaks, cracks, damage, proper mounting, loose or missing parts. b. Drain water from fuel filter/water separator (WP 0012, Service of Air Cleaner Assembly). | Any fuel leaks. Water not drained. |
| <p style="text-align: center;">NOTE</p> <p style="text-align: center;">Refer to Lube Order LO 9-6115-641-12.</p> | | | | |
| 8 | BEFORE | LUBRICATION SYSTEM | a. Inspect for leaks, damage, loose or missing parts. b. Inspect oil level. c. Inspect for contamination. | Class III leaks, damage, loose or missing parts. Oil level is low. Oil shows signs of contamination. |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|--|----------|----------------------------------|--|---|
| <p align="center">WARNING</p> <p>Cooling system operates at high temperature and pressure. Contact with high pressure steam and/or liquids can result in burns and scalding. Shut down generator set, and allow system to cool before performing checks, services and maintenance, or wear gloves and additional protective clothing and goggles as required. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 9 | BEFORE | RADIATOR | Inspect for leaks, damage, loose or missing parts. | Class III leaks or missing radiator cap. |
| 10 | BEFORE | HOSES | Inspect for leaks, cracks, or missing parts. | Class III leaks or missing clamps or hoses. |
| 11 | BEFORE | COOLING FAN | a. Inspect for obstruction, damage, or looseness. b. Inspect for unusual noise in fan area. | Damaged or loose. Unusual noise from fan area. |
| 11.1 | BEFORE | WATER PUMP | Inspect for leaks. | Class III leaks or unusual noise from area. |
| 12 | BEFORE | FAN BELT | Inspect for cracks, fraying, or looseness. | Broken or missing belt. |
| 13 | BEFORE | OVERFLOW BOTTLE | Inspect for proper mounting, leaks, or missing hardware. | Class III leaks or missing hardware. |
| <p align="center">WARNING</p> <p>Exhaust discharge contains deadly gases including carbon monoxide. DO NOT operate generator set in enclosed areas unless exhaust discharge is properly vented outside. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 14 | BEFORE | EXHAUST SYSTEM | Inspect for leaks, corrosion, and missing parts. | Leaks, damaged, or missing parts. |
| 15 | BEFORE | AIR CLEANER ASSEMBLY | a. Inspect for loose, damaged, or missing parts. b. Inspect restriction indicator for clogged air cleaner element | Loose, damaged, or missing parts. Clogged air cleaner element. |
| <p align="center">WARNING</p> <p>High voltage is produced when the generator set is in operation. Never attempt to start the generator set unless it is properly grounded. Failure to comply with this warning can cause injury or death to personnel.</p> <p align="center">WARNING</p> <p>Ensure nuts on ground terminals are properly secured creating a good ground. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 16 | BEFORE | GROUND ROD CABLE AND CONNECTIONS | Inspect for damage, corrosion, loose connections, and missing parts. | Damaged, corroded, loose connections, or missing parts. |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|--|----------|--------------------------------|---|--|
| <p align="center">WARNING</p> <p>Batteries give off a flammable gas. Do not smoke or use open flame when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.</p> <p align="center">WARNING</p> <p>Ensure nuts on ground terminals are properly secured creating a good ground. Failure to comply with this warning can cause injury or death to personnel.</p> <p align="center">WARNING</p> <p>Battery acid can cause burns to unprotected skin. Wear safety goggles and chemical gloves and avoid acid splash while working on batteries. Failure to comply with this warning can cause injury to personnel.</p> <p align="center">WARNING</p> <p>Dangerous voltage exists on live circuits. Always observe precautions and never work alone. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 17 | BEFORE | BATTERIES | a. Inspect electrolyte level. b. Inspect for secure mounting. | Electrolyte is below battery plates. Broken or missing mounting hardware. |
| 18 | BEFORE | BATTERY CABLES | Inspect for corrosion, damage, loose connections, or missing parts. | Damaged, loose, or missing parts. |
| 19 | BEFORE | OUTPUT BOX ASSEMBLY | a. Inspect cables for damage or loose connections. b. Inspect output terminals for damage or missing hardware. | Damaged, loose, or missing parts. Damaged or missing hardware. |
| 20 | BEFORE | CONTROLS AND INDICATORS | Inspect for damage or missing parts. | Damaged or missing parts. |
| <p align="center">WARNING</p> <p>High voltage is produced when this generator set is in operation. Make sure generator set is completely shut down and free of any power source before attempting any repair or maintenance on the set, or when connecting or disconnecting load cables. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 21 | BEFORE | CONTROL BOX HARNESS | Inspect for damage and looseness. | Damaged or loose. |
| <p align="center">WARNING</p> <p>Operating the generator set exposes personnel to a high noise level. Hearing protection must be worn when operating or working near the generator set when the generator set is running. Failure to comply with this warning can cause hearing damage to personnel.</p> | | | | |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|--|----------|----------------------------------|---|--|
| <p style="text-align: center;">WARNING</p> <p>Fuels used in the generator set are flammable. Do not smoke or use open flames when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.</p> <p style="text-align: center;">WARNING</p> <p>Top housing panels and exhaust system can get very hot. When performing DURING PMCS, wear gloves and additional protective clothing as required. Failure to comply with this warning can cause severe burns and injury to personnel.</p> <p style="text-align: center;">WARNING</p> <p>Exercise extreme caution when performing DURING PMCS checks inside engine compartment. Avoid contact with moving or hot engine parts. Failure to comply with this warning can cause injury or death to personnel.</p> <p style="text-align: center;">NOTE</p> <p>If the equipment must be kept in continuous operation, check and service only those items that can be checked and serviced without disrupting operations. Complete all checks and services when equipment is shut down.</p> | | | | |
| 22 | DURING | HOUSING | Check door panels, hinges, and latches for damaged, loose, or corroded items. | Cannot secure door. |
| 23 | DURING | ENGINE ASSEMBLY | Inspect for loose, damaged, or missing hardware. | Any loose, damaged, or missing hardware. |
| 24 | DURING | FUEL SYSTEM | Inspect for leaks, damaged, loose, or missing hardware. | Any fuel leaks, damaged, loose, or missing parts. |
| <p style="text-align: center;">NOTE</p> <p style="text-align: center;">Refer to Lube Order LO 9-6115-641-12.</p> | | | | |
| 25 | DURING | LUBRICATION SYSTEM | a. Inspect for leaks, damage, loose or missing parts. b. Inspect oil level. c. Inspect for contamination. | Class III leaks, damage, loose or missing parts. Oil level is low. Oil shows signs of contamination. |
| 26 | DURING | COOLING FAN | a. Inspect for obstruction, damage, or looseness. b. Inspect for unusual noise in fan area. | Damaged or loose. Unusual noise from fan area. |
| 27 | DURING | OVERFLOW BOTTLE | Inspect for proper mounting, leaks, or missing hardware. | Class III leaks or missing hardware. |
| 28 | DURING | GROUND ROD CABLE AND CONNECTIONS | Inspect for damage, corrosion, loose connections, and missing parts. | Damaged, corroded, loose connections, or missing parts. |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|---|----------|--------------------------------|---|---|
| <p align="center">WARNING</p> <p>High voltage is produced when the generator set is in operation. DO NOT touch live voltage connections. Never attempt to connect or disconnect load cables while the generator set is running. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 29 | DURING | CONTROLS AND INDICATORS | Inspect indicators are operating properly. | Indicators are not operating properly. |
| <p align="center">WARNING</p> <p>Top housing panels and exhaust system can get very hot. Shut down generator set, and allow system to cool before performing checks, services and maintenance. Failure to comply with this warning can cause severe burns and injury to personnel.</p> <p align="center">NOTE</p> <p>If the equipment must be kept in service continuous operation, check only those items that can be checked and serviced without disrupting operations. Complete all checks and services when equipment is shut down.</p> | | | | |
| 30 | AFTER | HOUSING | Check door panels, hinges, and latches for damaged, loose, or corroded items. | Cannot secure door. |
| 31 | AFTER | IDENTIFICATION PLATES | Check to ensure identification plates are secure. | |
| 32 | AFTER | SKID BASE | Inspect skid base for cracks and/or corrosion. | Skid base is cracked or shows signs of structural damage. |
| <p align="center">WARNING</p> <p>Fuels used in the generator set are flammable. Do not smoke or use open flames when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.</p> <p align="center">WARNING</p> <p>Diesel fuel is flammable and toxic to eyes, skin, and respiratory tract. Skin and eye protection are required when working in contact with diesel fuel. Avoid repeated or prolonged contact. Provide adequate ventilation. Operators are to wash exposed skin and change chemical soaked clothing promptly if exposed to fuel. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 33 | AFTER | ENGINE ASSEMBLY | Inspect for loose, damaged, or missing hardware. | Loose, damaged, or missing hardware. |
| 34 | AFTER | FUEL SYSTEM | Inspect for leaks, damage, loose, or missing hardware. | Any fuel leaks, damage, loose or missing parts. |
| 35 | AFTER | FUEL FILTER/WATER SEPARATOR | a. Inspect for leaks, cracks, damage, proper mounting, loose or missing parts. b. Drain water. | Any fuel leaks. Water not drained. |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|--|----------|--------------------------------|---|--|
| NOTE Refer to Lube Order LO 9-6115-641-12. | | | | |
| 36 | AFTER | LUBRICATION SYSTEM | a. Inspect for leaks, damage, loose or missing parts. b. Inspect oil level. c. Inspect for contamination. | Class III leaks, damage, loose or missing parts. Oil level is low. Oil shows signs of contamination. |
| WARNING Cooling system operates at high temperature and pressure. Contact with high pressure steam and/or liquids can result in burns and scalding. Shut down generator set, and allow system to cool before performing checks, services and maintenance, or wear gloves and additional protective clothing and goggles as required. Failure to comply with this warning can cause injury or death to personnel. | | | | |
| 37 | AFTER | RADIATOR | Inspect for leaks, damage, loose or missing parts. | Class III leaks or missing radiator cap. |
| 38 | AFTER | HOSES | Inspect for leaks, cracks, or missing parts. | Class III leaks or missing clamps or hoses. |
| 39 | AFTER | FAN BELT | Inspect for cracks, fraying, or looseness. | Broken or missing belt. |
| 40 | AFTER | CONTROLS AND INDICATORS | Inspect for damaged or missing parts. | Damaged or missing parts. |
| WINTERIZATION KIT PMCS | | | | |
| NOTE Be sure Generator Set PMCS is completed first in accordance with WP 0010. | | | | |
| NOTE For general location of the items to be inspected on winterization kit, refer to WP 0010, Figure 2. | | | | |
| 41 | BEFORE | HEATER ASSEMBLY | Check for damage. Ensure that heater assembly is mounted securely. | Damage that renders equipment unsafe. Heater not mounted securely. |
| 42 | BEFORE | CONTROL UNIT | Check for loose or broken wires or damage. | Wires loose or broken or control unit damaged. |
| 43 | BEFORE | FUEL PUMP | Inspect fuel pump for leaks | Any fuel leak. |
| 44 | BEFORE | FUEL TANK | Check for sufficient fuel. | Insufficient fuel. |
| 45 | BEFORE | FUEL LINES | Inspect winterization kit fuel lines for kinks, leaks, loose or damaged clamps. | Fuel lines damaged; clamps missing. |
| 46 | BEFORE | HEATER | Inspect heater for signs of leaks. | Class III coolant or any class fuel leak is detected. |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|---|----------|---------------------------------|---|--|
| 47 | BEFORE | EXHAUST HOSE | Inspect for obstruction, missing or damaged mounting clamp. | Hose obstructed; hose or clamp missing or damaged. |
| 48 | BEFORE | AIR INLET HOSE | Inspect for obstruction, missing or damaged mounting clamp. | Inlet hose obstructed. |
| <p style="text-align: center;">WARNING</p> <p>Cooling system operates at high temperatures and pressure. Contact with high pressure steam and/or liquids can result in burns and scalding. Shut down generator set, and allow system to cool before performing checks, services, and maintenance, or wear gloves and additional protective clothing and goggles as required. Failure to comply with this warning can cause injury or death to personnel.</p> | | | | |
| 49 | BEFORE | WINTERIZATION KIT COOLANT LINES | a. Inspect for loose, damaged, or missing clamps. b. Inspect for leaks. | Class III leaks or missing clamps or hoses. Class III leaks or missing clamps or hoses. |
| 50 | BEFORE | COOLANT PUMP | Inspect for leaks. | Class III leaks or missing clamps or hoses. |
| 51 | BEFORE | COOLANT LINES | Check on, around, and under equipment for coolant leaks. | Class III coolant leak is detected. |
| 52 | BEFORE | WIRE HARNESS | Inspect wiring for burned or frayed insulation or loose terminals. | Wiring is loose or damaged. |
| 53 | BEFORE | HEATER CONTROL AND SWITCH LAMP | a. Check that indicator light is on when heater is operating. b. Check Heater Function Code Plate. | Light blinks showing failure in accordance with Heater Function Code Plate. |
| 54 | DURING | HEATER ASSEMBLY | Check for leaks. | |
| 55 | DURING | ALL FUEL CONNECTIONS | Check for leaks. | Any class fuel leak detected. |
| 56 | DURING | ALL COOLANT CONNECTIONS | Inspect for leaks. | |
| 57 | AFTER | HEATER ASSEMBLY | Check for damage. | |
| 58 | AFTER | CONTROL UNIT | Loose or broken wires or damage. | |
| 59 | AFTER | ALL FUEL CONNECTIONS | Check for leaks. | |
| 60 | AFTER | FUELPUMP | Inspect fuel pump for leaks. | |
| 61 | AFTER | HEATER | Inspect heater for signs of leaks. | |
| 62 | AFTER | EXHAUST HOSE | Inspect for obstruction, missing or damaged mounting clamp. | |

Table 1. Preventive Maintenance Checks and Service. - Continued

| ITEM NO. | INTERVAL | ITEM TO BE CHECKED OR SERVICED | PROCEDURE | EQUIPMENT NOT READY/AVAILABLE IF: |
|----------|----------|--------------------------------|--|-----------------------------------|
| 63 | AFTER | AIR INLET HOSE | Inspect for obstruction, missing or damaged mounting clamp. | |
| 64 | AFTER | ALL COOLANT CONNECTIONS | Check for leaks. | |
| 65 | AFTER | WIRE HARNESS | Inspect wiring for burned or frayed insulation or loose terminals. | |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****GENERATOR SET SERVICING AND INSPECTION**

INITIAL SETUP:**Tools and Special Tools**

None

Materials/Parts

Coolant, Oil, Air Filters, Fuel

Personnel Required

1

ReferencesOperation Under Usual Conditions (WP 0005,
Stopping and Starting Procedures)**Equipment Condition**Ready for Operation

INTRODUCTION

This WP contains operator maintenance procedures. Deficiencies noted during inspection which are beyond the maintenance scope of the operator shall be reported to next higher maintenance level.

SERVICING**WARNING**

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Battery acid can cause burns to unprotected skin. Wear safety goggles and chemical gloves and avoid acid splash while working on batteries. Failure to comply with this warning can cause injury to personnel.

WARNING

Batteries give off a flammable gas. Do not smoke or use open flame when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

WARNING

High voltage is produced when this generator set is in operation. Ensure engine control and DEAD CRANK switches are set to OFF, negative battery cable is disconnected, and unit is completely shut down and free of any power source before attempting any troubleshooting or maintenance on unit. Failure to comply may cause injury or death to personnel.

INSPECTION OF INSTALLED ITEMS

Inspection of Batteries

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open battery access door.
3. Inspect for damaged battery case, corrosion, or damaged and loose connections on terminal cable, and damaged or missing battery caps.

WARNING

Batteries give off a flammable gas. Do not smoke or use open flame when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

4. Remove battery caps.

CAUTION

Electrolyte level must cover battery plates in all cells. Failure to observe this caution can cause damage to the battery.

NOTE

Electrolyte level should be at bottom of each cap cylinder.

5. Inspect electrolyte level.
6. Perform service procedures if required.
7. Install battery caps.
8. Close battery access door.

END OF TASK

SERVICING

Service of Batteries

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open battery access door.

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

WARNING

Batteries give off a flammable gas. Do not smoke or use open flame when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

WARNING

High voltage is produced when this generator set is in operation. Ensure engine control and DEAD CRANK switches are set to OFF, negative battery cable is disconnected, and unit is completely shut down and free of any power source before attempting any troubleshooting or maintenance on unit. Failure to comply may cause injury or death to personnel.

3. Remove battery caps.


NOTE

Electrolyte level should be at bottom of each cap cylinder.

4. Add distilled water to each battery cell as required.
5. Replace battery caps.
6. Close battery access door.
7. If necessary contact next higher maintenance level to clean or replace batteries or battery terminals.

END OF TASK**INSPECTION OF INSTALLED ITEMS****Inspection of Air Cleaner Assembly**

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open left side engine access door.
3. Inspect air cleaner housing (Figure 1, Item 5) for dents, corrosion, missing hardware and other damage.
4. Open right side engine access door and inspect air cleaner restriction indicator for indication of a clogged air cleaner element.
5. Close left side engine access door.

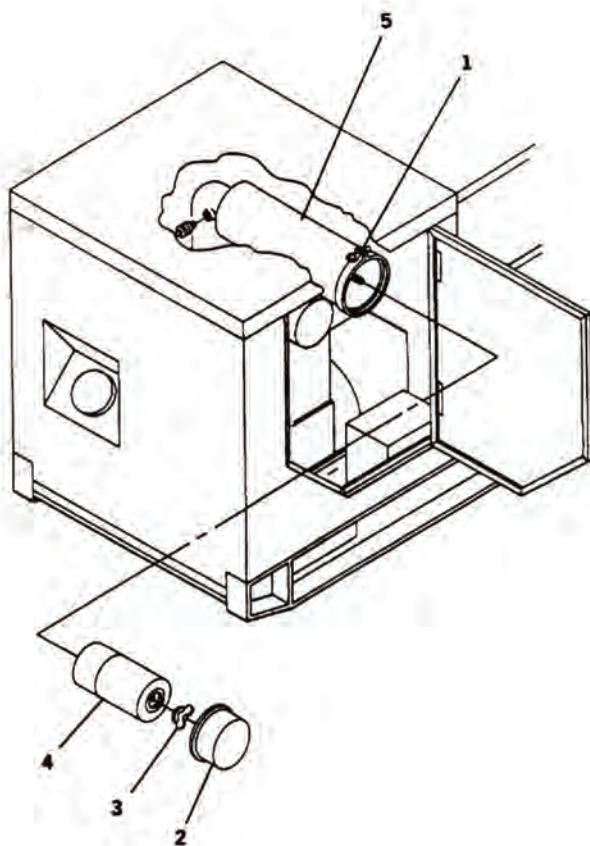**LEGEND**

1. Clamp, Loop
2. Cup Assembly
3. Nut, Plain, Wing
4. Filter Element, Intake
5. Canister, Air

Figure 1. Air Cleaner Element Replacement.

END OF TASK**SERVICING****Service of Air Cleaner Assembly**

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open left side engine access door.
3. Loosen Loop Clamp (Figure 1, Item 1) remove Cup Assembly (Figure 1, Item 2), on Air Canister (Figure 1, Item 5).
4. Remove wing nut (3) and air cleaner element (4). If fouled, discard air cleaner element.
5. Inspect inside of Air Canister (Figure 1, Item 5) for debris. Wipe Air Canister interior with clean lint-free cloth.

6. Install air cleaner element (4), wing nut (3), Cup Assembly (Figure 1, Item 2) and tighten Loop Clamp (Figure 1, Item 1).
7. Close left side engine access door.

END OF TASK

INSPECTION OF INSTALLED ITEMS

Inspection of Cooling System

WARNING

All metal jewelry can conduct electricity and become entangled in generator set components. Remove all jewelry when working on generator set. Failure to comply with this warning can cause injury or death to personnel.

WARNING

DO NOT wear loose clothing when performing checks, services and maintenance. Failure to comply with this warning can cause injury or death to personnel.

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open both engine access doors.

WARNING

Cooling system operates at high temperature and pressure. Contact with high pressure steam and/or liquids can result in burns and scalding. Shut down generator set, and allow system to cool before performing checks, services and maintenance, or wear gloves and additional protective clothing and goggles as required. Failure to comply with this warning can cause injury or death to personnel.

3. Check radiator for dirt, leaves, insects, etc. blocking air flow.
4. Check radiator and hoses for leaks, loose connections, loose mounting, corrosion, chafing and missing parts.
5. Check coolant level in coolant recovery (overflow) bottle.
6. Close both engine access doors.

END OF TASK

SERVICING**Service of Cooling System****WARNING**

Cooling system operates at high temperature and pressure. Contact with high pressure steam and/or liquids can result in burns and scalding. Shut down generator set, and allow system to cool before performing checks, services and maintenance, or wear gloves and additional protective clothing and goggles as required. Failure to comply with this warning can cause injury or death to personnel.

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open right side engine access door.
3. Remove coolant recovery (overflow) bottle cap.
4. Fill coolant recovery (overflow) bottle to HOT line if coolant is hot or to COLD line if coolant is cold, with proper coolant/antifreeze in accordance with Table 1.
5. Install coolant recovery (overflow) bottle cap. Close right side engine access door.

Table 1. Coolant.

| COOLANT | | |
|---|--|-------|
| AMBIENT TEMPERATURE | RADIATOR | RATIO |
| +40 °F TO +120 °F (+4 °C TO +49 °C) | Water: MIL-A-53009 (1) INHIBITOR, CORROSION | 35:1 |
| -25 °F TO +120 °F (-32 °C TO +49 °C) | Water: A-A-52624-X-A ANTIFREEZE (100%) | 1:1 |
| -50 °F TO +120 °F (-46 °C TO +49 °C) | A-A-52624-X-B ANTIFREEZE (60/40) | NA |

END OF TASK**INSPECTION OF INSTALLED ITEMS****Inspection of Fuel Tank****WARNING**

Fuels used in the generator set are flammable. Do not smoke or use open flames when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

1. Place MASTER SWITCH in PRIME & RUN or PRIME & RUN AUX FUEL position. Refer to WP 0005, Starting Procedure.
2. Check fuel level by observing FUEL LEVEL indicator.

3. Remove fuel cap and ensure strainer is free of dirt and other foreign material.

END OF TASK**SERVICING****Service of Fuel Tank****WARNING**

Fuels used in the generator set are flammable. Do not smoke or use open flames when performing maintenance. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

WARNING

Fuels used in the generator set are flammable. When filling the fuel tank, maintain metal-to-metal contact between filler nozzle and fuel tank opening to eliminate static electrical discharge. Failure to comply with this warning can cause injury or death to personnel, and damage to the generator set.

CAUTION

Use only specific diesel fuel to service the fuel tank, refer to Table 2 . Otherwise, equipment damage could result, if improper fuel is used.

Table 2. Diesel Fuel.

| FUEL | |
|-------------------------------------|--|
| AMBIENT TEMPERATURE | DIESEL FUEL |
| +20 °F TO +120 °F (-7 °C TO +49 °C) | A-A-52557, GRADE 2-D MIL-DTL-83133, JP-8 |
| -25 °F TO +20 °F (-32 °C TO +7 °C) | A-A-52557, GRADE 1-D MIL-DTL-5624, JP-5 |

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Remove fuel cap.
3. Remove strainer, clean as necessary and reinstall.

NOTE

Fuel tank holds 5 gallons (18.9 liters).

4. Add diesel fuel to fuel tank.
5. Install fuel cap.

END OF TASK

INSPECTION OF INSTALLED ITEMS

Inspection of Fuel Filter/Water Separator

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open left side engine access door.
3. Inspect fuel filter/water separator assembly. Refer to Figure 2 for proper mounting, cracks, dents, leaks, loose fuel lines and other damage.
4. Close left engine access door.

END OF TASK

SERVICING

Service of Fuel Filter/Water Separator

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Rotate MASTER SWITCH to PRIME & RUN.
3. Open left side engine access door.
4. Open fuel drain cock (Figure 2, Item 1) on fuel filter/water separator housing (2) and drain contaminants into a suitable container.
5. Close drain cock (1).
6. Close left side engine access door.
7. Rotate MASTER SWITCH to OFF.

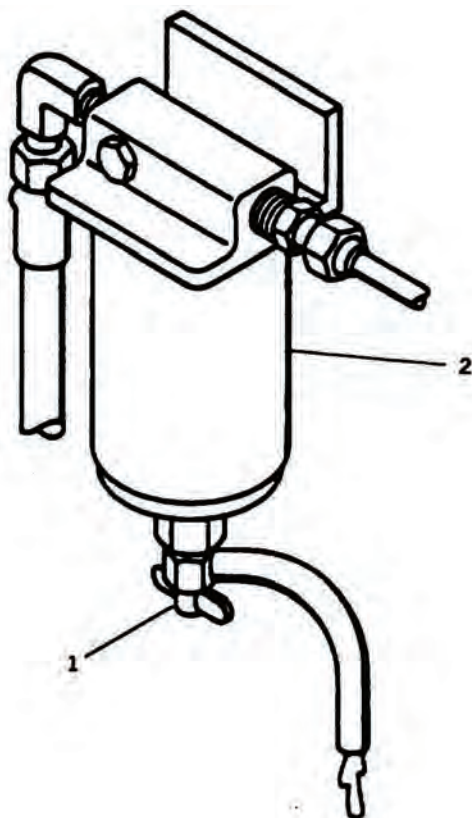


Figure 2. Draining Fuel Filter/Water Separator.

END OF TASK

INSPECTION OF INSTALLED ITEMS

Inspection of Lubrication System

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open both engine access doors.
3. Inspect engine assembly for oil leaks.
4. Check for damage, proper mounting, or missing parts.
5. Check engine crankcase oil level. Refer to LO 9-6115-641-12.
6. Close both engine access doors.

END OF TASK

SERVICING**Service of Lubrication System**

1. Shut down generator set. Refer to WP 0005, Stopping Procedure.
2. Open left engine access door.
3. Remove oil filler cap.
4. Add oil to engine crank case. Refer to LO 9-6115-641-12.
5. Install oil filler cap.
6. Close left engine access door.

END OF TASK**END OF WORK PACKAGE**

CHAPTER 5

SUPPORTING INFORMATION

FOR

**5 kW GENERATOR SET (60 Hz AND 400 Hz),
SKID MOUNTED, TACTICAL QUIET**

CHAPTER 5
SUPPORTING INFORMATION

WORK PACKAGE INDEX

| <u>Title</u> | <u>WP Sequence No.</u> |
|---|-------------------------------|
| REFERENCES | 0013 |
| COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS (BII) LISTS | 0014 |
| ADDITIONAL AUTHORIZATION LIST (AAL) | 0015 |
| EXPENDABLE AND DURABLE ITEMS LIST | 0016 |

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****REFERENCES**

SCOPE

This work package lists all forms, regulations, pamphlets, specifications, standards, technical manuals, technical bulletins, lubrication orders, field manuals, and miscellaneous publications referenced in this TM.

FORMS

| | |
|----------------|---|
| DA Form 2028 | Recommended Changes to Publications and Blank Forms |
| DA Form 2404 | Equipment Inspection and Maintenance Worksheet |
| DA Form 2407 | Maintenance Request |
| DA Form 2408 | Equipment Log Assembly (Records) |
| DA Form 2408-9 | Equipment Control Record |
| DA Form 5988-E | Equipment Inspection and Maintenance Worksheet |
| DD Form 314 | Preventive Maintenance Schedule and Record |
| SF Form 364 | Report of Discrepancy |
| SF Form 368 | Product Quality Deficiency Report |

ARMY REGULATIONS

| | |
|-----------|--|
| AR 310-25 | Dictionary of United States Army Terms |
|-----------|--|

DEPARTMENT OF THE ARMY PAMPHLETS

| | |
|--------------|--|
| DA PAM 750-8 | The Army Maintenance Management System (TAMMS) |
|--------------|--|

MILITARY SPECIFICATIONS

| | |
|----------------|---|
| MIL-A-53009(1) | Additive, Antifreeze Extender, Liquid Cooling Systems |
| MIL-DTL-5624 | Turbine Fuel, Aviation, Grades JP-4, JP-5, and JP-5/JP-8 ST |
| MIL-DTL-83133 | Turbine Fuels, Aviation, Kerosene Types, NATO F-34 (JP-8), NATO F-35 and JP-8+100 |

COMMERCIAL ITEM DESCRIPTIONS

| | |
|--------------|---|
| A-A-52557 | Fuel Oil, Diesel; for Posts, Camps, and Stations |
| A-A-52624 | Antifreeze, Multi Engine Type |
| ASME-Y14.38M | Abbreviations for Use on Drawings, and in Specifications, Standards and Technical Documents |

MILITARY STANDARDS

None

TECHNICAL MANUALS

| | |
|--------------|---|
| TM 750-244-3 | Procedures for Destruction of Equipment to Prevent Enemy Use (Mobility Equipment Command) |
|--------------|---|

TECHNICAL BULLETINS

| | |
|------------------|--|
| TB 43-0125 | Installation of Communications Electronic Equipment: Hookup of Electrical Cables to Mobile Generator Sets on Fielded Equipment to Meet Electrical Safety Standards |
| TB 9-6115-641-24 | Generator Set, Tactical Quiet 5kW, 60 Hz, MEP-802A and 400 Hz MEP-812A |

LUBE ORDERS

| | |
|------------------|--|
| LO 9-6115-641-12 | Generator Set, Skid Mounted, Tactical Quiet 5 kW, 60 and 400 Hz MEP-802A, Tactical Quiet, 60Hz, NSN 6115-01-274-7387 MEP-812A, Tactical Quiet, 400Hz, NSN 6115-01-274-7391 |
|------------------|--|

FIELD MANUALS

| | |
|------------|--|
| FM 1-02 | Operational Terms and Graphics |
| FM 20-31 | Electric Power Generation in the Field |
| FM 3-11 | Multiservice Tactics, Techniques and Procedures for Nuclear, Biological and Chemical Defense Operations |
| FM 3-11.3 | Multiservice Tactics, Techniques, and Procedures for Chemical, Biological, Radiological, and Nuclear Contamination Avoidance |
| FM 3-11.4 | Multiservice Tactics, Techniques and Procedures for Nuclear, Biological and Chemical (NBC) Protection |
| FM 3-11.5 | Multiservice Tactics, Techniques and Procedures for Chemical, Biological, Radiological and Nuclear Contamination |
| FM 31-70 | Basic Cold Weather Manual |
| FM 31-71 | Northern Operations |
| FM 3-97.6 | Mountain Operations |
| FM 4-25.11 | First Aid |
| FM 5-424 | Theater of Operations, Electrical Systems |
| FM 7-1 | Battle Focused Training |
| FM 9-207 | Operation and Maintenance of Ordnance Materiel in Cold Weather (0° to 65°) |

MISCELLANEOUS PUBLICATIONS

| | |
|--------------|---|
| AFR 66-1 | Air Force Maintenance Forms and Records |
| AR 700-138 | Army Logistics Readiness and Sustainability |
| AR 735-11-2 | Reporting of Supply Discrepancies |
| AR 750-1 | Army Materiel Maintenance Policy and Retail Maintenance Operations |
| CTA 50-970 | Expendable Items (Except Medical Class V, Repair Parts, and Heraldic Items) |
| CTA 8-100 | Army Medical Department Expendable/Durable Items |
| TM 750-244-2 | Procedures for Destruction of Electronics Materiel to Prevent Enemy Use |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET
COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS (BII) LISTS**

INTRODUCTION**Scope**

This work package lists COEI and BII for the 5 kW generator set to help you inventory items for safe and efficient operation of the equipment.

General

The COEI and BII information is divided into the following lists:

Components of End Item (COEI). This list is for information purposes only and is not authority to requisition replacements. These items are part of the generator set. As part of the end item, these items must be with the end item whenever it is issued or transferred between property accounts. Items of COEI are removed and separately packaged for transportation or shipment only when necessary. Illustrations are furnished to help you find and identify the items.

Basic Issue Items (BII). These essential items are required to place the generator set in operation, operate it, and to do emergency repairs. Although shipped separately packaged, BII must be with the generator set during operation and when it is transferred between property accounts. Listing these items is your authority to request/requisition them for replacement based on authorization of the end item by the TOE/MTOE. Illustrations are furnished to help you find and identify the items.

Explanation of Columns in the COEI List and BII List

Column (1) Illus Number. Gives you the number of the item illustrated.

Column (2) National Stock Number (NSN). Identifies the stock number of the item to be used for requisitioning purposes.

Column (3) Description, Part Number/(CAGEC). Identifies the Federal item name (in all capital letters) followed by a minimum description when needed. The stowage location of COEI and BII is also included in this column. The last line below the description is the part number and the Commercial and Government Entity Code (CAGEC) (in parentheses).

Column (4) Usable On Code. When applicable, gives you a code if the item you need is not the same for different models of equipment.

Column (5) U/I. Unit of Issue (U/I) indicates the physical measurement or count of the item as issued per the National Stock Number shown in column (2).

Column (6) Qty Rqr. Indicates the quantity required.

COMPONENTS OF END ITEM

Not applicable.

Table 1. Components of End Item List.

| (1) Illus Number | (2) National Stock Number (NSN) | (3) Description, Part Number / (CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|------------------------|---------------------------------------|---|--------------------------|------------|----------------|
| | | Not applicable. | | | NA |

***ARMY TM 9-6115-641-10
AIR FORCE TO 35C2-3-456-11**


TECHNICAL MANUAL

OPERATOR'S MANUAL

FOR

GENERATOR SET, SKID MOUNTED, TACTICAL QUIET,
5 kW, 60 Hz, MEP-802A
(NSN: 6115-01-274-7387) (EIC: VG2)

GENERATOR SET, SKID MOUNTED, TACTICAL QUIET,
5 kW, 400 Hz, MEP-812A
(NSN: 6115-01-274-7391) (EIC: VN2)

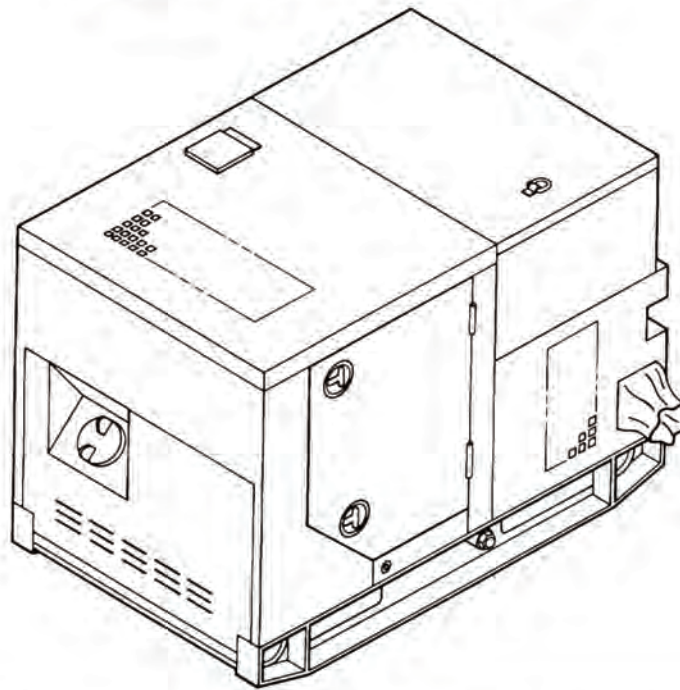

*SUPERSEDURE NOTICE - TM 9-6115-641-10 supersedes TM 9-6115-641-10 dated 30 December 1992, including all changes.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENTS OF THE ARMY
AND THE AIR FORCE
15 OCTOBER 2009**

Figure 1. Technical Manual TM 9-6115-641-10.

LUBRICATION ORDER
1 JUNE 2009**ARMY LO 9-6115-641-12**
AIR FORCE TO 35C2-3-456-11-1
MARINE CORPS LO 9-6115-641-12
(Superseding LO 9-6115-641-12, 30 October 1996)**GENERATOR SET, SKID MOUNTED TACTICAL QUIET 5KW****60 Hz NSN: 6115-01-274-7387**
PART NUMBER: MEP-802A
CAGEC: 30554
EIC: VG2

References: ARMY TM 9-6115-641-10, AIR FORCE TO 35C2-3-456-11

REPORTING OF ERRORS

You can help improve this LO. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Reports, as applicable by the requiring Service, should be submitted as follows:

- (a) (A) Army - Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) located in the back of this manual, directly to: Commander, U.S. Army CECOM Life Cycle Management Command (LCMC) and Fort Monmouth, ATTN: AMSEL-LC-LEO-E-CM, Fort Monmouth, NJ 07703-5006. You may also send in your recommended changes via electronic mail or by fax. Our fax number is 732-532-1556, DSN 992-1556. Our e-mail address is MONM-AMSELLEOPUBSCHG@conus.army.mil. Our online web address for entering and submitting DA Form 2028s is <http://edm.monmouth.army.mil/pubs/2028.html>.
- (b) (MC) Marine Corps - Submit notice of discrepancies or suggest changes on a NAVMC 10772. The NAVMC may be submitted via the Internet using website <https://www.ala.usmc.mil>, click on Publications, Technical Publications, follow the instructions, and then click on NAVMC 10772. It may also be submitted by electronic mail to smb.log.tech.pubs.fct@usmc.mil, or by mailing a paper copy NAVMC 10772 in an envelope addressed to Commander, Marine Corps Systems Command, ATTN: Assistant Commander Acquisition and Logistics (AC LCL/TP), 814 Radford Blvd, Suite 20343, Albany, Georgia 31704-0343. In addition, forward an information copy to the Project Officer at the following address: Commander, Marine Corps Systems Command (GTES-EPS), 2200 Lester Street, Quantico, VA 22134-6050.
- (c) (F) Air Force - By Air Force AFTO Form 22 (Technical Manual (TM) Change Recommendation and Reply) in accordance with paragraph 6-5, Section VI, TO 00-5-1 directly to prime ALC/MST.

A reply will be furnished to you.

Copy of this Lubrication Order will remain with the equipment at all times. Instructions contained herein are mandatory.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

Figure 2. Lubrication Order LO 9-6115-641-12.

Table 2. Basic Issue Items List.

| (1) Illus Number | (2) National Stock Number (NSN) | (3) Description, Part Number / (CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|------------------------|---------------------------------------|---|--------------------------|------------|----------------|
| 1 | | TECHNICAL MANUAL, TM 9-6115-641-10 | | EA | 1 |
| 2 | | LUBRICATION ORDER, LO 9-6115-641-12 | | EA | 1 |
| 2 | 5975-00-878-3791 | GROUNDING ROD | | EA | 1 |
| 2 | 4720-00-021-3201 | AUXILIARY FUEL LINES | | EA | 1 |

END OF WORK PACKAGE

OPERATOR MAINTENANCE**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET****ADDITIONAL AUTHORIZATION LIST (AAL)****ADDITIONAL AUTHORIZATION LIST (AAL) INTRODUCTION****SCOPE**

This work package lists additional items you are authorized for the support of the generator set.

General

This list identifies items that do not have to accompany the generator set and that do not have to be turned in with it. These items are all authorized to you by CTA, MTOE, TDA, or JTA.

Explanation of Columns in the AAL

Column (1) National Stock Number (NSN). Identifies the stock number of the item to be used for requisitioning purposes.

Column (2) Description, Part Number/(CAGEC). Identifies the Federal item name (in all capital letters) followed by a minimum description when needed. The last line below the description is the part number and the Commercial and Government Entity Code (CAGEC) (in parentheses).

Column (3) Usable On Code. When applicable, gives you a code if the item you need is not the same for different models of equipment.

Column (4) U/I. Unit of Issue (U/I) indicates the physical measurement or count of the item as issued per the National Stock Number shown in column (1).

Column (5) Qty Recm. Indicates the quantity recommended.

EXPLANATION OF LISTING

National stock numbers, descriptions, and quantities are provided to help you identify and request the additional items you require to support this equipment. The items are listed in alphabetical sequence by item name. If the item you require differs between serial numbers of the same model, effective serial numbers are shown in the last line of the description. If item required differs for different models of this equipment, the models are shown under the "Usable on Code" heading in the description column.

Table 1. Additional Authorization List.

| (1) National Stock Number (NSN) | (2) Description, Part Number / (CAGEC) | (3) Usable On Code | (4) U/I | (5) Qty Recm |
|---------------------------------------|--|-----------------------|------------|-----------------|
| 5342-00-066-1235 | ADAPTER, CONTAINER 13211E7541 (97403) | | EA | 1 |
| 7240-01-337-5269 | FUEL CAN | | EA | 1 |
| 4210-01-361-6921 | EXTINGUISHER, FIRE, CARBON DIOXIDE, 5 LB 322 (54905) | | EA | 1 |
| 5120-01-013-1676 | HAMMER, SLIDE, GROUND 0116-1810 (93742) | | EA | 1 |

Table 1. Additional Authorization List. - Continued

| (1) National Stock Number (NSN) | (2) Description, Part Number / (CAGEC) | (3) Usable On Code | (4) U/I | (5) Qty Recm |
|---------------------------------------|--|-----------------------|------------|-----------------|
| 7240-00-177-6154 | FLEXIBLE SPOUT MIL-S-1285 (81349) | | EA | 1 |
| 5975-00-878-3791/ 5975-00-952-1791 | ROD, GROUND A-A055804-III-B (58536) | | EA | 1 |

END OF WORK PACKAGE

OPERATOR MAINTENANCE

**5 KW GENERATOR SET (60 HZ AND 400 HZ), SKID MOUNTED, TACTICAL QUIET
EXPENDABLE AND DURABLE ITEMS LIST**

INTRODUCTION**Scope**

This work package lists expendable and durable items that you will need to operate and maintain the generator set. This list is for information only and is not authority to requisition the listed items. These items are authorized to you by CTA 50-970, Expendable/Durable Items (Except Medical, Class V Repair Parts, and Heraldic Items), CTA 50-909, Field and Garrison Furnishings and Equipment or CTA 8-100, Army Medical Department Expendable/Durable Items.

Explanation of Columns in the Expendable/Durable Items List

Column (1) Item No. This number is assigned to the entry in the list and is referenced in the narrative instructions to identify the item (e.g., Use brake fluid (WP 0098, item 5)).

Column (2) Level. This column identifies the lowest level of maintenance that requires the listed item (F = Maintainer or ASB).

Column (3) National Stock Number (NSN). This is the NSN assigned to the item which you can use to requisition it.

Column (4) Item Name, Description, Part Number/(CAGEC). This column provides the other information you need to identify the item. The last line below the description is the part number and the Commercial and Government Entity Code (CAGEC) (in parentheses).

Column (5) U/I. Unit of Issue (U/I) code shows the physical measurement or count of an item, such as gallon, dozen, gross, etc.

Table 1. Expendable and Durable Items List.

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number / (CAGEC) | (5) U/I |
|-----------------|--------------|---------------------------------------|---|------------|
| 6 | F | 8040-00-664-4318 | Adhesive 9995460 (18876) | EA |
| 8 | F | 6850-01-464-9125 | Antifreeze A-A-52624 (58536) | GL |
| 1 | F | 6850-01-331-3349 | Cleaning compound solvent P-D-680 (81348) | EA |
| 2 | F | 6850-01-331-3350 | Cleaning compound solvent P-D-680 (81348) | EA |
| 7 | F | 7920-01-338-3329 | Cloth Cleaning | EA |
| 3 | F | 9150-01-197-7690 | Grease Automotive/artillery GAA MIL-PRF-10924 (81349) | EA |

Table 1. Expendable and Durable Items List. - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number / (CAGEC) | (5) U/I |
|-----------------|--------------|---------------------------------------|---|------------|
| 4 | F | 9150-00-189-6727 | Oil Lubrication OE/HDO-10 MIL-PRF-2104 (81349) | EA |
| 5 | F | | Solder Sn60Pb40 (81348) | EA |
| 9 | F | 6810-00-107-1510 | Water Distilled | GL |

END OF WORK PACKAGE

INDEX

| <u>Subject</u> | <u>WP Sequence No. - Page No.</u> |
|---|--|
| A | |
| AC Generator, Location of | 0002-1 |
| Additional Authorization List | 0015-1 |
| Additional Authorization List (AAL) Work Package..... | 0015-1 |
| Air Cleaner Assembly, Inspection and Servicing of..... | 0012-3 |
| Air Cleaner Assembly, Location of | 0002-2 |
| Air Cleaner Element, Replacement of | 0012-3 |
| Air Intake and Exhaust System, Description of | 0003-5 |
| Alternator, Location of | 0002-2 |
| Assembly and Preparation for Use..... | 0005-1 |
| B | |
| Batteries, Location of..... | 0002-2 |
| Battle Short Switch, Use of..... | 0007-2 |
| C | |
| Components of End Item (COEI) and Basic Issue Items (BII) Lists Work Package..... | 0014-1 |
| Components of End Item and Basic Issue Items..... | 0014-1 |
| Control Panel, Description of..... | 0004-1 |
| Control Panel Assembly, Location of..... | 0002-3 |
| Control Panel Controls and Indicators..... | 0004-2 |
| Convenience Receptacle, Location of..... | 0002-3 |
| Convenience Receptacle, Use of | 0005-8 |
| Coolant Specifications | 0012-6 |
| Cooling System, Inspection and Servicing of | 0012-5 |
| Corrosion Prevention and Control (CPC) | 0001-3 |
| D | |
| Dead Crank Switch, Location of | 0002-1 |
| Description and Use of Operator Controls and Indicators Work Package..... | 0004-1 |
| Diesel Fuel Specifications | 0012-7 |
| Differences Between Models..... | 0002-7 |
| Dipstick, Location of | 0002-1 |

INDEX

| <u>Subject</u> | <u>WP Sequence No. - Page No.</u> |
|--|-----------------------------------|
| E | |
| Emergency Stopping | 0007-2 |
| Emergency Work Package | 0007-1 |
| Engine, Location of | 0002-1 |
| Engine, Servicing Lube Oil | 0012-9 |
| Engine Characteristics, Capabilities and Features | 0002-7 |
| Engine Cooling system, Description of | 0003-4 |
| Engine Lubrication System, Description of | 0003-4 |
| Engine Starting System, Description of | 0003-1 |
| Equipment Characteristics, Capabilities, and Features | 0002-1 |
| Equipment Data | 0002-7 |
| Equipment Description and Data | 0002-1 |
| Expendable and Durable Items List | 0016-1 |
| Expendable and Durable Items List Work Package | 0016-1 |
| F | |
| Fan Belt, Location of | 0002-2 |
| Frequency Adjust Control, Description of | 0004-5 |
| Frequency Adjust Control, Location of | 0002-3 |
| Fuel Filter/Water Separator, Inspection and Servicing of | 0012-8 |
| Fuel Filter/Water Separator, Location of | 0002-1 |
| Fuel Specifications | 0012-7 |
| Fuel System, Description of | 0003-3 |
| Fuel Tank, Inspection and Servicing of | 0012-6 |
| Fuel Tank, Location of | 0002-2 |
| G | |
| Generator Set Service | 0012-1 |
| Generator Set Servicing and Inspection | 0012-1 |
| Grounding Rod, Installation of | 0005-1 |
| H | |
| Heater Function Codes Plate | 0009-10 |
| Heater Operating Data | 0002-9 |
| How to Use This Manual | -iv |

INDEX

| <u>Subject</u> | <u>WP Sequence No. - Page No.</u> |
|--|--|
| I | |
| If Your Equipment Fails to Operate | 0010-1 |
| Initial Adjustments | 0005-1 |
| Installation of Grounding Rod | 0005-1 |
| Installation of Load Cables | 0005-2 |
| Introduction to Preventive Maintenance Checks and Services (PMCS)..... | 0010-1 |
| L | |
| Leading Particulars | 0002-7 |
| Leakage Definitions for Operators PMCS | 0010-3 |
| List of Abbreviations | 0001-4 |
| Load Cables, Installation of | 0005-2 |
| Load Output Terminal Board, Location of..... | 0002-3 |
| Location and Description of Major Components..... | 0002-1 |
| Location and Description of Major Components | 0002-5 |
| Location and Description of Winterization Kit Major Components..... | 0002-5 |
| Location of Major Winterization Kit Components..... | 0002-5 |
| Lubrication Instructions..... | 0011-1 |
| Lubrication System, Description of | 0003-4 |
| Lubrication System, Inspection and Servicing of..... | 0012-9 |
| M | |
| Maintenance Forms and Records | 0001-3 |
| Maintenance Procedures..... | 0012-1 |
| Malfunction Indicator Panel, Description of | 0004-4 |
| Malfunction Indicator Panel, Location of..... | 0002-3 |
| Muffler, Location of | 0002-2 |

INDEX

Subject **WP Sequence No. - Page No.**

O

| | |
|---|--------|
| Oil, Engine, Checking and Adding..... | 0012-9 |
| Oil Filter, Location of | 0002-1 |
| Operating Procedures | 0005-5 |
| Operation at High Altitudes..... | 0006-3 |
| Operation in Dusty or Sandy Areas..... | 0006-2 |
| Operation in Extreme Cold Weather (-25 °F [-31 °C]) | 0006-1 |
| Operation in Extreme Heat Above 120 °F (48.8 °C)..... | 0006-1 |
| Operation in Salt Water Areas..... | 0006-3 |
| Operation Under Rainy or Humid Conditions | 0006-2 |
| Operation Under Unusual Conditions..... | 0006-1 |
| Operation Under Unusual Conditions Work Package | 0006-1 |
| Operation Under Usual Conditions..... | 0005-1 |
| Operation Under Usual Conditions Work Package | 0005-1 |
| Operation Using Battle Short Switch | 0007-2 |
| Operation While in Contaminated Areas | 0006-3 |
| Operator PMCS Routing Diagram..... | 0010-7 |
| Output Supply System, Description of..... | 0003-6 |

P

| | |
|---|---------|
| PMCS, After Operations | 0010-1 |
| PMCS, Before Operations | 0010-1 |
| PMCS, During Operations | 0010-1 |
| PMCS Procedures | 0010-1 |
| Preparation for Movement | 0005-16 |
| Preventive Maintenance Check and Services (PMCS) | 0010-1 |
| Preventive Maintenance Checks and Services (PMCS) Table | 0011-1 |
| Principles of Operation | 0003-1 |
| Purpose of Equipment..... | 0001-1 |

R

| | |
|---|--------|
| Radiator, Location of | 0002-2 |
| References | 0013-1 |
| References Work Package..... | 0013-1 |
| Reporting Equipment Improvement Recommendations (EIR) | 0001-3 |

INDEX

Subject**WP Sequence No. - Page No.****S**

| | |
|---------------------------------------|--------|
| Scope of Technical Manual | 0001-1 |
| Self Test | 0005-5 |
| Servicing..... | 0012-2 |
| Skid Base, Location of..... | 0002-3 |
| Slave Receptacle, Location of..... | 0002-2 |
| Slave Starting Procedure..... | 0007-2 |
| Starter, Location of | 0002-2 |
| Starting Procedure..... | 0005-6 |
| Stopping Procedure..... | 0005-7 |
| Symptom Index, Troubleshooting..... | 0009-1 |
| Symptom Index, Winterization Kit..... | 0009-9 |

T

| | |
|---|--------|
| Theory of Operation Work Package | 0003-1 |
| Troubleshooting Index Work Package..... | 0008-1 |
| Troubleshooting Procedures | 0009-1 |
| Troubleshooting Procedures | 0009-8 |
| Troubleshooting Procedures Work Package | 0009-1 |
| Type of Manual..... | 0001-1 |

W

| | |
|------------------------------------|--------|
| Warnings, Cautions, and Notes..... | 0010-1 |
| Warranty Information | 0001-3 |
| Water Pump, Location of | 0002-2 |
| Winterization Kit | 0010-4 |

| | | | | | | | | | |
|---|----------------|------------|------|---|---|---|------------------------|--|--|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM). | | DATE 30 August 2002 | | |
| TO: (Forward to proponent of publication or form) (Include ZIP Code) Commander, US Army CECOM LCMC ATTN: AMSEL-LC-LEO-E-CM Fort Monmouth, NJ 07703-5006 | | | | | FROM: (Activity and location) (Include ZIP Code) Jane Q. Doe, SFC 1234 Any Street Anytown, AL 34565 | | | | |
| PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | | | |
| PUBLICATION/FORM NUMBER TM 11-1234-567-14 | | | | DATE 16 Sep 2001 | | TITLE Operator, Field and Sustainment Support Maintenance Manual for Radio, AN/ABC-123 | | | |
| ITEM | PAGE | PARA-GRAPH | LINE | FIGURE NO. | TABLE | RECOMMENDED CHANGES AND REASON | | | |
| 1 | WP0005 PG 3 | | 2 | | | Test or Corrective Action column should identify a different WP number. | | | |
| TYPED NAME, GRADE OR TITLE Jane Q. Doe, SFC | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION 123-4567 | | SIGNATURE | | | |

| | | | | | | | | |
|---|----------|----------|-----------------------|--|------------|----------|------------------------------------|--------------------|
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | FROM: (Activity and location) (Include ZIP Code) | | | DATE | |
| PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | DATE | | | TITLE | |
| PAGE NO. | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION |
| | | | | | | | | |
| PART III - REMARKS (Any general remarks, recommendations, or suggestions for improvement of publications and blank spaces. Additional blank space may be used if more space is needed.) | | | | | | | | |
| | | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | | SIGNATURE | |

| | | | | | | | |
|---|------|------------|------|--|-------|---|------|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA | | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM). | DATE |
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | | | FROM: (Activity and location) (Include ZIP Code) | |
| PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | DATE | | TITLE | |
| ITEM | PAGE | PARA-GRAPH | LINE | FIGURE NO. | TABLE | RECOMMENDED CHANGES AND REASON | |
| | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | SIGNATURE | |

| | | | | | | | | |
|--|----------|----------|--|---|------------|-----------|------------------------------------|--------------------|
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | FROM: (Activity and location) (Include ZIP Code) | | | DATE | |
| PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | |
| PUBLICATION/FORM NUMBER | | | DATE | | TITLE | | | |
| PAGE NO. | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION |
| | | | | | | | | |
| PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.) | | | | | | | | |
| | | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | | SIGNATURE | | |

| | | | | | | | |
|---|------|------------|------|--|-------|---|------|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA | | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM). | DATE |
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | | | FROM: (Activity and location) (Include ZIP Code) | |
| PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | DATE | | TITLE | |
| ITEM | PAGE | PARA-GRAPH | LINE | FIGURE NO. | TABLE | RECOMMENDED CHANGES AND REASON | |
| | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | SIGNATURE | |

| | | | | | | | | |
|--|----------|----------|--|---|------------|-----------|------------------------------------|--------------------|
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | FROM: (Activity and location) (Include ZIP Code) | | | DATE | |
| PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | |
| PUBLICATION/FORM NUMBER | | | DATE | | TITLE | | | |
| PAGE NO. | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION |
| | | | | | | | | |
| PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.) | | | | | | | | |
| | | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | | SIGNATURE | | |

| | | | | | | | |
|---|------|------------|------|--|-------|---|------|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA | | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM). | DATE |
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | | | FROM: (Activity and location) (Include ZIP Code) | |
| PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | DATE | | TITLE | |
| ITEM | PAGE | PARA-GRAPH | LINE | FIGURE NO. | TABLE | RECOMMENDED CHANGES AND REASON | |
| | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | SIGNATURE | |

| | | | | | | | | |
|--|----------|----------|--|---|------------|-----------|------------------------------------|--------------------|
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | FROM: (Activity and location) (Include ZIP Code) | | | DATE | |
| PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | |
| PUBLICATION/FORM NUMBER | | | DATE | | TITLE | | | |
| PAGE NO. | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION |
| | | | | | | | | |
| PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.) | | | | | | | | |
| | | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | | SIGNATURE | | |

By Order of the Secretary of the Army:

Official:



JOYCE E. MORROW
*Administrative Assistant to the
Secretary of the Army*
0930301

GEORGE W. CASEY, JR
*General, United States Army
Chief of Staff*

By Order of the Secretary of the Air Force:

Official:

DONALD J. HOFFMAN
*General, United States Air Force
Commander, AFMC*

NORTON A. SWARTZ
*General, United States Air Force
Chief of Staff*

Army Distribution:

To be distributed in accordance with the initial distribution number (IDN) 255241 requirements for TM 9-6115-641-10.

THE METRIC SYSTEM AND EQUIVALENTS

LINEAR MEASURE

1 Centimeter = 10 Millimeter = 0.01 Meters = 0.3937 inches
 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 inches
 1 kilometer = 1000 Meters = 0.621 Miles

WEIGHTS

1 Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces
 1 Kilogram = 100 Grams = 2.2 lb.1 Cu. Meter = 1,000,000
 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

LIQUID MEASURE

1 Millimeter = 0.001 Liters = 0.0338 Fluid Ounces
 1 Liter = 1000 Millimeters = 32.82 Fluid Ounces

SQUARE MEASURE

1 Sq. Centimeter = 100 Sq. Millimeter = 0.155 Sq. Inches
 1 Sq. Meter = 10,000 Sq. Centimeters = 10.76 Sq. Inches
 1 Sq. Kilometer = 1,000,000 Sq. Meters = 0.386 Sq. Miles

CUBIC MEASURE

1 Cu. Centimeter = 1000 Cu. Millimeters = 0.06 Cu. Inches
 1 Cu. Centimeters = 35.31 Cu. Feet

TEMPERATURE

$5/9 (^{\circ}\text{F} - 32) = ^{\circ}\text{C}$
 212° Fahrenheit is equivalent to 100° Celsius
 90° Fahrenheit is equivalent to 32.2° Celsius
 32° Fahrenheit is equivalent to 0° Celsius
 $9/5 ^{\circ}\text{C} + 32 = ^{\circ}\text{F}$

APPROXIMATE CONVERSION FACTORS

| TO CHANGE | TO | MULTIPLY BY |
|-----------------------------|---------------------------|-------------|
| Inches..... | Centimeters..... | 2.540 |
| Feet..... | Meters..... | 0.305 |
| Yards..... | Meters..... | 0.914 |
| Miles..... | Kilometers..... | 1.609 |
| Square Inches..... | Square Centimeters..... | 6.451 |
| Square Feet..... | Square Meters..... | 0.093 |
| Square Yards..... | Square Meters..... | 0.836 |
| Square Miles..... | Square Kilometers..... | 2.590 |
| Acres..... | Square Hectometers..... | 0.405 |
| Cubic Feet..... | Cubic Meters..... | 0.028 |
| Cubic Yards..... | Cubic Meters..... | 0.765 |
| Fluid Ounces..... | Milliliters..... | 29.573 |
| Pints..... | Liters..... | 0.473 |
| Quarts..... | Liters..... | 0.946 |
| Gallons..... | Liters..... | 3.785 |
| Ounces..... | Grams..... | 28.349 |
| Pounds..... | Kilograms..... | 0.454 |
| Short Tons..... | Metric Tons..... | 0.907 |
| Pound-Feet..... | Newton-Meters..... | 1.356 |
| Pounds per Square Inch..... | Kilo pascals..... | 6.895 |
| Miles per Gallon..... | Kilometers per Liter..... | 0.425 |
| Miles per Hour..... | Kilometers per Hour..... | 1.609 |

| TO CHANGE | TO | D I V I D E B Y |
|---------------------------|-----------------------------|-----------------|
| Centimeters..... | Inches..... | 2.540 |
| Meters..... | Feet..... | 0.305 |
| Meters..... | Yards..... | 0.914 |
| Kilometers..... | Miles..... | 1.609 |
| Square Centimeters..... | Square Inches..... | 6.451 |
| Square Meters..... | Square Feet..... | 0.093 |
| Square Meters..... | Square Yards..... | 0.836 |
| Square Kilometers..... | Square Miles..... | 2.590 |
| Square Hectometers..... | Acres..... | 0.405 |
| Cubic Meters..... | Cubic Feet..... | 0.028 |
| Cubic Meters..... | Cubic Yards..... | 0.765 |
| Milliliters..... | Fluid Ounces..... | 29.573 |
| Liters..... | Pints..... | 0.473 |
| Liters..... | Quarts..... | 0.946 |
| Liters-Meters..... | Gallons..... | 3.785 |
| Grams..... | Ounces..... | 28.349 |
| Kilograms..... | Pounds..... | 0.454 |
| Metric Tons..... | Short Tons..... | 0.907 |
| Newton-Meters..... | Pound-Feet..... | 1.356 |
| Kilo pascals..... | Pounds per Square Inch..... | 6.895 |
| Kilometers per Liter..... | Miles per Gallon..... | 0.425 |
| Kilometers per Hour..... | Miles per Hour..... | 1.609 |

