

**TM 9-2320-392-10-2\***  
**AIR FORCE T.O. 36A12-1C-1157-1-2**

\*Supersedes copy dated November 2004

---

**TECHNICAL MANUAL**  
**OPERATOR'S MANUAL FOR**  
**THE M1083A1 SERIES 5 TON, 6 X 6**  
**MEDIUM TACTICAL VEHICLES (MTV)**  
**VOLUME NO. 2 OF 2**

MODEL	NSN	EIC
TRK, CAR., MTV, M1083A1		
W/WN	2320-01-447-3884	BUL
W/O WN	2320-01-447-3890	BT9
TRK., CAR., MTV, W/MHC, M1084A1	2320-01-447-3887	BUB
TRK., CAR., MTV, LWB, M1085A1		
W/WN	2320-01-447-3897	BUR
W/O WN	2320-01-447-3891	BUG
TRK, CAR., MTV, LWB W/MHC, M1086A1	2320-01-447-3895	BUH
TRK., TRACTOR, MTV, M1088A1		
W/WN	2320-01-447-3900	BUC
W/O WN	2320-01-447-3893	BUN
TRK., WKR., MTV, M1089A1	2320-01-447-3892	BUD
TRK., DUMP, MTV, M1090A1		
W/WN	2320-01-447-6344	BUP
W/O WN	2320-01-447-3899	BUE
TRK., CHAS., MTV, M1092A1	2320-01-447-3894	BT8
TRK., CHAS., MTV, LWB M1096A1	2320-01-447-3885	XXX

**DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.**

---

HEADQUARTERS, DEPARTMENTS OF THE ARMY AND AIR FORCE

**JANUARY 2005**



---

## **WARNING SUMMARY**

---

### **WARNING**

**CARBON MONOXIDE (EXHAUST GAS) CAN KILL YOU.**

Carbon monoxide is a colorless, odorless, DEADLY POISONOUS gas and when breathed deprives body of oxygen and causes SUFFOCATION. Breathing air with carbon monoxide produces symptoms of headache, dizziness, loss of muscular control, a sleepy feeling, and coma. Permanent BRAIN DAMAGE or DEATH can result from severe exposure.

The following precautions MUST be followed to ensure personnel are safe whenever any type of personnel heater or engine is operated for any purpose. Failure to comply may result in serious injury or death to personnel.

DO NOT operate heater or engine in an enclosed area without adequate ventilation.

DO NOT drive any vehicle with inspection plates, cover plates, or engine compartment covers removed unless necessary for maintenance purposes.

NEVER sleep in a vehicle when the heater is operating or the engine is idling.

BE ALERT at all times during vehicle operation for exhaust odors and exposure symptoms. If either is present, IMMEDIATELY VENTILATE personnel compartments. Treatment of affected personnel shall be: expose to fresh air; keep warm; DO NOT PERMIT PHYSICAL EXERCISE. If necessary, give cardiopulmonary resuscitation, as described in FM 21-11, and get immediate medical attention. Failure to comply may result in serious injury or death to personnel.

THE BEST DEFENSE AGAINST CARBON MONOXIDE POISONING IS GOOD VENTILATION.

### **WARNING**

Do not touch extremely cold metal (below -26° F (-32° C)). Bare skin may freeze to cold metal. Failure to comply may result in injury to personnel.

---

**WARNING SUMMARY - Continued**

---

**WARNING**

**CARBON MONOXIDE (EXHAUST GAS) CAN KILL YOU.**

**DO NOT** operate troopseat heater or engine in an enclosed area without adequate ventilation. **NEVER** sleep in a vehicle when troopseat heater is operating or the engine is idling. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Nuclear, Biological, or Chemical (NBC) contaminated air filters must be handled and disposed of only by authorized and trained personnel. The unit commander or senior officer in charge of maintenance personnel must ensure that prescribed protective clothing (FM 3-4) is used, and prescribed safety measures and decontamination procedures (FM 3-5 and TB 700-4) are followed. The unit standard operating procedures are responsible for final disposal of contaminated air filters. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Adhesives, solvents, and sealing compounds can burn easily, can give off harmful vapors, and are harmful to skin and clothing. Keep away from open fire and use in well-ventilated area. If adhesive, solvent, or sealing compound gets on skin or clothing, wash immediately with soap and water. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Pressure in radiator overflow tank must be released before removing radiator cap. Failure to comply may result in injury to personnel.

**WARNING**

Never raise cab while occupied or when parked uphill on a steep grade. Failure to comply may result in serious injury or death to personnel.



---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Both suspension compression plates must be installed on axle studs. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Cab hydraulic latch must be locked before driving vehicle. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Do not pull seat belt more than 1 in. (2.54 cm) away from shoulder. Seat belt will not be effective if accident occurs. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Vehicle must be secure. Chock wheels when stopped on incline. Vehicle may roll downhill. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Ensure vehicle is parked on level ground before changing flat tire. Vehicle may roll. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Wear arctic clothing when cab temperatures fall and remain below 30° F (-1° C). Cold stress preventative measures in FM 31-70 should be applied when vehicle cab temperatures fall and remain below 30° F (-1° C). Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Engine compartment and accessories may be extremely hot when engine is running or has been running recently. Use caution around engine when cab is raised. Failure to comply may result in injury to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Engine compartment contains a partially exposed fan blade. Use extreme caution around front of engine. Failure to comply may result in injury to personnel.

### **WARNING**

Cargo cover weighs approximately 60 lbs (27 kgs). Long Wheel Base (LWB) cargo cover weighs approximately 80 lbs (36 kgs). Arctic cargo cover weighs approximately 100 lbs (45 kgs). An assistant is required to lift cargo cover. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Ensure engine oil is cool before performing any maintenance. Failure to comply may result in serious injury to personnel.

### **WARNING**

Ensure safety strap is fastened across back and front of vehicle before transporting troops. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Ensure both doors are securely closed before cab is raised. Do not allow personnel near cab when cab is being raised. Cab doors could open. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Ensure both doors are securely closed before cab is lowered. Do not allow personnel near cab when cab is being lowered. Cab doors could open. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Data and instruction plates given below must be followed at all times to safely operate vehicle. Failure to comply may result in injury to personnel or damage to equipment.

---

**WARNING SUMMARY - Continued**

---

---

**WARNING**

---

Extreme care should be taken when removing radiator cap if WATER TEMP gage reads above 180° F (82° C). Contact with steam or hot coolant under pressure may result. Failure to comply may result in injury to personnel.

---

**WARNING**

---

Tire weighs approximately 350 lbs (159 kgs). If treads of tire catch on tool box during lowering, raise tire and pull tire away from tool box and continue lowering. Use extreme care when lowering or handling tire. Failure to comply may result in injury to personnel.

---

**WARNING**

---

Tire weighs approximately 350 lbs (159 kgs). Use extreme care when handling tire. Failure to comply may result in injury to personnel.

---

**WARNING**

---

Place hydraulic jack on flat surface. Do not allow personnel under vehicle when jacking. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Handle tire with care. Tire may have exposed broken metal cords or sharp debris in it. Failure to comply may result in injury to personnel.

---

**WARNING**

---

All cleaning procedures must be accomplished in well-ventilated areas. Failure to comply may result in injury to personnel or damage to equipment.

---

**WARNING**

---

Use caution when inflating tire. Over inflation may cause tire to blow apart. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING SUMMARY - Continued**

---

---

**WARNING**

---

Wheels must be chocked and service brakes applied before parking brake is released. Vehicle may roll if wheels are not chocked. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Protective gloves, clothing, and/or respiratory equipment must be worn whenever caustic, toxic, or flammable cleaning solutions are used. Failure to comply may result in injury to personnel.

---

**WARNING**

---

A fire extinguisher must be available and ready during all cleaning operations involving solvents. Failure to comply may result in injury to personnel or damage to equipment.

---

**WARNING**

---

Manifold operator must stand near hydraulic manifold and observe spare tire. Guide person must stand to the right front of vehicle, well clear of spare tire. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Ensure tires have correct tire pressure for terrain conditions and driving speed (refer to Table 1 Cold Tire Inflation Pressure and Restrictions). Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Dry Cleaning Solvent (P-D-680) is TOXIC and flammable. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes, and clothes, and do not breath vapors. Keep away from heat or flame. Never smoke when using Dry Cleaning Solvent; the flashpoint for Type I Dry Cleaning Solvent is 100° F (38° C) and for Type II is 138° F (50° C). Failure to comply may result in serious injury or death to personnel.

---

**WARNING SUMMARY - Continued**

---

**WARNING**

If personnel become dizzy while using Dry Cleaning Solvent, immediately get fresh air and medical help. If Dry Cleaning Solvent contacts skin or clothes, flush with cold water. If Dry Cleaning Solvent contacts eyes, immediately flush eyes with water and get medical attention. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Hydraulic fluid (MIL-PRF-5606H) is TOXIC. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes, and clothes. Skin and clothing that come in contact with hydraulic fluid should be washed immediately. Saturated clothing should be removed immediately. Failure to comply may result in injury to personnel.

**WARNING**

Lead-acid battery gases can explode. Do not smoke, have open flames, or make sparks around a battery, especially if caps are off. Battery may give off gas which can explode. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Do not back up vehicle without an assistant. Operator has limited vision while backing vehicle. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Do not smoke, have open flame, or make sparks near batteries when slave starting vehicle. Batteries can explode. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Remove rings, bracelets, wristwatches, neck chains, and any other jewelry before working around vehicle. Jewelry may catch on equipment or may short across an electrical circuit or battery terminal. Failure to comply may result in serious injury or death to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Ensure master power switch on both vehicles are turned to off before connecting NATO power cable. Vehicles must not touch each other. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Diesel fuel is flammable. Do not fill fuel tank with engine running, while smoking, or when near an open flame. Never overfill fuel tank or spill fuel. If fuel is spilled, clean it up immediately. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Do not perform fuel/water separator checks, inspections, or draining while smoking, or when near fire or sparks. Fuel could ignite. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Gasoline is highly flammable. Do not operate swingfire heater while filling gas tank. Do not smoke or have open fires within 25 ft (7.6 m) of area while filling gas tank. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Allow swingfire heater to cool down before draining gasoline from swingfire heater gas tank. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Exhaust fumes from swingfire heater are poisonous. Do not operate swingfire heater in a closed room. Ensure adequate ventilation is available. If personnel become dizzy, seek immediate medical attention. Failure to comply may result in serious injury or death to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Diesel fuel or gasoline must never be used for cleaning. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Operating in water or mud causes brake linings to get wet and can impair vehicle braking. Dry brakes by driving vehicle about 500 ft (153 m) while applying service brakes often. If adequate braking is not restored by drying brakes, notify Field Maintenance. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Rear axle service brakes will not operate if REAR BRAKE AIR pressure gage reads below 75 psi (517 kPa). Rear axle braking will be provided by rear spring brakes for a limited time. Allow greater stopping distance. Discontinue vehicle operation as soon as possible. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Front axle service brakes will not operate if FRONT BRAKE AIR pressure gage reads below 75 psi (517 kPa). Allow greater stopping distance. Discontinue vehicle operation as soon as possible. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Notify Field Maintenance that lugnuts need to be tightened to 415-475 lb-ft (563-644 N·m) as soon as possible. Wheel may come loose if lugnuts are not tightened to proper torque. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Do not exceed maximum vehicle speed and grade limitations during normal operations. Do not exceed maximum approach or departure angles or ford water greater than maximum depth. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING SUMMARY - Continued**

---

---

**WARNING**

---

Vehicle speed should be reduced to 5-10 mph (8-16 km/h) during blackout conditions. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Bridges along your route may be marked with a class number. The bridge class number shows the safe capacity of the bridge. If the bridge class number on your vehicle is equal to or less than the bridge class number, the bridge will hold your vehicle. If the bridge class number on your vehicle is greater than the bridge class number, **DO NOT CROSS BRIDGE**. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Do not press brake pedal hard three or four times in a row. Air supply will be used up and service brakes will not work until air pressure builds up again. Do not operate vehicle until **FRONT** and **REAR BRAKE AIR** pressure reaches at least 100 psi (690 kPa). Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Transmission incorporates a hold feature to prohibit upshifting above selected gear during normal driving. However, during downhill operation, transmission may upshift above selected gear. On downgrades, vehicle speed may need to be restricted by using service brakes. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Avoid driving diagonally across a hill. Vehicle could roll over. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Do not straddle or drive on sides of sand mounds. Loose sand will not support vehicle on steep slopes. Avoid driving diagonally across a hill. Vehicle may roll over. Failure to comply may result in serious injury or death to personnel or damage to equipment.



---

**WARNING SUMMARY - Continued**

---

**WARNING**

Towing vehicle and disabled vehicle must have parking brakes applied before connecting/disconnecting towbar. Vehicles may roll into each other. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Towbar weighs approximately 100 lbs (45 kgs) and requires two or more personnel to carry. Failure to comply may result in injury to personnel.

**WARNING**

Do not place hands near pintle hook when connecting/disconnecting towbar from pintle hook. Failure to comply may result in injury to personnel.

**WARNING**

Personnel must not occupy towed vehicle during towing operation. Towed vehicle may become disconnected while being towed. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Ground guide is required to guide vehicle backing up. Failure to comply may result in injury to personnel or damage to equipment.

**WARNING**

Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.

**WARNING**

Ensure no one is behind tailgate before dump body is raised. Failure to comply may result in serious injury or death to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Set up stifflegs if load is swung around rear of vehicle. Vehicle could turn over if not supported. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Underlift assembly must be operated with WRECKER REMOTE CONTROL if Operator is not able to keep underlift assembly and disabled vehicle in sight at all times during operation. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Stinger camlock must be locked into first rectangular hole on stinger before underlift assembly is folded into its stowed position. Crossbar could shift suddenly. Failure to comply may result in injury to personnel.

### **WARNING**

Goggles must be worn when operating WRECKER CONTROL PANEL. Blowing dust and debris may become airborne while engine is running. Failure to comply may result in injury to personnel.

### **WARNING**

Ensure there are at least five wraps of cable on hoist drum at all times. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Do not exceed rated payload of vehicle. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Sandshoe weighs approximately 70 lbs (32 kgs). Use the aid of an assistant to lower/raise sandshoe. Failure to comply may result in injury to personnel or damage to equipment.

---

**WARNING SUMMARY - Continued**

---

---

**WARNING**

---

Keep hands and feet clear of stifflegs during operation. Failure to comply may result in injury to personnel.

---

**WARNING**

---

Do not raise vehicle tires off ground with stifflegs. Vehicle may roll over. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Stifflegs must be positioned so that vehicle is level from side to side. Vehicle may roll over. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Slowly take out slack in cable before recovering equipment. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Use extreme caution when disconnecting cable. Cable may spin rapidly to the left approximately 1 1/2 turns when disconnected. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Keep all personnel clear of area when tension is on cable. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

M1089A1 and disabled vehicle must have parking brakes applied before connecting/disconnecting towbar. Failure to comply may cause vehicles to roll into each other and may result in serious injury or death to personnel or damage to equipment.

---

**WARNING SUMMARY - Continued**

---

**WARNING**

M1089A1 should not be operated at speeds over 15 mph (24 km/h) when towing, except on paved roads when Operator determines terrain conditions allow safe operation. The following are maximum speeds for safe operation.

<u>TERRAIN CONDITION</u>	<u>MAXIMUM SPEED</u>
on road (level)	35 mph (56 km/h)
on road (hilly)	30 mph (48 km/h)
off road	15 mph (24 km/h)

Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Never stand against or between tractor tires, stand between tractor and trailer, allow anyone behind trailer during movement, or allow anyone to stand on opposite side of Operator during fifth wheel release. Always chock trailer tires before coupling, connect trailer brakes air supply and set trailer brakes before sliding fifth wheel. Use release tool when releasing and engaging slide latch lever. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Use release tool with hook side up when closing slide latch release lever. Failure to comply may result in injury to personnel.

**WARNING**

Underlift assembly must be operated with WRECKER REMOTE CONTROL if Operator is not able to keep underlift assembly and disabled vehicle in sight at all times during operation. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Keep personnel clear of underlift assembly and disabled vehicle when raising. Disabled vehicle could fall suddenly. Failure to comply may result in serious injury or death to personnel.

---

**WARNING SUMMARY - Continued**

---

---

**WARNING**

---

M1089A1 hydraulic hoses are under 3,000 pounds pressure and must be handled carefully to prevent damage or personal injury. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

MODE SELECTOR SWITCH must be in NORMAL position to relieve pressure before disconnecting hydraulic hoses. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Keep hands and feet clear of outriggers during operation. Failure to comply may result in injury to personnel.

---

**WARNING**

---

Keep boom clear of all electrical lines and other obstacles while operating Material Handling Crane (MHC). Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Area must be clear of personnel before operating swing or telescoping boom. Boom must be rotated and telescoped slow enough so Operator has control of load. If Operator cannot see load during operation, operate Material Handling Crane (MHC) with REMOTE CONTROL UNIT. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Operator must keep load in sight at all times while operating Material Handling Crane (MHC). Load may unexpectedly shift. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Do not operate Material Handling Crane (MHC) unless outriggers are set up and MHC is level from side to side. Failure to comply may result in serious injury or death to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Do not operate Material Handling Crane (MHC) and 15K Self-Recovery Winch (SRW) at the same time. Load may unexpectedly shift. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Material Handling Crane (MHC) must be operated with REMOTE CONTROL UNIT if Operator is not able to keep load in sight at all times during operation. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Main panel Material Handling Crane (MHC) controls must not be used when WRECKER REMOTE CONTROL is connected. MHC may move inadvertently. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Wheels must always be chocked before operating Material Handling Crane (MHC). Vehicle may move or load may shift. Failure to comply may result in serious injury to personnel or damage to equipment.

### **WARNING**

Goggles must be worn while operating Material Handling Crane (MHC) controls. Blowing dust and debris may become airborne while engine is running. Failure to comply may result in serious injury to personnel.

### **WARNING**

Outriggers must be positioned so that Material Handling Crane (MHC) is level from side to side. Use of MHC when vehicle is not level can cause vehicle to roll over. Failure to comply may result in serious injury or death to personnel.

---

**WARNING SUMMARY - Continued**

---

**WARNING**

Attach guide lines to load to keep control of load at all times. An assistant is required to attach guide lines. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Do not raise vehicle tires off ground with outriggers. Vehicle may roll over. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

There must always be at least five wraps of cable on 15K Self-Recovery Winch (SRW). If load is applied with less than five wraps of cable on 15K SRW, cable may come loose on drum. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Ensure line pull does not exceed capacity of 15K Self-Recovery Winch (SRW). Failure to comply may result in serious injury or death to personnel.

**WARNING**

Cab protector is spring loaded and weighs approximately 180 lbs (82 kgs). Hold cab protector down before removing pins. Slowly allow cab protector to raise to vertical position after pins are removed. Failure to comply may result in injury to personnel.

**WARNING**

Ensure no one is behind tailgate before dump body is raised. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Assistant must stand clear when dump body is being lowered. Failure to comply may result in injury to personnel.

---

**WARNING SUMMARY - Continued**

---

---

**WARNING**

---

Cab protector is spring loaded and weighs approximately 180 lbs (82 kgs). Keep pressure on cab protector when lowering and when installing pins. Failure to comply may result in injury to personnel.

---

**WARNING**

---

Do not press dump TAILGATE RELEASE switch while tailgate is not connected at the top. Tailgate will fall from dump body. Failure to comply may result in injury to personnel or damage to equipment.

---

**WARNING**

---

Dump body must be supported by maintenance legs at any time that maintenance is performed with dump body up. Failure to comply may result in serious injury or death to personnel or damage to equipment.

---

**WARNING**

---

Dump cover weighs approximately 60 lbs (27 kgs). Arctic dump cover weighs approximately 100 lbs (45 kgs). An assistant is required to lift dump cover. Failure to comply may result in injury to personnel or damage to equipment.

---

**WARNING**

---

Position of assistant must be known at all times. Do not allow anyone to stand between tractor and trailer, behind trailer, or under trailer neck during coupling of tractor to trailer. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

DO NOT attempt to use hydraulic jack on rear axles without jack adapter installed. Failure to comply may result in serious injury or death to personnel.

---

**WARNING**

---

Pressure in coolant reservoir must be released before removing cap. Failure to comply may result in injury to personnel.



---

**WARNING SUMMARY - Continued**

---

**WARNING**

Trailer wheels must be chocked before coupling/uncoupling with fifth wheel. Trailer wheels may roll if they are not chocked. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Listen for air leaks coming from the connections at the SERVICE and EMERGENCY gladhands. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Do not overfill coolant reservoir. Overfilling coolant reservoir will not allow enough space for coolant to expand during troopseat heater operation. Failure to comply may result in injury to personnel or damage to personnel.

**WARNING**

Use this procedure only in the event of an emergency. Using the MANUAL OVERRIDE switch to operate the Material Handling Crane (MHC) defeats the overload shutdown circuits and allows the MHC to exceed the rated capacity. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**WARNING**

Extreme care should be taken when removing radiator cap if WATER TEMP gage reads above 180° F (82° F). Contact with steam or hot coolant under pressure may result. Failure to comply may result in injury to personnel.

**WARNING**

Use care when removing debris from engine fan. Engine components will be hot. Failure to comply may result in injury to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Never raise cab while occupied or when parked uphill on a steep grade. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Power cable must be connected to Light Material Handling Crane (LMHC) before being connected to circuit breaker box. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Ensure that engine is shut down before connecting power cable at vehicle NATO connector. Failure to comply may result in injury or death to personnel.

### **WARNING**

Determine required Light Material Handling Crane (LMHC) settings prior to raising boom. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Ensure there are at least two wraps of cable on hoist drum at all times. Cable could come off hoist drum while load is being lifted. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Ensure that engine is not running before disconnecting circuit breaker box NATO connector from vehicle NATO connector. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Power source must be turned off before disconnecting power cable. Failure to comply may result in injury to personnel or damage to equipment.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Light Material Handling Crane (LMHC) boom and winch weighs approximately 110 lbs (50 kgs). The aid of an assistant is required to remove LMHC boom and winch. Failure to comply may result in injury to personnel.

### **WARNING**

Light Material Handling Crane (LMHC) mast weighs approximately 110 lbs (50 kgs). Use the aid of an assistant to remove mast from cargo bed pocket. Failure to comply may result in injury to personnel.

### **WARNING**

Light Material Handling Crane (LMHC) mast weighs approximately 110 lbs (50 kgs). Use the aid of an assistant to install mast from cargo bed pocket. Failure to comply may result in injury to personnel.

### **WARNING**

Light Material Handling Crane (LMHC) boom and winch weighs approximately 110 lbs (50 kgs). The aid of an assistant is required to install LMHC boom and winch. Failure to comply may result in injury to personnel.

### **WARNING**

Cargo bed is approximately 5 ft (1.5 m) above ground level. Use care during any Light Material Handling Crane (LMHC) operation. Failure to comply may result in injury or death to personnel.

### **WARNING**

Ensure that wheels are chocked prior to setting up Light Material Handling Crane (LMHC). Failure to comply may result in injury to personnel.

### **WARNING**

Determine required Light Material Handling Crane (LMHC) settings prior to telescoping boom. Failure to comply may result in injury to personnel or damage to equipment.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Ensure that service and emergency gladhand connections do not leak. Failure to comply may result in serious injury or death to personnel, or damage to equipment.

### **WARNING**

Keep hands clear of 30K winch during operation. Failure to comply may result in injury to personnel.

### **WARNING**

Operate vehicle at high idle (1350 rpm) until coolant temperature is 165° F (74° C) and windshield is sufficiently clear of frost/ice. Failure to comply may cause serious injury to personnel or may result in damage to equipment.

### **WARNING**

Area must be clear on both sides before extending outriggers. Failure to comply may result in serious injury to personnel.

### **WARNING**

When operating the vehicle in snowy or icy conditions, apply the brake pedal momentarily, every few miles. This will ensure that brake linings do not become encrusted with snow or ice. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Do not engage engine exhaust brake feature in icy or slippery conditions. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Do not drive vehicle until windshield is sufficiently clear of frost/ice. Failure to comply may result in severe injury or death to personnel.

---

**WARNING SUMMARY - Continued**

---

**WARNING**

Never mix gasoline or JP-4 turbine fuel with other fuels outside vehicle fuel tank. Any mixture should be done by adding fuels to fuel tank. Gasoline and JP-4 turbine fuel are highly combustible and may explode, resulting in injury or death to personnel.

**WARNING**

Do not place hands near pintle hook when aligning towbar eye with pintle hook or when removing towbar. Failure to comply may result in injury to personnel.

**WARNING**

Do not place hands near pintle hook when removing towbar. Failure to comply may result in injury to personnel.

**WARNING**

Keep hands and feet clear of the outriggers during operation. Failure to comply may result in injury to personnel.

**WARNING**

Do not disconnect cable from stowage ring until boom is raised to a 30-degree angle. Hook assembly could fall. Failure to comply may result in injury to personnel.

**WARNING**

Operator must keep control of load at all times. Attach guide lines to load. An assistant is required to attach guide lines. Failure to comply may result in serious injury or death to personnel.

**WARNING**

Gasoline is highly flammable. Do not smoke or have open flames within 25 feet of area when draining tank. Failure to comply may result in serious injury or death to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Area must be clear of personnel before rotating or telescoping boom. Boom must be rotated and telescoped slow enough so operator has control of load. If Operator cannot see load during operation, operate Material Handling Crane (MHC) with REMOTE CONTROL UNIT. Failure to comply may result in serious injury or death to personnel.

### **WARNING**

Vehicle Operator and all crew members must wear properly fitted and approved hearing protection devices when operating any FMTV at speeds of 40 mph (64 km/h) and above. Failure to comply may result in injury to personnel.

### **WARNING**

Operators of the M1084A1, M1086A1, and M1089A1 Material Handling Crane (MHC) must wear properly fitted and approved hearing protection devices during all craning operations. Failure to comply may result in injury to personnel.

### **WARNING**

All personnel working within 12 ft (3.5 m) of an operating M1084A1 or M1085A1 cargo vehicle must wear properly fitted and approved hearing protection devices. Failure to comply may result in injury to personnel.

### **WARNING**

All personnel working within 18 ft (5.5 m) of an operating M1089A1 wrecker must wear properly fitted and approved hearing protection devices. Failure to comply may result in injury to personnel.

### **WARNING**

Personnel firing the M240/M2HB machine gun or Mark 19 grenade launcher from an FMTV vehicle during training exercises must be wearing properly fitted and approved hearing protection devices. Failure to comply may result in injury to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

All personnel within 180 ft (55 m) of weapons being fired from an FMTV vehicle during training exercises must be wearing properly fitted and approved hearing devices. Failure to comply may result in injury to personnel.

### **WARNING**

When mission requires the vehicle Operator and crew to remain in a stationary FMTV vehicle with the engine running in outside temperatures above 90° F (32° C) vehicle Operator and crew must observe proper safety precautions to prevent heat stress injury. Refer to FM 21-10 Field Hygiene and Sanitation, and FM 21-11 First Aid for Soldiers for proper precautions and preventive measures. Failure to comply may result in injury to personnel.

### **WARNING**

When mission requires the vehicle Operator and crew to operate the FMTV vehicle in outside temperatures above 90° F (32° C) with the windows closed, vehicle Operator and crew must observe proper safety precautions to prevent heat stress injury. Refer to FM 21-10 Field Hygiene and Sanitation, and FM 21-11 First Aid for Soldiers for proper precautions and preventive measures. Failure to comply may result in injury to personnel.

### **WARNING**

Do not flat tow a fully loaded MTV and trailer combination. The FMTV Wrecker towbar can be damaged if weight capacity is exceeded. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

When towing a vehicle with nonfunctional brakes, use extreme caution and reduce/adjust speed accordingly. Failure to comply may result in serious injury or death to personnel or damage to equipment.

### **WARNING**

Keep all personnel clear of area when tension is on cable. Failure to comply may result in serious injury or death to personnel.

---

## **WARNING SUMMARY - Continued**

---

### **WARNING**

Wear heavy leather-palmed work gloves when handling wire rope. Never let moving wire rope slide through hands, even when wearing gloves. Failure to comply may result in serious injury to personnel.

### **WARNING**

Flagged safety pin is only removed for pneumatic operation of tailgate. It will remain installed at all other times. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Tailgate may be hinged from the top or bottom depending on mission requirements. Use care during positioning. Failure to comply may result in injury to personnel.

### **WARNING**

Prior to normal driving, the flagged safety pin must be installed. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Tailgate weighs approximately 270 lbs. (123 kgs). Use care when handling. Two assistants are required to lower or raise tailgate. Failure to comply may result in injury to personnel or damage to equipment.

### **WARNING**

Ensure flagged safety pin and manual release handle pin are installed prior to using bottom hinge option. Failure to comply may result in injury to personnel.

### **WARNING**

Tailgate weighs approximately 270 lbs. (123 kgs). Use care when lowering or raising. Failure to comply may result in injury to personnel.



---

**WARNING SUMMARY - Continued**

---

**WARNING**

Vehicle S/N 18,550 or higher are equipped with a Load and Battery Control Device (LBCD). LBCD have internal capacitors, which must be discharged prior to maintenance or troubleshooting procedures being performed. Failure to comply may result in damage to equipment and/or injury to personnel.

**WARNING**

Do not operate vehicle if radiator cap is damaged or missing. Failure to comply will result in injury to personnel or damage to equipment.



**INSET LATEST UPDATED PAGES/WORK PACKAGES, DESTROY SUPERSEDED  
DATA**

**LIST OF EFFECTIVE PAGES / WORK PACKAGES**

NOTE: The portion of text affected by updates are indicated by a vertical line in the outer margins of the page.

Dates of issue for original and updated pages / work packages are:

Original 0.....3 January 05

**TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 128 AND  
TOTAL NUMBER OF WORK PACKAGES IN VOLUME 1  
IS 73 CONSISTING OF THE FOLLOWING**

Page / WP	*Change No.
Cover (Back Blank).....	0
a to aa (bb Blank) .....	0
1 (2 Blank).....	0
A (B Blank).....	0
Chapter 3 Cover (Back Blank).....	0
WP 0074 00– WP 0102 00 .....	0
Chapter 4 Cover (Back Blank).....	0
WP 0103 00 – WP 0115 00 .....	0
Chapter 5 Cover (Back Blank).....	0
WP 0116 00 – WP 0120 00 .....	0
INDEX 1 to INDEX 59	
(INDEX 60 Blank) .....	0
Authentication (Back Blank).....	0
Metric Conversion Chart.....	0
Back Cover.....	0

\*Zero in this column indicates an original page or work package.

A/B Blank



TM 9 2320-392-10-2

HEADQUARTERS  
DEPARTMENTS OF THE ARMY AND AIR FORCE  
WASHINGTON, D.C., 3 JANUARY 2005

**TECHNICAL MANUAL  
OPERATOR'S MANUAL FOR THE M1083A1 SERIES  
5 TON, 6 X 6 MEDIUM TACTICAL VEHICLES (MTV)  
VOLUME NO. 2 OF 2**

MODEL	NSN	EIC
TRK, CAR., MTV, M1083A1		
W/WN	2320-01-447-3884	BUL
W/O WN	2320-01-447-3890	BT9
TRK., CAR., MTV, W/MHC, M1084A1	2320-01-447-3887	BUB
TRK., CHAS., MTV, LWB, M1085A1		
W/WN	2320-01-447-3897	BUR
W/O WN	2320-01-447-3891	BUG
TRK, CAR., MTV, LWB W/MHC, M1086A1	2320-01-447-3895	BUH
TRK., TRACTOR, MTV, M1088A1		
W/WN	2320-01-447-3900	BUC
W/O WN	2320-01-447-3893	BUN
TRK., WKR., MTV, M1089A1	2320-01-447-3892	BUD
TRK., DUMP, MTV, M1090A1		
W/WN	2320-01-447-6344	BUP
W/O WN	2320-01-447-3899	BUE
TRK., CHAS., MTV, M1092A1	2320-01-447-3894	BT8
TRK., CHAS., MTV, LWB M1096A1	2320-01-447-3885	XXX

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter or DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-R1, 1 Rock Island Arsenal, Rock Island IL 61299-7630. The email address is [TACOM-TECH-PUBS@ria.army.mil](mailto:TACOM-TECH-PUBS@ria.army.mil). The fax number is DSN 793-0726 or Commercial (309) 782-0726.

**DISTRIBUTION STATEMENT A.** - Approved for public release; distribution is unlimited.



## TABLE OF CONTENTS

	<u>WP Sequence No.</u>
<b>WARNING SUMMARY .....</b>	<b>a</b>
<b>HOW TO USE THIS MANUAL.....</b>	<b>iii</b>
 <b>CHAPTER 3 - TROUBLESHOOTING PROCEDURES FOR M1083A1 SERIES VEHICLES</b>	
Troubleshooting Introduction .....	WP 0074 00
Malfunction/Symptom Index.....	WP 0075 00
 <b>Troubleshooting Procedure Work Packages</b>	
Engine System Troubleshooting .....	WP 0076 00
Fuel System Troubleshooting.....	WP 0077 00
Exhaust System Troubleshooting.....	WP 0078 00
Cooling System Troubleshooting .....	WP 0079 00
Electrical System Troubleshooting .....	WP 0080 00
Transmission System Troubleshooting.....	WP 0081 00
Propeller Shaft Troubleshooting .....	WP 0082 00
Power Take-Off (PTO) Troubleshooting .....	WP 0083 00
Brake System Troubleshooting.....	WP 0084 00
Air System Troubleshooting.....	WP 0085 00
Wheel Troubleshooting .....	WP 0086 00
Hydraulic System Troubleshooting.....	WP 0087 00
Central Tire Inflation System (CTIS) Troubleshooting.....	WP 0088 00
Axle Troubleshooting .....	WP 0089 00
Steering System Troubleshooting.....	WP 0090 00
Fifth Wheel Troubleshooting .....	WP 0091 00
Suspension System Troubleshooting.....	WP 0092 00
15K Self-Recovery Winch (SRW) Troubleshooting .....	WP 0093 00
Steering Hydraulic System Troubleshooting.....	WP 0094 00
Air Transport System Troubleshooting.....	WP 0095 00
Dump Body Hydraulic System Troubleshooting.....	WP 0096 00
Wrecker Hydraulic System Troubleshooting.....	WP 0097 00
Special Purpose Kits Troubleshooting.....	WP 0098 00
M1084A1/M1086A1 Material Handling Crane (MHC)	
Hydraulics Troubleshooting.....	WP 0099 00
Cab Tilt and Spare Tire Retainer Troubleshooting .....	WP 0100 00
M1089A1 Air System Troubleshooting.....	WP 0101 00
Frame Troubleshooting .....	WP 0102 00
 <b>CHAPTER 4 - PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) AND MAINTENANCE INSTRUCTIONS FOR M1083A1 SERIES VEHICLES</b>	
 <b>PMCS Work Package</b>	
M1083A1 Series Preventive Maintenance Checks and Services (PMCS) .....	WP 0103 00

**WP Sequence No.**

**Maintenance Work Packages**

Maintenance Introduction .....	WP 0104 00
Changing Tire .....	WP 0105 00
Servicing Tires .....	WP 0106 00
Cleaning Vehicle .....	WP 0107 00
Opening Battery Box/Testing Batteries .....	WP 0108 00
Servicing Air Filter (Emergency Procedure) .....	WP 0109 00
M1083A1/M1084A1 Troopseat Kit Installation/Removal.....	WP 0110 00
M1085A1 Troopseat Kit Installation/Removal .....	WP 0111 00
M1090A1 Troopseat Kit Installation/Removal .....	WP 0112 00
Power Distribution Panel (PDP) Cover Removal/Installation .....	WP 0113 00
Bumperette Kit Installation/Removal .....	WP 0114 00
Rear Spring Brake Caging.....	WP 0115 00

**CHAPTER 5 - SUPPORTING INFORMATION FOR M1083A1  
SERIES VEHICLES**

References .....	WP 0116 00
Components of End Item (COEI) and Basic Issue Items (BII) Lists .....	WP 0117 00
Additional Authorization List (AAL) .....	WP 0118 00
Expendable and Durable Items.....	WP 0119 00
Stowage Location/Decal/Stencil Guide .....	WP 0120 00
Subject Index.....	1



---

## HOW TO USE THIS MANUAL

---

### OVERVIEW

This Technical Manual (TM) is provided to help you operate and maintain the Medium Tactical Vehicle (MTV). It is divided into the following major sections in order of appearance:

**Front Cover.** Provides information about the type of manual and vehicle models covered by the TM.

**Warning Summary.** Provides a summary of all warnings that apply throughout the manual. Read all WARNINGS and CAUTIONS before performing any operation, troubleshooting, or maintenance procedures.

**Table of Contents.** Lists the Chapters, Work Packages, and Alphabetical Index in order of appearance.

**Chapter 1, Introductory Information with Theory of Operation for the M1083A1 Series Vehicles.** Describes the MTV and provides equipment data.

**Chapter 2, Operating Instructions for the M1083A1 Series Vehicles.** Describes operator's controls and indicators, and operating instructions.

**Chapter 3, Troubleshooting Procedures for the M1083A1 Series Vehicles.** Provides instructions for troubleshooting problems with the MTV.

**Chapter 4, Preventive Maintenance Checks and Services (PMCS) and Maintenance Instructions for the M1083A1 Series Vehicles.** Provides the instructions for Operator maintenance.

**Chapter 5, Supporting Information for the M1083A1 Series Vehicles.** Contains information about References, Components of End Items (COEI) and Basic Issue Items (BII) lists, Additional Authorization List (AAL), Expendable and Durable Items List, and Stowage Location.

**Subject Index.** Lists important subjects contained in this TM in alphabetical order. It also gives the work package and page number where each subject is located.

### FINDING INFORMATION

There are several ways to find the information you need in this manual. They are as follows:

**Table of Contents.** Lists Chapters, Sections, and Indexes with Work Package numbers in order of appearance.

**Malfunction Index.** Lists malfunctions contained in the Troubleshooting with Work Package numbers in order of appearance.

---

## HOW TO USE THIS MANUAL - Continued

---

### OVERVIEW - Continued

**Alphabetical (Subject) Index.** Lists all important topics in alphabetical order with Work Package and page numbers.

### TROUBLESHOOTING

Troubleshooting is contained in Chapter 3. When you have a problem with the operation of your equipment, look at Malfunction/Symptom Index in WP 0075 00. Find the malfunction in the Index. Turn to the Work Package listed for the malfunction. Perform the steps required to correct the malfunction. If you cannot find the malfunction, or the malfunction is not corrected, notify Field Maintenance.

### OPERATION AND MAINTENANCE

**Operation.** Before you operate the MTV, familiarize yourself with the controls and indicators (Chapter 2, WP 0004 00 through WP 0016 00). Perform your BEFORE preventive maintenance (Chapter 4, WP 0103 00). Read the operating instructions contained in Chapter 2, WP 0017 00 through WP 0073 00. Always follow WARNINGS and CAUTIONS. During operation, perform your DURING preventive maintenance and perform your AFTER preventive maintenance after operation (WP 0103 00).

**Maintenance.** When you perform maintenance, look over the entire procedure before starting. Make sure you have the necessary tools and materials at hand. Always observe WARNINGS and CAUTIONS.

**CHAPTER 3**

**TROUBLESHOOTING PROCEDURES  
FOR THE  
M1083A1 SERIES VEHICLES**



---

**TROUBLESHOOTING INTRODUCTION**

---

**0074 00****MALFUNCTION/SYMPTOM INDEX**

The malfunction/symptom index (WP 0075 00) is a quick reference index for finding troubleshooting procedures. Associated with each symptom name is a work package sequence number representing the starting point in a troubleshooting sequence. Should any one symptom require more than one troubleshooting sequence to arrive at the most likely area of investigation, the additional starting point numbers are presented.

As the troubleshooting activity progresses through to the conclusion of a particular sequence, a reference is made to the next logical troubleshooting sequence by work package sequence number, or by referring to the malfunction/symptom index to locate the next failure symptom work package. This type of activity continues until successful fault isolation is achieved.

**TROUBLESHOOTING PROCEDURES**

The troubleshooting work packages contain tables listing the malfunctions, tests or inspections, and corrective action required to return the vehicle to normal operation. Perform the steps in the order they appear in the tables.

Each work package is headed by an initial setup. This setup outlines what is needed as well as certain conditions which must be met before starting the task. **DON'T START A TASK UNTIL:**

You understand the task.

You understand what you are to do.

You understand what is needed to do the work.

You have the things you need.

This manual cannot list all malfunctions that may occur, or all tests or inspections and corrective actions. If a malfunction is not listed or is not corrected by listed corrective actions, notify Field Maintenance.



**MALFUNCTION/SYMPTOM INDEX****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****ENGINE SYSTEM**

- |  |            |
|--|------------|
| 1. Engine Does Not Crank                                   | WP 0076 00 |
| 2. Engine Cranks But Does Not Start                        | WP 0076 00 |
| 3. Low Engine Oil Pressure                                 | WP 0076 00 |
| 4. Engine Stalls At Low Rpm                                | WP 0076 00 |
| 5. Engine Overspeeds On Start                              | WP 0076 00 |
| 6. Too Much Engine Vibration                               | WP 0076 00 |
| 7. Coolant In Engine Lubrication Oil                       | WP 0076 00 |
| 8. Excessive Engine Oil Consumption                        | WP 0076 00 |
| 9. Engine Overheats  | WP 0076 00 |
| 10. Excessive Black Or Gray Exhaust Smoke From Engine      | WP 0076 00 |
| 11. White Exhaust Smoke From Engine                        | WP 0076 00 |
| 12. Engine Speed Is Not Stable                             | WP 0076 00 |
| 13. Engine Starts But Misfires, Runs Rough, Or Lacks Power | WP 0076 00 |
| 14. Blue Exhaust Smoke From Engine                         | WP 0076 00 |
| 15. CHECK ENGINE Indicator Remains Illuminated             | WP 0076 00 |
| 16. STOP ENGINE Indicator Remains Illuminated              | WP 0076 00 |

**FUEL SYSTEM**

- |  |            |
|--|------------|
| 1. Engine Cranks But Does Not Start, Or Engine Stalls After Starting | WP 0077 00 |
| 2. Ether Starting Aid Does Not Operate                               | WP 0077 00 |
| 3. Fuel Consumption Too High   | WP 0077 00 |

---

**MALFUNCTION/SYMPTOM INDEX - Continued** **0075 00**

---

<u><b>Malfunction/Symptom</b></u>	<u><b>Troubleshooting Procedure</b></u>
<b>FUEL SYSTEM - Continued</b>	
4. Accelerator Pedal Sticks	WP 0077 00
<b>EXHAUST SYSTEM</b>	
1. Exhaust System Unusually Noisy Or Vibrates Excessively During Engine Operation	WP 0078 00
2. Exhaust Fumes In Cab	WP 0078 00
<b>COOLING SYSTEM</b>	
1. Engine Overheats	WP 0079 00
2. Oil In Cooling System	WP 0079 00
3. Loss Of Coolant	WP 0079 00
<b>ELECTRICAL SYSTEM</b>	
1. Engine Does Not Crank	WP 0080 00
2. 24 VDC Circuits Do Not Operate	WP 0080 00
3. 12 VDC Circuits Do Not Operate (100 Amp Alternator)	WP 0080 00
4. 12 VDC Circuits Do Not Operate (200 Amp Alternator)	WP 0080 00
5. 12 VDC and 24 VDC Circuits Do Not Operate (Vehicle S/N 18,550 or Higher)	WP 0080 00
6. Engine Cranks But Does Not Start	WP 0080 00
7. FUEL Gage Does Not Operate Or Is Inaccurate	WP 0080 00
8. WATER TEMP Gage Does Not Operate Or Is Inaccurate	WP 0080 00
9. REAR BRAKE AIR Pressure Gage Does Not Operate Or Is Inaccurate	WP 0080 00
10. FRONT BRAKE AIR Pressure Gage Does Not Operate Or Is Inaccurate	WP 0080 00



**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****ELECTRICAL SYSTEM - Continued**

11. OIL PRESS Gage Does Not Operate Or Is Inaccurate	WP 0080 00
12. Speedometer Does Not Operate Or Is Inaccurate	WP 0080 00
13. VOLTS Gage Does Not Operate Or Is Inaccurate	WP 0080 00
14. Audible Alarm Does Not Operate	WP 0080 00
15. Audible Alarm Does Not Operate When Troop Transport Alarm Switch Is Turned On	WP 0080 00
16. Instrument Panel Switch Does Not Illuminate	WP 0080 00
17. Instrument Panel Gage Does Not Illuminate	WP 0080 00
18. Auxiliary Panel, Personnel Heater, And Instrument Panel Do Not Illuminate	WP 0080 00
19. Auxiliary Panel Switch Does Not Illuminate	WP 0080 00
20. Auxiliary Panel Does Not Illuminate	WP 0080 00
21. COOLANT TEMP Indicator Does Not Illuminate	WP 0080 00
22. COOLANT TEMP Indicator Illuminates	WP 0080 00
23. CTIS OVERSPEED Indicator Does Not Illuminate	WP 0080 00
24. CHEMICAL DETECT Indicator Does Not Illuminate	WP 0080 00
25. Left Turn Signal Indicator Does Not Illuminate	WP 0080 00
26. Right Turn Signal Indicator Does Not Illuminate	WP 0080 00
27. HIGH BEAM Indicator Does Not Illuminate	WP 0080 00
28. PARK BRAKE Indicator Does Not Illuminate	WP 0080 00
29. PTO Indicator Does Not Illuminate	WP 0080 00
30. ENGINE FAN OFF Indicator Does Not Illuminate	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****ELECTRICAL SYSTEM - Continued**

31. DUMP BODY UP Indicator Does Not Illuminate	WP 0080 00
32. TRANS TEMP Indicator Does Not Illuminate	WP 0080 00
33. LOW FRONT AIR Indicator Does Not Illuminate (Vehicle S/N 18,549 or Lower)	WP 0080 00
34. LOW REAR AIR Indicator Does Not Illuminate (Vehicle S/N 18,549 or Lower)	WP 0080 00
35. LOW AIR Indicator Does Not Illuminate (Vehicle S/N 18,550 or Higher)	WP 0080 00
36. ENGINE OIL PRESSURE Indicator Does Not Illuminate	WP 0080 00
37. ENGINE OIL PRESSURE Indicator Illuminates While Engine Is Running/Remains Illuminated 10 Seconds After Engine Starts	WP 0080 00
38. STOP ENGINE Indicator Does Not Illuminate	WP 0080 00
39. CHECK ENGINE Indicator Does Not Illuminate	WP 0080 00
40. EXHAUST BRAKE Indicator Does Not Illuminate	WP 0080 00
41. CHECK TRANS Indicator Does Not Illuminate	WP 0080 00
42. INLET AIR Indicator Does Not Illuminate	WP 0080 00
43. ABS Indicator Does Not Illuminate	WP 0080 00
44. CTIS OFF Indicator Does Not Illuminate	WP 0080 00
45. Lamp Test 24 VDC Does Not Operate	WP 0080 00
46. Lamp Test Ground Does Not Operate	WP 0080 00
47. Charging System Indicator Does Not Illuminate (Vehicle S/N 18,550 or Higher)	WP 0080 00
48. Battery Disconnect Indicator Does Not Illuminate (Vehicle S/N 18,550 or Higher)	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**ELECTRICAL SYSTEM - Continued**

49. One Or Both Headlights (High And Low Beams) Do Not Illuminate	WP 0080 00
50. One Or Both Headlight Low Beams Do Not Illuminate	WP 0080 00
51. One Or Both Headlight High Beams Do Not Illuminate	WP 0080 00
52. Parking Lights Do Not Illuminate	WP 0080 00
53. LH Door And/Or LH Front Marker Lights Do Not Illuminate	WP 0080 00
54. RH Door And/Or RH Front Marker Lights Do Not Illuminate	WP 0080 00
55. One Or More Cab Top Marker Lights Do Not Illuminate	WP 0080 00
56. Side And/Or Rear Marker Lights Do Not Illuminate	WP 0080 00
57. All Front And/Or Rear Marker Lights Do Not Illuminate In Normal Mode	WP 0080 00
58. One Or Both Composite Taillights Do Not Illuminate	WP 0080 00
59. One Or Both Front Blackout Marker Lights Do Not Illuminate	WP 0080 00
60. Blackout Drive Light Does Not Illuminate	WP 0080 00
61. One Or Both Rear Blackout Marker Lights Do Not Illuminate	WP 0080 00
62. All Blackout Marker Lights Do Not Illuminate	WP 0080 00
63. Amber Warning Light Does Not Illuminate	WP 0080 00
64. Backup Light Does Not Illuminate	WP 0080 00
65. Blackout Marker Lights Do Not Illuminate And/Or WTEC III Transmission Pushbutton Shift Selector (TPSS) Does Not Dim	WP 0080 00
66. Rear Hazard Lights Do Not Illuminate	WP 0080 00
67. Front And Rear Hazard Lights Do Not Illuminate	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**ELECTRICAL SYSTEM - Continued**

68. Front And Rear Turn Signals Do Not Illuminate	WP 0080 00
69. Left Or Right Front Turn Signal Does Not Illuminate	WP 0080 00
70. One Or Both Stoplights Do Not Illuminate	WP 0080 00
71. One Or Both Blackout Stoplights Do Not Illuminate	WP 0080 00
72. Stoplights And Blackout Stoplights Do Not Illuminate	WP 0080 00
73. Trailer Marker/Taillights Do Not Illuminate	WP 0080 00
74. Trailer Right Stop/Turn Light Does Not Illuminate	WP 0080 00
75. Trailer Left Stop/Turn Light Does Not Illuminate	WP 0080 00
76. Both Trailer Stop/Turn Lights Do Not Illuminate	WP 0080 00
77. Trailer Blackout Marker Lights Do Not Illuminate	WP 0080 00
78. Trailer Blackout Stoplights Do Not Illuminate	WP 0080 00
79. Intervehicular Clearance Lights Do Not Illuminate	WP 0080 00
80. Intervehicular Left Turn Signal Does Not Illuminate	WP 0080 00
81. Intervehicular Right Turn Signal Does Not Illuminate	WP 0080 00
82. Intervehicular Stoplights Do Not Illuminate	WP 0080 00
83. Intervehicular Taillights Do Not Illuminate	WP 0080 00
84. Personnel Heater Control Does Not Illuminate	WP 0080 00
85. Personnel Heater Fan Does Not Operate	WP 0080 00
86. Windshield Washer Does Not Operate	WP 0080 00
87. Windshield Wiper Does Not Operate On Low Speed	WP 0080 00
88. All Windshield Wiper Speeds Do Not Operate	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****ELECTRICAL SYSTEM - Continued**

89. Windshield Wiper Does Not Operate On Intermittent Speed	WP 0080 00
90. Windshield Wiper Does Not Operate On High Speed	WP 0080 00
91. Horn Does Not Operate	WP 0080 00
92. Horn, Windshield Wipers, And Windshield Washer Do Not Operate	WP 0080 00
93. Chemical Alarm Does Not Operate	WP 0080 00
94. Chemical Detector Does Not Operate	WP 0080 00
95. Central Tire Inflation System (CTIS) Does Not Operate	WP 0080 00
96. Central Tire Inflation System (CTIS) Does Not Inflate Tires	WP 0080 00
97. Central Tire Inflation System (CTIS) Does Not Deflate Tires	WP 0080 00
98. Central Tire Inflation System (CTIS) ECU Does Not Dim In Blackout Mode	WP 0080 00
99. 15K Self-Recovery Winch (SRW) Does Not Reel In Or Pay Out	WP 0080 00
100. 15K Self-Recovery Winch (SRW) Does Not Reel In	WP 0080 00
101. 15K Self-Recovery Winch (SRW) Does Not Pay Out	WP 0080 00
102. Power Take-Off (PTO) Does Not Engage	WP 0080 00
103. Electrical System Does Not Maintain A Charge In Batteries	WP 0080 00
104. Differential Lock Solenoid Does Not Operate	WP 0080 00
105. Engine Fan Runs Constantly	WP 0080 00
106. Engine Fan Does Not Turn Off Using Engine Fan Off Switch	WP 0080 00
107. Ether Starting Aid Does Not Operate	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**ELECTRICAL SYSTEM - Continued**

108. Radio Does Not Operate	WP 0080 00
109. Battery Tester Does Not Operate	WP 0080 00
110. Exhaust Brake Does Not Operate	WP 0080 00
111. Inlet Air Heater Does Not Operate	WP 0080 00
112. M1084A1/M1086A1 Material Handling Crane (MHC) Does Not Operate	WP 0080 00
113. M1084A1/M1086A1 Material Handling Crane (MHC) Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
114. M1084A1/M1086A1 Material Handling Crane (MHC) Hoist Up Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
115. M1084A1/M1086A1 Material Handling Crane (MHC) Hoist Down Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
116. M1084A1/M1086A1 Material Handling Crane (MHC) Boom Up Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
117. M1084A1/M1086A1 Material Handling Crane (MHC) Boom Down Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
118. M1084A1/M1086A1 Material Handling Crane (MHC) Telescope In Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
119. M1084A1/M1086A1 Material Handling Crane (MHC) Telescope Out Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00
120. M1084A1/M1086A1 Material Handling Crane (MHC) Swing CW Does Not Operate From REMOTE CONTROL UNIT	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**ELECTRICAL SYSTEM - Continued**

- |  |            |
|--|------------|
| 121. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Swing CCW Does Not Operate From REMOTE CONTROL<br>UNIT | WP 0080 00 |
| 122. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Overload Shutdown System Does Not Activate             | WP 0080 00 |
| 123. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Overload Shutdown System Stays Activated               | WP 0080 00 |
| 124. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Hoist Up Lockout Does Not Activate                     | WP 0080 00 |
| 125. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Boom Down Lockout Does Not Activate                    | WP 0080 00 |
| 126. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Boom Up Lockout Does Not Activate                      | WP 0080 00 |
| 127. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Telescope Out Lockout Does Not Activate                | WP 0080 00 |
| 128. Stoplights Do Not Illuminate When M1088A1 Trailer<br>Brakes Are Applied                                 | WP 0080 00 |
| 129. M1089A1 Material Handling Crane (MHC)<br>Does Not Operate   | WP 0080 00 |
| 130. M1089A1 Material Handling Crane (MHC)<br>Does Not Operate From REMOTE CONTROL UNIT                      | WP 0080 00 |
| 131. M1089A1 Material Handling Crane (MHC)<br>Hoist Up Does Not Operate From REMOTE<br>CONTROL UNIT          | WP 0080 00 |
| 132. M1089A1 Material Handling Crane (MHC)<br>Hoist Down Does Not Operate From REMOTE<br>CONTROL UNIT        | WP 0080 00 |
| 133. M1089A1 Material Handling Crane (MHC)<br>Boom Up Does Not Operate From REMOTE<br>CONTROL UNIT           | WP 0080 00 |

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**ELECTRICAL SYSTEM - Continued**

- |  |            |
|--|------------|
| 134. M1089A1 Material Handling Crane (MHC)<br>Boom Down Does Not Operate From REMOTE<br>CONTROL UNIT     | WP 0080 00 |
| 135. M1089A1 Material Handling Crane (MHC)<br>Telescope In Does Not Operate From REMOTE<br>CONTROL UNIT  | WP 0080 00 |
| 136. M1089A1 Material Handling Crane (MHC)<br>Telescope Out Does Not Operate From REMOTE<br>CONTROL UNIT | WP 0080 00 |
| 137. M1089A1 Material Handling Crane (MHC)<br>Swing CW Does Not Operate From REMOTE<br>CONTROL UNIT      | WP 0080 00 |
| 138. M1089A1 Material Handling Crane (MHC)<br>Swing CCW Does Not Operate From REMOTE<br>CONTROL UNIT     | WP 0080 00 |
| 139. M1089A1 Material Handling Crane (MHC)<br>Hoist Up Lockout Does Not Activate                         | WP 0080 00 |
| 140. M1089A1 Material Handling Crane (MHC)<br>Boom Down Lockout Does Not Activate                        | WP 0080 00 |
| 141. M1089A1 Material Handling Crane (MHC)<br>Boom Up Lockout Does Not Activate                          | WP 0080 00 |
| 142. M1089A1 Material Handling Crane (MHC)<br>Telescope Out Lockout Does Not Activate                    | WP 0080 00 |
| 143. M1089A1 Material Handling Crane (MHC)<br>Overload Shutdown System Does Not Activate                 | WP 0080 00 |
| 144. M1089A1 Material Handling Crane (MHC)<br>Overload Shutdown System Stays Activated                   | WP 0080 00 |
| 145. All Wrecker Functions Do Not Operate From<br>WRECKER CONTROL PANEL And WRECKER<br>REMOTE CONTROL    | WP 0080 00 |



---

**MALFUNCTION/SYMPTOM INDEX - Continued** **0075 00**

---

<u><b>Malfunction/Symptom</b></u>	<u><b>Troubleshooting Procedure</b></u>
<b>ELECTRICAL SYSTEM - Continued</b>	
146. All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL	WP 0080 00
147. All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL	WP 0080 00
148. 30K Winch Left Or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL	WP 0080 00
149. 30K Winch Left Or Right Freespool Function Does Not Operate From WRECKER CONTROL PANEL	WP 0080 00
150. 30K Winch Does Not Pay-In	WP 0080 00
151. One Wrecker Function Does Not Operate From WRECKER REMOTE CONTROL	WP 0080 00
152. M1090A1 TAILGATE RELEASE Does Not Operate	WP 0080 00
153. Dump Body Does Not Raise	WP 0080 00
154. Dump Body Does Not Lower	WP 0080 00
155. Dump Bed And Tailgate Release Do Not Operate	WP 0080 00
156. Transmission Auxiliary Oil Cooler Fan(s) Run Constantly	WP 0080 00
157. Transmission Auxiliary Oil Cooler Fan Does Not Operate	WP 0080 00
158. Worklights Do Not Illuminate	WP 0080 00
159. M1088A1/M1089A1 LH Worklights Do Not Illuminate	WP 0080 00
160. M1088A1/M1089A1 RH Worklights Do Not Illuminate	WP 0080 00
161. M1088A1/M1089A1 Worklights Do Not Illuminate In Blackout Mode With Blackout Override Switch On	WP 0080 00
162. All Main Light Switch Functions Do Not Operate	WP 0080 00
163. All Electrical Gages Do Not Operate	WP 0080 00

**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****ELECTRICAL SYSTEM - Continued**

- |   |            |
|---|------------|
| 164. Audible Alarm, Radio, Starter Pushbutton, And<br>Electrical Gages Do Not Operate | WP 0080 00 |
| 165. LO IDLE/HI IDLE Switch Does Not Operate  | WP 0080 00 |
| 166. Master Power Switch Does Not Shut Sown Engine                                    | WP 0080 00 |
| 167. Air Dryer Heater Does Not Operate  | WP 0080 00 |
| 168 Stoplights And 12 VDC Indicator Panel Circuits<br>Do Not Illuminate               | WP 0080 00 |
| 169. Dump Bed UP/DOWN Switch Does Not Illuminate                                      | WP 0080 00 |
| 170. Dump Bed Tailgate Release Switch Does Not Illuminate                             | WP 0080 00 |
| 171. Remote Start Does Not Operate  | WP 0080 00 |

**TRANSMISSION SYSTEM**

- |  |            |
|--|------------|
| 1. WTEC III Transmission Pushbutton Shift Selector<br>(TPSS) LED Flashes Selected Gear<br>And/Or Transmission Does Not Shift Gears | WP 0081 00 |
| 2. Transmission Unusually Noisy When Operating   | WP 0081 00 |
| 3. WTEC III Transmission Pushbutton Shift Selector<br>(TPSS) Does Not Illuminate/Operate   | WP 0081 00 |
| 4. CHECK TRANS Indicator Remains Illuminated   | WP 0081 00 |
| 5. TRANS TEMP Indicator Remains Illuminated  | WP 0081 00 |

**DRIVE SHAFT**

- |   |            |
|---|------------|
| Drive Shaft Or Universal Joints Unusually Noisy<br>When Operating | WP 0082 00 |
|---|------------|

**POWER TAKE OFF (PTO)**

- |                                      |            |
|--------------------------------------|------------|
| Power Take-Off (PTO) Does Not Engage | WP 0083 00 |
|--------------------------------------|------------|

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**BRAKE SYSTEM**

- |  |            |
|--|------------|
| 1. Excessive Braking Distance                                  | WP 0084 00 |
| 2. Rear Brakes Do Not Apply                                    | WP 0084 00 |
| 3. Parking Brake Does Not Release                              | WP 0084 00 |
| 4. Front Brakes Overheat                                       | WP 0084 00 |
| 5. Vehicle Brakes Unevenly, Or Brakes Pull To One Side Or Grab | WP 0084 00 |
| 6. Front Brakes Do Not Apply                                   | WP 0084 00 |
| 7. Rear Brakes Overheat  | WP 0084 00 |
| 8. Parking Brake Does Not Apply                                | WP 0084 00 |
| 9. Brake System Loses Air When Service Brakes Are Applied      | WP 0084 00 |
| 10. ABS Indicator Remains Illuminated                          | WP 0084 00 |

**AIR SYSTEM**

- |   |            |
|---|------------|
| 1. Air System Loses Pressure During Operation/Slow Air Pressure Buildup                   | WP 0085 00 |
| 2. Large Quantity Of Moisture Expelled From Air Reservoirs                                | WP 0085 00 |
| 3. Air Dryer Purges Constantly  | WP 0085 00 |
| 4. No Air Pressure Or Low Air Pressure Present At Rear Gladhands                          | WP 0085 00 |
| 5. Air System Pressure Builds Up More Than 120 PSI (827 kPa) (Compressor Fails To Unload) | WP 0085 00 |
| 6. Noisy Air Compressor Operation   | WP 0085 00 |

**WHEEL**

- |                                       |            |
|---------------------------------------|------------|
| 1. Tires Wear Unevenly Or Excessively | WP 0086 00 |
|---------------------------------------|------------|

**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****WHEEL - Continued**

- |                              |            |
|------------------------------|------------|
| 2. Wheel Wobbles Or Shimmies | WP 0086 00 |
|------------------------------|------------|

**HYDRAULIC SYSTEM**

- |   |            |
|---|------------|
| 1. Loss Of Hydraulic Pressure (Single Stage Pump) | WP 0087 00 |
| 2. Loss Of Hydraulic Pressure (Three Stage Pump)  | WP 0087 00 |

**CENTRAL TIRE INFLATION SYSTEM (CTIS)**

- |  |            |
|--|------------|
| 1. Two Steady Mode Lights Illuminate On Central Tire Inflation System (CTIS) ECU                                   | WP 0088 00 |
| 2. Four Flashing Lights On Central Tire Inflation System (CTIS) ECU  | WP 0088 00 |
| 3. Five Flashing Lights On Central Tire Inflation System (CTIS) ECU  | WP 0088 00 |
| 4. Central Tire Inflation System (CTIS) Repeatedly Resumes Cycling 30 Seconds After Indicator Lights Stop Flashing | WP 0088 00 |
| 5. Central Tire Inflation System (CTIS) ECU Lights Illuminate, But CTIS Fails To Inflate Or Deflate Tires          | WP 0088 00 |
| 6. Central Tire Inflation System (CTIS) Overspeed Pressure Change Does Not Operate                                 | WP 0088 00 |
| 7. Central Tire Inflation System (CTIS) ECU Does Not Illuminate  | WP 0088 00 |
| 8. Central Tire Inflation System (CTIS) ECU Indicator Lights Flashing Sequentially                                 | WP 0088 00 |
| 9. CTIS OVERSPEED Indicator Illuminates Solidly  | WP 0088 00 |
| 10. CTIS OVERSPEED Indicator Remains Illuminated   | WP 0088 00 |

**AXLE**

- |                            |            |
|----------------------------|------------|
| Axle Differential(S) Noisy | WP 0089 00 |
|----------------------------|------------|

**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****STEERING SYSTEM**

- |   |            |
|---|------------|
| 1. Hard To Steer                              | WP 0090 00 |
| 2. Wanders, Pulls To One Side, Or Shimmies    | WP 0090 00 |
| 3. Excessive Play When Turning Steering Wheel | WP 0090 00 |
| 4. No Response When Turning Steering Wheel    | WP 0090 00 |

**FIFTH WHEEL**

- |  |            |
|--|------------|
| 1. Fifth Wheel Does Not Lock When Coupling Trailer To Tractor          | WP 0091 00 |
| 2. Excessive Movement Of Trailer King Pin In Fifth Wheel               | WP 0091 00 |
| 3. Fifth Wheel Does Not Unlock When Disconnecting Trailer From Tractor | WP 0091 00 |
| 4. Fifth Wheel Sliding Mechanism Does Not Operate                      | WP 0091 00 |

**SUSPENSION SYSTEM**

- |   |            |
|---|------------|
| 1. Wanders, Pulls To One Side, Or Shimmies    | WP 0092 00 |
| 2. Leans To One Side, Or Rear Of Vehicle Sags | WP 0092 00 |

**15K SELF-RECOVERY WINCH (SRW) SYSTEM**

- |  |            |
|--|------------|
| 15K Self-Recovery Winch (SRW) Does Not Operate | WP 0093 00 |
|--|------------|

**STEERING HYDRAULIC SYSTEM**

- |                                   |            |
|-----------------------------------|------------|
| Steering Hard Or Does Not Operate | WP 0094 00 |
|-----------------------------------|------------|

**AIR TRANSPORT SYSTEM**

- |   |            |
|---|------------|
| 1. Cab Tilt, Spare Tire Retainer, And Suspension Compression Do Not Operate | WP 0095 00 |
| 2. Suspension Does Not Compress Or Return To Normal Properly                | WP 0095 00 |

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**AIR TRANSPORT SYSTEM - Continued**

- |   |            |
|---|------------|
| 3. Cab Leveling Air Springs Do Not Operate Properly | WP 0095 00 |
|---|------------|

**DUMP BODY HYDRAULIC SYSTEM**

- |   |            |
|---|------------|
| 1. Dump Body Does Not Raise                   | WP 0096 00 |
| 2. Dump Body Does Not Lower                   | WP 0096 00 |
| 3. Dump Body Drifts Down From Raised Position | WP 0096 00 |

**WRECKER HYDRAULIC SYSTEM**

- |  |            |
|--|------------|
| 1. M1089A1 Material Handling Crane (MHC) Does Not Operate                                    | WP 0097 00 |
| 2. M1089A1 Stifflegs/Left 30K Winch/15K Self-Recovery Winch (SRW) Do Not Operate             | WP 0097 00 |
| 3. M1089A1 Stiffleg(s) Does Not Operate Or Operates Slowly                                   | WP 0097 00 |
| 4. M1089A1 Left 30K Winch Does Not Operate Or Operates Slowly                                | WP 0097 00 |
| 5. M1089A1 Stinger/Telescopic Lift Cylinders/Fold Cylinders/Right 30K Winch Do Not Operate   | WP 0097 00 |
| 6. M1089A1 Stinger Does Not Operate  | WP 0097 00 |
| 7. M1089A1 Underlift Telescopic Lift Cylinder(S) Does Not Operate                            | WP 0097 00 |
| 8. M1089A1 Fold Cylinder Does Not Operate  | WP 0097 00 |
| 9. M1089A1 Right 30K Winch Does Not Operate  | WP 0097 00 |
| 10. M1089A1 Material Handling Crane (MHC) Hand Pump Does Not Operate                         | WP 0097 00 |
| 11. No Service Or External Hydraulic Power From M1089A1                                      | WP 0097 00 |
| 12. M1089A1 Material Handling Crane (MHC) Left Or Right Outrigger Drifts Or Does Not Operate | WP 0097 00 |

**MALFUNCTION/SYMPTOM INDEX - Continued** **0075 00**

<u>Malfunction/Symptom</u>	<u>Troubleshooting Procedure</u>
<b>WRECKER HYDRAULIC SYSTEM - Continued</b>	
13. M1089A1 Material Handling Crane (MHC) Mast Does Not Erect	WP 0097 00
14. M1089A1 Material Handling Crane (MHC) Outrigger Extension Cylinder Does Not Operate	WP 0097 00
15. M1089A1 Material Handling Crane (MHC) Boom Swing Does Not Operate	WP 0097 00
16. M1089A1 Material Handling Crane (MHC) Boom Does Not Lift Up Or Down Or Hold Under Load	WP 0097 00
17. M1089A1 Material Handling Crane (MHC) Boom Does Not Telescope In Or Out	WP 0097 00
18. M1089A1 Material Handling Crane (MHC) Hoist Does Not Operate	WP 0097 00
19. M1089A1 Left Stiffleg Drifts Or Does Not Operate	WP 0097 00
20. M1089A1 Right Stiffleg Drifts Or Does Not Operate	WP 0097 00
21. M1089A1 Pay-Out Hydraulic Motor Assembly Does Not Operate	WP 0097 00
<b>SPECIAL PURPOSE KITS</b>	
1. Cargo Area Arctic Heater Does Not Operate	WP 0098 00
2. Cargo Area Arctic Heater Indicator Lamp Blinks Twice While Heater Is Running	WP 0098 00
3. Cargo Area Arctic Heater Shuts Down Automatically	WP 0098 00
4. Cargo Area Arctic Override Switch Does Not Operate	WP 0098 00
5. Cab Arctic Heater Combustion Starts Immediately When Switched On	WP 0098 00
6. Cab Arctic Heater Does Not Start	WP 0098 00

**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****SPECIAL PURPOSE KITS - Continued**

- |   |            |
|---|------------|
| 7. Cab Arctic Heater Switches On And Off Repeatedly   | WP 0098 00 |
| 8. Cab Arctic Heater Hard To Start  | WP 0098 00 |
| 9. Cab Arctic Heater Turns Itself Off   | WP 0098 00 |
| 10. Cab Arctic Heater Emits Black Smoke   | WP 0098 00 |
| 11. Cab Arctic Heater Emits White Smoke More Than<br>20 Seconds After Start-Up  | WP 0098 00 |
| 12. Cab Arctic Heater Cannot Be Switched Off  | WP 0098 00 |
| 13. Light Material Handling Crane (LMHC)<br>Does Not Operate  | WP 0098 00 |
| 14. Light Material Handling Crane (LMHC) Hoist In<br>Does Not Operate   | WP 0098 00 |
| 15. Light Material Handling Crane (LMHC) Hoist<br>Out Does Not Operate  | WP 0098 00 |
| 16. Cab Arctic Heater Does Not Ignite   | WP 0098 00 |
| 17. Swingfire Does Not Operate  | WP 0098 00 |
| 18. Arctic Engine Preheat Indicator Does Not Illuminate   | WP 0098 00 |
| 19. Arctic Engine Preheat Indicator Flashes Special Failure<br>Code for 60 Seconds  | WP 0098 00 |
| 20. Arctic Engine Preheat Indicator Flashes Slowly Indicating<br>"Ready" When Ignition Is Switched On Although<br>Water Temperature Is Below 77°F (25°C). | WP 0098 00 |
| 21. Arctic Engine Preheat Indicator Illuminates Continuously<br>Although Water Temperature Is Above 77°F (25°C).  | WP 0098 00 |
| 22. Arctic Engine Preheat Indicator Flashes Slowly Indicating<br>"Ready" But Engine Will Not Start Or Is Hard To Start                                    | WP 0098 00 |
| 23. Heavy White Smoke After Cold Start  | WP 0098 00 |



**MALFUNCTION/SYMPTOM INDEX - Continued****0075 00****Malfunction/Symptom****Troubleshooting  
Procedure****SPECIAL PURPOSE KITS - Continued**

- |   |            |
|---|------------|
| 24. Engine Block Arctic Heater Does Not Operate                                 | WP 0098 00 |
| 25. No Power To Digitization Rack   | WP 0098 00 |
| 26. No Power To Mobile Tracking System (MTS) Sense                              | WP 0098 00 |
| 27. No Power To Enhanced Position Location Reporting System (EPLRS)             | WP 0098 00 |
| 28. No Power To Precision Lightweight Global Positioning System Receiver (PLGR) | WP 0098 00 |
| 29. No Power To Driver Visual Enhancement (DVE)                                 | WP 0098 00 |
| 30. No Power To SINGGAR/Force XXI Battle Command Or Below (FBCB)                | WP 0098 00 |
| 31. No Power To Mobile Tracking System (MTS)                                    | WP 0098 00 |

**M1084A1/M1086A1 MATERIAL HANDLING CRANE  
(MHC) HYDRAULICS**

- |  |            |
|--|------------|
| 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hand Pump Does Not Operate                        | WP 0099 00 |
| 2. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulic Functions Operate Slowly                | WP 0099 00 |
| 3. M1084A1/M1086A1 Material Handling Crane (MHC) Left Outrigger (Jack) Drifts Or Does Not Operate  | WP 0099 00 |
| 4. M1084A1/M1086A1 Material Handling Crane (MHC) Right Outrigger (Jack) Drifts Or Does Not Operate | WP 0099 00 |
| 5. M1084A1/M1086A1 Material Handling Crane (MHC) Mast Does Not Erect                               | WP 0099 00 |
| 6. M1084A1/M1086A1 Material Handling Crane (MHC) Hoist Does Not Operate                            | WP 0099 00 |

**MALFUNCTION/SYMPTOM INDEX - Continued**

**0075 00**

**Malfunction/Symptom**

**Troubleshooting  
Procedure**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE  
(MHC) HYDRAULICS - Continued**

- |   |            |
|---|------------|
| 7. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Boom Swing Does Not Operate                       | WP 0099 00 |
| 8. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Boom Does Not Telescope In Or Out                 | WP 0099 00 |
| 9. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Swing, Telescope, Boom, And Hoist Do Not Operate  | WP 0099 00 |
| 10. M1084A1/M1086A1 Material Handling Crane (MHC)<br>Boom Does Not Lift Up Or Down Or Hold Under Load | WP 0099 00 |

**CAB TILT AND SPARE TIRE RETAINER**

- |   |            |
|---|------------|
| 1. Cab Does Not Raise Or Lower Properly | WP 0100 00 |
|---|------------|

**CAB TILT AND SPARE TIRE RETAINER – Continued**

- |   |            |
|---|------------|
| 2. Spare Tire Does Not Raise Or Lower<br>Properly | WP 0100 00 |
|---|------------|

**M1089A1 AIR SYSTEM TROUBLESHOOTING**

- |   |            |
|---|------------|
| 1. One Wrecker Function Does Not Operate From<br>WRECKER REMOTE CONTROL     | WP 0101 00 |
| 2. Wrecker Left Or Right 30K Winch Freespool Does<br>Not Operate            | WP 0101 00 |
| 3. Wrecker Left Or Right 30K Winch Cable Drum<br>Tensioner Does Not Operate | WP 0101 00 |
| 4. 30K Winch LH or RH Does Not Pay-In                                       | WP 0101 00 |

**FRAME TROUBLESHOOTING**

- |   |            |
|---|------------|
| Tires Continue To Wear After Front End Alignment,<br>And/Or Vehicle Drives Sideways Down Road | WP 0102 00 |
|---|------------|

**ENGINE SYSTEM TROUBLESHOOTING****0076 00****INITIAL SETUP:****Maintenance Level**

Operator

**References**

WP 0018 00

WP 0021 00

WP 0077 00

WP 0079 00

WP 0080 00

WP 0103 00

WP 0108 00

WP 0109 00


**ENGINE SYSTEM****Table 1. Engine System Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. ENGINE DOES NOT CRANK	1. Are batteries, battery cables, and terminal post free from damage and corrosion?	1. Remove battery box cover (WP 0108 00).

**ENGINE SYSTEM TROUBLESHOOTING - Continued** **0076 00**

**ENGINE SYSTEM - Continued**

**Table 1. Engine System Troubleshooting Procedures - Continued.**

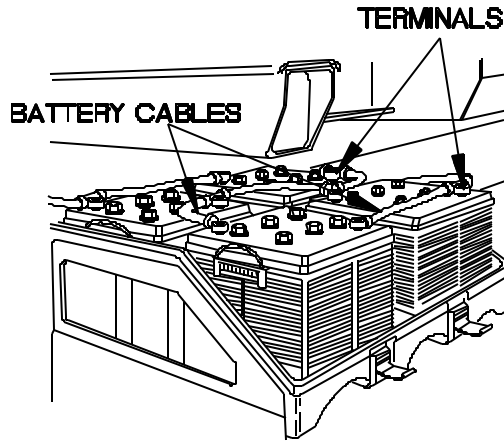MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. ENGINE DOES NOT CRANK</p> <div data-bbox="514 722 1015 1161">  <p>The diagram shows a perspective view of a battery bank with multiple cells. Two labels with leader lines point to the top of the battery: 'BATTERY CABLES' points to the cables connected to the terminals, and 'TERMINALS' points to the terminal posts themselves.</p> </div>	<p>2. Are battery cells at appropriate fluid levels (WP 0108 00)?</p>	<p>2. Check batteries, battery cables, and terminal posts for apparent damage and corrosion.</p> <p>7600803-</p> <p>3. If damage or corrosion is present, notify Field Maintenance.</p> <p>4. If no damage or corrosion is present, go to test 2 of this malfunction.</p> <p>1. If batteries cells are not at appropriate level, notify Field Maintenance.</p> <p>2. If batteries cells are at appropriate level, perform Electrical System Troubleshooting (WP 0080 00 Malfunction 1. Engine Does Not Crank).</p>

**ENGINE SYSTEM TROUBLESHOOTING - Continued****0076 00****ENGINE SYSTEM - Continued****Table 1. Engine System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
2. ENGINE CRANKS BUT DOES NOT START	1. Check for restricted air cleaner (WP 0109 00).	1. If restricted, clean air filter element (WP 0109 00).  2. If air filter element will not clean, notify Field Maintenance.  3. If engine cranks but still does not start, perform Fuel System Troubleshooting (WP 0077 00, Malfunction 1, Engine Cranks But Does Not Start or Engine Stalls After Starting).
3. LOW ENGINE OIL PRESSURE	1. Check for proper engine oil level.  2. Check engine oil for contamination.	1. Check engine oil level (WP 0103 00, Table 3, Item 6).  2. If engine oil level is low, add engine oil (WP 0103 00, Table 3, Item 6).  3. If engine oil level is high, notify Field Maintenance.  1. If engine oil is contaminated, notify Field Maintenance.  2. If engine oil pressure is still high or low, notify Field Maintenance.
4. ENGINE STALLS AT LOW RPM	1. Check for restricted air cleaner (WP 0109 00).	1. If restricted, clean air filter element (WP 0109 00).  2. If air filter element will not clean, notify Field Maintenance.

**ENGINE SYSTEM TROUBLESHOOTING - Continued** **0076 00**

**ENGINE SYSTEM - Continued**

**Table 1. Engine System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
4. ENGINE STALLS AT LOW RPM - Continued	2. Check air cleaner hoses and pipe for kinks and damage.	<ol style="list-style-type: none"> <li>1. Check air particle restriction hose for kinks and damage.</li> <li>2. Raise cab (WP 0021 00).</li> <li>3. Check air cleaner to turbocharger pipe and hose for kinks or damage.</li> <li>4. If pipe or hose(s) is damaged or kinked, notify Field Maintenance.</li> <li>5. Lower cab (WP 0021 00).</li> <li>6. If engine stalls at low rpm, notify Field Maintenance.</li> </ol>
5. ENGINE OVERSPEEDS ON START		Notify Field Maintenance.
6. TOO MUCH VIBRATION IN ENGINE	<ol style="list-style-type: none"> <li>1. Check for restricted air cleaner (WP 0109 00).</li> <li>2. Check for loose vibration damper and/or missing bolts and damage.</li> </ol>	<ol style="list-style-type: none"> <li>1. If restricted, clean air cleaner element (WP 0109 00).</li> <li>2. If air filter element will not clean, notify Field Maintenance.</li> <li>1. Raise cab (WP 0021 00).</li> <li>2. Visually check vibration damper for loose and/or missing bolts and damage.</li> </ol>

**Table 1. Engine System Troubleshooting Procedures - Continued.**

0076 00-5

**ENGINE SYSTEM TROUBLESHOOTING - Continued****0076 00****ENGINE SYSTEM - Continued****Table 1. Engine System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
10. EXCESSIVE BLACK OR GRAY EXHAUST SMOKE	<ol style="list-style-type: none"> <li>1. Check for restricted air cleaner (WP 0109 00).</li> <li>2. Check air cleaner hoses and pipe for kinks and damage.</li> </ol>	<ol style="list-style-type: none"> <li>1. If restricted, clean air filter element (WP 0109 00).</li> <li>2. If air filter element will not clean, notify Field Maintenance.</li> <li>1. Check air particle restriction hose for kinks and damage.</li> <li>2. Raise cab (WP 0021 00).</li> <li>3. Check air cleaner to turbocharger pipe and hose for kinks or damage.</li> <li>4. If pipe or hose(s) is damaged or kinked, notify Field Maintenance.</li> <li>5. Lower cab (WP 0021 00).</li> <li>6. If excessive black or gray smoke is still seen from engine, notify Field Maintenance.</li> </ol>
11. WHITE EXHAUST SMOKE	Check for restricted air cleaner (WP 0109 00).	<ol style="list-style-type: none"> <li>1. If restricted, clean air filter element (WP 0109 00).</li> <li>2. If air filter element will not clean, notify Field Maintenance.</li> <li>3. If white exhaust smoke is still seen from engine, notify Field Maintenance.</li> </ol>




**ENGINE SYSTEM TROUBLESHOOTING - Continued**

**0076 00**

**ENGINE SYSTEM - Continued**

**Table 1. Engine System Troubleshooting Procedures - Continued.**

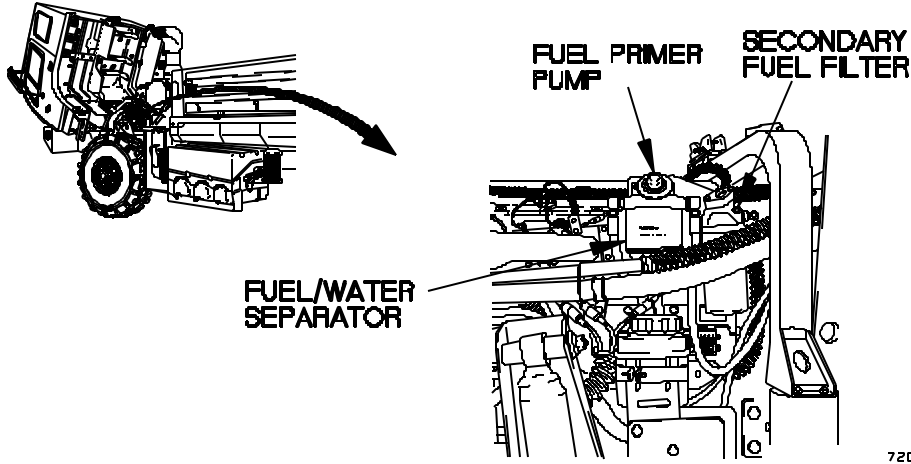
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>12. ENGINE SPEED IS NOT STABLE</p>	<ol style="list-style-type: none"> <li>1. Check for restricted air cleaner (WP 0109 00).</li> <li>2. Check for fuel leaks.</li> </ol>	<ol style="list-style-type: none"> <li>1. If restricted, clean air filter element (WP 0109 00).</li> <li>2. If air filter element will not clean, notify Field Maintenance.</li> <li>1. Raise cab (WP 0021 00).</li> <li>2. Check secondary fuel filter, fuel hoses, fuel fittings, draincocks, fuel tank hoses and tank, and other hoses that hold fuel for leaks.</li> </ol>
		<ol style="list-style-type: none"> <li>3. If any fuel leaks are found, notify Field Maintenance.</li> <li>4. Lower cab (WP 0021 00).</li> <li>5. If engine speed is still not stable, notify Field Maintenance.</li> </ol>

**ENGINE SYSTEM TROUBLESHOOTING - Continued**

**0076 00**

**ENGINE SYSTEM - Continued**

**Table 1. Engine System Troubleshooting Procedures - Continued.**

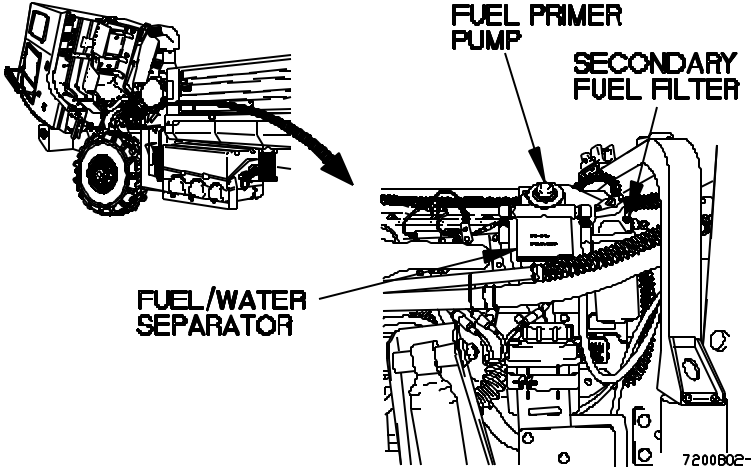MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>13. ENGINE STARTS BUT MISFIRES, RUNS ROUGH, OR LACKS POWER</p>	<p>1. Check for restricted air cleaner (WP 0109 00).</p> <p>2. Check for fuel leaks.</p>	<p>1. If restricted, clean air filter element (WP 0109 00).</p> <p>2. If air filter element will not clean, notify Field Maintenance.</p> <p>1. Raise cab (WP 0021 00).</p> <p>2. Check secondary fuel filter, fuel hoses, fuel fittings, draincocks, fuel tank hoses and tank, and other hoses that hold fuel for leaks.</p>
		<p>3. If any fuel leaks are found, notify Field Maintenance.</p> <p>4. Lower cab (WP 0021 00).</p> <p>5. If engine starts but misfires, runs rough, or lacks power, notify Field Maintenance.</p>


**ENGINE SYSTEM TROUBLESHOOTING - Continued**

**0076 00**

**ENGINE SYSTEM - Continued**

**Table 1. Engine System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
14. BLUE EXHAUST SMOKE FROM ENGINE	Check for proper engine oil level.	<ol style="list-style-type: none"> <li>1. Check engine oil level (WP 0103 00, Table 3, Item 6).</li> <li>2. If engine oil level is low, add engine oil (WP 0103 00, Table 3, Item 6).</li> <li>3. If engine oil level is high, notify Field Maintenance.</li> <li>4. If blue exhaust smoke is still seen from engine, notify Field Maintenance.</li> </ol>
15. CHECK ENGINE INDICATOR REMAINS ILLUMINATED	<ol style="list-style-type: none"> <li>1. Check to see if CHECK ENGINE indicator remains illuminated after test drive.</li> </ol>	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Test drive vehicle.</li> <li>3. Check to see if CHECK ENGINE indicator remains illuminated.</li> </ol>

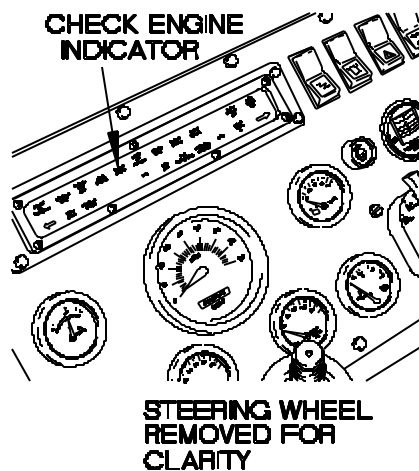


7200803-

**ENGINE SYSTEM TROUBLESHOOTING - Continued** **0076 00**

**ENGINE SYSTEM - Continued**

**Table 1. Engine System Troubleshooting Procedures - Continued.**

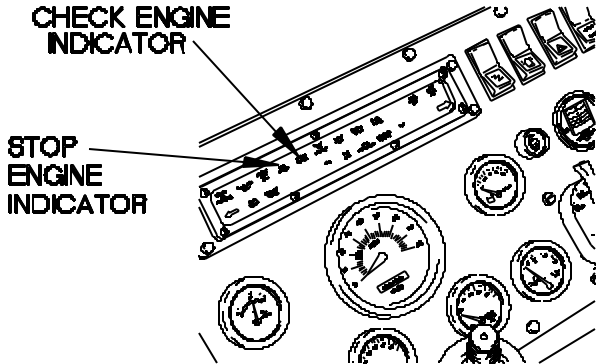MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
15. CHECK ENGINE INDICATOR REMAINS ILLUMINATED - Continued		4. Shut down engine (WP 0018 00).  5. If CHECK ENGINE indicator remains illuminated, notify Field Maintenance.
16. STOP ENGINE INDICATOR REMAINS ILLUMINATED	1. Check to see if STOP ENGINE indicator remains illuminated after test drive.	1. Start engine (WP 0018 00).  2. Test drive vehicle.  3. Check to see if STOP ENGINE indicator remains illuminated.
 <p data-bbox="711 1570 938 1654"><b>STEERING WHEEL REMOVED FOR CLARITY</b></p>		<p data-bbox="1117 1640 1188 1661">7200B04-</p> 4. Shut down engine (WP 0018 00).

**ENGINE SYSTEM TROUBLESHOOTING - Continued** **0076 00****ENGINE SYSTEM - Continued****Table 1. Engine System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
16. STOP ENGINE INDICATOR REMAINS ILLUMINATED - Continued		5. If STOP ENGINE indicator remains illuminated, notify Field Maintenance.

**END OF WORK PACKAGE.**



**FUEL SYSTEM TROUBLESHOOTING**

**0077 00**

**THIS WORK PACKAGE COVERS:**

Fuel System

**INITIAL SETUP:**

**Maintenance Level**

Operator

**References**

WP 0017 00

WP 0018 00

WP 0021 00

WP 0076 00

WP 0080 00

**FUEL SYSTEM**

**Table 1. Fuel System Troubleshooting Procedures.**



MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. ENGINE CRANKS BUT DOES NOT START, OR ENGINE STALLS AFTER STARTING	1. Perform Engine System Troubleshooting.	Perform Engine System Troubleshooting (WP 0076 00, Malfunction 2, Engine Cranks But Does Not Start).
	2. Check to see if fuel tank is empty.	1. If fuel tank is empty, fill fuel tank (WP 0017 00). 2. If engine still cranks but does not start, perform Electrical System Troubleshooting (WP 0080 00, Malfunction 2, Engine Cranks But Does Not Start).
2. ETHER STARTING AID DOES NOT OPERATE	Check to see if engine starts using ether starting aid.	1. Attempt to start engine using ether starting aid (WP 0018 00). 2. If ether starting aid does not operate, perform Electrical System Troubleshooting (WP 0080 00, malfunction 101, Ether Starting Aid Does Not Operate).

**FUEL SYSTEM TROUBLESHOOTING - Continued**

**0077 00**

**FUEL SYSTEM - Continued**


**Table 1. Fuel System Troubleshooting Procedures - Continued.**

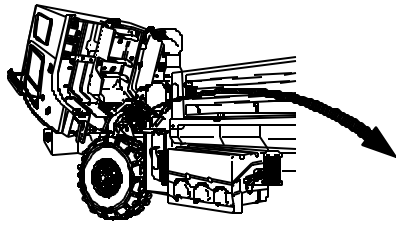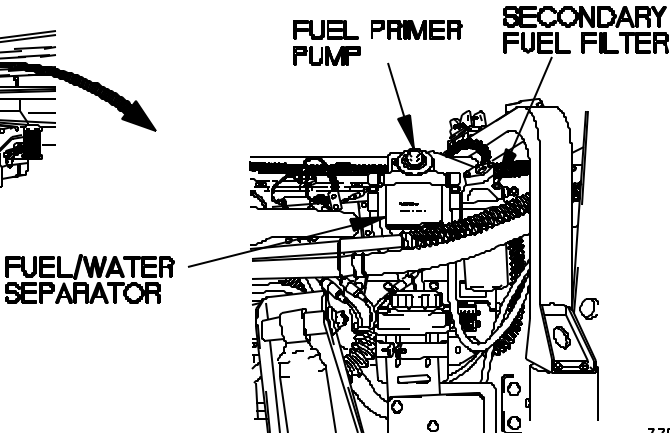MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. FUEL CONSUMPTION TOO HIGH</p>   <p>7 300601 -</p>	<p>Check for fuel leaks.</p>	<ol style="list-style-type: none"> <li>1. Raise cab (WP 0021 00).</li> <li>2. Check secondary fuel filter, fuel hoses, fuel fittings, draincocks, fuel tank hoses and tank, and other lines that hold fuel for leaks.</li> <li>3. If any fuel leaks are found, notify Field Maintenance.</li> <li>4. If fuel consumption is still too high, notify Field Maintenance.</li> <li>5. Lower cab (WP 0021 00).</li> </ol>



**FUEL SYSTEM TROUBLESHOOTING - Continued****0077 00****FUEL SYSTEM - Continued****Table 1. Fuel System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
4. ACCELERATOR PEDAL STICKS	Check to see if accelerator pedal sticks.	If accelerator pedal sticks, notify Field Maintenance.

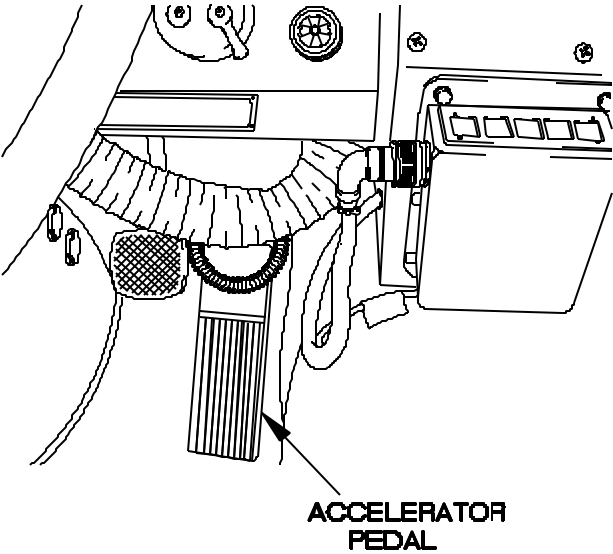7300802-

**END OF WORK PACKAGE.**



**EXHAUST SYSTEM TROUBLESHOOTING**

**0078 00**

**THIS WORK PACKAGE COVERS:**

Exhaust System

**INITIAL SETUP:**

**Maintenance Level**

Operator

**Reference**

FM 21-11

**Condition**

Engine Running (WP 0018 00).

**EXHAUST SYSTEM**

**Table 1. Exhaust System Troubleshooting Procedures.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. EXHAUST SYSTEM UNUSUALLY NOISY OR VIBRATES EXCESSIVELY DURING ENGINE OPERATION	1. Listen to hear exhaust system is unusually noisy.	If exhaust system is unusually noisy notify Field Maintenance.
	2. Check exhaust system for excessive vibration.	1. If exhaust system vibrates excessively, notify Field Maintenance. 2. Shut down engine (WP 0018 00).
2. EXHAUST FUMES IN CAB	Check for exhaust fumes in cab.	1. Briefly roll up windows and check for exhaust fumes in cab. 2. If exhaust fumes continue to escape into cab, notify Field Maintenance. 3. Shut down engine (WP 0018 00).

**END OF WORK PACKAGE.**



# COOLING SYSTEM TROUBLESHOOTING

0079 00

## THIS WORK PACKAGE COVERS:

Cooling System

## INITIAL SETUP:

### Maintenance Level

Operator



### References

WP 0021 00

WP 0103 00

## COOLING SYSTEM

Table 1. Cooling System Troubleshooting Procedures.

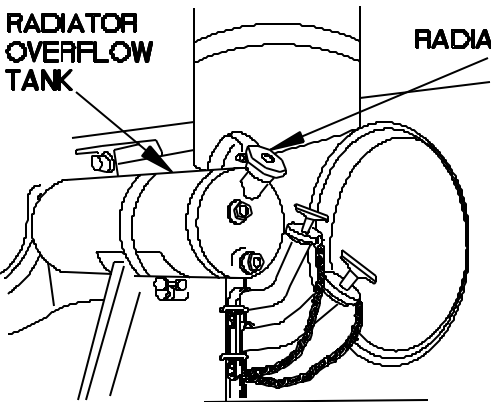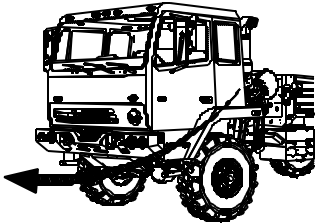MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Extreme care should be taken when removing radiator cap if WATER TEMP gage reads above 180° F (82° C). Contact with steam or hot coolant under pressure may result. Failure to comply may result in injury to personnel.</p>		
1. ENGINE OVERHEATS	<ol style="list-style-type: none"> <li>1. Check coolant level at radiator overflow tank.</li> <li>2. Check radiator cap for leakage and damage.</li> </ol>	<p>If low, add coolant as required (WP 0103 00, Table 1, Item 3).</p> <p>If leaking or damaged, notify Field Maintenance.</p>
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div>		

7500801 -

**COOLING SYSTEM TROUBLESHOOTING - Continued 0079 00**

**COOLING SYSTEM - Continued**

**Table 1. Cooling System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. ENGINE OVERHEATS - Continued	3. Check radiator overflow tank and hoses for leaks and damage.  4. Check outside of radiator core for obstructions.  5. Check for leakage from radiator hoses and hose connections.	If leaking or damaged, notify Field Maintenance.  1. Raise cab (WP 0021 00).  2. Check radiator fins for obstructions. 3. If clogged, remove debris.  1. If loose, tighten.  2. If damaged, notify Field Maintenance. 3. Lower cab (WP 0021 00). 4. If engine continues to overheat, notify Field Maintenance.
2. OIL IN COOLING SYSTEM		Notify Field Maintenance.
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Extreme care should be taken when removing radiator cap if WATER TEMP gage reads above 180° F (82° C). Contact with steam or hot coolant under pressure may result. Failure to comply may result in injury to personnel.</b></p>		
3. LOSS OF COOLANT	1. Check radiator cap for leakage and damage.	If leaking or damaged, notify Field Maintenance.

**COOLING SYSTEM TROUBLESHOOTING - Continued 0079 00**

**COOLING SYSTEM - Continued**

**Table 1. Cooling System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
3. LOSS OF COOLANT - Continued	2. Check radiator overflow tank and hoses for leaks and damages.	If leaking or damaged, notify Field Maintenance.
	3. Check radiator fins for obstructions.	1. Raise cab (WP 0021 00)  2. Check radiator fins for obstructions. 3. If clogged, remove debris.
	4. Check all hoses and connections for visual signs of leakage.	1. If loose, tighten.  2. If damaged, notify Field Maintenance. 3. Lower cab (WP 0021 00). 4. If coolant loss is still seen, notify Field Maintenance.

**END OF WORK PACKAGE.**





**ELECTRICAL SYSTEM TROUBLESHOOTING****0080 00****THIS WORK PACKAGE COVERS:**

Electrical System

**INITIAL SETUP:****Maintenance Level**

Operator

**ELECTRICAL SYSTEM**

Table 1 identifies circuit breakers for electrical system troubleshooting. Refer to Printed Circuit Board Decal for circuit breaker locations.

\* Information for vehicle S/N 100,001 to 199,999

\*\* Information for vehicle S/N 11,438 to 99,999

**Table 1. Circuit Breaker Identification for Electrical System Troubleshooting.**

REFERENCE DESIGNATOR	FUNCTION	CB AMPS	VOLTAGE	PDM*
CB20	Radio Power	25.0	24	3
CB21	Air Dryer Heater/Inter-Axle Differential Solenoid	15.0	24	2
CB22	Inlet Air Heater, Fan OFF and Ether Starting Aid	10.0	24	4
CB23	Heater Blower	15.0	24	4
CB30	Chemical Detector	10.0	24	3
CB35*	Trailer ABS*	15.0*	24*	4
CB37	Wiper/Washer/Horn	10.0	24	4
CB38	Amber Warning Light	15.0	12	2
CB39	Trailer Blackout Stop	10.0	24	3
CB40	CTIS Power	10.0	24	4
CB41	Trailer Taillight, Blackout Marker	15.0	24	1

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM - Continued****Table 1. Circuit Breaker Identification for Electrical System Troubleshooting – Continued.**

REFERENCE DESIGNATOR	FUNCTION	CB AMPS	VOLTAGE	PDM*
CB42	Engine ECM** / Two-Way Intercom*	30.0** / 20.0*	24	3
CB43	Transmission ECU	10.0	24	3
CB44	Trailer Taillight	15.0	24	3
CB45	Fuel Preheat Control/Ignition	15.0	24	3
CB48	Arctic Kit / Material Handling Crane (MHC)*	20.0	24	3
CB49	PTO Power, Fuel/Water Separator	15.0	24	4
CB50	Dump / Material Handling Crane (MHC)	15.0	24	4
CB53	M1084A1/M1086A1 Material Handling Crane (MHC)** / Spare*	15.0	12	2
CB54	Blackout Drive Light	10.0	12	1
CB60*	Engine ECM*	40.0*	24*	N/A
CB65	Parking Lights	10.0	12	2
CB66	Blackout Marker	10.0	12	1
CB67	Trailer Taillight, Marker Lights	25.0	12	1
CB68	Auxiliary Transmission Cooler	25.0	24	4
CB70	Blackout Marker, Blackout Drive Light, Blackout Drive (front and rear), Marker Lights, Parking Lights, Accessory Power, Backup Light, Headlights, Auxiliary Panel, Instrument Panel Assembly, and Personnel Heater Illuminations	20.0	12	2
CB71	Trailer Taillight, Rear Composite Lights, Hazard Flasher, Stoplights	15.0	12	2

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM - Continued****Table 1. Circuit Breaker Identification for Electrical System Troubleshooting – Continued.**

REFERENCE DESIGNATOR	FUNCTION	CB AMPS	VOLTAGE	PDM*
CB72	Worklights	15.0	12	1
CB73	Backup Light	10.0	12	2
CB74	Turn Signals	10.0	12	2
CB76	Trailer Blackout Stop, Blackout Stop	15.0	12	2
CB77	Accessory Power, Engine Instruments	10.0** / 15.0*	24	4
CB78	Headlights	15.0	12	1
CB79	Transmission ECU	15.0	24	2
CB80	Rear Composite Lights	25.0** / 20.0*	12	1
CB82	ABS Indicator, ABS Power	10.0	12	1
CB83	ABS Power	10.0	12	2
CB84*	Power Outlet*	20.0*	12*	1
CB85**	12V Power Outlet**	20.0**	12**	N/A
CB88*	Trailer ABS*	15.0*	12*	2

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM - Continued**

Table 2 is used to identify relays for electrical system Troubleshooting. Refer to Printed Circuit Board Decal for Circuit Breaker Locations.

**Table 2. Relay Identification.**

REFERENCE DESIGNATOR	FUNCTION	VOLTAGE	PDM*
K1	24V Ignition Relay	24 VDC	N/A
K2	12V Ignition Relay	12 VDC	N/A
K4**	Spare Relay**	12 VDC**	N/A
K5	Wiper Delay Relay	12 VDC** / 24 VDC*	4
K7	Headlight Relay	12 VDC	1
K8	Low/High Beam Relay	12 VDC	1
K9	Hazard Flasher Relay	12 VDC	2
K10	Stop Light Relay	12 VDC	2
K11	Alternator Excitation Relay	12 VDC** / 24 VDC *	4
K12	Work Light Relay	12VDC	1
K13	Rotary Warning Relay	12 VDC	2
K15**	Auxiliary Cooler Relay**	12 VDC**	N/A
K15A*	Auxiliary Cooler Relay*	24 VDC*	4
K15B*	Auxiliary Cooler Relay*	24 VDC*	4
K16**	Exhaust Brake Relay**	12 VDC**	N/A
K17	ABS Lamp Relay	12 VDC	1
K19	Start Inhibit Relay	12 VDC** / 24 VDC*	4
K20	Marker Lamps Relay	12 VDC	1
K21	Rear Left Light Relay	12 VDC	3
K22	Rear Right Light Relay	12 VDC	3
K25	Reverse Warning Relay	12 VDC** / 24 VDC*	2
K26	Neutral Start Relay	12 VDC** / 24 VDC*	4

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM - Continued****Table 2. Relay Identification.**

REFERENCE DESIGNATOR	FUNCTION	VOLTAGE	PDM*
K27	Trailer B.O Stop Light	12 VDC	3
K28	Trailer Marker Light Relay	12 VDC	1
K29	Trailer B.O. Marker Light	12 VDC	1
K30	Trailer Rear Left Light Relay	12 VDC	3
K31	Trailer Rear Right Light Relay	12 VDC	3
K34	Differential Lock Relay	12 VDC** / 24 VDC*	2
K37	PTO Relay	12 VDC** / 24 VDC*	4
K40*	Start Disable*	24 VDC*	3
K42	Engine PTO Relay	12 VDC** / 24 VDC*	3
K53	Radio Power Relay	12 VDC** / 24 VDC*	3

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM - Continued**

Table 3 describes the malfunctions, tests or inspections, and the corrective actions for the Electrical System Troubleshooting procedures.


**Table 3. Electrical System Troubleshooting Procedures.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p align="center"><b>NOTE</b></p> <p>Perform Engine System Troubleshooting (WP 0081 00, Malfunction 1, Engine Does Not Crank) before starting here.</p>		
1. ENGINE DOES NOT CRANK	<p>1. Have Preventive Maintenance Checks and Services (PMCS) Before checks been performed.</p> <p>2. Does audible alarm operate?</p> <p>3. Does WTEC III Transmission Pushbutton Shift Selector (TPSS) illuminate/operate?</p>	<p>1. If PMCS Before checks have not been performed, perform M1083A1 Series Preventive Maintenance Checks and Services (PMCS) (WP 0103 00) Before checks.</p> <p>2. If PMCS Before Checks have been performed, go to test 2 of this malfunction.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Depress LAMP TEST switch (WP 0018 00).</p> <p>3. If audible alarm does not operate, perform Electrical System Troubleshooting Malfunction 14 (Audible Alarm Does Not Operate).</p> <p>4. If audible alarm operates, go to test 3 of this malfunction.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Check to see if WTEC III TPSS display window displays "N" (WP 0004 00).</p>

# **ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

## **ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

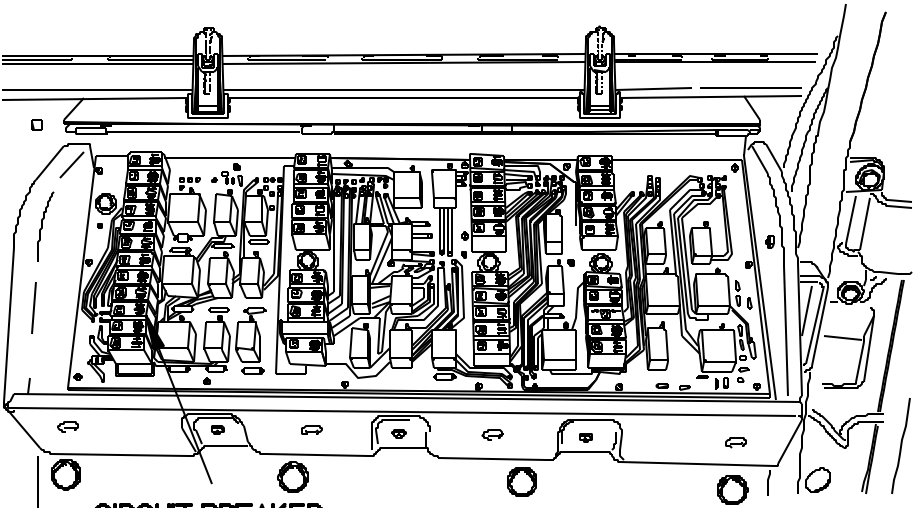MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. ENGINE DOES NOT CRANK – Continued</p>	<p>3. Check to see if circuit breaker CB77 is tripped.</p>	<p>3. f WTEC III TPSS does not display "N", perform Transmission System Troubleshooting (WP 0081 00, Malfunction 3, WTEC III Transmission Pushbutton Shift Selector (TPSS) Does Not Illuminate/Operate).</p> <p>4. If WTEC III does display "N", notify Field Maintenance.</p> <p>5. If WTEC III TPSS does display "N", go to test 3 of this malfunction.</p> <p>1. Remove Power Distribution Panel (PDP) cover (WP 0113 00).</p> <p>2. If circuit breaker CB77 is tripped, push in to reset.</p>
 <p>CIRCUIT BREAKER CB77</p>		<p>3. Attempt to start engine (WP 0018 00).</p>

7600802 -

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


0080 00-8



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

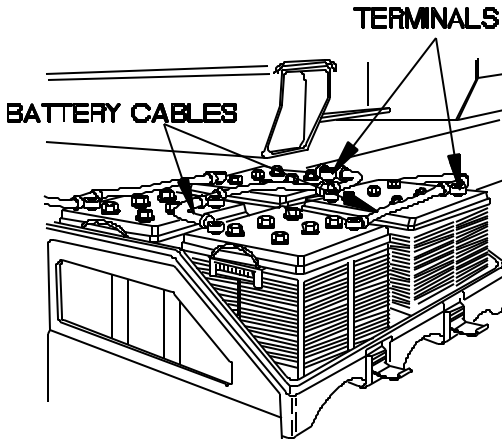MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. 24 VDC CIRCUITS DO NOT OPERATE - Continued</p>		<p>3. If damage or corrosion is present, notify Field Maintenance.</p>
	<p>3. Are batteries cells at appropriate fluid levels (WP 0108 00)?</p> <p>4. Is vehicle S/N 18,550 to 199,999?</p> <p>5. Do service drive lights illuminate?</p>	<p>4. If no damage or corrosion is present, go to test 3 of this malfunction.</p> <p>1. If batteries cells are not at appropriate level, notify Field Maintenance.</p> <p>2. If batteries cells are at appropriate level, go to test 4 of this malfunction.</p> <p>1. If vehicle S/N is not 18,550 to 199,999 go to test 6 of this malfunction.</p> <p>2. If vehicle S/N is 18,550 to 199,999 go to test 5 of this malfunction.</p> <p>1. Position main light switch to SER DRIVE (WP 0004 00).</p>

7600803-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. 24 VDC CIRCUITS DO NOT OPERATE – Continued</p>	<p>6. Check to see if circuit breaker CB45 is tripped.</p>	<p>2. Check to see SER DRIVE lights illuminate.</p> <p>3. If SER DRIVE lights do not illuminate, perform Electrical System Troubleshooting Malfunction 5. 12 and 24 VDC Circuits Do Not Operate (VEHICLE S/N 18,550 OR HIGHER).</p> <p>4. If SER DRIVE lights illuminate, go to test 6 of this malfunction.</p> <p>1. Position main light switch to off (WP 0004 00).</p> <p>2. Remove Power Distribution Panel (PDP) cover (WP 0113 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

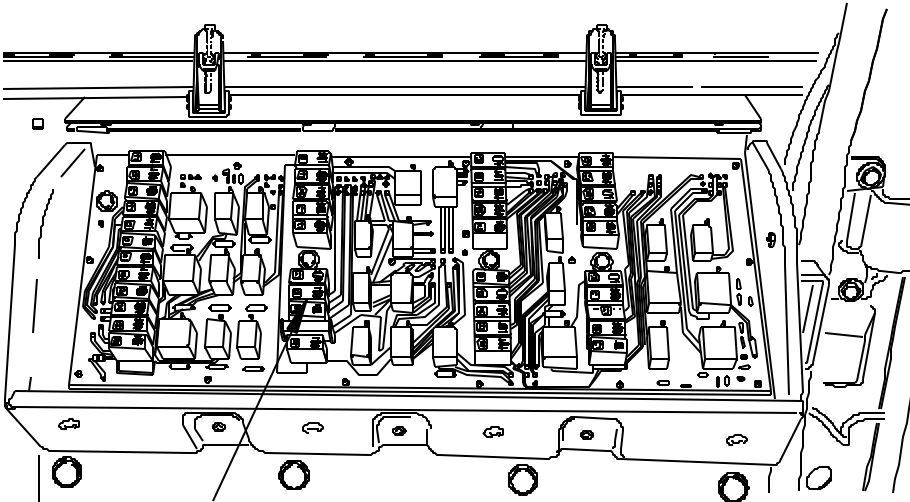MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. 24 VDC CIRCUITS DO NOT OPERATE – Continued		
<p style="text-align: center;"><b>NOTE</b></p> <p>Perform the following corrective action on vehicles S/N 11,438 to 99,999.</p>		
		3. Check to see if circuit breaker CB45 is tripped.
 <p style="text-align: center;"><b>CIRCUIT BREAKER CB45</b></p> <p style="text-align: right;">7600848-</p>		
<p style="text-align: center;"><b>NOTE</b></p> <p>Perform corrective actions 4 and 5 on vehicles S/N 100,001 to 199,999.</p>		
		4. Open Power Distribution Module (PDM) 3.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

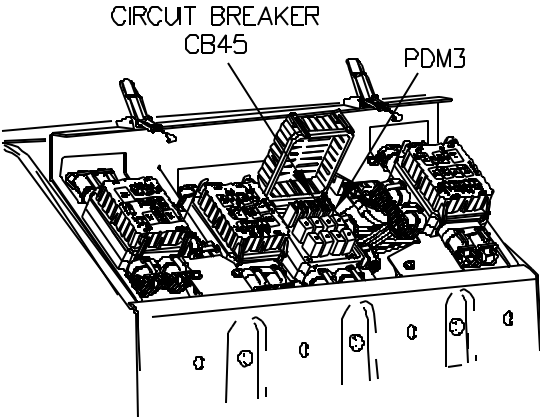MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. 24 VDC CIRCUITS DO NOT OPERATE – Continued</p>		<p>5. Check to see if circuit breaker CB45 is tripped.</p> <p style="text-align: center;">CB45x</p> <p>6. If circuit breaker CB45 is tripped, push in to reset.</p> <p>7. Position master power switch to on (WP 0004 00).</p> <p>8. If circuit breaker CB45 trips again, notify Field Maintenance.</p> <p>9. Position master power switch to off (WP 0004 00).</p> <p>10. If circuit breaker CB45 was not tripped or does not trip again, got to test 7 of this malfunction.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. 24 VDC CIRCUITS DO NOT OPERATE –Continued.		
<p style="text-align: center;"><b>NOTE</b></p> <p>Perform corrective action 11 on vehicles S/N 100,001 to 199,999.</p>		
	7. Do the windshield wipers operate?	<p>11. Close PDM 3.</p> <p>12. Install PDP cover (WP 0113 00).</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Position windshield wiper switch to position "I" (WP 0007 00).</p> <p>3. Check to see if windshield wipers operate on low speed.</p> <p>4. If windshield wipers do not operate, notify Field Maintenance.</p> <p>5. If windshield wipers operate, fault corrected.</p> <p>6. Position windshield wiper switch to position "O" (WP 0007 00).</p> <p>7. Position master power switch to off (WP 0004 00).</p>
3. 12 VDC CIRCUITS DO NOT OPERATE (100 AMP ALTERNATOR)	1. Have Preventive Maintenance Checks and Services (PMCS) Before checks been preformed.	1. Before checks have not been performed, perform M1083 A1 Series Preventative Maintenance Checks and Services (PMCS) (WP 0103 00) Before Checks.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. 12 VDC CIRCUITS DO NOT OPERATE (100 AMP ALTERNATOR) - Continued</p>	<p>2. Are batteries, battery cables, and terminal post free from damage and corrosion?</p>	<p>2. If PMCS Before checks have been performed, go to test 2 of this malfunction.</p> <p>1. Remove battery box cover (WP 0108 00).</p> <p>2. Check batteries, battery cables, and terminal posts for apparent damage and corrosion.</p> <p>3. If damage or corrosion is present, notify Field Maintenance.</p> <p>4. If no damage or corrosion is present, go to test 3 of this malfunction.</p>
	<p>3. Are batteries cells at appropriate fluid levels (WP 0108 00)?</p>	<p>1. If batteries cells are not at appropriate level, notify Field Maintenance.</p>

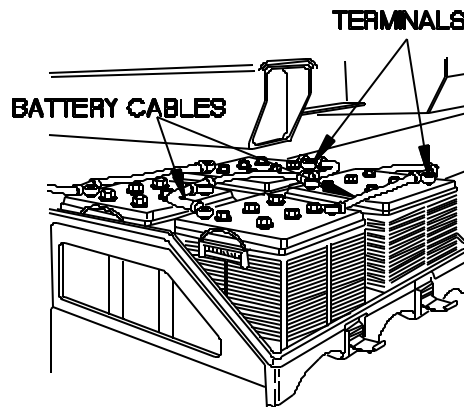

7600803-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. 12 VDC CIRCUITS DO NOT OPERATE (100 AMP ALTERNATOR) - Continued		2. If batteries cells are at appropriate level, notify Field Maintenance.
4. 12 VDC CIRCUITS DO NOT OPERATE (200 AMP ALTERNATOR)		Notify Field Maintenance.
5. 12 VDC and 24 VDC CIRCUITS DO NOT OPERATE (VEHICLE S/N 18,550 OR HIGHER)	1. Have Preventative Maintenance Checks and Services (PMCS) Before checks been performed?	1. If PMCS Before checks have not been performed, perform M1083 A1 Series Preventative Maintenance Checks and Services (PMCS) (WP 0103 00) Before checks.
	2. Are batteries, battery cables, and terminal post free from damage and corrosion?	2. If PMCS Before checks have been performed, go to test 2 of this malfunction.  1. Remove battery box cover (WP 0108 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

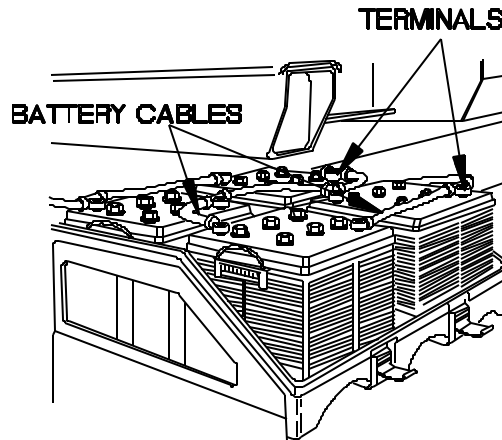MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. 12 VDC and 24 VDC CIRCUITS DO NOT OPERATE (VEHICLE S/N 18,550 OR HIGHER) - Continued</p>		<p>2. Check batteries, battery cables, and terminal posts for apparent damage and corrosion.</p>
<div data-bbox="535 791 1034 1228">  <p>The diagram shows a perspective view of a battery bank. Two labels with leader lines point to the battery assembly: 'BATTERY CABLES' points to the cables on the left side, and 'TERMINALS' points to the terminal posts on the right side.</p> </div> <p style="text-align: right;">7600803-</p>		
	<p>3. Are batteries cells at appropriate fluid levels (WP 0108 00)?.</p>	<p>3. If damage or corrosion is present, notify Field Maintenance.</p> <p>4. If no damage or corrosion is present, go to test 3 of this malfunction.</p> <p>1. If batteries cells are not at appropriate level, notify Field Maintenance.</p> <p>2. If batteries cells are at appropriate level, notify Field Maintenance.</p>




**Table 3. Electrical System Troubleshooting Procedures - Continued.**

0080 00-17

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

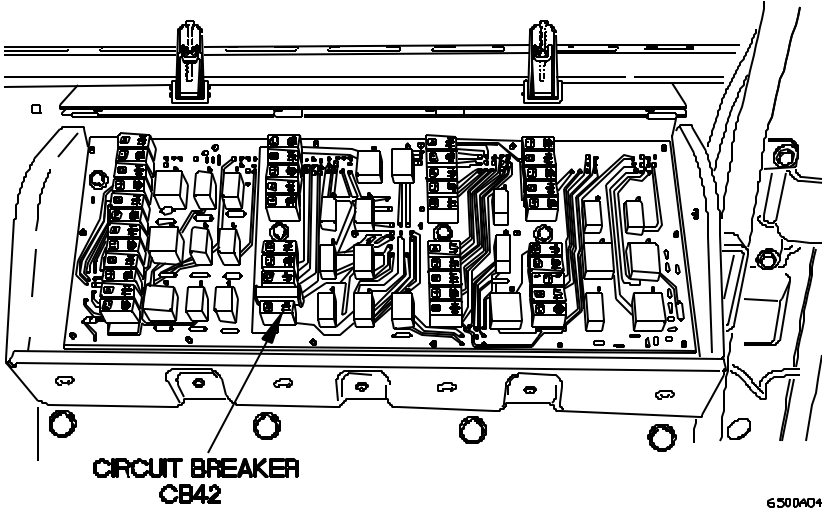MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
6. ENGINE CRANKS BUT DOES NOT START - Continued	4. Check circuit breakers CB42 in PCB to see if it is tripped	1. Remove PDP cover (WP 0113 00).
		6500404-
		2. If circuit breaker is tripped, push in to reset. 3. Attempt to start engine (WP 0018 00). 4. If engine cranks but does not start, check circuit breakers to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance. 5. Install PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. ENGINE CRANKS BUT DOES NOT START - Continued</p>	<p>5. Is circuit breaker CB60 tripped?</p>	<p>6. If engine cranks but still does not start, notify Field Maintenance.</p> <p>1. Position MBDS to disconnect (OFF) (WP 0011 00).</p>
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Vehicles are equipped with a Load and Battery Control Device (LBCD). The LBCD has internal capacitors that must be discharged prior to performing maintenance or troubleshooting procedures. Failure to comply may result in damage to equipment and/or injury to personnel.</p>		
<p>2. Position master power switch to on for 30 seconds (WP 0004 00).</p> <p>3. Position master power switch to off (WP 0004 00).</p> <p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Electrical power is still present inside the battery disconnect enclosure with the MBDS in the disconnect (OFF) position. Do not touch the studs of the MBDS. Failure to comply may result in injury or death to personnel.</p> <p>Remove rings, bracelets, wristwatches, neck chains, and any other jewelry before working around vehicle. Jewelry may catch on equipment or may short across an electrical circuit or battery terminal. Failure to comply may result in serious injury or death to personnel.</p>		

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. ENGINE CRANKS BUT DOES NOT START - Continued</p>		<p>4. Remove six screws, washers, and cover from battery disconnect enclosure.</p>
	<div data-bbox="537 684 1110 1274"> <p>SCREW</p> <p>WASHER</p> <p>COVER</p> <p>BATTERY DISCONNECT ENCLOSURE BATTDISXC</p> </div>	<p>5. Check to see if circuit breaker CB60 is tripped.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

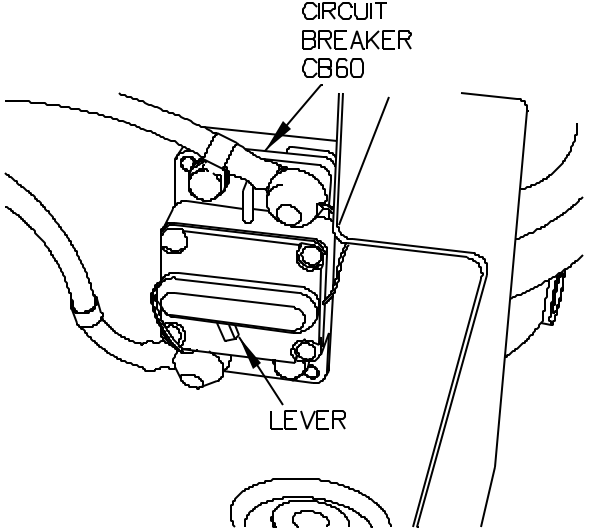MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. ENGINE CRANKS BUT DOES NOT START - Continued</p>		<p>6. If circuit breaker CB60 is tripped, push lever up to reset.</p> <p style="text-align: center;">CB60</p> <p>7. Position MBDS to connect (ON) (WP 0011 00).</p> <p>8. Attempt to start engine (WP 0018 00).</p> <p>9. Check to see if circuit breaker CB60 is tripped again.</p> <p>10. Shut down engine (WP 0018 00).</p> <p>11. Position MBDS to disconnect (OFF) (WP 0011 00).</p> <p>12. Position master power switch to on for 30 seconds (WP 0004 00).</p>

# **ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

## **ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

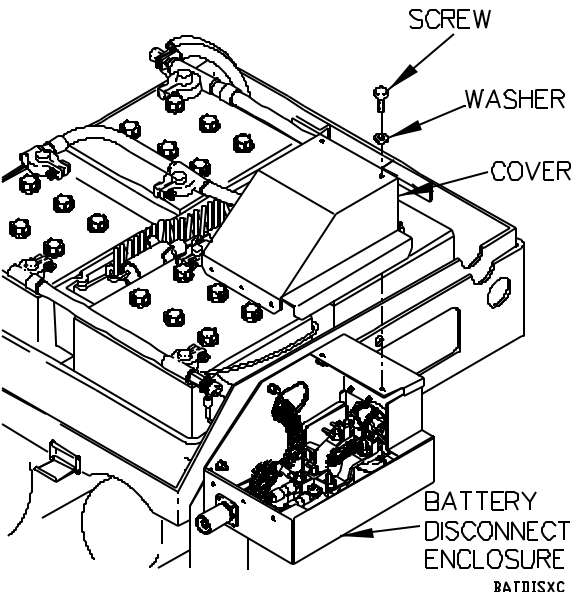MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. ENGINE CRANKS BUT DOES NOT START - Continued</p>		<p>13. Position master power switch to off (WP 0004 00).</p> <p>14. Install cover on battery disconnect enclosure with six washers and screws.</p>
<p>7. FUEL GAGE DOES NOT OPERATE OR IS INACCURATE</p>	<p>1. Is vehicle S/N 11,438 to 99,999?</p>	
		<p>15. If circuit breaker CB60 tripped again, notify supervisor.</p> <p>16. If circuit breaker CB60 is not tripped and the engine still does not start, notify Field Maintenance.</p> <p>1. If vehicle S/N is 11,438 to 99,999 go to test 3 of this malfunction.</p> <p>2. If vehicle S/N is not 11,438 to 99,999 go to test 2 of this malfunction.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
7. FUEL GAGE DOES NOT OPERATE OR IS INACCURATE - Continued	<p>2. Has Preventative Maintenance Checks and Services (PMCS) Before checks been performed?</p> <p>3. Check to see if any instrument panel gages operate.</p>	<p>1. If PMCS Before checks have not been performed, perform PMCS Before checks (WP 0103 00).</p> <p>2. If PMCS Before checks have been performed, go to test 3 of this malfunction.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. If no instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</p> <p>3. If fuel gage does not operate or is inaccurate, notify Field Maintenance.</p> <p>4. Position master power switch to off (WP 0004 00).</p>
8. WATER TEMP GAGE DOES NOT OPERATE OR IS INACCURATE	<p>1. Check to see if any instrument panel gages operate.</p>	<p>1. Position master power switch to on (WP 0004 00).</p> <p>2. If no instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</p> <p>3. If WATER TEMP gage does not operate or is inaccurate, go to test 2 of this malfunction.</p> <p>4. Position master power switch to off (WP 0004 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>8. WATER TEMP GAGE DOES NOT OPERATE OR IS INACCURATE - Continued</p>	<p>2. Is the vehicle S/N 11,438 to 99,999?</p> <p>3. Does 24 VOLTS gage operate?</p>	<p>1. If vehicle S/N is 11,438 to 99,999 notify Field Maintenance.</p> <p>2. If vehicle S/N is not 11,438 to 99,999 go to test 3 of this malfunction.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Check to see if 24 VOLTS gage operates.</p> <p>3. Position master power switch to off (WP 0004 00).</p> <p>4. If 24 VOLTS gage does not operate, perform Malfunction 174 (24 VOLTS Gage, OIL PRES Gage, WATER TEMP Gage, and Speedometer Do Not Operate).</p> <p>5. If 24 VOLTS gage operates, notify Field Maintenance.</p>
<p>9. REAR BRAKE AIR PRESSURE GAGE DOES NOT OPERATE OR IS INACCURATE</p>	<p>1. Check to see if any instrument panel gages operate.</p>	<p>1. Position master power switch to on (WP 0004 00).</p> <p>2. If no instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</p> <p>3. Position master power switch to off (WP 0004 00).</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
9. REAR BRAKE AIR PRESSURE GAGE DOES NOT OPERATE OR IS INACCURATE - Continued	2. Check to see if REAR BRAKE AIR pressure gage operates and is accurate.	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. If REAR BRAKE AIR pressure gage does not operate or is inaccurate notify Field Maintenance.</li> <li>3. Shut down engine (WP 0018 00).</li> </ol>
10. FRONT BRAKE AIR PRESSURE GAGE DOES NOT OPERATE OR IS INACCURATE	<ol style="list-style-type: none"> <li>1. Check to see if any instrument panel gages operate.</li> <li>2. Check to see if FRONT BRAKE AIR pressure gage operates and is accurate.</li> </ol>	<ol style="list-style-type: none"> <li>1. Position master power switch to on (WP 0004 00).</li> <li>2. If no instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</li> <li>3. Position master power switch to off (WP 0004 00).</li> <li>1. Start engine (WP 0018 00).</li> <li>2. If FRONT BRAKE AIR pressure gage does not operate or is inaccurate notify Field Maintenance.</li> <li>3. Shut down engine (WP 0018 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

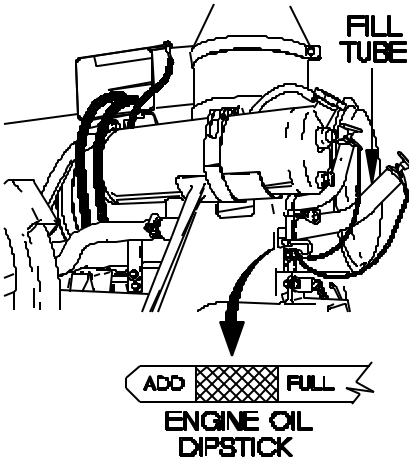MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
11. OIL PRESS GAGE DOES NOT OPERATE OR IS INACCURATE	1. Is engine oil at proper level?	1. Raise cab (WP 0021 00).
<div><b>WARNING</b></div> <p>Ensure engine oil is cool before performing any maintenance. Failure to comply may result in serious injury to personnel.</p>		
		<div><div>2. Pull engine oil dipstick from dipstick tube.</div><div>3. Wipe oil dipstick clean.</div><div>4. Reinsert oil dipstick in dipstick tube until fully seated.</div><div>5. Pull engine oil dipstick from dipstick tube.</div></div>
<div><p>02A0302</p></div>		
		<div><div>6. Reading should be between ADD and FULL markings on dipstick.</div></div>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
11. OIL PRESS GAGE DOES NOT OPERATE OR IS INACCURATE - Continued		<p>7. If oil is low, add oil to appropriate level (WP 0103 00).</p> <p>8. Return dipstick to dipstick tube.</p> <p>9. If oil level was below the ADD mark, adding oil has significantly changed the known information of the vehicle. Verify the fault still exists and restart troubleshooting if necessary.</p> <p>10. If oil level was already between the ADD and FULL marks, go to test 2 of this malfunction.</p> <p>11. Lower cab (WP 0021 00).</p>
	2. Does any other electrical gage operate?	<p>1. Position master power switch to on (WP 0004 00).</p> <p>2. If no other instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</p> <p>3. If other instrument panel gages operate, go to test 3 of this malfunction.</p> <p>4. Position master power switch to off (WP 0004 00).</p>
	3. Is vehicle S/N 11,438 to 99,999?	<p>1. If vehicle S/N is 11,438 to 99,999 notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
11. OIL PRESS GAGE DOES NOT OPERATE OR IS INACCURATE - Continued	4. Does 24 VOLTS gage operate?	<p>2. If vehicle S/N Is not 11,438 to 99,999 got to test 4 of this malfunction.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Check to see if 24 VOLTS Gage operates.</p> <p>3. Position master power switch to off (WP 0004 00).</p> <p>4. If 24 VOLTS gage does not operate, perform Malfunction 174 (24 VOLTS Gage, OIL PRESS Gage, WATER TEMP Gage, and Speedometer Do Not Operate).</p> <p>5. If 24 VOLTS gage operates, notify Field Maintenance.</p>
12. SPEEDOMETER DOES NOT OPERATE OR IS INACCURATE	1. Do any instrument panel gages operate?	<p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Check to see if any instrument panel gages operate.</p> <p>3. Position master power switch to off (WP 0004 00).</p> <p>4. If no instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</p> <p>5. If any instrument panel gages operate, go to test 2 of this malfunction.</p>

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
12. SPEEDOMETER DOES NOT OPERATE OR IS INACCURATE - Continued	<p>2. Is vehicle S/N 11,438 to 99,999?</p> <p>3. Does speedometer illuminate?</p> <p>4. Does 24 VOLTS gage operate?</p>	<p>1. If vehicle S/N is 11,438 to 99,999 got to test 3 of this malfunction.</p> <p>2. If vehicle S/N is not 11,438 to 99,999 go to test 4 of this malfunction</p> <p>Check to see if speedometer illuminates (WP 0018 00).</p> <p>If speedometer does not illuminate, perform Malfunction 17 (Instrument Panel Gage Does Not Illuminate).</p> <p>If speedometer illuminates, notify Field Maintenance.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Check to see if 24 VOLTS gage operates.</p> <p>3. Position master power switch to off (WP 0004 00).</p> <p>4. If 24 VOLTS gage does not operate, perform Malfunction 174 (24 VOLTS Gage, OIL PRESS Gage, WATER TEMP Gage, and Speedometer Do Not Operate).</p> <p>5. If 24 VOLTS gage operates, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
13. VOLTS GAGE DOES NOT OPERATE OR IS INACCURATE	1. Check to see if any instrument panel gages operate.	<ol style="list-style-type: none"> <li>1. Position master power switch to on (WP 0004 00).</li> <li>2. If no instrument panel gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate).</li> <li>3. Position master power switch to off (WP 0004 00).</li> </ol>
	2. Check to see if VOLTS gage operates and is accurate.	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. If VOLTS gage does not operate or is inaccurate notify Field Maintenance.</li> <li>3. Shut down engine (WP 0018 00).</li> </ol>
14. AUDIBLE ALARM DOES NOT OPERATE	1. Is vehicle S/N 11,438 to 99,999?	<ol style="list-style-type: none"> <li>1. If vehicle S/N is not 11,438 to 99,999 go to test 2 of this malfunction.</li> <li>2. If vehicle S/N is 11,438 to 99,999 go to test 3 of this malfunction.</li> </ol>
	2. Check to see if lamp test switch illuminates lighted indicator display (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If lamp test switch does not illuminate lighted indicator display, perform Malfunction 173 (Lamp Test Switch Does Not Operate).</li> <li>2. If lamp test switch illuminates lighted indicator display, notify Field Maintenance.</li> </ol>
	3. Check to see if lamp test switch illuminates lighted indicator display (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If lamp test switch does not illuminate lighted indicator display, perform Malfunction 46 (Lamp Test Ground Does Not Operate).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
14. AUDIBLE ALARM DOES NOT OPERATE - Continued	4. Do radio, electrical gages, and starter pushbutton operate?	<p>2. If lamp test switch illuminates lighted indicator display, go to test 4 of this malfunction.</p> <p>1. Check to see if electrical gages and starter pushbutton operate (WP 0018 00).</p> <p>1. If electrical gages and starter pushbutton do not operate, perform Malfunction 164 (Audible Alarm, Radio, Electrical Gages, and Starter Pushbutton Do Not Operate).</p> <p>2. If electrical gages and starter pushbutton operate, notify Field Maintenance.</p>
15. AUDIBLE ALARM DOES NOT OPERATE WHEN TROOP TRANSPORT ALARM SWITCH IS TURNED ON	<p>1. Check to see if lamp test switch illuminates lighted indicator display (WP 0018 00).</p> <p>2. Check to see if audible alarm sounds from low air pressure.</p>	<p>1. If lamp test switch does not illuminate lighted indicator display, go to test 3 of this malfunction.</p> <p>2. If lamp test switch illuminates lighted indicator display, go to test 2 of this malfunction.</p> <p>1. Drain air tanks (WP 0018 00).</p> <p>2. Position master power switch to on (WP 0004 00).</p> <p>3. Check to see if audible alarm sounds from low air pressure.</p> <p>4. Position master power switch to off (WP 0004 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>15. AUDIBLE ALARM DOES NOT OPERATE WHEN TROOP TRANSPORT ALARM SWITCH IS TURNED ON - Continued</p>	<p>3. Check to see if audible alarm operates when troop transport alarm switch is turned on.</p>	<p>5. If audible alarm does not operate from low air pressure, perform Malfunction 14 (Audible Alarm Does Not Operate).</p> <p>6. If audible alarm operates from low air pressure, notify Field Maintenance.</p> <p>1. Start engine (WP 0018 00, Cold Engine Start).</p> <p>2. Allow engine to run until air tanks are above 75 PSI.</p> <p>3. Check to see if troop transport alarm is audible (WP 0012 00).</p> <p>4. If audible alarm does not operate when troop transport alarm switch is turned on, notify Field Maintenance.</p> <p>Notify Field Maintenance.</p>
<p>16. INSTRUMENT PANEL SWITCH DOES NOT ILLUMINATE</p>		
<p>17. INSTRUMENT PANEL GAGE DOES NOT ILLUMINATE</p>	<p>Check to see if any instrument panel gage illuminates (WP 0018 00).</p>	<p>1. If no instrument panel gage illuminates, perform Malfunction 18 (Auxiliary Panel, Personnel Heater, and Instrument Panel Do Not Illuminate).</p> <p>2. If one instrument panel gage does not illuminate, notify Field Maintenance</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
18. AUXILIARY PANEL, PERSONNEL HEATER, AND INSTRUMENT PANEL DO NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).
	2. Check to see if auxiliary panel, personnel heater, and instrument panel (WP 0018 00).	If auxiliary panel, personnel heater, and instrument panel do not illuminate, notify Field Maintenance.
	3. Check to see if headlights illuminate (WP 0016 00).	If headlights do illuminate, Notify Field Maintenance.
19. AUXILIARY PANEL, SWITCH DOES NOT ILLUMINATE	Check to see if any auxiliary panel switch illuminates (WP 0018 00).	1. If other auxiliary panel switches do not illuminate, perform Malfunction 20 (Auxiliary Panel Does Not Illuminate).
		2. If other auxiliary panel switches illuminate, notify Field Maintenance.
20. AUXILIARY PANEL DOES NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).
	2. Check to see if auxiliary panel illuminates (WP 0018 00).	If auxiliary panel does not illuminate, notify Field Maintenance.
21. COOLANT TEMP INDICATOR DOES NOT ILLUMINATE	1. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 go to test 2 of this malfunction.
		2. If vehicle S/N is not 11,438 to 99,999 go to test 3 of this malfunction.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
21. COOLANT TEMP INDICATOR DOES NOT ILLUMINATE - Continued	2. Check to see if LAMP TEST switch illuminates COOLANT TEMP indicator (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If COOLANT TEMP indicator on lighted indicator display does not illuminate, perform Malfunction 46 (Lamp Test Ground Does Not Operate).</li> <li>2. If COOLANT TEMP indicator on lighted indicator display illuminates, notify Field Maintenance.</li> </ol>
	3. Check to see if LAMP TEST switch illuminates COOLANT TEMP indicator (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If COOLANT TEMP indicator on lighted indicator display does not illuminate, perform MALFUNCTION 173 (Lamp Test Switch Does Not Operate).</li> <li>2. If COOLANT TEMP indicator on lighted indicator display illuminates, go to test 4 of this malfunction.</li> </ol>
	4. Does WATER TEMP gage operate?	<ol style="list-style-type: none"> <li>1. Position master power switch to on (WP 0004 00).</li> <li>2. Check to see if WATER TEMP gage operates.</li> <li>3. Position master power switch to off (WP 0004 00).</li> </ol>
		<ol style="list-style-type: none"> <li>4. If WATER TEMP gage does not operate, perform Malfunction 174 (24 VOLTS Gage, OIL PRESS Gage, WATER TEMP Gage, and Speedometer Do Not Operate).</li> <li>5. If WATER TEMP gage operates, notify Field Maintenance.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
22. COOLANT TEMP INDICATOR ILLUMINATES	Does WATER TEMP gage read below 216°F (102°C) when COOLANT TEMP indicator illuminates?	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Check to see if WATER TEMP gage reads below 216°F (102°C) when COOLANT TEMP Indicator illuminates.</li> <li>3. If WATER TEMP gage reads above 216°F (102°C) when COOLANT TEMP indicator illuminates, perform Cooling System Troubleshooting (WP 0080 00, malfunction 1, Engine Overheats).</li> <li>4. If WATER TEMP gage reads below 216°F (102°C) when COOLANT TEMP indicator illuminates, notify Field Maintenance.</li> <li>5. Shut down engine (WP 0016 00).</li> </ol>
23. CTIS OVERSPEED INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates CTIS OVERSPEED indicator (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If LAMP TEST switch does not illuminates CTIS OVERSPEED indicator, go to test 2 of this malfunction.</li> <li>2. If LAMP TEST switch illuminates CTIS OVERSPEED indicator, notify Field Maintenance.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
23. CTIS OVERSPEED INDICATOR DOES NOT ILLUMINATE - Continued	2. Is vehicle S/N 11,438 to 99,999?	<ol style="list-style-type: none"> <li>1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).</li> <li>2. If vehicle S/N is not 11,438 to 99,999 perform malfunction 173 (Lamp Test Switch Does Not Operate).</li> </ol>
24. CHEMICAL DETECT INDICATOR DOES NOT ILLUMINATE	<ol style="list-style-type: none"> <li>1. Is vehicle S/N 11,438 to 99,999?</li> <li>2. Check to see if LAMP TEST switch illuminates CHEMICAL DETECT indicator (WP 0018 00).</li> </ol>	<ol style="list-style-type: none"> <li>1. If vehicle S/N is 11,438 to 99,999 go to test 2 of this malfunction.</li> <li>2. If vehicle S/N is not 11,438 to 99,999 go to test 4 of this malfunction.</li> <li>1. If LAMP TEST switch does not illuminate CHEMICAL DETECT indicator, perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).</li> <li>2. If LAMP TEST switch illuminates CHEMICAL DETECT indicator, go to test 3 of this malfunction.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

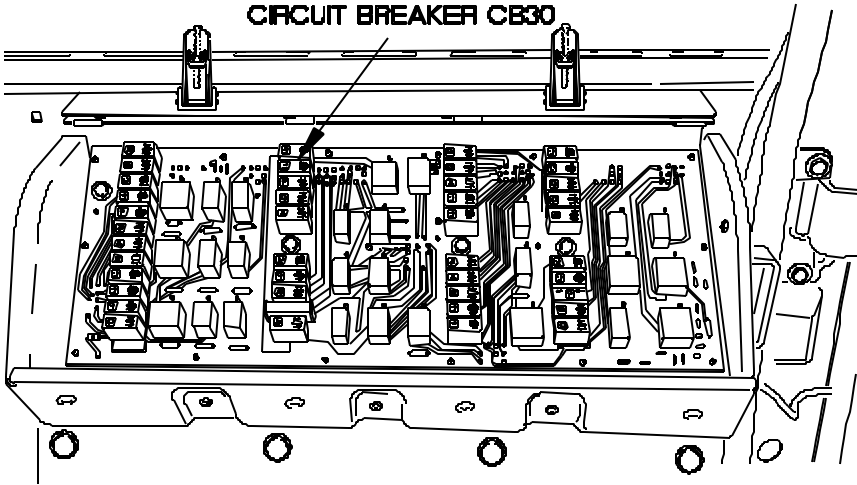
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
24. CHEMICAL DETECT INDICATOR DOES NOT ILLUMINATE - Continued	3. Check circuit breaker CB30 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
		<p data-bbox="1208 1213 1279 1230">6500405-</p> <ol style="list-style-type: none"> <li data-bbox="919 1262 1305 1325">2. If circuit breaker CB30 has tripped, push in to reset.</li> <li data-bbox="919 1346 1305 1409">3. Position master power switch to on (WP 0004 00).</li> <li data-bbox="919 1430 1305 1493">4. Check to see if circuit breaker CB30 has tripped again.</li> <li data-bbox="919 1514 1305 1577">5. Position master power switch to off (WP 0004 00).</li> <li data-bbox="919 1598 1305 1692">6. If circuit breaker CB30 has tripped again, notify Field Maintenance.</li> <li data-bbox="919 1713 1305 1797">7. If circuit breaker CB30 did not trip again, go to test 6 of this malfunction.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
24. CHEMICAL DETECT INDICATOR DOES NOT ILLUMINATE - Continued	4. Check to see if LAMP TEST switch illuminates CHEMICAL DETECT indicator (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If LAMP TEST switch does not illuminate CHEMICAL DETECT indicator, perform Malfunction 173 (Lamp Test Switch Does Not Operate).</li> <li>2. If LAMP TEST switch illuminates CHEMICAL DETECT indicator, go to test 5 of this malfunction.</li> </ol>
	5. Check circuit breaker CB30 in PCB to see if it is tripped.	<ol style="list-style-type: none"> <li>1. Remove PDP cover (WP 0113 00).</li> <li>2. Open PDM 3.</li> </ol>

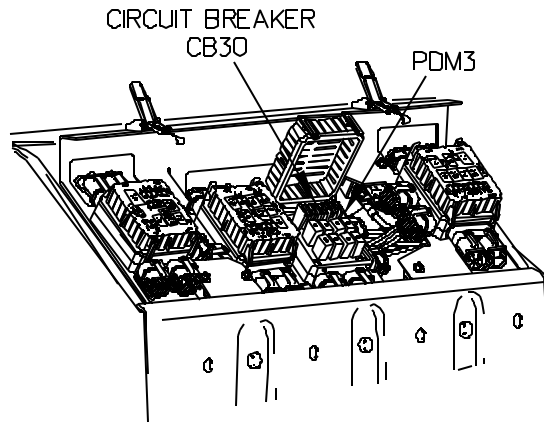

CB30X

3. If circuit breaker CB30 has tripped, push button to reset.
4. Position master power switch to on (WP 0004 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
24. CHEMICAL DETECT INDICATOR DOES NOT ILLUMINATE - Continued		<p>5. Check to see if circuit breaker CB30 has tripped again.</p> <p>6. Position master power switch to off (WP 0004 00).</p> <p>7. If circuit breaker CB30 has tripped again, notify Field Maintenance.</p> <p>8. If circuit breaker CB30 did not trip again, go to test 6 of this malfunction.</p> <p>If CHEMICAL DETECT indicator does not illuminate, notify Field Maintenance.</p>
25. LEFT TURN SIGNAL INDICATOR DOES NOT ILLUMINATE	<p>6. Check to see if CHEMICAL DETECT indicator illuminates (WP 0018 00).</p> <p>1. Check to see if LAMP TEST switch illuminates left turn signal indicator (WP 0018 00).</p> <p>2. Is vehicle S/N 11,438 to 99,999?</p>	<p>1. If LAMP TEST switch does not illuminate left turn signal indicator, go to test 2 of this malfunction.</p> <p>2. If LAMP TEST switch illuminates left turn signal indicator, go to test 3 of this malfunction.</p> <p>1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).</p> <p>2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
25. LEFT TURN SIGNAL INDICATOR DOES NOT ILLUMINATE - Continued	3. Check to see if left turn signal illuminates (WP 0007 00).	1. If left turn signal does not illuminate, perform Malfunction 68 (Front and Rear Turn Signals do Not Illuminate).  2. If left turn signal illuminates, notify Field Maintenance.
26. RIGHT TURN SIGNAL INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates right turn signal indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate right turn signal indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates right turn signal indicator, go to test 3 of this malfunction.
	2. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
	3. Check to see if right turn signal illuminates (WP 0007 00).	1. If right turn signal does not illuminate, perform Malfunction 68 (Front and Rear Turn Signals Do Not Illuminate).  2. If right turn signal illuminates, notify Field Maintenance.



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
27. HIGH BEAM INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates HIGH BEAM indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate HIGH BEAM indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates HIGH BEAM indicator, go to test 3 of this malfunction.
	2. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
	3. Check to see if headlight high beams illuminate (WP 0007 00).	1. If headlight high beams do not illuminate, perform Malfunction 51 (One or Both Headlight High Beams Do Not Illuminate).  2. If headlight high beams illuminate, notify Field Maintenance.
28. PARK BRAKE INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates PARK BRAKE indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate PARK BRAKE indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates PARK BRAKE indicator, notify Field Maintenance.
	2. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
28. PARK BRAKE INDICATOR DOES NOT ILLUMINATE - Continued		2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
29. PTO INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates PTO indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate PTO indicator, go to test 2 of this malfunction.
	2. Is vehicle S/N 11,438 to 99,999?	2. If LAMP TEST switch illuminates PTO indicator, notify Field Maintenance.
		1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).
		2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
30. ENGINE FAN OFF INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates FAN OFF indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate FAN OFF indicator, go to test 2 of this malfunction.
	2. Is vehicle S/N 11,438 to 99,999?	2. If LAMP TEST switch illuminates FAN OFF indicator, notify Field Maintenance.
		1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).
		2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
31. DUMP BODY UP INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates DUMP BODY UP indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate DUMP BODY UP indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates DUMP BODY UP indicator, go to test 3 of this malfunction.
	2. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
	3. Is vehicle S/N 100,001 to 199,999?	1. If vehicle S/N is not 100,001 to 199,999 go to test 4 of this malfunction.  2. If vehicle S/N is 100,001 to 199,999 go to test 5 of this malfunction.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
31. DUMP BODY UP INDICATOR DOES NOT ILLUMINATE - Continued	4. Is circuit breaker CB21 tripped?	1. Remove PDP cover (WP 0113 00).
<div data-bbox="555 693 1031 1037" data-label="Image"> <p>CIRCUIT BREAKER CB21</p> </div>		<p data-bbox="987 1171 1084 1192">Q2E9902</p> <ol style="list-style-type: none"> <li data-bbox="917 1224 1300 1287">2. If circuit breaker CB21 is tripped, push button to reset.</li> <li data-bbox="917 1308 1300 1371">3. Position master power switch to on (WP 0004 00).</li> <li data-bbox="917 1392 1300 1455">4. Check circuit breaker CB21 to see if it is tripped again.</li> <li data-bbox="917 1476 1300 1539">5. Position master power switch to off (WP 0004 00).</li> <li data-bbox="917 1560 1300 1623">6. Install PDP cover (WP 0113 00).</li> <li data-bbox="917 1644 1300 1738">7. If circuit breaker CB21 is tripped, notify Field Maintenance.</li> <li data-bbox="917 1759 1300 1854">8. If circuit breaker CB21 is not tripped, go to test 6 of this malfunction.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
31. DUMP BODY UP INDICATOR DOES NOT ILLUMINATE - Continued	5. Is circuit breaker CB21 tripped?	1. Remove PDP cover (WP 0113 00).  2. Open PDM 2.
<div data-bbox="539 735 755 791" data-label="Text"> <p>COVER REMOVED FOR CLARITY</p> </div> <div data-bbox="500 819 1096 1299" data-label="Image"> </div>		
		3. If circuit breaker CB21 is tripped, push button to reset. 4. Position master power switch to on (WP 0004 00). 5. Check circuit breaker CB21 to see if it is tripped again. 6. Position master power switch to off (WP 0004 00). 7. Close PDM 2. 8. Install PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
31. DUMP BODY UP INDICATOR DOES NOT ILLUMINATE - Continued	6. Does DUMP BODY UP indicator illuminate?	9. If circuit breaker CB21 is tripped, notify Field Maintenance.
		10. If circuit breaker CB21 is not tripped, go to test 6 of this malfunction.
32. TRANS TEMP INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates TRANS TEMP indicator (WP 0018 00).	1. Raise dump body (WP 0031 00).
		2. Check to see if DUMP BODY UP indicator illuminates (WP 0004 00).
		3. Lower dump body (WP 0031 00).
		4. If DUMP BODY UP indicator does not illuminate, notify Field Maintenance.
	2. Is vehicle S/N 11,438 to 99,999?	1. If LAMP TEST switch does not illuminate TRANS TEMP indicator, go to test 2 of this malfunction.
		2. If LAMP TEST switch illuminates TRANS TEMP indicator, notify Field Maintenance.
		1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).
		2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
33. LOW FRONT AIR INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 11,438 TO 18,549)	Check to see if LAMP TEST switch illuminates LOW FRONT AIR indicator (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If LAMP TEST switch does not illuminate LOW FRONT AIR indicator, perform Malfunction 46 (Lamp Test Ground Does Not Operate).</li> <li>2. If LAMP TEST switch illuminates LOW FRONT AIR indicator, notify Field Maintenance.</li> </ol>
34. LOW REAR AIR INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 11,438 TO 18,549)	Check to see if LAMP TEST switch illuminates LOW REAR AIR indicator (WP 0018 00).	<ol style="list-style-type: none"> <li>1. If LAMP TEST switch does not illuminate LOW REAR AIR indicator, perform Malfunction 46 (Lamp Test Ground Does Not Operate).</li> <li>2. If LAMP TEST switch illuminates LOW REAR AIR indicator, notify Field Maintenance.</li> </ol>
35. LOW AIR INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 18,550 TO 199,999)	<ol style="list-style-type: none"> <li>1. Check to see if LAMP TEST switch illuminates LOW AIR indicator (WP 0018 00).</li> <li>2. Is vehicle S/N 18,550 to 99,999?</li> </ol>	<ol style="list-style-type: none"> <li>1. If LAMP TEST switch does not illuminate LOW AIR indicator, go to test 2 of this malfunction.</li> <li>2. If LAMP TEST switch illuminates LOW AIR indicator, notify Field Maintenance.</li> </ol> <ol style="list-style-type: none"> <li>1. If vehicle S/N is 18,550 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).</li> <li>2. If vehicle S/N is not 18,550 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
36. ENGINE OIL PRESSURE / LOW OIL PRESSURE INDICATOR DOES NOT ILLUMINATE	1. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 go to test 2 of this malfunction.  2. If vehicle S/N is not 11,438 to 99,999 go to test 3 of this malfunction.
	2. Check to see if LAMP TEST switch illuminates ENGINE OIL PRESSURE indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate ENGINE OIL PRESSURE indicator, perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If LAMP TEST switch illuminates ENGINE OIL PRESSURE indicator, go to test 4 of this malfunction.
	3. Check to see if LAMP TEST switch illuminates LOW OIL PRESSURE indicator (WP 0018 00).	1. If LAMP TEST switch does not illuminate LOW OIL PRESSURE indicator, perform Malfunction 173 (Lamp Test Switch Does Not Operate).  2. If LAMP TEST switch illuminates LOW OIL PRESSURE indicator, go to test 4 of this malfunction.
	4. Check to see if OIL PRESS gage operates (WP 0018 00).	1. If OIL PRESS gage does not operate, perform Malfunction 11 (Oil Press Gage Does Not Operate Or Is Inaccurate).  2. If OIL PRESS gage operates, notify Field Maintenance.



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
37. ENGINE OIL PRESSURE / LOW OIL PRESSURE INDICATOR ILLUMINATES WHILE ENGINE IS RUNNING / REMAINS ILLUMINATED 10 SECONDS AFTER ENGINE STARTS	1. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 go to test 2 of this malfunction.  2. If vehicle S/N is not 11,438 to 99,999 go to test 3 of this malfunction.
	2. Does engine OIL PRESS gage read greater than 12 PSI while engine is running?	1. Start engine (WP 0018 00). 2. Check to see if engine OIL PRESS gage reads greater than 12 PSI while engine is running (WP 0004 00).  3. Shut down engine (WP 0018 00).  4. If engine OIL PRESS gage reads 12 PSI or less, perform Engine System Troubleshooting (WP 0076 00 Malfunction 3. Low Engine Oil Pressure).  5. If engine OIL PRESS gage reads greater than 12 PSI, notify Field Maintenance.
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Ensure engine oil is cool before performing any maintenance. Failure to comply may result in serious injury to personnel.</b></p>		
	3. Is engine oil at proper level?	1. Pull engine oil dipstick from dipstick tube.  2. Wipe oil dipstick clean.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

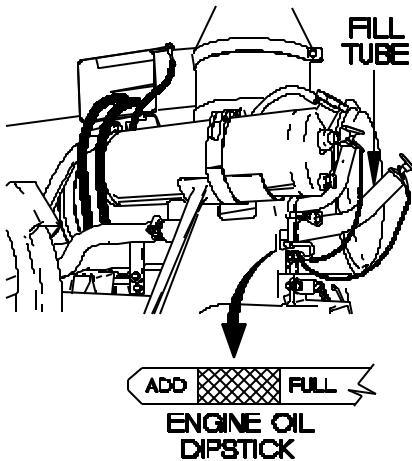MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>37. ENGINE OIL PRESSURE / LOW OIL PRESSURE INDICATOR ILLUMINATES WHILE ENGINE IS RUNNING / REMAINS ILLUMINATED 10 SECONDS AFTER ENGINE STARTS - Continued</p>		<p>3. Reinsert oil dipstick in dipstick tube until fully seated.</p> <p>4. Pull engine oil dipstick from dipstick tube.</p>
	 <p>Q2A0302</p>	<p>5. Reading should be between ADD and FULL markings on dipstick.</p> <p>6. If oil is low, add oil to appropriate level (WP 0103 00).</p> <p>7. Return dipstick to dipstick tube.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
37. ENGINE OIL PRESSURE / LOW OIL PRESSURE INDICATOR ILLUMINATES WHILE ENGINE IS RUNNING / REMAINS ILLUMINATED 10 SECONDS AFTER ENGINE STARTS - Continued		<p>8. If oil level was below the ADD mark, adding oil has significantly changed the known information of the vehicle. Verify the fault still exists and restart troubleshooting if necessary.</p> <p>9. If oil level was already between the ADD and FULL marks, notify Field Maintenance.</p>
38. STOP ENGINE INDICATOR DOES NOT ILLUMINATE	<p>1. Check to see if LAMP TEST switch illuminates STOP ENGINE indicator (WP 0018 00).</p> <p>2. Is vehicle S/N 11,438 to 99,999?</p>	<p>1. If LAMP TEST switch does not illuminate STOP ENGINE indicator, go to test 2 of this malfunction.</p> <p>2. If LAMP TEST switch illuminates STOP ENGINE indicator, notify Field Maintenance.</p> <p>1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).</p> <p>2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).</p>
39. CHECK ENGINE INDICATOR DOES NOT ILLUMINATE	<p>1. Check to see if LAMP TEST switch illuminates CHECK ENGINE indicator (WP 0018 00).</p>	<p>1. If LAMP TEST switch does not illuminate CHECK ENGINE indicator, go to test 2 of this malfunction.</p> <p>2. If LAMP TEST switch illuminates CHECK ENGINE indicator, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
39. CHECK ENGINE INDICATOR DOES NOT ILLUMINATE - Continued	2. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
40. EXHAUST BRAKE INDICATOR DOES NOT ILLUMINATE	1. Does exhaust brake operate?	1. Position master power switch to on (WP 0004 00).  2. Position WARMUP/ OFF/RETARD switch to WARMUP (WP 0004 00).  3. Start engine (WP 0018 00).  4. Check to hear if exhaust brake operates.  5. Shut down engine (WP 0018 00).  6. Position WARMUP/ OFF/RETARD switch to OFF (WP 0004 00).  7. Position master power switch to off (WP 0004 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>40. EXHAUST BRAKE INDICATOR DOES NOT ILLUMINATE - Continued</p>	<p>2. Check to see if LAMP TEST switch illuminates EXHAUST BRAKE indicator (WP 0018 00).</p> <p>3. Is vehicle S/N 11,438 to 99,999?</p>	<p>8. If exhaust brake does not operate, perform Malfunction 110 (Exhaust Brake Does Not Operate).</p> <p>9. If exhaust brake operates, go to test 2 of this malfunction.</p> <p>1. If LAMP TEST switch does not illuminate EXHAUST BRAKE indicator, go to test 3 of this malfunction.</p> <p>2. If LAMP TEST switch illuminates EXHAUST BRAKE indicator, notify Field Maintenance.</p> <p>1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).</p> <p>2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).</p>
<p>41. CHECK TRANS INDICATOR DOES NOT ILLUMINATE</p>	<p>1. Check to see if LAMP TEST switch illuminates CHECK TRANS indicator (WP 0018 00).</p>	<p>1. If LAMP TEST switch does not illuminate CHECK TRANS indicator, go to test 2 of this malfunction.</p> <p>2. If LAMP TEST switch illuminates CHECK TRANS indicator, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
41. CHECK TRANS INDICATOR DOES NOT ILLUMINATE - Continued	2. Is vehicle S/N 11,438 to 99,999?	1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
42. INLET AIR HEATER INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates INLET AIR indicator (WP 0018 00).  2. Is vehicle S/N 11,438 to 99,999?	1. If LAMP TEST switch does not illuminate INLET AIR HEATER indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates INLET AIR HEATER indicator, notify Field Maintenance.  1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
43. ABS INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates ABS indicator (WP 0018 00).  2. Is vehicle S/N 11,438 to 99,999?	1. If LAMP TEST switch does not illuminate ABS indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates ABS indicator, notify Field Maintenance.  1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 45 (Lamp Test 24 VDC Does Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
43. ABS INDICATOR DOES NOT ILLUMINATE - Continued		2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
44. CTIS OFF INDICATOR DOES NOT ILLUMINATE	1. Check to see if LAMP TEST switch illuminates CTIS OFF indicator (WP 0018 00).  2. Is vehicle S/N 11,438 to 99,999?	1. If LAMP TEST switch does not illuminate CTIS OFF indicator, go to test 2 of this malfunction.  2. If LAMP TEST switch illuminates CTIS OFF indicator, notify Field Maintenance.  1. If vehicle S/N is 11,438 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If vehicle S/N is not 11,438 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).
45. LAMP TEST 24 VDC DOES NOT OPERATE	1. Check circuit breaker CB77 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

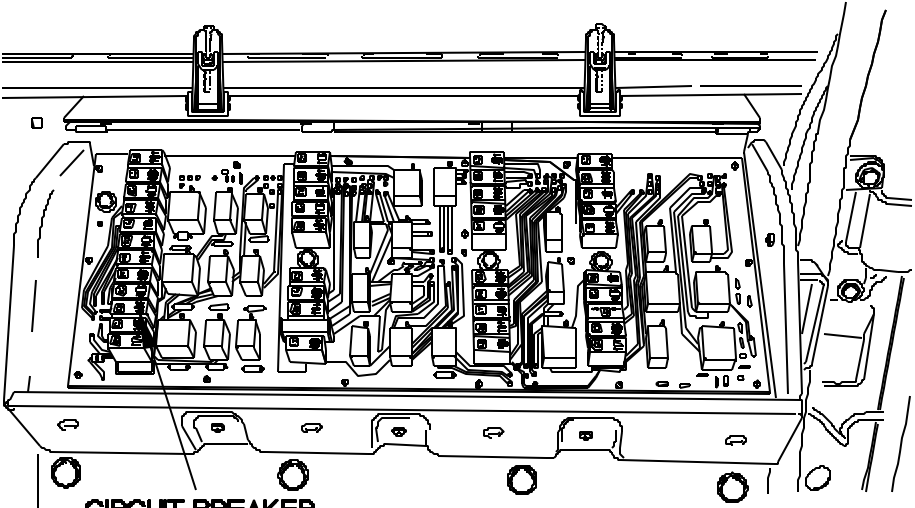MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>45. LAMP TEST 24 VDC DOES NOT OPERATE - Continued</p>		<p>2. If circuit breaker CB77 is tripped, push in to reset.</p>
		
	<p>2. Check to see if lamp test 24 VDC operates (WP 0018 00).</p>	<p>1. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If lamp test 24 VDC does not operate, notify Field Maintenance.</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
46. LAMP TEST GROUND DOES NOT OPERATE (Vehicle S/N 11,438 to 99,999)	1. Do service drive lights illuminate?	1. Position main light switch to SER DRIVE (WP 0004 00).  2. Check to see if service drive lights illuminate.  3. Position main light switch to OFF (WP 0004 00).  2. If service drive lights do not illuminate, perform Malfunction 3 (12 VDC Circuits Do Not Operate (100 AMP Alternator)).  3. If service drive lights illuminate, go to test 2 of this malfunction.
	2. Do stoplights illuminate?	1. Position master power switch to on (WP 0004 00).  <div style="text-align: center;"><b>NOTE</b></div> Lamp test ground and stoplights operate on same circuit.  2. Position main light switch to STOPLIGHT (WP 0004 00).  3. Depress brake pedal.  4. Check to see if stoplights illuminate.  5. Release brake pedal.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
46. LAMP TEST GROUND DOES NOT OPERATE (Vehicle S/N 11,438 to 99,999) - Continued		6. Position main light switch to OFF (WP 0004 00).  7. Position master power switch to off (WP 0004 00).  8. If stoplights do not illuminate, perform Malfunction 168 (Stoplights and !2 VDC Indicator Panel Circuits Do Not Operate).  9. If stoplights illuminate, notify Field Maintenance.
47. CHARGING SYSTEM INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 18,550 OR HIGHER).	1. Is vehicle S/N 18,550 to 99,999?  2. Check to see if LAMP TEST switch illuminates CHARGING SYSTEM indicator (WP 0019 00).	1. If vehicle S/N is 18,550 to 99,999 go to test 2 of this malfunction.  2. If vehicle S/N is not 18,550 to 99,999 go to test 3 of this malfunction.  1. If CHARGING SYSTEM indicator does not illuminate, perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If CHARGING SYSTEM indicator illuminates, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
47. CHARGING SYSTEM INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 18,550 OR HIGHER). - Continued	3. Check to see if LAMP TEST switch illuminates NO CHARGE indicator (WP 0019 00).	1. If NO CHARGE indicator does not illuminate, perform Malfunction 173 (Lamp Test Switch Does Not Illuminate).  2. If NO CHARGE indicator illuminates, notify field maintenance.
48. BATTERY DISCONN INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 18,550 OR HIGHER).	1. Check to see if LAMP TEST switch illuminates BATTERY DISCONN indicator (WP 0019 00).  2. Is vehicle S/N 18,550 to 99,999?	1. If BATTERY DISCONN indicator does not illuminate, go to test 2 of this malfunction.  2. If BATTERY DISCONN indicator illuminates, notify Field Maintenance.  1. If vehicle is S/N is 18,550 to 99,999 perform Malfunction 46 (Lamp Test Ground Does Not Operate).  2. If vehicle S/N is not 18,550 to 99,999 perform Malfunction 173 (Lamp Test Switch Does Not Operate).  Notify Field Maintenance.
49. ONE OR BOTH HEADLIGHTS (HIGH AND LOW BEAMS) DO NOT ILLUMINATE	Check to see if headlights illuminate (WP 0018 00).	
50. ONE OR BOTH HEADLIGHT LOW BEAMS DO NOT ILLUMINATE	1. Check to see if headlight high beams illuminate (WP 0018 00).	If headlight high beams do not illuminate, Malfunction 49 (One Or Both Headlight Beams [High And Low Beams] Do Not Illuminate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
50. ONE OR BOTH HEADLIGHT LOW BEAMS DO NOT ILLUMINATE - Continued	2. Check to see if one or both headlight low beams illuminate (WP 0018 00)	If headlight low beams do not illuminate, notify Field Maintenance.
51. ONE OR BOTH HEADLIGHT HIGH BEAMS DO NOT ILLUMINATE	1. Check to see if one or both headlight low beams illuminate (WP 0018 00).	If headlight low beams do not illuminate, perform Malfunction 49 (One Or Both Headlight Beams [High And Low Beams] Do Not Illuminate).
	2. Check to see if one or both headlight high beams illuminate (WP 0007 00).	If headlight high beams do not illuminate, notify Field Maintenance.
52. PARKING LIGHTS DO NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).
	2. Check to see if turn signals illuminate (WP 0007 00).	If turn signals do not illuminate, perform Malfunction 58 (One Or Both Composite Taillights Do Not Illuminate).
	3. Check circuit breaker CB65 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
52. PARKING LIGHTS DO NOT ILLUMINATE - Continued		2. If circuit breaker is tripped, push in to reset.
<div data-bbox="414 688 1242 1150" data-label="Image"> </div> <div data-bbox="711 1161 945 1218" data-label="Caption"> <p><b>CIRCUIT BREAKER CB65</b></p> </div> <div data-bbox="1209 1213 1279 1230" data-label="Text"> <p>7600810-</p> </div>		
	4. Check to see if parking lights illuminate (WP 0018 00).	3. Position main light switch to SER DRIVE (WP 0004 00).  4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.  5. Position main light switch to OFF (WP 0004 00).  6. Install PDP cover (WP 0113 00).  If parking lights do not illuminate, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
53. LH DOOR AND/OR LH FRONT MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if other marker lights illuminate (WP 0018 00).	If other marker lights do not illuminate, perform Malfunction 57 (All Front and/or Rear Marker Lights Do Not Illuminate In Normal Mode).
	2. Check to see if LH door and/or LH front marker lights illuminate (WP 0018 00).	If LH door and/or LH front marker lights do not illuminate, notify Field Maintenance.
54. RH DOOR AND/OR RH FRONT MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if other marker lights illuminate (WP 0018 00).	If other marker lights do not illuminate, perform Malfunction 57 (All Front and/or Rear Marker Lights Do Not Illuminate In Normal Mode).
	2. Check to see if RH door and/or RH front marker lights illuminate (WP 0018 00).	If RH door and/or RH front marker lights do not illuminate, notify Field Maintenance.
55. ONE OR MORE CAB TOP MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if other marker lights illuminate (WP 0018 00).	If other marker lights do not illuminate, perform Malfunction 57 (All Front and/or Rear Marker Lights Do Not Illuminate In Normal Mode).
	2. Check to see if cab top marker lights illuminate (WP 0018 00).	If cab top marker lights do not illuminate, notify Field Maintenance.
56. SIDE AND/OR REAR MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if other marker lights illuminate (WP 0018 00).	If other marker lights do not illuminate, Malfunction 57 (All Front and/or Rear Marker Lights Do Not Illuminate In Normal Mode).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
56. SIDE AND/OR REAR MARKER LIGHTS DO NOT ILLUMINATE - Continued	2. Check to see if side and/or rear marker lights illuminate (WP 0018 00).	If side and/or rear marker lights do not illuminate, notify Field Maintenance.
57. ALL FRONT AND/OR REAR MARKER LIGHTS DO NOT ILLUMINATE IN NORMAL MODE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).
	2. Check to see if rear marker lights illuminate (WP 0018 00).	If rear marker lights do not illuminate, check to see if front marker lights illuminate.
	3. Check circuit breaker CB67 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

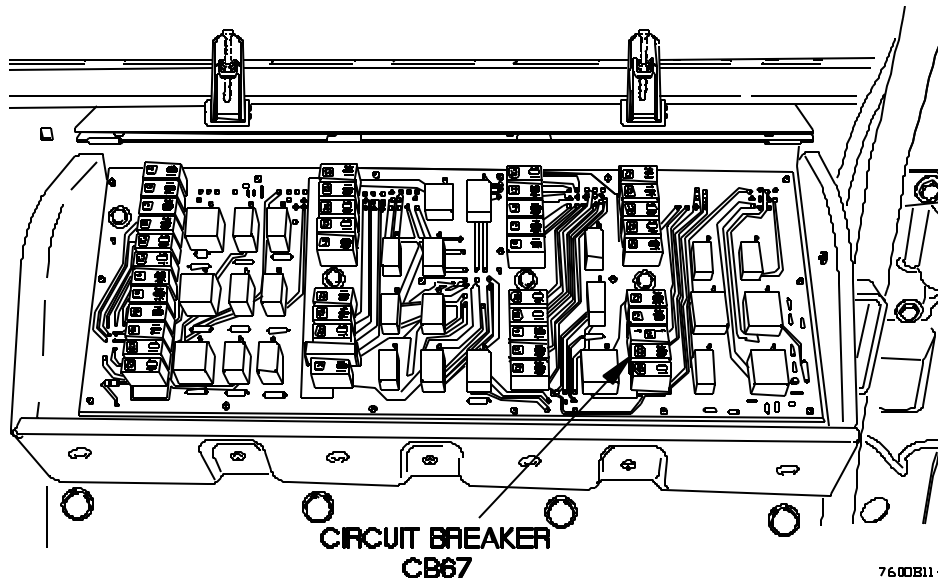

7600811 -

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>57. ALL FRONT AND/OR REAR MARKER LIGHTS DO NOT ILLUMINATE IN NORMAL MODE - Continued</p>	<p>4. Check to see if front marker lights illuminate (WP 0018 00, Operating Vehicle Lights).</p>	<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>7. Perform step 6 of this malfunction to check if the marker lights illuminate.</p> <p>If front marker lights illuminate, perform step 5 of this malfunction. If rear marker lights do not illuminate, perform step 6 of this malfunction.</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

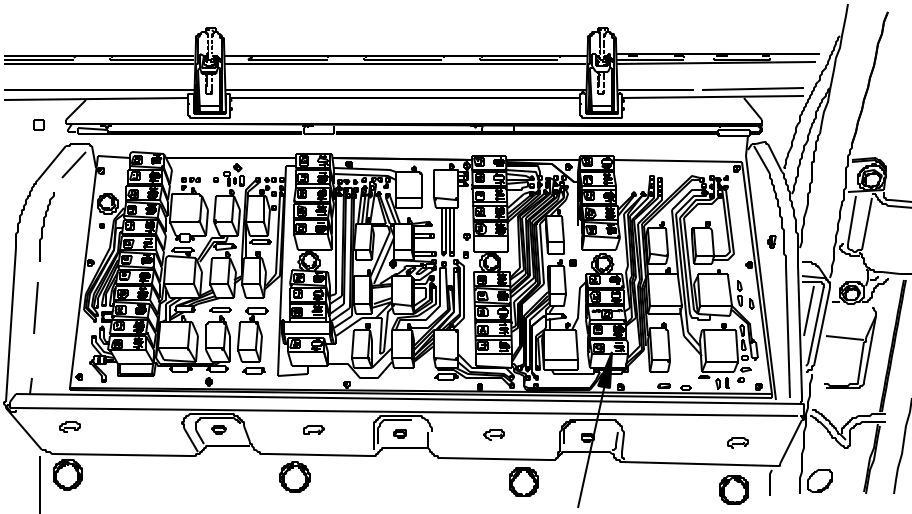MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
57. ALL FRONT AND/OR REAR MARKER LIGHTS DO NOT ILLUMINATE IN NORMAL MODE - Continued	5. Check circuit breaker CB80 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
 <p data-bbox="829 1268 1057 1318"><b>CIRCUIT BREAKER CB80</b></p> <p data-bbox="1208 1308 1281 1325">7600812-</p>		
		<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p>


**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
57. ALL FRONT AND/OR REAR MARKER LIGHTS DO NOT ILLUMINATE IN NORMAL MODE - Continued	6. Check to see if marker lights illuminate (WP 0018 00).	If marker lights do not illuminate, notify Field Maintenance.
58. ONE OR BOTH COMPOSITE TAILLIGHTS DO NOT ILLUMINATE	1. Check to see if front marker lights illuminate (WP 0018 00).	If front marker lights do not illuminate, perform Malfunction 57 (All Front and/or Rear Marker Lights Do Not Illuminate In Normal Mode).
	2. Check to see if left and right rear marker lights illuminate (WP 0018 00).	If left and right rear marker lights do not illuminate, perform Malfunction 56 (Side And/Or Rear Marker Lights Do Not Illuminate).
	3. Check to see if one or both composite taillights illuminate (WP 0018 00).	If one or both composite taillights do not illuminate, notify Field Maintenance.
59. ONE OR BOTH FRONT BLACKOUT MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if rear blackout marker lights illuminate (WP 0018 00).	If rear blackout marker lights do not illuminate, perform Malfunction 62 (All Blackout Drive Lights Do Not Illuminate).
	2. Check to see if front blackout marker lights illuminate (WP 0018 00).	If front blackout marker lights do not illuminate, notify Field Maintenance.
60. BLACKOUT DRIVE LIGHT DOES NOT ILLUMINATE	1. Check to see if blackout marker lights illuminate (WP 0018 00).	If blackout marker lights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

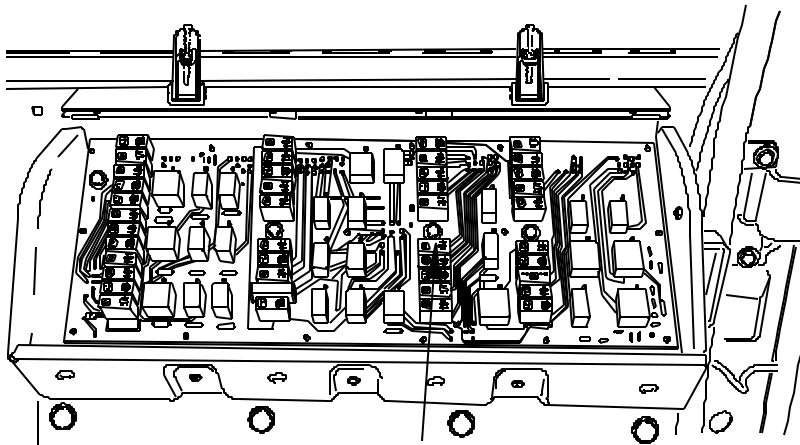MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
60 BLACKOUT DRIVE LIGHT DOES NOT ILLUMINATE - Continued	2. Check circuit breaker CB54 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
<div><p>CIRCUIT BREAKER CB54</p><p>7600813-</p></div>		
	3. Check to see if blackout drive light illuminates (WP 0018 00).	<div>2. If circuit breaker is tripped, push in to reset.</div> <div>3. Position main light switch to BO DRIVE (WP 0004 00).</div> <div>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</div> <div>5. Position main light switch to OFF (WP 0004 00).</div> <div>6. Install PDP cover (WP 0113 00).</div> <div>If blackout drive light does not illuminate, notify Field Maintenance.</div>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
61. ONE OR BOTH REAR BLACKOUT MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if front blackout marker lights illuminate (WP 0018 00).	If front blackout marker lights do not illuminate, perform Malfunction 62 (All Blackout Marker Lights Do Not Illuminate).
	2. Check to see if rear blackout marker lights illuminate (WP 0018 00).	If rear blackout marker lights do not illuminate, notify Field Maintenance.
62. ALL BLACKOUT MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if WTEC III TPSS dims in blackout mode (WP 0018 00).	If WTEC III TPSS does not dim in blackout mode, perform Malfunction 65 (Blackout Markers Do Not Illuminate And/Or WTEC III Transmission Pushbutton Shift Selector [TPSS] Does Not Dim).
	2. Check to see if blackout marker lights illuminate (WP 0018 00).	If blackout marker lights do not illuminate, notify Field Maintenance.
63. AMBER WARNING LIGHT DOES NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).
	2. Check circuit breaker CB38 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>63. AMBER WARNING LIGHT DOES NOT ILLUMINATE - Continued</p>		<p>2. If circuit breaker CB38 is tripped, push in to reset.</p>
<div data-bbox="394 674 1222 1136"> </div> <p data-bbox="711 1146 943 1203" style="text-align: center;"><b>CIRCUIT BREAKER CB38</b></p>		
	<p>3. Check to see if amber warning light illuminates.</p>	<p>7600814 -</p> <p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>1. Position main light switch to SER DRIVE (WP 0004 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
63. AMBER WARNING LIGHT DOES NOT ILLUMINATE - Continued		2. Position warning light switch to on (WP 0004 00).  3. Check to see if amber warning light illuminates.  4. Position amber warning light switch to off (WP 0004 00).  5. Position amber main light switch to OFF (WP 0004 00).  6. If amber warning light does not illuminate, notify Field Maintenance.
64. BACKUP LIGHT DOES NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	1. If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).  2. Remove PDP cover (WP 0113 00).

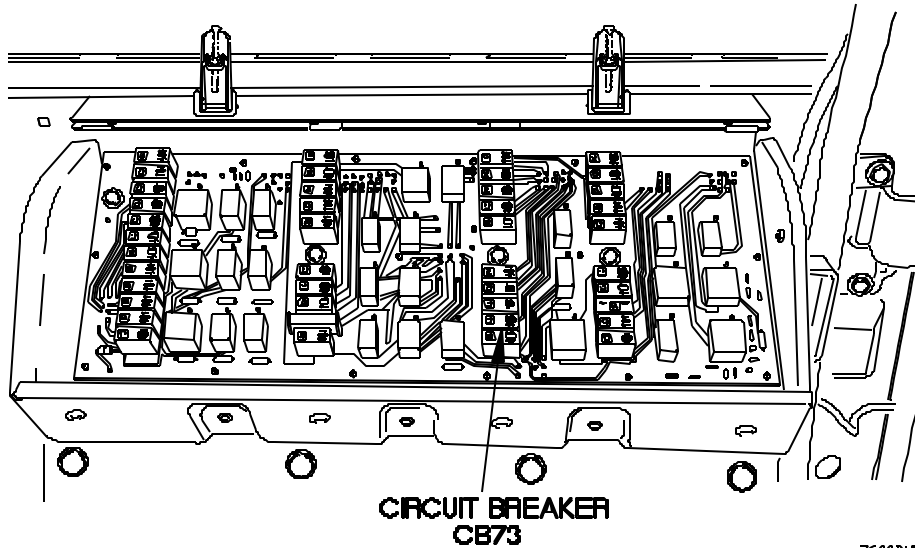

7600815-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>64. BACKUP LIGHT DOES NOT ILLUMINATE - Continued</p>	<p>2. Check to see if backup light illuminates (WP 0018 00).</p>	<p>3. If circuit breaker is tripped, push in to reset.</p> <p>4. Position main light switch to SER DRIVE (WP 0004 00)</p> <p>5. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>6. Position main light switch to OFF (WP 0004 00).</p> <p>7. Install PDP cover (WP 0113 00).</p> <p>If backup light does not illuminate, notify Field Maintenance.</p>
<p>65. BLACKOUT MARKER LIGHTS DO NOT ILLUMINATE AND/OR WTEC III TRANSMISSION PUSHBUTTON SHIFT SELECTOR (TPSS) DOES NOT DIM</p>	<p>1. Check circuit breaker CB66 in PCB to see if it is tripped.</p>	<p>1. Remove PDP cover (WP 0113 00).</p> <p>2. If circuit breaker is tripped, push in to reset.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>65. BLACKOUT MARKER LIGHTS DO NOT ILLUMINATE AND/OR WTEC III TRANSMISSION PUSHBUTTON SHIFT SELECTOR (TPSS) DOES NOT DIM - Continued</p>	<p>2. Check to see if blackout drive light operates (WP 0018 00).</p>	<p>1. If blackout drive light does not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).</p>
<div data-bbox="402 863 1230 1325"> </div> <p data-bbox="721 1335 951 1388" style="text-align: center;"><b>CIRCUIT BREAKER CB38</b></p> <p data-bbox="1208 1402 1279 1419" style="text-align: right;">7600816-</p>		
		<p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
65. BLACKOUT MARKER LIGHTS DO NOT ILLUMINATE AND/OR WTEC III TRANSMISSION PUSHBUTTON SHIFT SELECTOR (TPSS) DOES NOT DIM - Continued	3. Check to see if blackout marker lights illuminate and WTEC III TPSS dims (WP 0018 00).	6. Install PDP cover (WP 0113 00).  If blackout marker lights do not illuminate or WTEC III TPSS does not dim, notify Field Maintenance.
66. REAR HAZARD LIGHTS DO NOT ILLUMINATE	1. Check to see if front hazard lights illuminate (WP 0018 00).  2. Check to see if stoplights illuminate (WP 0018 00).  3. Check to see if rear hazard lights operate (WP 0018 00).	If front hazard lights do not illuminate, perform Malfunction 67 (Front And Rear Hazard Lights Do Not Illuminate).  If stoplights do not illuminate, perform Malfunction 70 (One Or Both Stoplights Do Not Illuminate).  If rear hazard lights do not operate, notify Field Maintenance.
67. FRONT AND REAR HAZARD LIGHTS DO NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
67. FRONT AND REAR HAZARD LIGHTS DO NOT ILLUMINATE - Continued	<ol style="list-style-type: none"> <li>2. Check to see if front turn signals illuminate (WP 0007 00).</li> <li>3. Check to see if front and rear hazard lights illuminate (WP 0018 00).</li> </ol>	<p>If front turn signals do not illuminate, perform Malfunction 69 (Left Or Right Turn Signal Does Not Illuminate).</p> <p>If front and rear hazard lights do not illuminate, notify Field Maintenance.</p>
68. FRONT AND REAR TURN SIGNALS DO NOT ILLUMINATE	<ol style="list-style-type: none"> <li>1. Check to see if headlights illuminate (WP 0018 00).</li> <li>2. Check to see if stoplights illuminate (WP 0018 00).</li> <li>3. Check circuit breaker CB74 in PCB to see if it is tripped.</li> </ol>	<p>If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).</p> <p>If stoplights do not illuminate, perform Malfunction 70 (One Or Both Stoplights Do Not Illuminate).</p> <ol style="list-style-type: none"> <li>1. Remove PDP cover (WP 0113 00).</li> </ol>

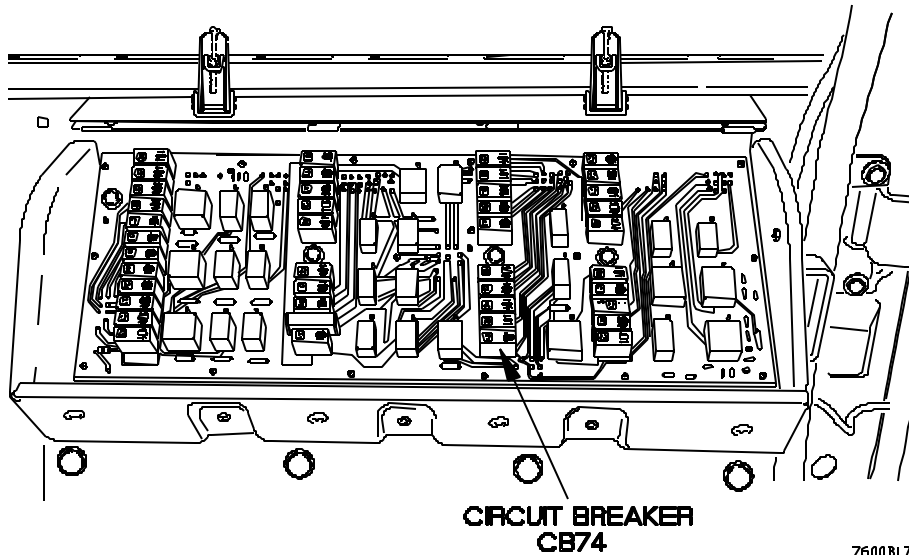

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
68. FRONT AND REAR TURN SIGNALS DO NOT ILLUMINATE - Continued		<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position main light switch to SER DRIVE (WP 0004 00)</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, Notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p>
	4. Check to see if front and rear turn signals illuminate (WP 0007 00).	If front and rear turn signals do not illuminate, notify Field Maintenance.
69. LEFT OR RIGHT FRONT TURN SIGNAL DOES NOT ILLUMINATE	1. Check to see if rear turn signals illuminate (WP 0007 00).	If rear turn signals do not illuminate, perform Malfunction 68 (Front And Rear Turn Signals Do Not Illuminate).
	2. Check to see if left and right front turn signals illuminate (WP 0007 00).	If left and right front turn signals do not illuminate, notify Field Maintenance.
70. ONE OR BOTH STOPLIGHTS DO NOT ILLUMINATE	1. Check to see if blackout stoplights illuminate (WP 0018 00).	If blackout stoplights do not illuminate, perform Malfunction 72 (Stoplights And Blackout Stoplights Do Not Illuminate).

# **ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

## **ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

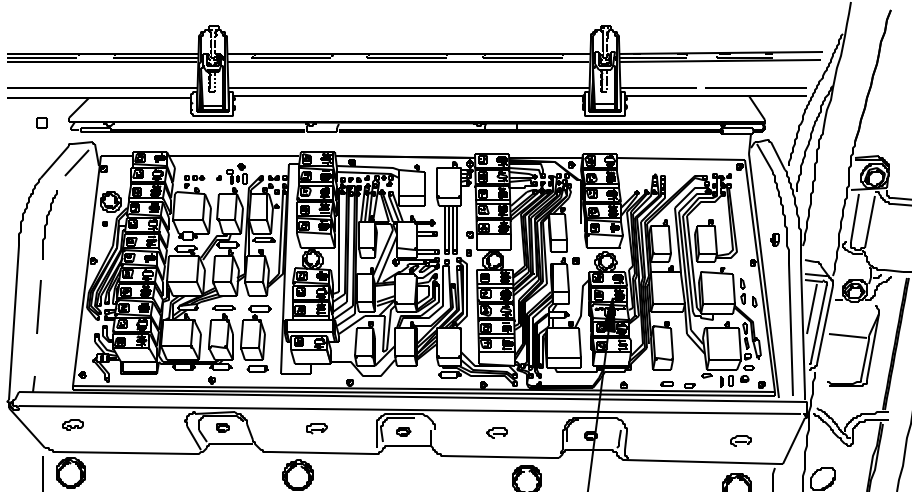MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>70. ONE OR BOTH STOPLIGHTS DO NOT ILLUMINATE - Continued</p>	<p>2. Check to see if one stoplight illuminates (WP 0018 00).</p> <p>3. Check circuit breaker CB71 in PCB to see if it is tripped</p>	<p>If one stoplight illuminates, notify Field Maintenance.</p> <p>1. Remove PDP cover (WP 0113 00).</p>
	<div data-bbox="360 772 1266 1339">  <p data-bbox="824 1276 1052 1339"><b>CIRCUIT BREAKER CB71</b></p> <p data-bbox="1209 1327 1279 1339">7600818-</p> </div>	<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
70. ONE OR BOTH STOPLIGHTS DO NOT ILLUMINATE - Continued	4. Check to see if stoplights illuminate (WP 0018 00).	6. Install PDP cover (WP 0113 00).  If one or both stoplights do not illuminate, notify Field Maintenance.
71. ONE OR BOTH BLACKOUT STOPLIGHTS DO NOT ILLUMINATE	1. Check to see if stoplights illuminate in normal mode (WP 0018 00).  2. Check to see if one or both blackout stoplights illuminate (WP 0018 00)	If stoplights do not illuminate in normal mode, perform Malfunction 72 (Stoplights And Blackout Stoplights Do Not Illuminate).  If one or both blackout stoplights do not illuminate, notify Field Maintenance.
72. STOPLIGHTS AND BLACKOUT STOPLIGHTS DO NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

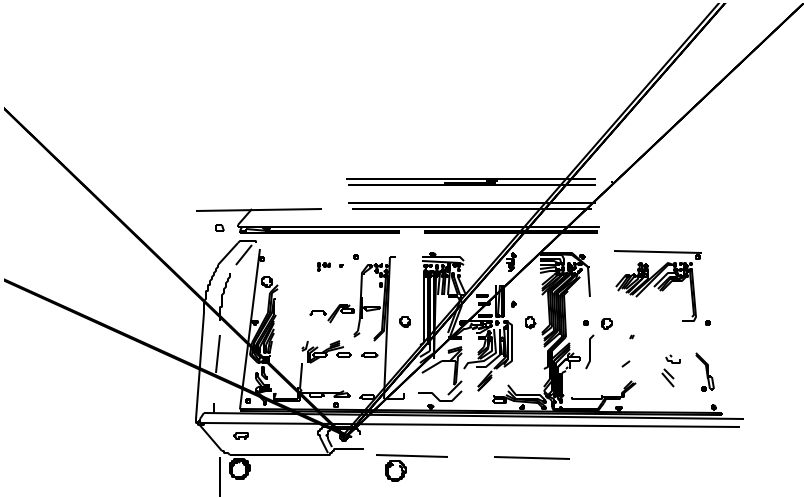MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>72. STOPLIGHTS AND BLACKOUT STOPLIGHTS DO NOT ILLUMINATE - Continued</p>	<p>2. Check circuit breaker CB76 in PCB to see if it is tripped.</p>	<p>1. Remove PDP cover (WP 0113 00).</p>
		<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
72. STOPLIGHTS AND BLACKOUT STOPLIGHTS DO NOT ILLUMINATE - Continued	3. Check to see if stoplights and blackout stoplights illuminate (WP 0018 00).	If stoplights and blackout stoplights do not operate, notify Field Maintenance.
73. TRAILER MARKER/ TAILLIGHTS DO NOT ILLUMINATE	1. Check to see if towing vehicle marker lights illuminate (WP 0018 00).  2. Check circuit breaker CB41 in PCB to see if it is tripped	If towing vehicle marker lights do not operate, perform Malfunction 57 (All Front and/or Rear Marker Lights Do Not Illuminate In Normal Mode).  1. Remove PDP cover (WP 0113 00).

**CIRCUIT BREAKER  
CB41**

7600820-

		2. If circuit breaker is tripped, push in to reset.  3. Position master power switch to on (WP 0004 00).
--	--	--

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
73. TRAILER MARKER/ TAILLIGHTS DO NOT ILLUMINATE - Continued		<p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, Notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If trailer marker/taillights do not operate, notify Field Maintenance.</p>
74. TRAILER RIGHT STOP/TURN LIGHT DOES NOT ILLUMINATE	<p>3. Check to see if trailer marker/ taillights operate (WP 0018 00).</p> <p>1. Check to see if towing vehicle right stoplight illuminates (WP 0018 00).</p> <p>2. Check to see if trailer left stop/turn light illuminates (WP 0018 00).</p> <p>3. Check to see if trailer right stop/turn light illuminates (WP 0018 00).</p>	<p>If towing vehicle right stoplight does not operate, perform Malfunction 70 (One Or Both Stoplights Do Not Illuminate).</p> <p>If trailer left stop/turn light does not illuminate, perform Malfunction 76 (Both Trailer Stop/Turn Lights Do Not Illuminate).</p> <p>If trailer right stop/turn light does not illuminate, notify Field Maintenance.</p>
75. TRAILER LEFT STOP/TURN LIGHT DOES NOT ILLUMINATE	<p>1. Check to see if towing vehicle left stoplight illuminates (WP 0018 00).</p> <p>2. Check to see if trailer right stop/turn light illuminates (WP 0018 00).</p>	<p>If towing vehicle left stoplight does not illuminate, perform Malfunction 70 (One Or Both Stoplights Do Not Illuminate).</p> <p>If trailer right stop/turn light does not illuminate, perform Malfunction 76 (Both Trailer Stop/Turn Lights Do Not Illuminate).</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

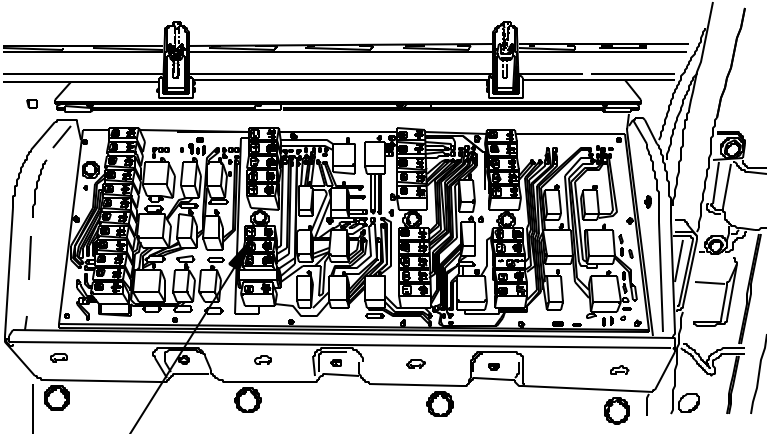MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
75. TRAILER LEFT STOP/TURN LIGHT DOES NOT ILLUMINATE - Continued	3. Check to see if trailer left stop/turn light illuminates (WP 0018 00).	If trailer left stop/turn light does not illuminate, notify Field Maintenance.
76. BOTH TRAILER STOP/TURN LIGHTS DO NOT ILLUMINATE	1. Check circuit breaker CB44 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
 <p><b>CIRCUIT BREAKER CB44</b></p>		<p>7600 821 -</p> <ol style="list-style-type: none"> <li>2. If circuit breaker is tripped, push in to reset.</li> <li>3. Position main light switch to SER DRIVE (WP 0004 00)</li> <li>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</li> <li>5. Position main light switch to OFF (WP 0004 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

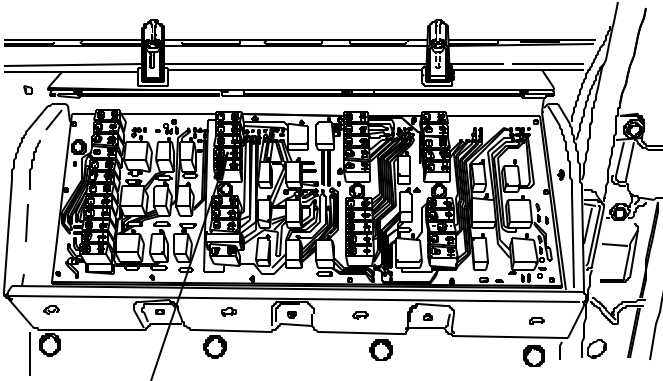MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
76. BOTH TRAILER STOP/TURN LIGHTS DO NOT ILLUMINATE - Continued	2. Check to see if trailer stop/turn lights illuminate (WP 0018 00).	6. Install PDP cover (WP 0113 00).  If trailer stop/turn lights do not illuminate, notify Field Maintenance.
77. TRAILER BLACK-OUT MARKER LIGHTS DO NOT ILLUMINATE	1. Check to see if towing vehicle blackout marker lights illuminate (WP 0018 00).  2. Check circuit breaker CB41 in PCB to see if it is tripped	If towing vehicle blackout marker lights do not illuminate, perform Malfunction 62 (All Blackout Marker Lights Do Not Illuminate).  1. Remove PDP cover (WP 0113 00).
	 <p data-bbox="527 1528 831 1558"><b>CIRCUIT BREAKER CB41</b></p>	<p data-bbox="1209 1543 1279 1558">7600822-</p> <p data-bbox="917 1585 1274 1648">2. If circuit breaker is tripped, push in to reset.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
77. TRAILER BLACK- OUT MARKER LIGHTS DO NOT ILLUMINATE - Continued	3. Check to see if trailer blackout marker lights illuminate (WP 0018 00).	3. Position master power switch to on (WP 0004 00).  4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, Notify Field Maintenance.  5. Position master power switch to off (WP 0004 00).  6. Install PDP cover (WP 0113 00).  If trailer blackout marker lights do not illuminate, notify Field Maintenance.
78. TRAILER BLACKOUT STOPLIGHTS DO NOT ILLUMINATE	1. Check to see if towing vehicle blackout stoplights illuminate (WP 0018 00).	If towing vehicle blackout stoplights do not illuminate, perform Malfunction 61 (One Or Both Rear Blackout Stoplights Do Not Illuminate).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>78. TRAILER BLACKOUT STOPLIGHTS DO NOT ILLUMINATE - Continued</p>	<p>2. Check circuit breaker CB39 in PCB to see if it is tripped</p>	<p>1. Remove PDP cover (WP 0113 00).</p>
<div data-bbox="365 693 1274 1197"> </div> <div data-bbox="462 1207 698 1260"> <p><b>CIRCUIT BREAKER CB39</b></p> </div> <div data-bbox="1201 1239 1282 1270"> <p>7600823-</p> </div>		
		<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, Notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
78. TRAILER BLACKOUT STOPLIGHTS DO NOT ILLUMINATE - Continued	3. Check to see if trailer blackout stoplights illuminate (WP 0018 00).	If trailer blackout stoplights do not illuminate, notify Field Maintenance.
79. INTERVEHICULAR CLEARANCE LIGHTS DO NOT ILLUMINATE	1. Check to see if towing vehicle clearance lights illuminate (WP 0018 00).  2. Check to see if intervehicular clearance lights illuminate (WP 0018 00).	If towing vehicle clearance lights do not illuminate, perform Malfunction 56 (Side And/Or Rear Marker Lights Do Not Illuminate).  If intervehicular clearance lights do not illuminate, notify Field Maintenance.
80. INTERVEHICULAR LEFT TURN SIGNAL DOES NOT ILLUMINATE	1. Check to see if towing vehicle left turn signal illuminates (WP 0007 00).  2. Check to see if intervehicular left turn signal illuminates (WP 0007 00).	If towing vehicle left turn signal does not illuminate, perform Malfunction 68 (Front And Rear Turn Signals Do Not Illuminate).  If intervehicular left turn signal does not illuminate, notify Field Maintenance.
81. INTERVEHICULAR RIGHT TURN SIGNAL DOES NOT ILLUMINATE	1. Check to see if towing vehicle right turn signal illuminates (WP 0007 00).  2. Check to see if intervehicular right turn signal illuminates (WP 0007 00).	If towing vehicle right turn signal does not illuminate, perform Malfunction 68 (Front And Rear Turn Signals Do Not Illuminate).  If intervehicular right turn signal does not illuminate, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
82. INTERVEHICULAR STOPLIGHTS DO NOT ILLUMINATE	1. Check to see if towing vehicle stoplights illuminate (WP 0018 00).	If towing vehicle stoplights do not illuminate, perform Malfunction 70 (One Or Both Stoplights Do Not Illuminate).
	2. Check to see if intervehicular stoplights illuminate (WP 0018 00).	If intervehicular stoplights do not illuminate, notify Field Maintenance.
83. INTERVEHICULAR TAILLIGHTS DO NOT ILLUMINATE	1. Check to see if towing vehicle taillights illuminate (WP 0018 00).	If towing vehicle taillights do not illuminate, perform Malfunction 58 (One Or Both Composite Taillights Do Not Illuminate).
	2. Check to see if intervehicular taillights illuminate (WP 0018 00).	If intervehicular taillights do not illuminate, notify Field Maintenance.
84. PERSONNEL HEATER CONTROL DOES NOT ILLUMINATE	1. Check to see if headlights illuminate (WP 0018 00, Operating Vehicle Lights).	If headlights do not illuminate, perform Malfunction 162 (All Main Light Switch Functions Do Not Operate).
	2. Check to see if personnel heater control illuminates (WP 0006 00).	If personnel heater control does not illuminate, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

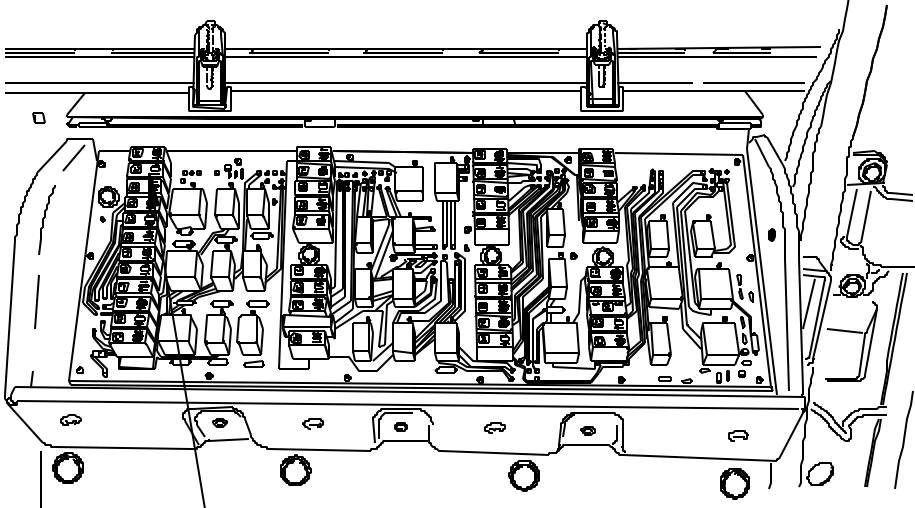MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
85. PERSONNEL HEATER FAN DOES NOT OPERATE	1. Check circuit breaker CB23 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
 <p data-bbox="459 1150 695 1203">CIRCUIT BREAKER CB23</p>		<p data-bbox="1206 1182 1279 1197">7600824 -</p> <ol style="list-style-type: none"> <li data-bbox="914 1224 1323 1297">2. If circuit breaker is tripped, push in to reset.</li> <li data-bbox="914 1308 1323 1381">3. Position master power switch to on (WP 0004 00).</li> <li data-bbox="914 1392 1323 1560">4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</li> <li data-bbox="914 1570 1323 1644">5. Position master power switch to off (WP 0004 00).</li> <li data-bbox="914 1654 1323 1728">6. Install PDP cover (WP 0113 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
85. PERSONNEL HEATER FAN DOES NOT OPERATE - Continued	2. Check to see if personnel heater fan operates (WP 0018 00).	If personnel heater fan does not operate, notify Field Maintenance.
86. WINDSHIELD WASHER DOES NOT OPERATE	1. Check to see if horn operates (WP 0007 00).	If horn does not operate, perform Malfunction 92 (Horn, Windshield Wipers, And Windshield Washer Do Not Operate).
	2. Check to see if windshield washer operates (WP 0007 00).	If windshield washer does not operate, notify Field Maintenance.
87. WINDSHIELD WIPER DOES NOT OPERATE ON LOW SPEED	1. Check to see if windshield wiper operates on high speed (WP 0007 00).	If windshield wiper does not operate on high speed, perform Malfunction 82 (All Windshield Wiper Speeds Do Not Operate).
	2. Check to see if windshield wiper operates on low speed (WP 0007 00).	If windshield wiper does not operate on low speed, notify Field Maintenance.
88. ALL WINDSHIELD WIPER SPEEDS DO NOT OPERATE	1. Check to see if horn operates (WP 0007 00).	If horn does not operate, perform Malfunction 92 (Horn, Windshield Wipers, And Windshield Washer Do Not Operate).
	2. Check to see if all windshield wiper speeds operate (WP 0007 00).	If all windshield wiper speeds do not operate, notify Field Maintenance.



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
89. WINDSHIELD WIPER DOES NOT OPERATE ON INTERMITTENT SPEED	1. Check to see if windshield wiper operates on low speed (WP 0007 00).	If windshield wiper does not operate on low speed, perform Malfunction 87 (All Windshield Wiper Does Not Operate On Low Speed).
	2. Check to see if windshield wiper operates on intermittent speed (WP 0007 00).	If windshield wiper does not operate on intermittent speed, notify Field Maintenance.
90. WINDSHIELD WIPER DOES NOT OPERATE ON HIGH SPEED	1. Check to see if windshield wiper operates on low speed (WP 0007 00).	If windshield wiper does not operate on low speed, perform Malfunction 88 (All Windshield Wiper Speeds Do Not Operate).
	2. Check to see if windshield wiper operates on high speed (WP 0007 00).	If windshield wiper does not operate on high speed, notify Field Maintenance.
91. HORN DOES NOT OPERATE	1. Check to see if windshield washer operates (WP 0007 00).	If windshield washer does not operate, perform Malfunction 92 (Horn, Windshield Wipers, And Windshield Washer Do Not Operate).
	2. Check to see horn operates (WP 0007 00).	If horn does not operate, notify Field Maintenance.
92. HORN, WINDSHIELD WIPERS, AND WINDSHIELD WASHER DO NOT OPERATE	1. Does the audible alarm operate?	1. Drain air tanks (WP 0018 00).
		2. Position master power switch to on (WP 0004 00).
		3. Check to see if audible alarm operates.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>92. HORN, WIND-SHIELD WIPERS, AND WINDSHIELD WASHER DO NOT OPERATE - Continued</p>	<p>4. Is circuit breaker CB37 tripped?</p>	<p>4. Position master power switch to off (WP 0004 00).</p> <p>5. If audible alarm does not operate, perform malfunction 2 (24 VDC Circuits Do Not Operate).</p> <p>6. If audible alarm operates, go to test 2 of this malfunction.</p> <p>1. Remove PDP cover (WP 0113 00).</p> <p>2. Open PDM 4.</p>

COVER REMOVED FOR CLARITY

PDM4

CIRCUIT BREAKER CB37

cb37x

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>92. HORN, WIND-SHIELD WIPERS, AND WINDSHIELD WASHER DO NOT OPERATE - Continued</p>	<p>5. Check to see if horn, windshield wipers, and windshield washer operate (WP 0007 00).</p>	<p>3. If circuit breaker CB37 is tripped, push button to reset.</p> <p>4. Position master power switch to on (WP 0004 00).</p> <p>5. Check circuit breaker CB37 to see if it is tripped again. If circuit breaker is tripped again, notify Field Maintenance.</p> <p>6. Position master power switch to off (WP 0004 00).</p> <p>7. Close PDM 4 (WP 0113 00).</p> <p>8. Install PDP cover (WP 0113 00).</p> <p>6. If horn, windshield wipers, and windshield washer do not operate, notify Field Maintenance.</p>
<p>93. CHEMICAL ALARM DOES NOT OPERATE</p>	<p>1. Check to see if CHEMICAL DETECT indicator illuminates (WP 0018 00).</p> <p>2. Check to see if chemical alarm operates.</p>	<p>If CHEMICAL DETECT indicator does not illuminate, perform Malfunction 94 (Chemical Detector Does Not Operate).</p> <p>If chemical alarm does not operate, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
94. CHEMICAL DETECTOR DOES NOT OPERATE	1. Check circuit breaker CB30 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
<div data-bbox="423 653 1252 1161"> </div>		
<div data-bbox="1208 1182 1279 1199">7600826 -</div>		
	2. Check to see if chemical detector operates.	2. If circuit breaker is tripped, push in to reset. 3. Position master power switch to on (WP 0004 00). 4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance. 5. Position master power switch to off (WP 0004 00). 6. Install PDP cover (WP 0113 00). If chemical detector does not operate, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

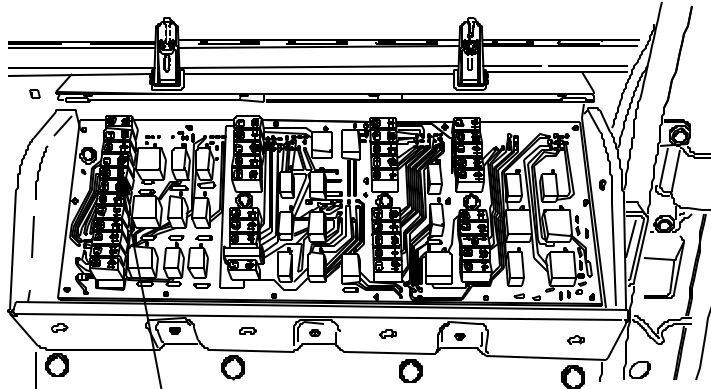
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
95. CENTRAL TIRE INFLATION SYSTEM (CTIS) DOES NOT OPERATE	1. Check circuit breaker CB40 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
<div data-bbox="446 716 1153 1167">  <p data-bbox="511 1108 738 1167">CIRCUIT BREAKER CB40</p> </div>		
	2. Check to see if CTIS operates (WP 0020 00).	<p data-bbox="1209 1150 1279 1167">7600827-</p> <ol style="list-style-type: none"> <li>2. If circuit breaker is tripped, push in to reset.</li> <li>3. Position master power switch to on (WP 0004 00).</li> <li>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</li> <li>5. Position master power switch to off (WP 0004 00).</li> <li>6. Install PDP cover (WP 0113 00).</li> </ol> <p>If CTIS does not operate, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
96. CENTRAL TIRE INFLATION SYSTEM (CTIS) DOES NOT INFLATE TIRES	1. Check to see if CTIS deflates tires (WP 0022 00).	If CTIS does not deflate tires, perform Malfunction 95 (Central Tire Inflation (CTIS) Does Not Operate).
	2. Check to see if CTIS inflates tires (WP 0022 00).	If CTIS does not inflate tires, notify Field Maintenance.
97. CENTRAL TIRE INFLATION SYSTEM (CTIS) DOES NOT DEFLATE TIRES	1. Check to see if CTIS inflates tires (WP 0022 00).	If CTIS does not inflate tires, perform Malfunction 95 (Central Tire Inflation System (CTIS) Does Not Operate).
	2. Check to see if CTIS deflates tires (WP 0020 00).	If CTIS does not deflate tires, notify Field Maintenance.
98. CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU DOES NOT DIM IN BLACKOUT MODE	1. Check circuit breaker CB66 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

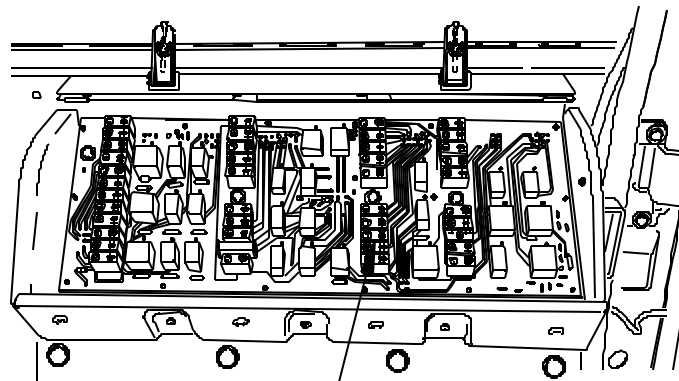


**CIRCUIT BREAKER CB66**

7600828-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
98. CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU DOES NOT DIM IN BLACKOUT MODE - Continued		<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped again, notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If CTIS ECU does not dim in blackout mode, notify Field Maintenance.</p>
99. 15K SELF-RECOVERY WINCH (SRW) DOES NOT REEL IN OR PAY OUT	<p>2. Check to see if CTIS ECU mode light dims in blackout mode (WP 0018 00)</p> <p>1. Check to see if PTO operates (WP 0065 00).</p> <p>2. Check to see if 15K SRW operates (WP 0065 00).</p>	<p>If PTO does not operate, perform Malfunction 102 (Power Take-Off {PTO Does Not Operate}).</p> <p>If 15K SRW does not operate, notify Field Maintenance.</p>
100. 15K SELF-RECOVERY WINCH (SRW) DOES NOT REEL IN	<p>1. Check to see if 15K SRW pays out (WP 0065 00).</p> <p>2. Check to see if 15K SRW reels in (WP 0065 00).</p>	<p>If 15K SRW does not pay out, perform Malfunction 99 (15K Self-Recovery Winch (SRW) Does Not Reel In Or Pay Out).</p> <p>If 15K SRW does not reel in, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**
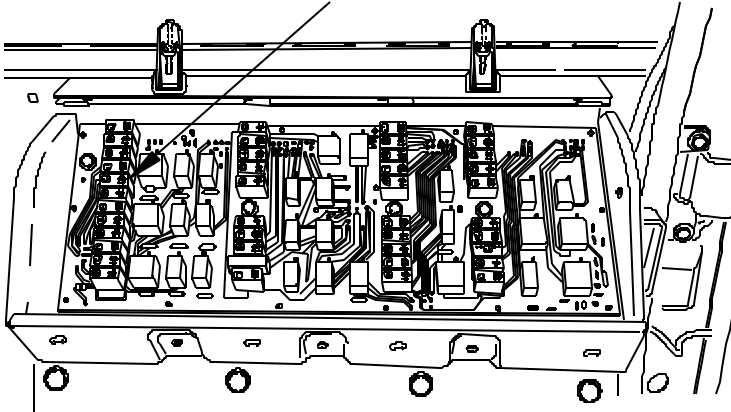
<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
101. 15K SELF-RECOVERY WINCH (SRW) DOES NOT PAY OUT	<ol style="list-style-type: none"> <li>1. Check to see if 15K SRW reels in (WP 0065 00).</li> <li>2. Check to see if 15K SRW pays out (WP 0065 00).</li> </ol>	<p>If 15K SRW does not reel in, perform Malfunction 99 (15K Self-Recovery Winch (SRW) Does Not Reel In Or Pay Out).</p> <p>If 15K SRW does not pay out, notify Field Maintenance.</p>
<p style="text-align: center;"><b>NOTE</b></p> <p>Perform PTO Troubleshooting (WP 0083 00, Malfunction 1, Power Take-Off (PTO) Does Not Engage) before starting here.</p>		
102. POWER TAKE-OFF (PTO) DOES NOT ENGAGE	<ol style="list-style-type: none"> <li>1. Check circuit breakers CB43 in PCB to see if it is tripped.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove PDP cover (WP 0113 00).</li> </ol>
<p style="text-align: center;"><b>CIRCUIT BREAKER CB49</b></p> 		
		<p style="text-align: right;">7600829-</p> <ol style="list-style-type: none"> <li>2. If circuit breaker is tripped, push in to reset.</li> <li>3. Position master power switch to on (WP 0004 00).</li> </ol>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>102. POWER TAKE-OFF (PTO) DOES NOT ENGAGE - Continued</p>	<p>2. Check to see if PTO engages (WP 0065 00).</p>	<p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If PTO does not engage, notify Field Maintenance.</p>
<p>103. ELECTRICAL SYSTEM DOES NOT MAINTAIN A CHARGE IN BATTERIES / CHARGING SYSTEM INDICATOR ILLUMINATES</p>	<p>1. Has Preventative Maintenance Checks and Services (PMCS) Before checks been performed?</p> <p>2. Are batteries, battery cables, and terminal post free from damage and corrosion?</p>	<p>1. If PMCS Before checks have not been performed, perform M1078 A1 Series Preventative Maintenance Checks and Services (PMCS) (WP 0103 00) Before Checks.</p> <p>2. If PMCS Before checks have been performed, go to test 2 of this malfunction.</p> <p>1. Remove battery box cover (WP 0108 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

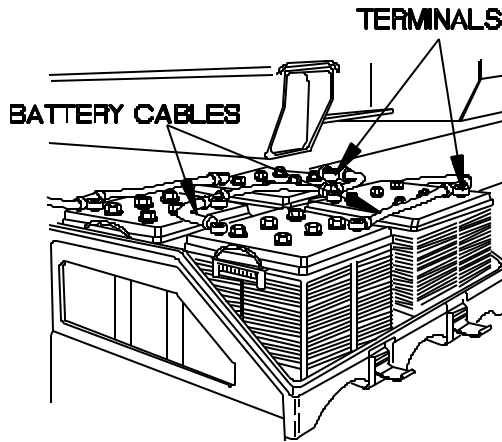MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>103. ELECTRICAL SYSTEM DOES NOT MAINTAIN A CHARGE IN BATTERIES / CHARGING SYSTEM INDICATOR ILLUMINATES - Continued</p>		<p>2 Check batteries, battery cables, and terminal posts for apparent damage and corrosion.</p>
<div data-bbox="503 888 1002 1327">  <p>The diagram shows a perspective view of a battery bank. Two labels with leader lines point to specific parts: 'BATTERY CABLES' points to the cables connecting the battery terminals, and 'TERMINALS' points to the terminal posts on the battery cells.</p> </div>		
	<p>3. Are batteries cells at appropriate fluid levels (WP 0108 00)?</p>	<p>3. If damage or corrosion is present, notify Field Maintenance.</p> <p>4. If no damage or corrosion is present, go to test 3 of this malfunction.</p> <p>1. If batteries cells are not at appropriate level, notify Field Maintenance.</p> <p>2. If batteries cells are at appropriate level, go to test 4 of this malfunction.</p>

7600803-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
103. ELECTRICAL SYSTEM DOES NOT MAINTAIN A CHARGE IN BATTERIES / CHARGING SYSTEM INDICATOR ILLUMINATES - Continued	4. Is vehicle S/N 18,550 to 199,999?	1. If vehicle S/N is not 18,550 to 199,999 notify Field Maintenance.  2. If vehicle S/N is 18,550 to 199,999 go to test 5 of this malfunction.
	5. Does BATTERY DISCONX indicator illuminate while vehicle engine is running?	1. Start engine (WP 0018 00).  2. Allow engine to run for approximately two minutes. 3. Check to see if BATTERY DISCONX indicator illuminates while engine is running (WP 0004 00). 4. If BATTERY DISCONX indicator does not illuminate, go to test 6 of this malfunction. 5. If BATTERY DISCONX indicator illuminates, notify Field Maintenance. 6. Shut down engine (WP 0018 00).
	6. Is vehicle S/N 100,001 to 199,999?	1. If vehicle S/N is not 100,001 to 199,999 go to test 7 of this malfunction.  2. If vehicle S/N is 100,001 to 199,999 notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
103. ELECTRICAL SYSTEM DOES NOT MAINTAIN A CHARGE IN BATTERIES / CHARGING SYSTEM INDICATOR ILLUMINATES - Continued	7. Does ENGINE OIL PRESSURE indicator remain illuminated after engine starts?	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Check to see if ENGINE OIL PRESSURE indicator remains illuminated after engine starts (WP 0004 00).</li> <li>3. If ENGINE OIL PRESSURE indicator does not remain illuminated after engine starts, notify Field Maintenance.</li> <li>4. If ENGINE OIL PRESSURE indicator remains illuminated after engine starts, perform Electrical System Troubleshooting Malfunction 37 (ENGINE OIL PRESSURE Indicator Illuminates While Engine is Running/Remains Illuminated 10 Seconds After Engine Starts).</li> <li>5. Shut down engine (WP 0018 00). Notify Field Maintenance.</li> </ol>
104. DIFFERENTIAL LOCK SOLENOID DOES NOT OPERATE		
105. ENGINE FAN RUNS CONSTANTLY	<ol style="list-style-type: none"> <li>1. Check to see if engine fan turns off using engine fan off switch (WP 0018 00).</li> <li>2. Check to see if air tanks are pressurized.</li> </ol>	<p>If engine fan does not turn off using engine fan off switch, perform Malfunction 106 (Engine Fan Does Not Turn Off Using Engine Fan Off Switch).</p> <ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

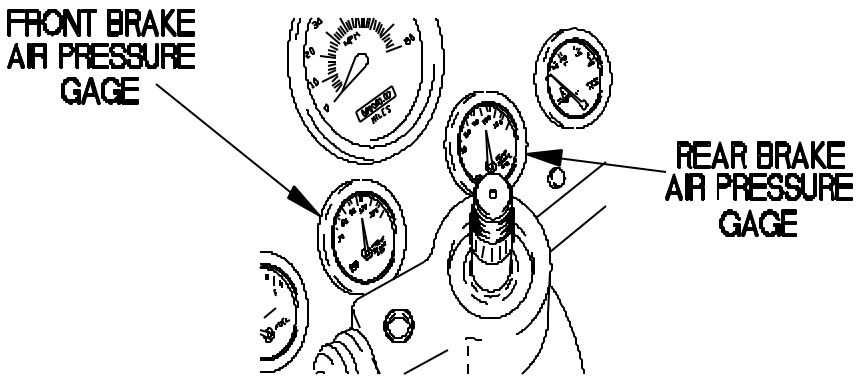MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>105. ENGINE FAN RUNS CONSTANTLY - Continued</p>		<p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p>
		<p>7600831-</p>
	<p>3. Check to see if engine fan runs constantly (WP 0004 00).</p>	<p>3. Shut down engine (WP 0018 00).</p> <p>4. If FRONT BRAKE AIR or REAR BRAKE AIR pressure gage does not register 120 psi, perform Air System Troubleshooting (WP 0085 00, Malfunction 1, Air System Loses Pressure During Operation/Slow Air Pressure Buildup).</p> <p>If engine fan runs constantly, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

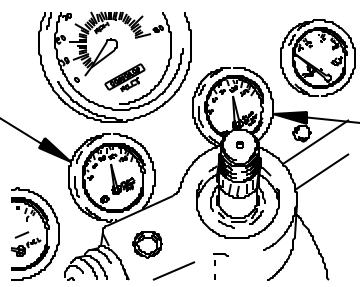MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
106. ENGINE FAN DOES NOT TURN OFF USING ENGINE FAN OFF SWITCH	1. Check to see if air tanks are pressurized.	1. Start engine (WP 0018 00).  2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.
<div data-bbox="381 808 576 892">FRONT BRAKE AIR PRESSURE GAGE</div> <div data-bbox="625 808 982 1092">  </div> <div data-bbox="1023 903 1218 987">REAR BRAKE AIR PRESSURE GAGE</div> <div data-bbox="1201 1071 1282 1092">7600832-</div>		
		3. Shut down engine (WP 0018 00).  4. If FRONT BRAKE AIR or REAR BRAKE AIR pressure gage does not register 120 psi, perform WP 0085 00, Malfunction 1, Air System Loses Pressure During Operation/Slow Air Pressure Buildup.)

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

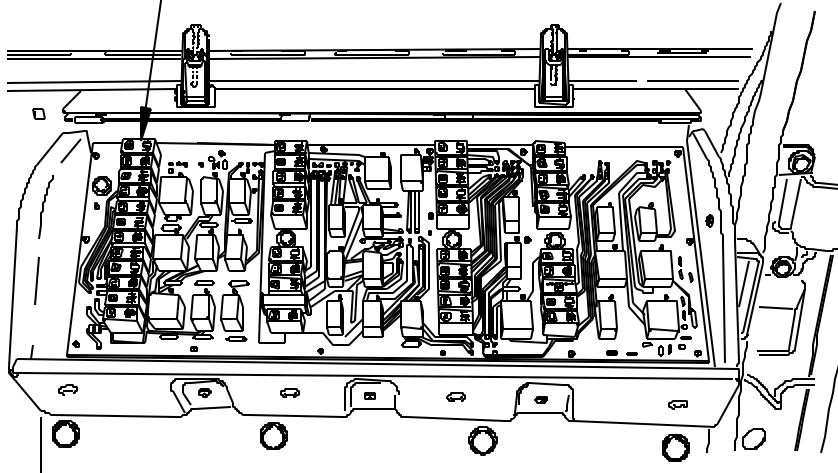MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>106. ENGINE FAN DOES NOT TURN OFF USING ENGINE FAN OFF SWITCH - Continued</p>	<p>2. Check circuit breaker CB22 in PCB to see if it is tripped.</p>	<p>1. Remove PDP cover (WP 0113 00).</p>
	<p><b>CIRCUIT BREAKER CB22</b></p> 	<p>7600833-</p> <p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Start engine (WP 0018 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

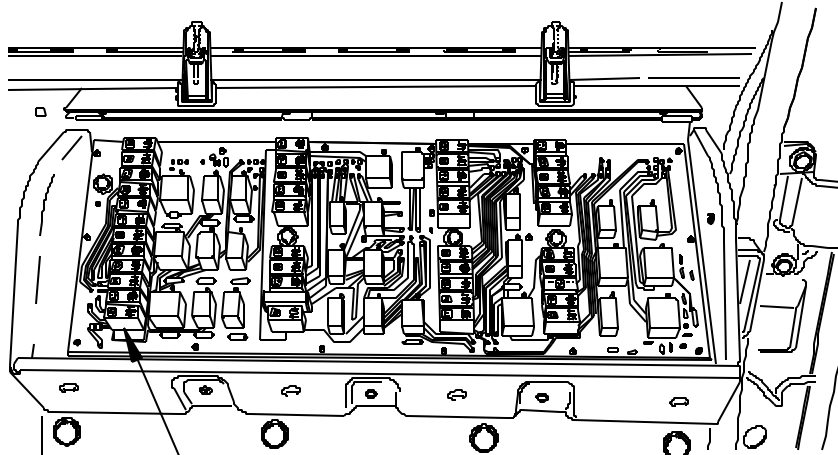MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>106. ENGINE FAN DOES NOT TURN OFF USING ENGINE FAN OFF SWITCH - Continued</p>	<p>3. Check to see if engine fan turns off using engine fan off switch (WP 0018 00).</p>	<p>5. Shut down engine ( WP 0018 00)</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If engine fan does not turn off using engine fan off switch, notify Field Maintenance.</p>
<p>107. ETHER STARTING AID DOES NOT OPERATE</p>	<p>1. Check circuit breaker CB68 in PCB to see if it is tripped.</p>	<p>1. Remove PDP cover (WP 0113 00).</p>
<div data-bbox="391 1062 1224 1556">  <p data-bbox="542 1524 850 1556">CIRCUIT BREAKER CB68</p> </div>		<p>2. If circuit breaker is tripped, push in to reset.</p>

7600834 -



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>107. ETHER STARTING AID DOES NOT OPERATE - Continued</p>	<p>2. Check to see if ether cylinder is damaged (WP 0103 00, Table 5, Item 2).</p> <p>3. Check to see if ether starting aid operates (WP 0051 00).</p>	<p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If ether cylinder is damaged, notify Field Maintenance.</p> <p>If ether starting aid does not operate, perform Fuel System Troubleshooting (WP 0076 00, malfunction 2, Ether Starting Aid Does Not Operate).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

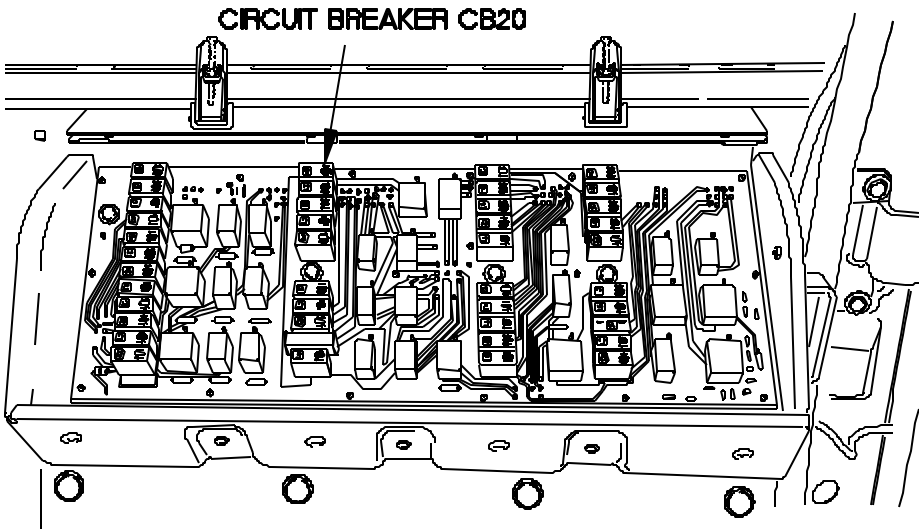MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
108. RADIO DOES NOT OPERATE	1. Check circuit breaker CB20 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
		7600835-
		2. If circuit breaker is tripped, push in to reset. 3. Position master power switch to on (WP 0004 00). 4. Position radio to on. 5. Position radio to off. 6. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance. 7. Position master power switch to off (WP 0004 00). 8. Install PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

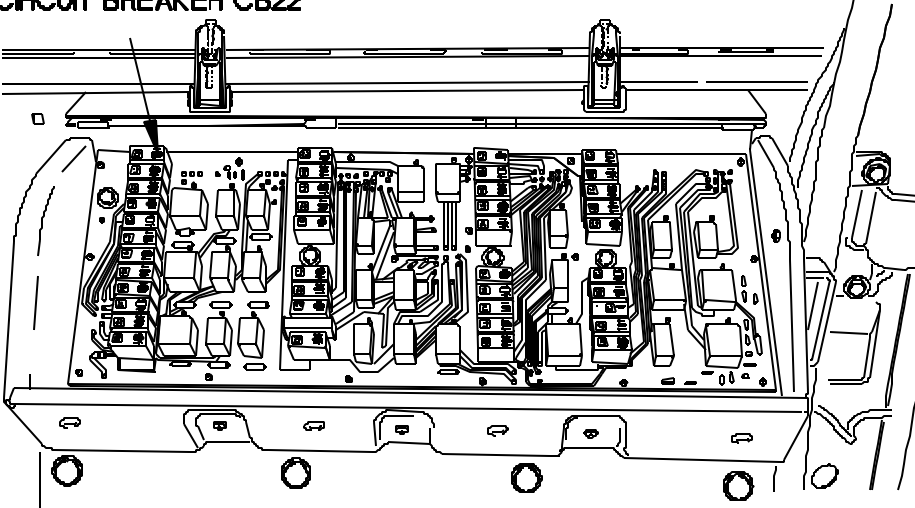MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
108. RADIO DOES NOT OPERATE - Continued	2. Check to see if radio operates.	If radio does not operate, notify Field Maintenance.
109. BATTERY TESTER DOES NOT OPERATE		Notify Field Maintenance.
110. EXHAUST BRAKE DOES NOT OPERATE		Notify Field Maintenance.
111. INLET AIR HEATER DOES NOT OPERATE	1. Check circuit breaker CB22 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
<p><b>CIRCUIT BREAKER CB22</b></p> 		<p>7600836-</p> <p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
111. INLET AIR HEATER DOES NOT OPERATE - Continued		<p>4. Check circuit breaker to see if it is tripped. If circuit breaker is tripped or trips again, notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If inlet air heater does not operate, notify Field Maintenance.</p> <p>Notify Field Maintenance.</p>
112. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE	2. Check to see if inlet air heater operates (WP 0018 00).	
113. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
114. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HOIST UP DOES NOT OPERATE FROM REMOTE CONTROL UNIT	1. Check to see if MHC boom up operates from REMOTE CONTROL UNIT (WP 0030 00).	If MHC boom does not operate from REMOTE CONTROL UNIT, perform Malfunction 114 (Material Handling Crane [MHC] Does Not Operate from Remote Control Unit).

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

0080 00-109

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
117. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM DOWN DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
118. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) TELESCOPE IN DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
119. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) TELESCOPE OUT DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
120. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) SWING CW DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
121. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) SWING CCW DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
122. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) OVERLOAD SHUTDOWN SYSTEM DOES NOT ACTIVATE		Notify Field Maintenance.
123. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) OVERLOAD SHUTDOWN SYSTEM STAYS ACTIVATED		Notify Field Maintenance.
124. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HOIST UP LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
125. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM DOWN LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.
126. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM UP LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.
127. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) TELESCOPE OUT LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.
128. STOPLIGHTS DO NOT ILLUMINATE WHEN M1088A1 TRAILER BRAKES ARE APPLIED	<ol style="list-style-type: none"> <li>1. Check to see if stoplights operate when vehicle brake is depressed (WP 0018 00).</li> <li>2. Check to see if stoplights illuminate when trailer handbrake is applied (WP 0032 00).</li> </ol>	<p>If stoplights do not operate when vehicle brake is depressed, perform Malfunction 70 (One Or Both Stoplights Do Not Illuminate.)</p> <p>If stoplights do not illuminate when trailer handbrake is applied, notify Field Maintenance.</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
129. M1089A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE	1. Check to see if external remote control cable connections are tight.	1. Check cable connections at MHC fixed station and REMOTE CONTROL UNIT for secure connection (WP 0043 00).  2. Tighten any loose connector found.  3. If loose connector was found, attempt to operate MHC (WP 0043 00).
	2. Check circuit breaker CB48 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

**CIRCUIT BRAKER  
CB48**

7600837-

		2. If circuit breaker CB48 has tripped, push in to reset.  3. Position master power switch to on (WP 0004 00).
--	--	--

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
129. M1089A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE - Continued	3. Perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, malfunction 1, Material Handling Crane (MHC) Does Not Operate).	4. If circuit breaker CB48 has tripped again, notify Field Maintenance.
130. M1089A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
131. M1089A1 MATERIAL HANDLING CRANE (MHC) HOIST UP DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
132. M1089A1 MATERIAL HANDLING CRANE (MHC) HOIST DOWN DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
133. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM UP DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
134. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM DOWN DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
135. M1089A1 MATERIAL HANDLING CRANE (MHC) TELESCOPE IN DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
136. M1089A1 MATERIAL HANDLING CRANE (MHC) TELESCOPE OUT DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
137. M1089A1 MATERIAL HANDLING CRANE (MHC) SWING CW DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
138. M1089A1 MATERIAL HANDLING CRANE (MHC) SWING CCW DOES NOT OPERATE FROM REMOTE CONTROL UNIT		Notify Field Maintenance.
139. M1089A1 MATERIAL HANDLING CRANE (MHC) HOIST UP LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.


**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
140. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM DOWN LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.
141. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM UP LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.
142. M1089A1 MATERIAL HANDLING CRANE (MHC) TELESCOPE OUT LOCKOUT DOES NOT ACTIVATE		Notify Field Maintenance.
143. M1089A1 MATERIAL HANDLING CRANE (MHC) OVERLOAD SHUTDOWN SYSTEM DOES NOT ACTIVATE		Notify Field Maintenance.
144. M1089A1 MATERIAL HANDLING CRANE (MHC) OVERLOAD SHUTDOWN SYSTEM STAYS ACTIVATED		Notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

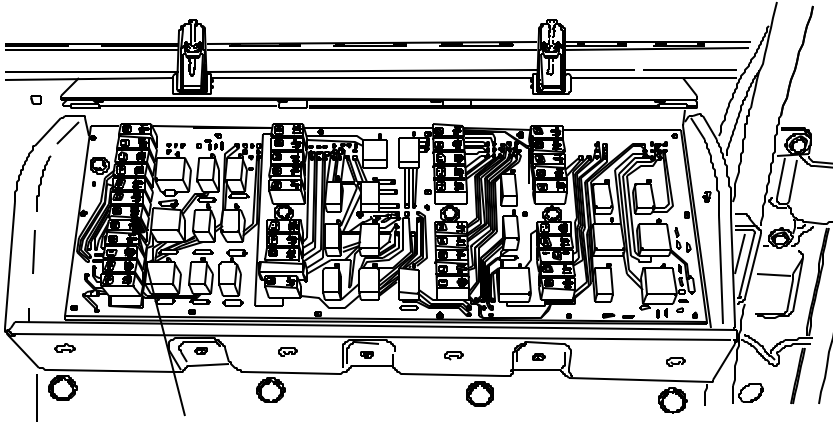MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
145. ALL WRECKER FUNCTIONS DO NOT OPERATE FROM WRECKER CONTROL PANEL AND WRECKER REMOTE CONTROL	1. Check circuit breaker CB50 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
 <p data-bbox="493 1224 802 1255"><b>CIRCUIT BREAKER CB50</b></p>		<p data-bbox="1208 1287 1279 1297">7600838-</p>
		<ol style="list-style-type: none"> <li data-bbox="919 1329 1273 1392">2. If circuit breaker is tripped, push in to reset.</li> <li data-bbox="919 1413 1305 1476">3. Position master power switch to on (WP 0004 00).</li> <li data-bbox="919 1497 1305 1654">4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped or trips again, notify Field Maintenance.</li> <li data-bbox="919 1675 1305 1738">5. Position master power switch to off (WP 0004 00).</li> <li data-bbox="919 1759 1273 1822">6. Install PDP cover (WP 0113 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
145. ALL WRECKER FUNCTIONS DO NOT OPERATE FROM WRECKER CONTROL PANEL AND WRECKER REMOTE CONTROL - Continued	2. Check to see if wrecker functions operate from WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL (WP 0037 00).	If wrecker functions do not operate from WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL, notify Field Maintenance.
146. ALL WRECKER FUNCTIONS DO NOT OPERATE FROM WRECKER REMOTE CONTROL	1. Check to see if wrecker functions operate from WRECKER CONTROL PANEL (WP 0037 00).	If wrecker functions do not operate from WRECKER CONTROL PANEL, perform Malfunction 145 (All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL And WRECKER REMOTE CONTROL).
	2. Check to see if wrecker functions operate from WRECKER REMOTE CONTROL (WP 0037 00).	If wrecker functions do not operate from WRECKER REMOTE CONTROL, notify Field Maintenance.
147. ALL WRECKER FUNCTIONS DO NOT OPERATE FROM WRECKER CONTROL PANEL	1. Check to see if wrecker functions operate from WRECKER REMOTE CONTROL (WP 0037 00).	If wrecker functions do not operate from WRECKER REMOTE CONTROL, perform Malfunction 145 (All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL And WRECKER REMOTE CONTROL).
	2. Check to see if wrecker functions operate from WRECKER CONTROL PANEL (WP 0037 00).	If wrecker functions do not operate from WRECKER CONTROL PANEL, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
148. 30K WINCH LEFT OR RIGHT SPEED FUNCTION DOES NOT OPERATE FROM WRECKER CONTROL PANEL	<ol style="list-style-type: none"> <li>1. Check to see if 30K winch left or right speed function operates from WRECKER REMOTE CONTROL (WP 0037 00).</li> <li>2. Check to see if other wrecker functions operate from WRECKER REMOTE CONTROL (WP 0037 00).</li> <li>3. Check to see if 30K winch left or right speed function operates from WRECKER REMOTE CONTROL (WP 0037 00).</li> </ol>	<ol style="list-style-type: none"> <li>1. If 30K winch left speed function does not operate from WRECKER REMOTE CONTROL, perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, Malfunction 4, Left 30K Winch Does Not Operate).</li> <li>2. If 30K winch right speed function does not operate from WRECKER REMOTE CONTROL, perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, Malfunction 9, Right 30K Winch Does Not Operate).  If other wrecker functions do not operate from WRECKER REMOTE CONTROL, perform Malfunction 146 (All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL).  If 30K winch left or right speed function does not operate from WRECKER REMOTE CONTROL, notify Field Maintenance.</li> </ol>
149. 30K WINCH LEFT OR RIGHT FREESPOOL FUNCTION DOES NOT OPERATE FROM WRECKER CONTROL PANEL	<ol style="list-style-type: none"> <li>1. Check to see if 30K winch left or right freespool function operates from WRECKER CONTROL PANEL (WP 0037 00).</li> </ol>	<ol style="list-style-type: none"> <li>1. If 30K winch left freespool function does not operate from WRECKER CONTROL PANEL, perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, Malfunction 4, Left 30K Winch Does Not Operate).</li> </ol>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
149. 30K WINCH LEFT OR RIGHT FREESPOOL FUNCTION DOES NOT OPERATE FROM WRECKER CONTROL PANEL - Continued		2. If 30K winch right freespool function does not operate from WRECKER CONTROL PANEL, perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, Malfunction 9, Right 30K Winch Does Not Operate).
	2. Check to see if other wrecker functions operate from WRECKER CONTROL PANEL (WP 0037 00).	If other wrecker functions do not operate from WRECKER CONTROL PANEL, perform Malfunction 147 (All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL).
	3. Check to see if 30K winch left or right freespool function operates from WRECKER CONTROL PANEL (WP 0037 00).	If 30K winch left or right freespool function does not operate from WRECKER CONTROL PANEL, notify Field Maintenance.
150. 30K WINCH DOES NOT PAY-IN	1. Has Preventative Maintenance Checks and Services (PMCS) Before checks been performed?	1. If PMCS Before checks have not been performed, perform M1083 A1 Series Preventative Maintenance Checks and Services (PMCS) (WP 0103 00 Before checks).
	2. Verify the MAIN WINCH LH and RH FREE SPOOL switches are in the OFF position (WP 0016 00).	2. If PMCS Before checks have been performed, go to test 2 of this malfunction. 1. If MAIN WINCH LH and RH FREE SPOOL switches are not in the OFF position, position switches to OFF (WP 0016 00).


**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
151. ONE WRECKER FUNCTION DOES NOT OPERATE FROM WRECKER REMOTE CONTROL	1. Check to see if wrecker function operates from WRECKER REMOTE CONTROL (WP 0037 00).	2. MAIN WINCH LH and RH FREE SPOOL switches are in the OFF position, notify Field Maintenance.  If wrecker function does not operate from WRECKER REMOTE CONTROL, perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, Malfunction 4, Left 30K Winch Does Not Operate Or Malfunction 9, Right 30K Winch Does Not Operate).
	2. Check to see if other wrecker function operate from WRECKER REMOTE CONTROL(WP 0037 00).	If other wrecker functions do not operate from WRECKER REMOTE CONTROL, perform Malfunction 147 (All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL).
	3. Check to see if wrecker function operates from WRECKER CONTROL PANEL (WP 0037 00).	If wrecker function does not operate from WRECKER CONTROL PANEL, notify Field Maintenance.
152. M1090A1 TAILGATE RELEASE DOES NOT OPERATE	1. Check to see if dump body raises and lowers (WP 0031 00).	If dump body does not operate, perform Malfunction 155 (DUMP BED And TAILGATE RELEASE Do Not Operate).
	2. Check to see if TAILGATE RELEASE operates (WP 0031 00).	If TAILGATE RELEASE does not operate, notify Field Maintenance.

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

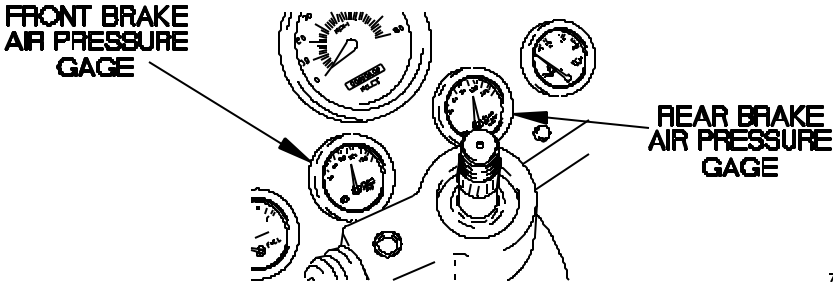MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
153. DUMP BODY DOES NOT RAISE	<ol style="list-style-type: none"> <li>1. Check to see if TAILGATE RELEASE operates (WP 0031 00).</li> <li>2. Check to see if dump body raises (WP 0031 00).</li> </ol>	<p>If TAILGATE RELEASE does not operate, perform Malfunction 155 (Dump Bed And Tailgate Release Do Not Operate).</p> <p>If dump body does not raise, notify Field Maintenance.</p>
154. DUMP BODY DOES NOT LOWER	<ol style="list-style-type: none"> <li>1. Check to see if TAILGATE RELEASE operates (WP 0031 00).</li> <li>2. Check to see if dump body lowers (WP 0031 00).</li> </ol>	<p>If tailgate release does not operate, perform Malfunction 155 (DUMP BED And TAILGATE RELEASE Do Not Operate).</p> <p>If dump body does not lower, notify Field Maintenance.</p>
155. DUMP BED AND TAILGATE RELEASE DO NOT OPERATE	<ol style="list-style-type: none"> <li>1. Check to see if air tanks are pressurized.</li> </ol>	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</li> </ol>
		<p style="text-align: right;">7600839-</p> <ol style="list-style-type: none"> <li>3. Shut down engine (WP 0018 00).</li> </ol>

# **ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

## **ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

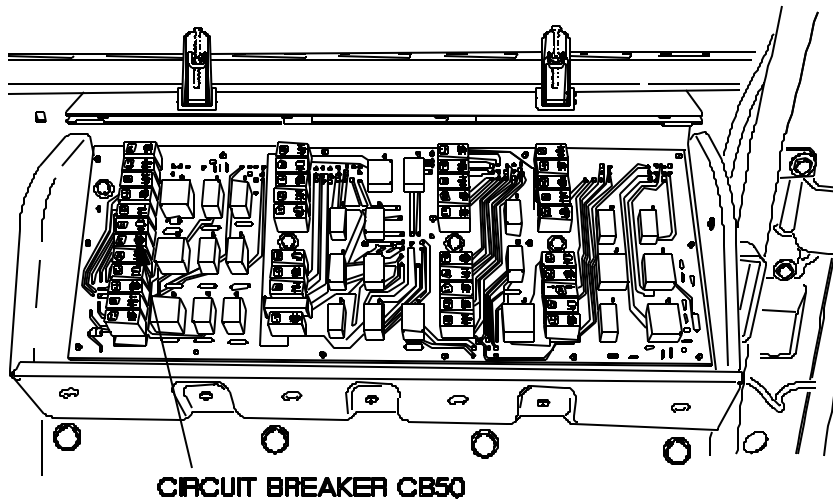MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>155. DUMP BED AND TAILGATE RELEASE DO NOT OPERATE - Continued</p>	<p>2. Check circuit breaker CB50 in PCB to see if it is tripped.</p>	<p>4. If FRONT BRAKE AIR or REAR BRAKE AIR pressure gage does not register 120 PSI, perform Air System Troubleshooting (WP 0085 00, Malfunction 1, Air System Loses Pressure During Operation/Slow Air Pressure Buildup).</p> <p>1. Remove PDP cover (WP 0113 00).</p>
	<div data-bbox="381 919 1209 1417">  <p><b>CIRCUIT BREAKER CB50</b></p> </div>	<div data-bbox="1209 1407 1274 1428"> <p>7600840-</p> </div> <p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker to see if it tripped. If circuit breaker is tripped, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
155. DUMP BED AND TAILGATE RELEASE DO NOT OPERATE - Continued	3. Check to see if DUMP BED and TAILGATE RELEASE operate (WP 0031 00).	5. Position master power switch to off (WP 0004 00).  6. Install PDP cover (WP 0113 00).  If DUMP BED and TAILGATE RELEASE do not operate, notify Field Maintenance.
156. TRANSMISSION AUXILIARY OIL COOLER FAN(S) RUN CONSTANTLY	1. Check to see if engine fan turns off (WP 0004 00)  2. Check to see if transmission auxiliary oil cooler fan(s) run constantly (WP 0003 00, Cooling System).	If engine fan does not turn off, perform Malfunction 105 (Engine Fan Runs Constantly).  If transmission auxiliary oil cooler fan(s) run constantly, notify Field Maintenance.
157. TRANSMISSION AUXILIARY OIL COOLER FAN DOES NOT OPERATE	1. Check circuit breaker CB68 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>157. TRANSMISSION AUXILIARY OIL COOLER FAN DOES NOT OPERATE - Continued</p>		<p>2. If circuit breaker CB68 is tripped, push in to reset.</p>
	<div data-bbox="381 779 1128 1207" data-label="Image"> </div> <p data-bbox="521 1213 831 1243">CIRCUIT BREAKER CB68</p>	<p data-bbox="1175 1234 1243 1251">7600841-</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker to see if it tripped. If circuit breaker is tripped, notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If transmission auxiliary oil cooler fan does not operate, notify Field Maintenance.</p>
	<p>2. Check to see if transmission auxiliary oil cooler fan operates (WP 0018 00).</p>	

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
158. WORKLIGHTS DO NOT ILLUMINATE	1. Check to see if hazard lights illuminate.	1. Position main light switch to STOPLIGHT (WP 0004 00).  2. Position hazard lights switch to on (WP 0004 00).  3. Check to see if hazard lights illuminate.  4. Position hazard lights switch to off (WP 0004 00).  5. Position main light switch to off (WP 0004 00).  6. If hazard lights do not illuminate, perform Malfunction 67 (Front And Rear Hazard Lights Do Not Illuminate).
	2. Check circuit breaker CB72 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).

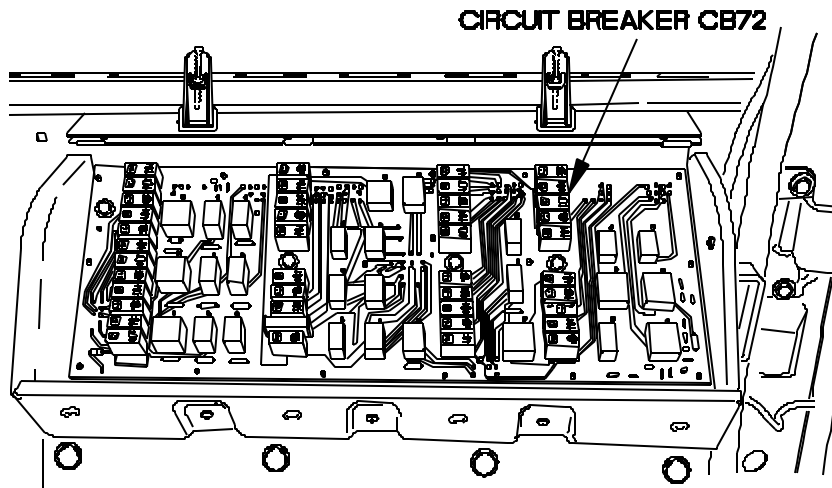

7600842-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
158. WORKLIGHTS DO NOT ILLUMINATE - Continued		<p>2. If circuit breaker is tripped, push in to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker to see if it tripped. If circuit breaker is tripped, notify Field Maintenance.</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>If worklights do not illuminate, notify Field Maintenance.</p>
159. M1088A1/ M1089A1 LH WORKLIGHT DOES NOT ILLUMINATE	<p>3. Check to see if worklights illuminate (WP 0018 00).</p> <p>1. Check to see if RH worklight illuminates (WP 0018 00).</p> <p>2. Check to see if LH worklight illuminates (WP 0018 00).</p>	<p>If RH worklight does not illuminate, perform Malfunction 158 (Worklights Do Not Illuminate).</p> <p>If LH worklight does not illuminate, notify Field Maintenance.</p>
160. M1088A1/ M1089A1 RH WORKLIGHT DOES NOT ILLUMINATE	<p>1. Check to see if LH worklight illuminates (WP 0018 00).</p> <p>2. Check to see if RH worklight illuminates (WP 0018 00).</p>	<p>If LH worklight does not illuminate, perform Malfunction 158 (Worklights Do Not Illuminate).</p> <p>If RH worklight does not illuminate, notify Field Maintenance.</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

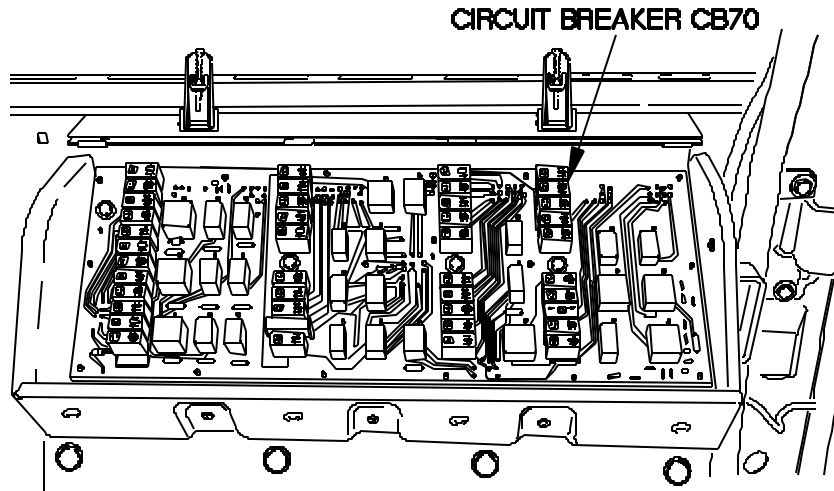MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>161. M1088A1/ M1089A1 WORKLIGHTS DO NOT ILLUMINATE IN BLACKOUT MODE WITH BLACKOUT OVERRIDE SWITCH ON</p>	<p>1. Check to see if worklights illuminate in normal mode (WP 0018 00).</p> <p>2. Check to see if worklights illuminate in blackout mode with blackout override switch on (WP 0018 00).</p>	<p>If worklights do not illuminate in normal mode, perform Malfunction 158 (Worklights Do Not Illuminate).</p> <p>If worklights do not illuminate in blackout mode with blackout override switch on, notify Field Maintenance.</p>
<p>162. ALL MAIN LIGHT SWITCH FUNCTIONS DO NOT OPERATE</p>	<p>1. Check circuit breaker CB70 in PCB to see if it is tripped.</p>	<p>1. Remove PDP cover (WP 0113 00).</p>
	<div data-bbox="397 1203 1226 1690">  </div>	<p>2. If circuit breaker is tripped, push in to reset.</p>

7600843-

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>162. ALL MAIN LIGHT SWITCH FUNCTIONS DO NOT OPERATE - Continued</p>	<p>2. Check to see if main light switch functions operate.</p>	<p>3. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>4. Check circuit breaker to see if it tripped. If circuit breaker is tripped, notify Field Maintenance.</p> <p>5. Position main light switch to OFF (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p> <p>1. Position main light switch to SER DRIVE (WP 0004 00).</p> <p>2. Check to see if headlights illuminate.</p> <p>3. Position main light switch to OFF (WP 0004 00).</p> <p>4. If main light switch functions do not operate, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
163. ALL ELECTRICAL GAGES DO NOT OPERATE	1. Is vehicle S/N 100,001 to 199,999?	<ol style="list-style-type: none"> <li>1. If vehicle S/N is not 100,001 to 199,999 go to test 2 of this malfunction.</li> <li>2. If vehicle S/N is 100,001 to 199,999 go to test 3 of this malfunction.</li> </ol>
	Check to see if starter pushbutton operates (WP 0018 00)	<ol style="list-style-type: none"> <li>1. If starter pushbutton does not operate, perform Malfunction 164, Audible Alarm, Radio, Starter Pushbutton, And Electrical Gages Do Not Operate).</li> <li>2. If starter pushbutton operates, notify Field Maintenance.</li> </ol>
	3. Have Preventative Maintenance Checks and Services (PMCS) Before checks been performed?	<ol style="list-style-type: none"> <li>1. If PMCS Before checks have not been performed, perform M1078 A1 Series Preventative Maintenance Checks and Services (PMCS) (WP 0103 00) Before checks.</li> <li>2. If PMCS Before checks have been performed, go to test 4 of this malfunction</li> </ol>
	4. Check to see if circuit breaker CB76 is tripped.	<ol style="list-style-type: none"> <li>1. Remove PDP cover (WP 0113 00).</li> </ol>


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

0080 00-132

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

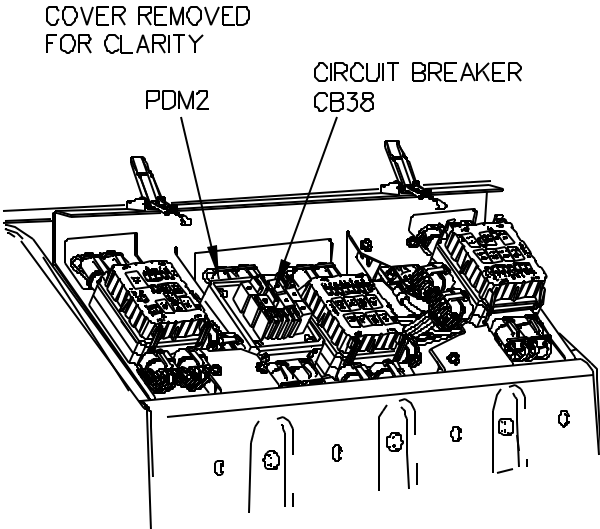MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>163. ALL ELECTRICAL GAGES DO NOT OPERATE - Continued</p>	<p>5. Check to see if circuit breaker CB38 is tripped</p>	<p>1. If circuit breaker CB38 is tripped, push button to reset</p>
	<p>COVER REMOVED FOR CLARITY</p> 	<p>CB38x</p> <ol style="list-style-type: none"> <li>2. Check circuit breaker CB38 to see if it is tripped again.</li> <li>3. Close PDM2.</li> <li>4. Install PDP cover (WP 0113 00).</li> <li>5. If circuit breaker CB38 is tripped again, contact supervisor.</li> <li>6. If circuit breaker CB38 is not tripped again, notify Field Maintenance.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
164. AUDIBLE ALARM, RADIO, STARTER PUSHBUTTON, AND ELECTRICAL GAGES DO NOT OPERATE	1. Check circuit breaker CB77 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
	<div data-bbox="440 730 1138 1129" data-label="Image"> </div> <p data-bbox="570 1125 878 1157"><b>CIRCUIT BREAKER CB77</b></p> <p data-bbox="1208 1136 1279 1157">7600844 -</p>	<p data-bbox="911 1178 1321 1633">                     2. If circuit breaker is tripped, push in to reset.                      3. Position master power switch to on (WP 0004 00).                      4. Check circuit breaker to see if it is tripped again. If circuit breaker is tripped again, notify Field Maintenance.                      5. Position master power switch to off (WP 0004 00).                      6. Install PDP cover (WP 0113 00).                 </p> <p data-bbox="964 1650 1321 1776">                     If audible alarm, radio, starter pushbutton, and electrical gages do not operate, notify Field Maintenance.                 </p>
	2. Check to see if audible alarm, radio, starter pushbutton, and electrical gages operate (WP 0018 00).	

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
165. LO IDLE/HI IDLE SWITCH DOES NOT OPERATE	Check to see if LO IDLE/HI IDLE switch does not operate.	<ol style="list-style-type: none"> <li>1. Position PTO switch to off (WP 0005 00).</li> <li>2. Start engine (WP 0018 00).</li> <li>3. Position LO IDLE/HI IDLE switch to HI IDLE (WP 0004 00).</li> <li>4. Note if LO IDLE/HI IDLE switch operates.</li> <li>5. Shut down engine (WP 0018 00).</li> <li>6. If LO IDLE/HI IDLE switch does not operate, notify Field Maintenance.</li> </ol>
166. MASTER POWER SWITCH DOES NOT SHUT DOWN ENGINE	<ol style="list-style-type: none"> <li>1. Is vehicle S/N 18,550 or higher?</li> <li>2. Shut down engine by removing circuit breaker CB42.</li> </ol>	<ol style="list-style-type: none"> <li>1. If vehicle is not S/N 18,550 or higher, go to test 2 of this malfunction.</li> <li>2. If vehicle is S/N 18,550 or higher, go to test 3 of this malfunction.</li> <li>1. Position master power switch to off (WP 0004 00).</li> </ol>
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Remove rings, bracelets, wristwatches, neck chains, and any other jewelry before working around vehicle. Jewelry may catch on equipment or may short across an electrical circuit or battery terminal. Failure to comply may result serious injury or death to personnel.</b></p>		
		<ol style="list-style-type: none"> <li>2. Remove Power Distribution Panel (PDP) cover (WP 0113 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>166. MASTER POWER SWITCH DOES NOT SHUT DOWN ENGINE - Continued</p>		<p>3. Remove circuit breaker CB42 from Printed Circuit Board (PCB).</p>
	<div data-bbox="440 690 1166 1167" data-label="Image"> </div> <p>3. Verify remote IGN switch is in the OFF position (WP 0011 00).</p>	<p>4. After engine shuts down, install circuit breaker CB42 in PCB.</p> <p>5. Install PDP cover (WP 0113 00).</p> <p>6. Notify Field Maintenance.</p> <p>1. Position master power switch to off (WP 0004 00).</p> <p>2. Lift RH rear cab mud flap.</p>



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

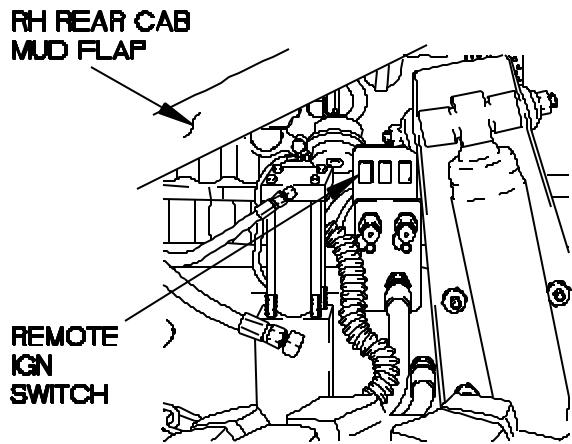MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>166. MASTER POWER SWITCH DOES NOT SHUT DOWN ENGINE - Continued</p>		<p>3. Position remote IGN switch to OFF (WP 0011 00).</p>
		
	<p>4. Shut down engine by positioning Manual Battery Disconnect Switch (MBDS) to disconnect (OFF).</p>	<p>7600850-</p> <p>4. If engine does not shutdown, go to test 4 of this malfunction.</p> <p>1. Position MBDS to disconnect (OFF) (WP 0011 00).</p> <p>2. After engine shuts down, position MBDS to connect (ON) (WP 0011 00).</p> <p>3. Notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**


**Table 3. Electrical System Troubleshooting Procedures - Continued.**

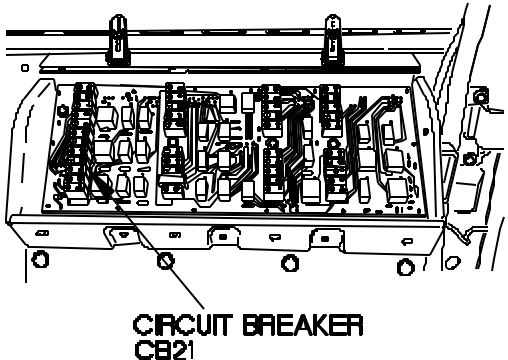MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
167. AIR DRYER HEATER DOES NOT OPERATE	1. Check circuit breaker CB21 in PCB to see if it is tripped.	1. Remove PDP cover (WP 0113 00).
	<div data-bbox="592 640 1096 997">  <p>CIRCUIT BREAKER CB21</p> </div> 2. Check to see if air tanks are pressurized.	<div data-bbox="1209 993 1279 1010"> <p>7600845-</p> </div> 2. If circuit breaker CB21 has tripped, push in to reset. 3. Position master power switch to on (WP 0004 00). 4. If circuit breaker CB21 has tripped again, notify Field Maintenance. 1. Start engine (WP 0018 00).

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

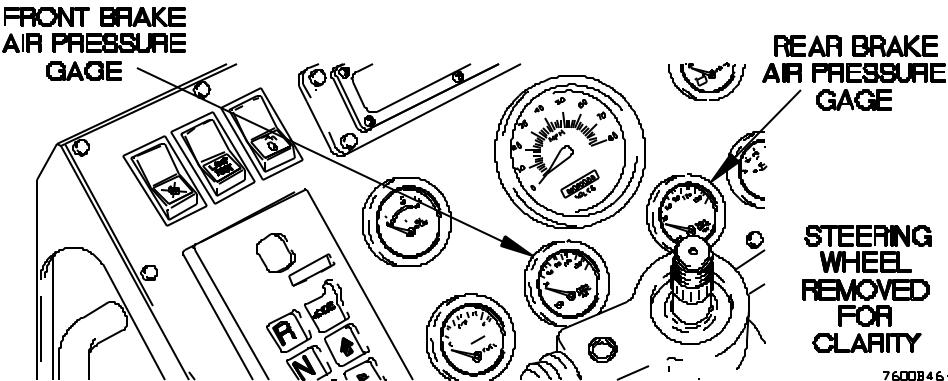MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>167. AIR DRYER HEATER DOES NOT OPERATE - Continued</p> 	<p>3. Check to see if air hoses and fittings are free from leaks.</p> <p>4. Check to see if air dryer heater operates.</p>	<p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p> <p>3. Shut down engine (WP 0018 00).</p> <p>4. If FRONT BRAKE AIR or REAR BRAKE AIR pressure gage does not register 120 psi, perform WP 0085 00, Malfunction 1, Air System Loses Pressure During Operation/Slow Air Pressure Buildup).</p> <p>If air hoses and fittings are not free from leaks, notify Field Maintenance to repair leaks.</p> <p>If air dryer heater does not operate, notify Field Maintenance.</p>

# **ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

## **ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
168. STOPLIGHTS AND 12 VDC INDICATOR PANEL CIRCUITS DO NOT OPERATE	<ol style="list-style-type: none"> <li>1. Is vehicle S/N 100,001 to 199,999?</li> <li>2. Check circuit breaker CB76 in PCB to see if it is tripped.</li> </ol>	<ol style="list-style-type: none"> <li>1. If vehicle S/N is not 100,001 to 199,999 go to test 2 of this malfunction.</li> <li>2. If vehicle S/N is 100,001 to 199,999 go to test 3 of this malfunction.</li> <li>1. Remove PDP cover (WP 0113 00).</li> </ol>
		<div data-bbox="358 926 1268 1440" data-label="Image"> </div> <p data-bbox="1203 1472 1281 1486">7600847-</p> <ol style="list-style-type: none"> <li>2. If circuit breaker CB76 has tripped, push in to reset.</li> <li>3. Position master power switch to on (WP 0004 00).</li> <li>4. If circuit breaker CB76 has tripped again, notify Field Maintenance.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
168. STOPLIGHTS AND 12 VDC INDICATOR PANEL CIRCUITS DO NOT OPERATE - Continued	3. Check circuit breaker CB76 in PCB to see if it is stripped.	5. If circuit breaker CB76 has not tripped again, perform test 4 of this malfunction.
		4. Remove PDP cover (WP 0113 00).  5. Open PDM 2.
<div><p>PDM2</p><p>FOR CLARITY COVER REMOVED</p><p>CIRCUIT BREAKER CB76</p></div>		
		<p>CB76x</p> <div><p>3. If circuit breaker CB76 has tripped, push in to reset.</p><p>4. Position master power switch to on (WP 0004 00).</p><p>5. If circuit breaker CB76 has tripped again, contact supervisor.</p></div>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>168. STOPLIGHTS AND 12 VDC INDICATOR PANEL CIRCUITS DO NOT OPERATE - Continued</p>	<p>4. Check to see if stoplights and 12 VDC indicator panel illuminate.</p>	<p>6. If circuit breaker CB76 has not tripped again, perform test 4 of this malfunction.</p> <p>1. Position master power switch to on (WP 0004 00).</p> <p>2. Position main light switch to STOPLIGHT (WP 0004 00).</p> <p>3. Depress brake pedal.</p> <p>4. Check to see if stoplights illuminate.</p> <p>5. Release brake pedal.</p> <p>6. Position main light switch to OFF (WP 0004 00).</p> <p>7. Hold LAMP TEST switch in on position (WP 0004 00).</p> <p>8. Check to see if lighted indicator display illuminates.</p> <p>9. Release LAMP TEST switch.</p> <p>10. Position master power switch to off (WP 0004 00).</p> <p>11. If stoplights and 12 VDC indicator panel do not illuminate, notify Field Maintenance.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
169. DUMP BED UP/DOWN SWITCH DOES NOT ILLUMINATE.	<ol style="list-style-type: none"> <li>1. Check to see if auxiliary panel illuminates (WP 0005 00).</li> <li>2. Check to see if DUMP BED UP/DOWN switch illuminates (WP 0005 00).</li> </ol>	<p>If auxiliary panel does not illuminate, perform Malfunction 20 (Auxiliary Panel Does Not Illuminate).</p> <p>If DUMP BED UP/DOWN switch does not illuminate, notify Field Maintenance.</p>
170. DUMP BED TAILGATE RELEASE SWITCH DOES NOT ILLUMINATE	<ol style="list-style-type: none"> <li>1. Check to see if auxiliary panel illuminates (WP 0005 00).</li> <li>2. Check to see if dump bed tailgate release switch illuminates (WP 0005 00).</li> </ol>	<p>If auxiliary panel does not illuminate, perform Malfunction 20 (Auxiliary Panel Does Not Illuminate).</p> <p>If dump bed tailgate release switch does not illuminate, notify Field Maintenance.</p>
171. REMOTE START DOES NOT OPERATE (VEHICLE S/N 18,550 OR HIGHER).	Check to see if engine starts using instrument panel controls.	<ol style="list-style-type: none"> <li>1. Position master power switch to on (WP 0004 00).</li> <li>2. Attempt to start engine (WP 0016 00).</li> <li>3. If engine starts, check to see if any instrument panel gages operate. If engine starts and any gages operate, Notify Field Maintenance.</li> <li>4. Position master power switch to off (WP 0004 00).</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
172. 24 VOLTS GAGE DOES NOT OPERATE OR IS INACCURATE (VEHICLE S/N 100,001 TO 199,999)	1. Does any other electrical gage operate?	1. Position master power switch to on (WP 0004 00).  2. Check to see if any other electrical gages operate.  3. Position master power switch to off (WP 0004 00).  4. If no other electrical gage operates, perform Malfunction 163 (All Electrical Gages Do Not Operate).  5. If other electrical gages operate, go to test 2 of this malfunction.
	2. Does OIL PRESS gage operate?	1. Start engine (WP 0020 00).  2. Check to see if OIL PRESS gage operates.  3. Shut down engine (WP 0020 00).  4. If OIL PRESS gage does not operate, perform Malfunction 174 (24 VOLTS Gage, OIL PRESS Gage, WATER TEMP Gage, and Speedometer Do Not Operate).  5. If OIL PRESS gage operates, notify Field Maintenance.



**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
173. LAMP TEST SWITCH DOES NOT OPERATE (VEHICLE S/N 100,001 TO 199,999)	1. Does engine crank?	<ol style="list-style-type: none"> <li>1. Attempt to start engine (WP 0020 00).</li> <li>2. If engine does not crank, perform Malfunction 1 (Engine Does Not Crank).</li> <li>3. If engine cranks, go to test 2 of this malfunction.</li> </ol>
	2. Do lighted indicator display icons illuminate in chase pattern?	<ol style="list-style-type: none"> <li>1. Wait until vehicle has been running for 45 seconds and check lighted indicator display for icons illuminating in chase pattern.</li> <li>2. Shut down engine (WP 0020 00).</li> <li>3. If lighted indicator display icons illuminate in chase pattern, perform Malfunction 175 (Lighted Indicator Display Icons Illuminate in Chase Pattern).</li> <li>4. If lighted indicator display icons do not illuminate in chase pattern, go to test 3 of this malfunction.</li> </ol>
	3. Do stoplights illuminate?	<ol style="list-style-type: none"> <li>1. Position master power switch to on (WP 0004 00).</li> <li>2. Position main light switch to STOPLIGHT (WP 0004 00).</li> <li>3. Depress brake pedal.</li> <li>4. Check to see if stoplights illuminate.</li> </ol>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

**ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
173. LAMP TEST SWITCH DOES NOT OPERATE (VEHICLE S/N 100,001 TO 199,999) - Continued		5. Release brake pedal. 6. Position main light switch to OFF (WP 0004 00). 7. Position master power switch to off (WP 0004 00). 8. If stoplights do not illuminate, perform Malfunction 168 (Stoplights and 12 VDC Indicator Panel Circuits Do Not Operate). 9. If stoplights illuminate, notify Field Maintenance.
174. 24 VOLTS GAGE, OIL PRESS GAGE, WATER TEMP GAGE, AND SPEEDOMETER DO NOT OPERATE (VEHICLE S/N 100,001 TO 199,999)		Notify Field Maintenance.
175. Lighted Indicator Display Icons Illuminate in Chase Pattern (VEHICLE S/N 100,001 TO 199,999)	1. Do any electrical gages operate?	1. Position master power switch to on (WP 0004 00). 2. Check to see if any electrical gages operate. 3. Position master power switch to off (WP 0004 00). 4. If no electrical gages operate, perform Malfunction 163 (All Electrical Gages Do Not Operate). 5. If electrical gages operate, notify Field Maintenance.


**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
176. 12 VOLTS GAGE DOES NOT OPERATE OR IS INACCURATE (VEHICLE S/N 100,001 TO 199,999)	1. Does any other electrical gage operate?	1. Position master power switch to on (WP 0004 00).  2. Check to see if any other electrical gages operate.  3. Position master power switch to off (WP 0004 00).  4. If no other electrical gage operates, perform Malfunction 163 (All Electrical Gages Do Not Operate).  5. If other electrical gages operate, notify Field Maintenance.
177. Two-Way Troop Intercom Does Not Operate (VEHICLE S/N 100,001 TO 199,999)	1. Have Preventative Maintenance Checks and Services (PMCS) Before checks been performed?  2. Is either cab or cargo two-way troop intercom LED illuminated red or green?	1. If PMCS Before checks have not been performed, perform M1078 A1 Series Preventative Maintenance Checks and Services (PMCS) (WP 0103 00) Before checks.  2. If PMCS Before checks have been performed, go to test 2 of this malfunction.  1. Position Manual Battery Disconnect Switch (MBDS) to connect (ON) (WP 0011 00).  2. Check cab and cargo two-way intercom LEDs.

# **ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00**

## **ELECTRICAL SYSTEM – Continued**

**Table 3. Electrical System Troubleshooting Procedures - Continued.**
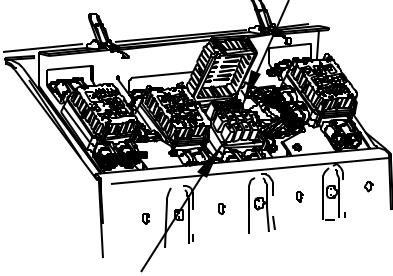
<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
177. Two-Way Troop Intercom Does Not Operate (VEHICLE S/N 100,001 TO 199,999) - Continued		<p>3. If either cab or cargo LED is illuminated, notify Field Maintenance.</p> <p>4. If neither cab nor cargo LED is illuminated, go to test 3 of this malfunction.</p>
<p style="text-align: center;"><b>WARNING</b></p> <p>Remove rings, bracelets, wristwatches, neck chains, and any other jewelry before working around vehicle. Jewelry may catch on equipment or may short across an electrical circuit or battery terminal. Failure to comply may result in serious injury or death to personnel.</p>		
	3. Is circuit breaker CB42 tripped?	<p>1. Remove PDP cover (WP 0113 00).</p> <p>2. Open PDM 3.</p>
<p style="text-align: center;">CIRCUIT BREAKER CB42</p>  <p style="text-align: center;">PDM 3</p>		
		<p style="text-align: center;">02X39S02</p> <p>3. If circuit breaker CB42 is tripped, push button to reset.</p>

**ELECTRICAL SYSTEM TROUBLESHOOTING - Continued 0080 00****ELECTRICAL SYSTEM – Continued****Table 3. Electrical System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
177. Two-Way Troop Intercom Does Not Operate (VEHICLE S/N 100,001 TO 199,999) - Continued		<p>4. Check circuit breaker CB42 to see if it is tripped again.</p> <p>5. If circuit breaker CB42 is tripped, contact supervisor.</p> <p>6. If circuit breaker CB42 is not tripped, notify Field Maintenance.</p>
178. TRAILER ABS INDICATOR DOES NOT ILLUMINATE (VEHICLE S/N 100,001 TO 199,999)	1. Check to see if LAMP TEST switch illuminates TRAILER ABS indicator (WP 0016 00).	<p>1. If TRAILER ABS indicator does not illuminate, perform Malfunction 144 (Lamp Test Switch Does Not Operate).</p> <p>2. If TRAILER ABS indicator illuminates, notify Field Maintenance.</p>

**END OF WORK PACKAGE.**



**TRANSMISSION SYSTEM TROUBLESHOOTING****0081 00****THIS WORK PACKAGE COVERS:**

Transmission System

**INITIAL SETUP:****Maintenance Level**

Operator

**References**

WP 0103 00

**TRANSMISSION SYSTEM****Table 1. Transmission System Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. WTEC III TRANSMISSION PUSHBUTTON SHIFT SELECTOR (TPSS) LED FLASHES SELECTED GEAR AND/OR TRANSMISSION DOES NOT SHIFT GEARS	1. Check transmission oil level (WP 0103 00, Table 3, Item 7).  2. Check transmission oil for contamination.	1. If transmission oil level is low, add transmission oil (WP 0103 00, Table 3, Item 7).  2. If transmission oil level is high, notify Field Maintenance.  1. If transmission oil is contaminated, notify Field Maintenance.  2. If TPSS display window still flashes selected gear and/or transmission still does not shift gears, notify Field Maintenance.
2. TRANSMISSION UNUSUALLY NOISY WHEN OPERATING	1. Check transmission oil level (WP 0103 00, Table 3, Item 7).	1. If transmission oil level is low, add transmission oil (WP 0103 00, Table 3, Item 7).

# TRANSMISSION SYSTEM TROUBLESHOOTING


## - Continued

0081 00

## TRANSMISSION SYSTEM - Continued

Table 1. Transmission System Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. TRANSMISSION UNUSUALLY NOISY WHEN OPERATING  - Continued	2. Check transmission oil for contamination.	2. If transmission oil level is high, notify Field Maintenance.  1. If transmission oil is contaminated, notify Field Maintenance.  2. If transmission is still unusually noisy when operating, notify Field Maintenance.
3. WTEC III TRANSMISSION PUSHBUTTON SHIFT SELECTOR (TPSS) DOES NOT ILLUMINATE/ OPERATE	1. Check to see if circuit breakers CB43 and CB79 are tripped.	1. Remove PDP cover (WP 0114 00).  2. If circuit breaker(s) CB43 or CB79 is tripped, push button to reset.

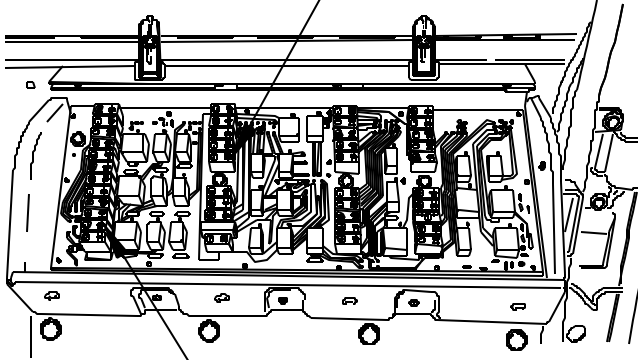

The diagram shows a top-down view of the transmission system's internal components. Two circuit breakers are highlighted with leader lines: 'CIRCUIT BREAKER CB43' at the top and 'CIRCUIT BREAKER CB79' at the bottom. The components are housed in a metal enclosure with various electrical connections and wiring visible.

7700801 -



**TRANSMISSION SYSTEM TROUBLESHOOTING****0081 00****TRANSMISSION SYSTEM****Table 1. Transmission System Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
3. WTEC III TRANSMISSION  PUSHBUTTON SHIFT SELECTOR  (TPSS) DOES NOT ILLUMINATE/ OPERATE - Continued	2. Check to see if WTEC III TPSS illuminates and operates.	3. Position master power switch to on (WP 0004 00).  4. Check circuit breaker(s) to see if it is tripped again.  5. Position master power switch to off (WP 0004 00).  6. If circuit breaker(s) is tripped, notify Field Maintenance.  7. Install PDP cover (WP 0113 00).  1. Position master power switch to on (WP 0004 00).  2. Position main light switch to SER DRIVE (WP 0004 00).  3. Position dimmer switch to maximum brightness (WP 0004 00).  4. Check to see if WTEC III TPSS illuminates.  5. Position main light switch to off (WP 0004 00).  6. Position master power switch to off (WP 0004 00).  7. If WTEC III TPSS does not illuminate, notify Field Maintenance.

**TRANSMISSION SYSTEM TROUBLESHOOTING**  
- Continued

0081 00

**TRANSMISSION SYSTEM - Continued**

Table 1. Transmission System Troubleshooting Procedures - Continued.

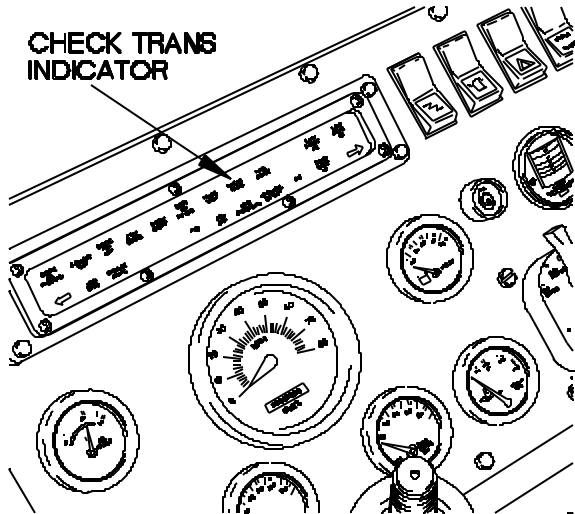
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
4. CHECK TRANS INDICATOR REMAINS ILLUMINATED	1. Check to see if CHECK TRANS indicator remains illuminated after test drive.	1. Start engine (WP 0018 00).  2. Test drive vehicle.  3. Check to see if CHECK TRANS indicator remains illuminated.
<p>STEERING WHEEL REMOVED FOR CLARITY</p>  <p>CHECK TRANS INDICATOR</p> <p>7700802-</p>		4. Shut down engine (WP 0018 00).  5. If CHECK TRANS indicator remains illuminated, notify Field Maintenance.

**TRANSMISSION SYSTEM TROUBLESHOOTING**  
- Continued

0081 00

**TRANSMISSION SYSTEM - Continued**

**Table 1. Transmission System Troubleshooting Procedures - Continued.**

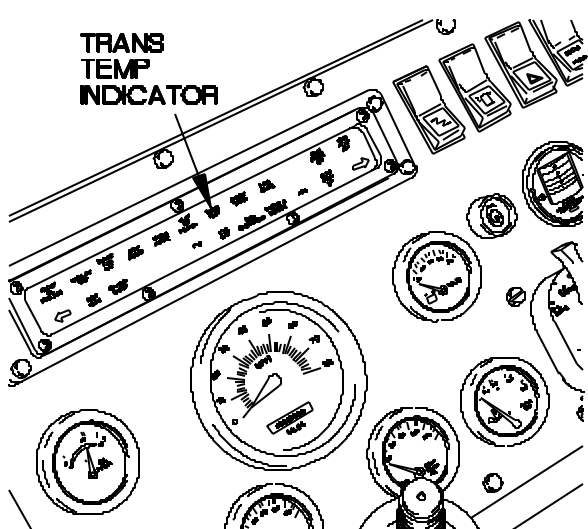MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. TRANS TEMP INDICATOR REMAINS ILLUMINATED</p> <p>STEERING WHEEL REMOVED FOR CLARITY</p>  <p>7700803-</p>	<p>1. Check to see if TRANS TEMP indicator remains illuminated after test drive.</p>	<p>1. Start engine (WP 0018 00).</p> <p>2. Test drive vehicle.</p> <p>3. Check to see if TRANS TEMP indicator remains illuminated.</p> <p>4. Shut down engine (WP 0018 00).</p> <p>5. If TRANS TEMP indicator remains illuminated, notify Field Maintenance.</p>

**END OF WORK PACKAGE.**



## DRIVE SHAFT TROUBLESHOOTING

0082 00

### THIS WORK PACKAGE COVERS:

Drive Shaft

### INITIAL SETUP:

#### Maintenance Level

Operator

#### Personnel

Two


#### Equipment Conditions

Engine running (WP 0018 00).

### DRIVE SHAFT

Table 1. Drive Shaft Troubleshooting Procedures.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
DRIVE SHAFT OR UNIVERSAL JOINTS UNUSUALLY NOISY WHEN OPERATING	Verify that drive shaft or universal joint is unusually noisy.	<ol style="list-style-type: none"> <li>Road test vehicle.</li> <li>Listen for unusually loud noise from drive shaft or universal joint.</li> <li>If drive shaft or universal joint is unusually noisy notify Field Maintenance.</li> </ol>

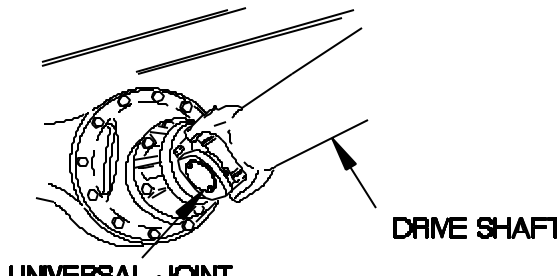

UNIVERSAL JOINT

DRIVE SHAFT

7800801 -

END OF WORK PACKAGE.



**POWER TAKE-OFF (PTO) TROUBLESHOOTING**

**0083 00**

**THIS WORK PACKAGE COVERS:**

Power Take-Off (PTO)

**INITIAL SETUP:**

**Maintenance Level**

Operator


**Conditions**

Engine running (WP 0018 00).

Engine at low idle (WP 0018 00).

**POWER TAKE-OFF (PTO)**

**Table 1. Power Take-Off (PTO) Troubleshooting Procedures.**

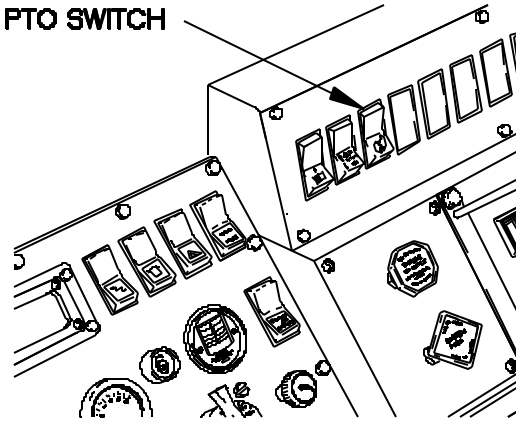MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. POWER TAKE-OFF (PTO) DOES NOT ENGAGE	Check to see if PTO engages.	1. Position PTO switch to on.  2. Check to see if PTO engages.
		3. Position PTO switch to off. 4. Shut down engine (WP 0018 00).

**POWER TAKE-OFF (PTO) TROUBLESHOOTING  
- Continued****0083 00****Table 1. Power Take-Off (PTO) Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. POWER TAKE-OFF (PTO) DOES NOT ENGAGE - Continued		5. If PTO does not engage, perform Electrical System Troubleshooting (WP 0075 00, Malfunction 96, Power Take-Off (PTO) Does Not Engage).

**END OF WORK PACKAGE.**



# **BRAKE SYSTEM TROUBLESHOOTING**

0084 00

## **THIS WORK PACKAGE COVERS:**

Brake System

## **INITIAL SETUP:**

### **Maintenance Level**

Operator

### **References**

WP 0018 00

## **BRAKE SYSTEM**

Table 1. Brake System Troubleshooting Procedures.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. EXCESSIVE BRAKING DISTANCE	1. Check to see if air tanks are pressurized	1. Start engine (WP 0018 00).  2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.  3. Shut down engine (WP 0018 00).

STEERING WHEEL REMOVED FOR CLARITY

FRONT BRAKE AIR PRESSURE GAGE

REAR BRAKE AIR PRESSURE GAGE

8000801-



**BRAKE SYSTEM TROUBLESHOOTING - Continued**

**0084 00**

**BRAKE SYSTEM - Continued**

**Table 1. Brake System Troubleshooting Procedures - Continued.**




MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. REAR BRAKES DO NOT APPLY - Continued</p>		<p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p> <p>3. Shut down engine (WP 0018 00).</p>
<div data-bbox="358 758 1242 1270"> </div>		
	<p>2. Check to see if rear brakes apply.</p>	<p>4. Check to see if front brakes apply.</p> <p>5. If front brakes do not apply, perform Brake System troubleshooting (WP 0083 00, Malfunction 1, Excessive Braking Distance).</p> <p>If rear brakes still do not apply, notify Field Maintenance.</p>

# BRAKE SYSTEM TROUBLESHOOTING - Continued

0084 00

## BRAKE SYSTEM - Continued

Table 1. Brake System Troubleshooting Procedures - Continued.

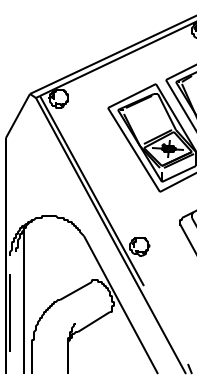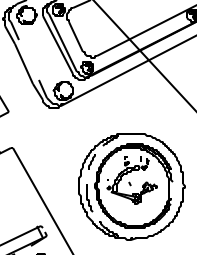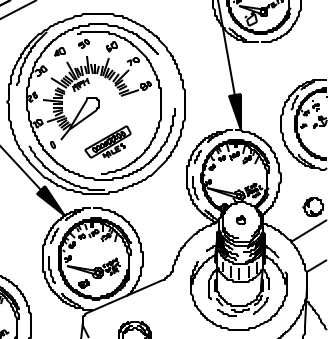
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. PARKING BRAKE DOES NOT RELEASE	1. Check to see if air tanks are pressurized.	1. Start engine (WP 0018 00).  2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.  3. Shut down engine (WP 0018 00).
<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>STEERING WHEEL REMOVED FOR CLARITY</p>  </div> <div style="text-align: center;"> <p>FRONT BRAKE AIR PRESSURE GAGE</p>  </div> <div style="text-align: center;"> <p>REAR BRAKE AIR PRESSURE GAGE</p>  </div> </div> <p style="text-align: right; font-size: small;">8000804 -</p>		
4. FRONT BRAKES OVERHEAT	1. Check to see if air tanks are pressurized.  2. Check to see if parking brake releases.	4. If either FRONT BRAKE AIR or REAR BRAKE AIR pressure gages do not register 120 psi, notify Field Maintenance.  If parking brake will not release, notify Field Maintenance.  1. Start engine (WP 0018 00).

# BRAKE SYSTEM TROUBLESHOOTING - Continued

0084 00

## BRAKE SYSTEM - Continued

Table 1. Brake System Troubleshooting Procedures - Continued.

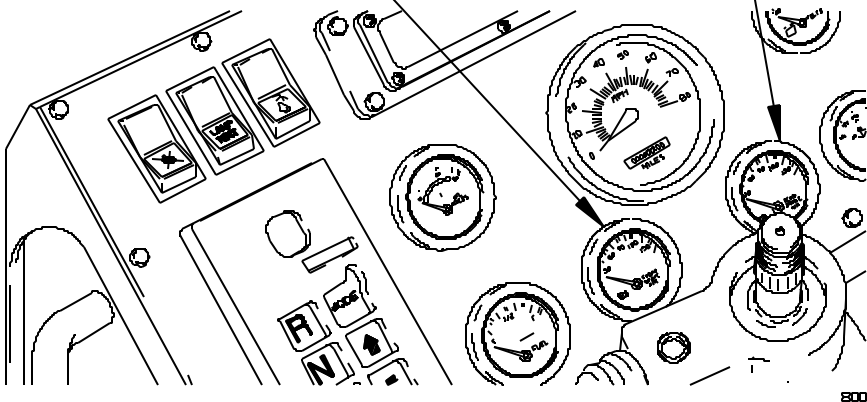
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
4. FRONT BRAKES OVERHEAT - Continued		<ol style="list-style-type: none"> <li>Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</li> <li>Shut down engine (WP 0018 00).</li> <li>If either FRONT BRAKE AIR or REAR BRAKE AIR pressure gages do not register 120 psi, notify Field Maintenance.</li> </ol>
<div> <div>STEERING WHEEL REMOVED FOR CLARITY</div> <div>FRONT BRAKE AIR PRESSURE GAGE</div> <div>REAR BRAKE AIR PRESSURE GAGE</div>  </div>		
5. VEHICLE BRAKES UNEVENLY, OR BRAKES PULL TO ONE SIDE OR GRAB	<ol style="list-style-type: none"> <li>Check to see if air tanks are pressurized.</li> </ol>	<ol style="list-style-type: none"> <li>Start engine (WP 0018 00).</li> </ol>

**BRAKE SYSTEM TROUBLESHOOTING - Continued**

**0084 00**

**BRAKE SYSTEM - Continued**

**Table 1. Brake System Troubleshooting Procedures - Continued.**

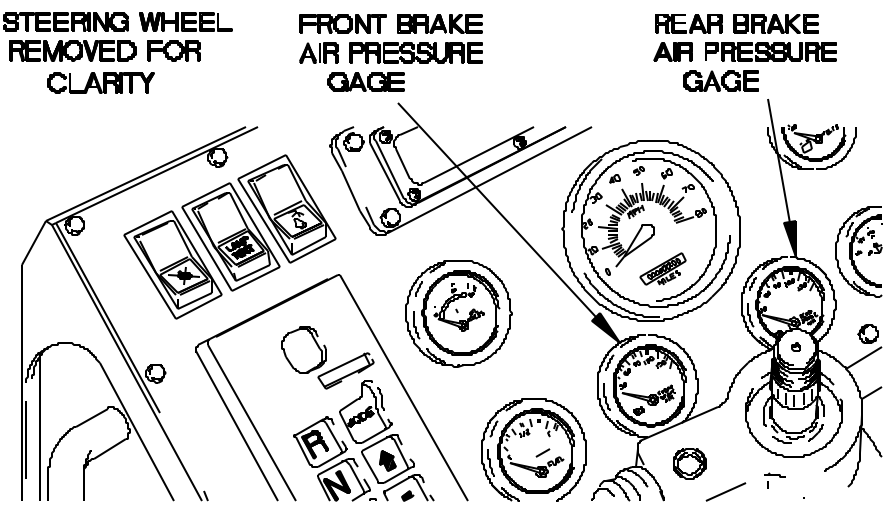
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. VEHICLE BRAKES UNEVENLY, OR BRAKES PULL TO ONE SIDE OR GRAB - Continued</p>		<p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p> <p>3. Shut down engine (WP 0018 00)</p> <p>4. If either FRONT BRAKE AIR or REAR BRAKE AIR pressure gages do not register 120 psi, notify Field Maintenance.</p>
<p>STEERING WHEEL REMOVED FOR CLARITY</p> 	<p>2. Check to see if vehicle brakes properly.</p>	<p>1. Start engine (WP 0018 00).</p> <p>2. Road test vehicle.</p>

**BRAKE SYSTEM TROUBLESHOOTING - Continued**

**0084 00**

**BRAKE SYSTEM - Continued**

**Table 1. Brake System Troubleshooting Procedures - Continued.**

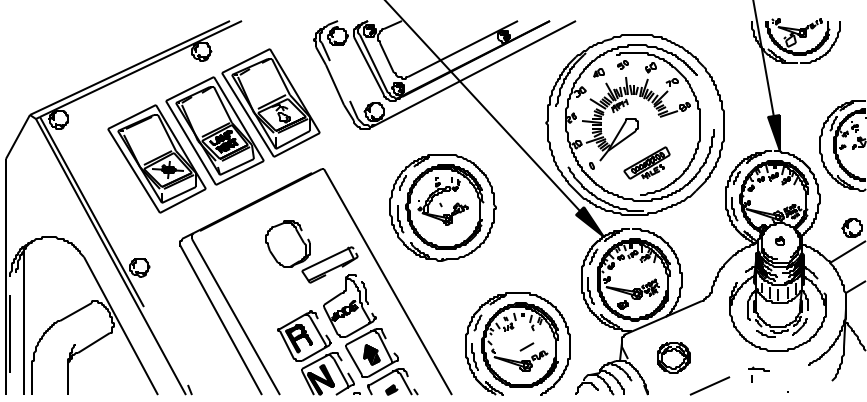
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. VEHICLE BRAKES UNEVENLY, OR BRAKES PULL TO ONE SIDE, OR GRAB - Continued</p> <p>6. FRONT BRAKES DO NOT APPLY</p>	<p>1. Check to see if rear breaks apply.</p>	<p>3. If vehicle brakes unevenly, brakes pull to one side or grab, perform Steering System Troubleshooting (WP 0090 00, Malfunction 2, Wanders, Pulls to One Side, or Shimmies)..</p> <p>4. Shut down engine (WP 0018 00)</p> <p>1. Start engine (WP 0018 00).</p> <p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p>
<p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p> <p><b>FRONT BRAKE AIR PRESSURE GAGE</b></p>  <p><b>REAR BRAKE AIR PRESSURE GAGE</b></p> <p>8000807-</p>		<p>3. Shut down engine (WP 0018 00).</p> <p>4. Check to see if rear brakes apply.</p>

**BRAKE SYSTEM TROUBLESHOOTING - Continued**

**0084 00**

**BRAKE SYSTEM - Continued**

**Table 1. Brake System Troubleshooting Procedures - Continued.**

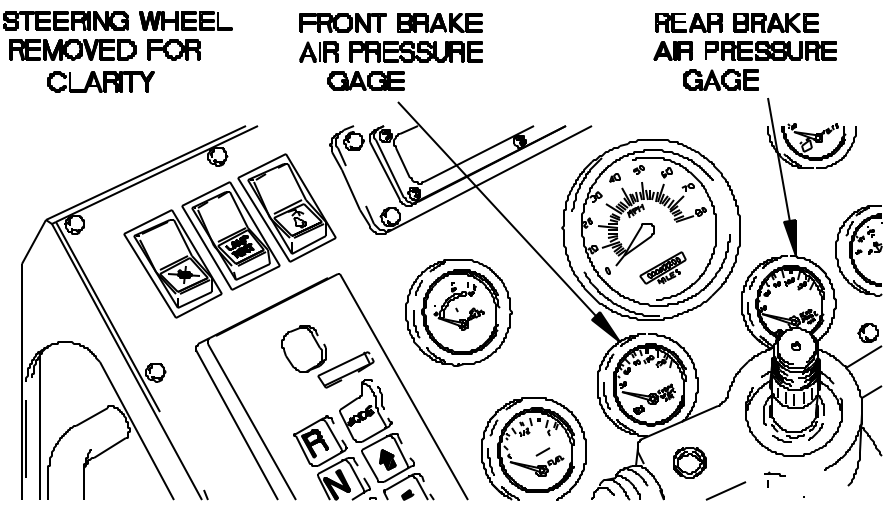MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. FRONT BRAKES DO NOT APPLY - Continued</p> <p>7. REAR BRAKES OVERHEAT</p>	<p>2. Check to see if front brakes apply.</p> <p>1. Check to see if air tanks are pressurized.</p>	<p>5. If rear brakes do not apply perform Brake System, troubleshooting (WP 0083 00 Malfunction 1, Excessive Braking Distance).</p> <p>If front brakes do not apply, notify Field Maintenance.</p> <p>1. Start engine (WP 0018 00).</p> <p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p>
<p>STEERING WHEEL REMOVED FOR CLARITY</p> 		<p>3. Shut down engine (WP 0018 00).</p>




**BRAKE SYSTEM TROUBLESHOOTING - Continued**

**0084 00**

**BRAKE SYSTEM - Continued**

**Table 1. Brake System Troubleshooting Procedures - Continued.**

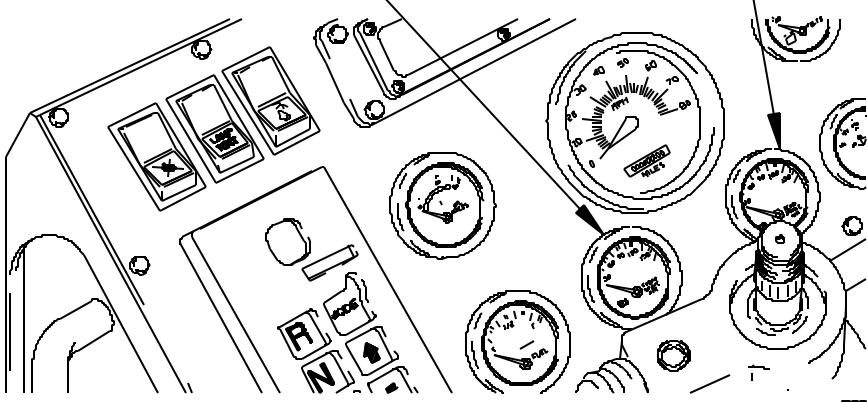MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>7. REAR BRAKES OVERHEAT - Continued</p> <p>8. PARKING BRAKE DOES NOT APPLY</p>	<p>2. Check to see if rear brakes overheat.</p> <p>1. Check to see if rear brakes apply.</p>	<p>4. If either FRONT BRAKE AIR or REAR BRAKE AIR pressure gages do not register 120 psi, notify Field Maintenance.</p> <p>If rear brakes overheat, notify Field Maintenance.</p> <p>1. Start engine (WP 0018 00).</p> <p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p>
<p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p> <p><b>FRONT BRAKE AIR PRESSURE GAGE</b></p> <p><b>REAR BRAKE AIR PRESSURE GAGE</b></p>  <p>8000809-</p>		<p>3. Shut down engine (WP 0018 00).</p> <p>4. Check to see if rear brakes apply.</p>

**BRAKE SYSTEM TROUBLESHOOTING - Continued**


**0084 00**

**BRAKE SYSTEM - Continued**

**Table 1. Brake System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
8. PARKING BRAKE DOES NOT APPLY - Continued	2. Check to see if parking brake applies.	5. If rear brakes do not apply, perform Brake System troubleshooting (WP 0083 00 Malfunction 2, Rear Brakes Do Not Apply).  If parking brake does not apply, notify Field Maintenance.  Notify Field Maintenance.
9. BRAKE SYSTEM LOSES AIR WHEN SERVICE BRAKES ARE APPLIED		
10. ABS INDICATOR REMAINS ILLUMINATED	1. Check to see if ABS indicator remains illuminated after test drive.	1. Start engine (WP 0018 00).  2. Test drive vehicle.  3. Check to see if ABS indicator remains illuminated.

STEERING WHEEL  
REMOVED FOR  
CLARITY

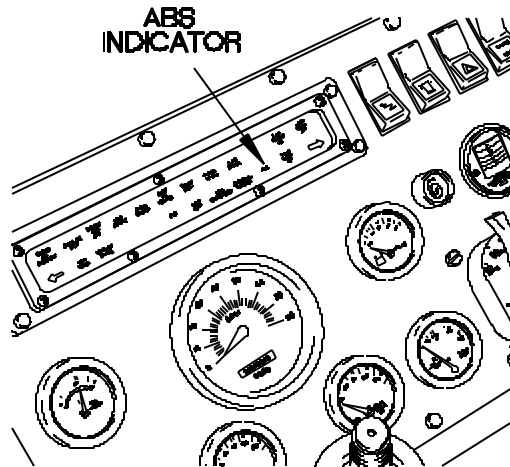

8000810-

**BRAKE SYSTEM TROUBLESHOOTING - Continued****0084 00****BRAKE SYSTEM - Continued****Table 1. Brake System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
10. ABS INDICATOR REMAINS ILLUMINATED - Continued		4. Shut down engine (WP 0018 00).  5. If ABS indicator remains illuminated, notify Field Maintenance.

**END OF WORK PACKAGE.**



## AIR SYSTEM TROUBLESHOOTING

0085 00

### THIS WORK PACKAGE COVERS:

Air System

### INITIAL SETUP:

#### Maintenance Level

Operator

#### References

WP 0018 00

WP 0021 00

### AIR SYSTEM

Table 1. Air System Troubleshooting Procedures.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. AIR SYSTEM LOSES PRESSURE DURING OPERATION/ SLOW AIR PRESSURE BUILDUP	Check to see if air system loses pressure during operation or has slow air pressure buildup.	1. Start engine (WP 0018 00).  2. Note readings on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages (WP 0018 00).  3. If air system loses pressure during operation or has slow air pressure buildup, notify Field Maintenance.  4. Shut down engine (WP 0018 00).
2. LARGE QUANTITY OF MOISTURE EXPELLED FROM AIR RESERVOIRS	Check to see if air tanks expel large quantity of moisture.	1. Start engine (WP 0018 00).


**AIR SYSTEM TROUBLESHOOTING - Continued**

**0085 00**

**AIR SYSTEM - Continued**

**Table 1. Air System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. LARGE QUANTITY OF MOISTURE EXPELLED FROM AIR RESERVOIR - Continued</p> <p>3. AIR DRYER PURGES CONSTANTLY</p>	<p>Check to see if air dryer constantly purges.</p>	<p>2. Open drain cock on bottom of air tanks and check for large quantities of moisture being expelled from air tanks.</p> <p>3. If air tanks expel large quantity of moisture, notify Field Maintenance.</p> <p>4. Shut down engine (WP 0018 00).</p> <p>1. Start engine (WP 0018 00).</p> <p>2. Check air dryer for continual purging.</p> <p>3. If air dryer constantly purges, notify Field Maintenance.</p> <p>4. Shut down engine (WP 0018 00).</p>

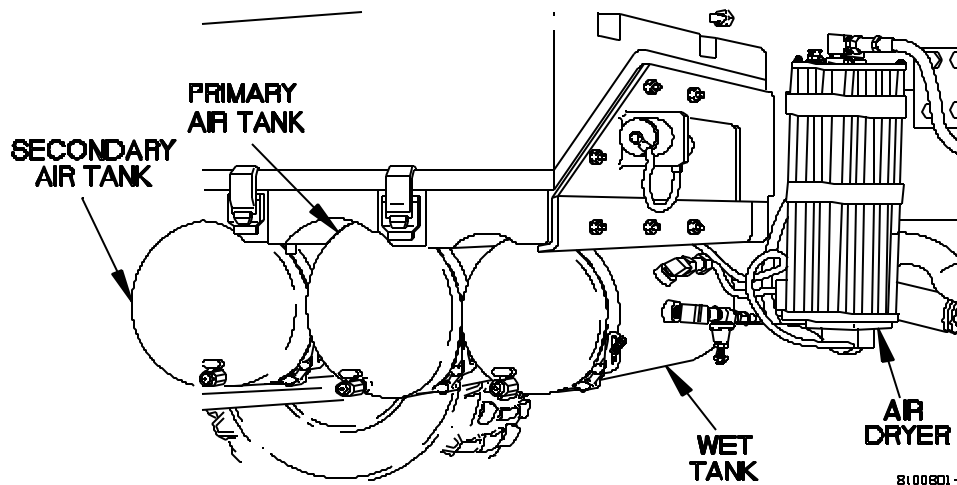


**AIR SYSTEM TROUBLESHOOTING - Continued**

**0085 00**

**AIR SYSTEM - Continued**

**Table 1. Air System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>4. NO AIR PRESSURE OR LOW AIR PRESSURE PRESENT AT REAR GLADHANDS</p>	<p>Check to see if no air pressure or low air pressure is present at rear gladhands.</p>	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Check air pressure at rear gladhands.</li> <li>3. If no air pressure or low air pressure is present at rear gladhands, notify Field Maintenance.</li> <li>4. Shut down engine (WP 0018 00).</li> </ol>

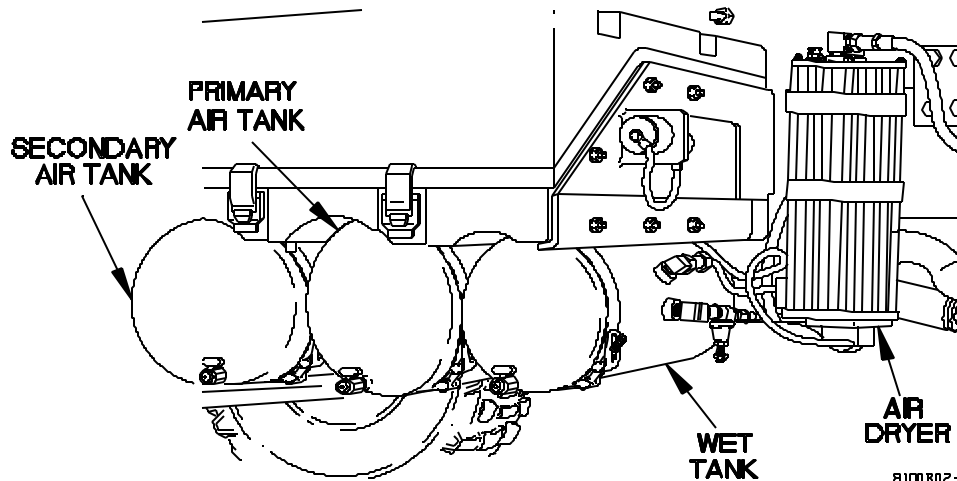

**AIR SYSTEM TROUBLESHOOTING - Continued**

**0085 00**

**AIR SYSTEM - Continued**

**Table 1. Air System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. AIR SYSTEM PRESSURE BUILDS UP MORE THAN 120 PSI (827 kPa) (COMPRESSOR FAILS TO UNLOAD)</p>	<p>Check to see if air compressor fails to unload.</p>	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Allow engine to idle until 120 psi (827 kPa) or more is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</li> <li>3. If air system pressure builds to more than 120 psi (827 kPa), notify Field Maintenance.</li> <li>4. Shut down engine (WP 0018 00).</li> </ol>

SERVICE GLADHAND      EMERGENCY GLADHAND

8100803-




**AIR SYSTEM TROUBLESHOOTING - Continued**

**0085 00**

**AIR SYSTEM - Continued**

**Table 1. Air System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
6. NOISY AIR COMPRESSOR OPERATION	Listen to see if air compressor operates noisily.	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00).</li> <li>2. Raise cab (WP 0021 00).</li> <li>3. Listen to see if air compressor operates noisily.</li> <li>4. If air compressor operates noisily, notify Field Maintenance.</li> <li>5. Lower cab (WP 0021 00).</li> <li>6. Shut down engine (WP 0018 00).</li> </ol>

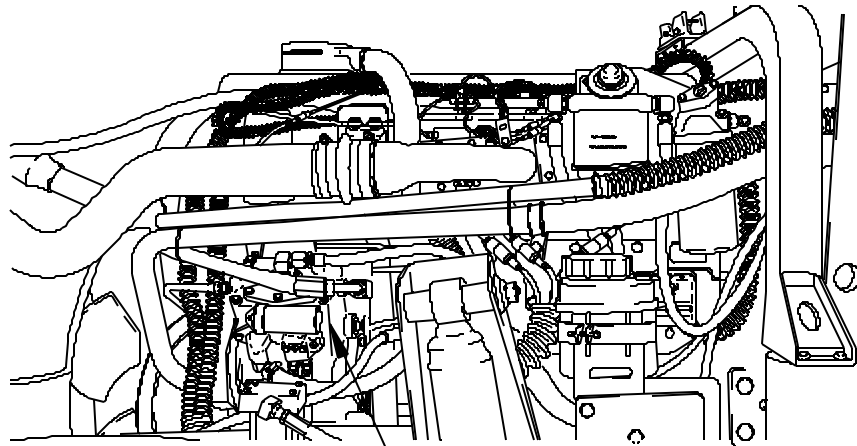

**AIR COMPRESSOR**

B100B03-

**END OF WORK PACKAGE.**



**WHEEL TROUBLESHOOTING****0086 00****THIS WORK PACKAGE COVERS:**

Wheel

**INITIAL SETUP:****Maintenance Level**

Operator

**References**

WP 0018 00

WP 0022 00

**Tools/Specials Tools**Inflator-gage, Tire (Item 30,  
Table 2, WP 0117 00)

WP 0088 00

WP 0090 00

**WHEEL****Table 1. Wheel Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. TIRES WEAR UNEVENLY OR EXCESSIVELY	1. Check to see if steering operates properly.	1. Start engine (WP 0018 00).  2. Road test vehicle to check if steering operates properly.  3. If steering does not operate properly, perform Steering System Troubleshooting (WP 0091 00, Malfunction 1, Hard to Steer)
	2. Check if tire pressure is sufficient in CTIS HWY Mode.	1. Set CTIS to HWY mode (WP 0022 00).  2. Check pressures of each tire with tire inflator-gage.

**WHEEL TROUBLESHOOTING - Continued****0086 00****WHEEL - Continued****Table 1. Wheel Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. TIRES WEAR UNEVENLY OR EXCESSIVELY - Continued		3. If tire pressures are greater or less than those given below, perform CTIS Troubleshooting (WP 0083 00, Malfunction 5, Central Tire Inflation System (CTIS) ECU Lights Operate but CTIS Fails to Inflate or Deflate).  <u>All models except M1088A1 and M1089A1:</u> HWY Mode      60 psi (414 kPa)  <u>Models M1088A1 and M1089A1:</u> HWY Mode      81 psi (558 kPa)  4. Shut down Engine (WP 0018 00).  5. If tires still wear unevenly or excessively, notify Field Maintenance.


**WHEEL TROUBLESHOOTING - Continued**

**0086 00**

**WHEEL - Continued**

**Table 1. Wheel Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. WHEEL WOBBLES OR SHIMMIES	<p style="text-align: center;"><b>WARNING</b></p> <p><b>Notify Field Maintenance that lugnuts need to be tightened to 415-475 lb-ft (563-644 N·m) as soon as possible. Wheel may come loose if lugnuts are not tightened to proper torque. Failure to comply may result in serious injury or death to personnel.</b></p> <ol style="list-style-type: none"> <li>1. Check wheel studs and lugnuts for obvious looseness.</li> <li>2. Check for bent or broken studs and missing or loose lugnuts.</li> </ol>	<p>If loose, tighten.</p> <ol style="list-style-type: none"> <li>1. Notify Field Maintenance if two or more lugnuts or studs on the same wheel are missing, broken, or bent.</li> <li>2. If wheel still wobbles or shimmies, notify Field Maintenance.</li> </ol>

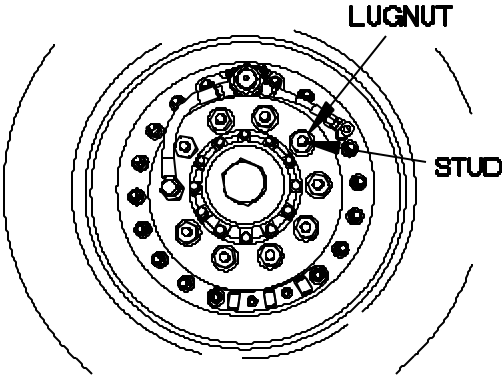

8200801 -

**END OF WORK PACKAGE.**



# HYDRAULIC SYSTEM TROUBLESHOOTING

0087 00

## THIS WORK PACKAGE COVERS:

Hydraulic System

## INITIAL SETUP:

### Maintenance Level


Operator

### References

WP 0103 00

## HYDRAULIC SYSTEM


Table 1. Hydraulic System Troubleshooting Procedures.

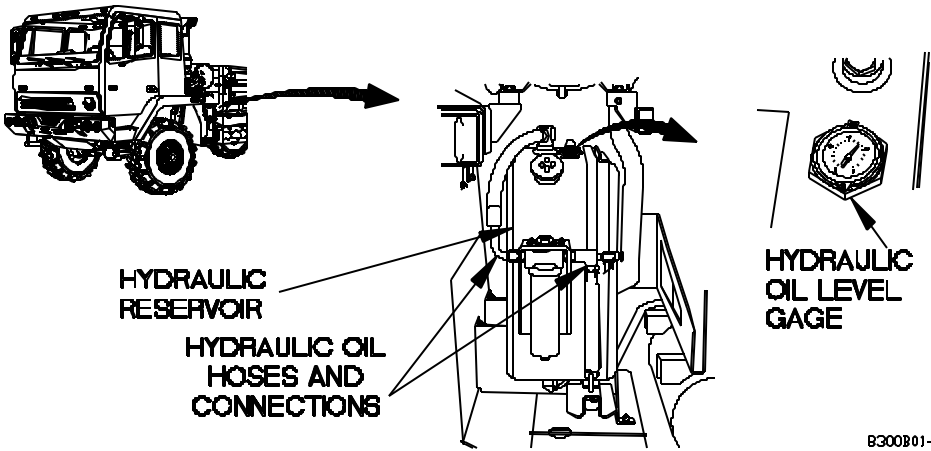MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
1. LOSS OF HYDRAULIC PRESSURE (SINGLE STAGE PUMP)	Check hydraulic oil level gage to determine hydraulic oil level (WP 0103 00, Table 3, Item 8).	1. If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p>HYDRAULIC RESERVOIR</p> <p>HYDRAULIC OIL HOSES AND CONNECTIONS</p> <p>HYDRAULIC OIL LEVEL GAGE</p> <p>B300B01-</p>		

# **HYDRAULIC SYSTEM TROUBLESHOOTING - Continued 0087 00**

## **HYDRAULIC SYSTEM - Continued**

**Table 1. Hydraulic System Troubleshooting Procedures - Continued.**

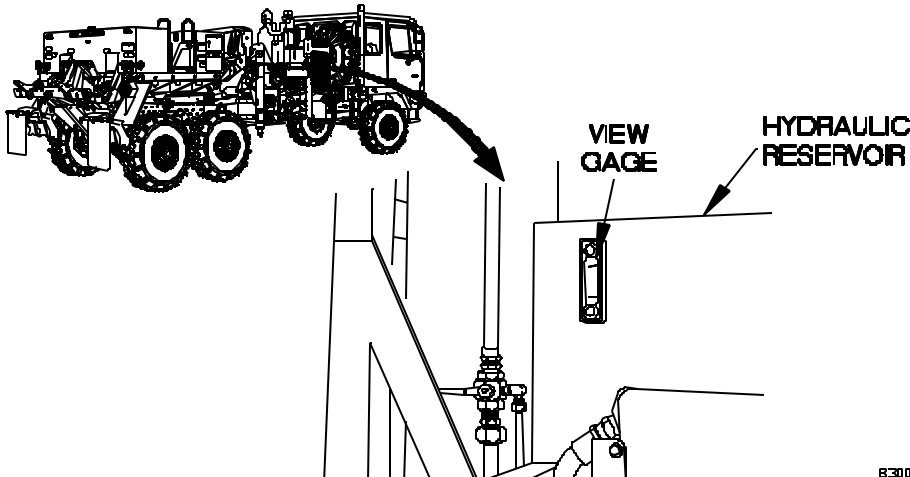MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. LOSS OF HYDRAULIC PRESSURE (SINGLE STAGE PUMP) - Continued		2. If loss of hydraulic pressure continues, notify Field Maintenance.
<b>CAUTION</b>		
Hydraulic oil level must not be above, or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may cause damage to hydraulic system.		
2. LOSS OF HYDRAULIC PRESSURE (THREE STAGE PUMP)	Check hydraulic oil level at hydraulic oil view gage.	1. If hydraulic oil view gage registers below black line, remove reservoir cap and fill hydraulic oil to appropriate level (WP 0099 00, Table 15, Item 9). 2. Install reservoir cap. 3. If loss of hydraulic pressure continues, notify Field Maintenance.
 <p>The diagram shows a side view of a vehicle with a hydraulic system. An arrow points from the vehicle's rear to a detailed view of the hydraulic reservoir. The reservoir is a vertical tank with a cap. A view gage is attached to the side of the reservoir, showing a black line indicating the correct oil level. Labels 'VIEW GAGE' and 'HYDRAULIC RESERVOIR' point to their respective parts. A hand is shown at the bottom right, possibly indicating the location of the cap or gage.</p>		

8300802-

**END OF WORK PACKAGE.**



## CENTRAL TIRE INFLATION SYSTEM (CTIS) TROUBLESHOOTING

0088 00

### THIS WORK PACKAGE COVERS:

Central Tire Inflation System (CTIS)

### INITIAL SETUP:

#### Maintenance Level

Operator

#### References

WP 0018 00

WP 0080 00

### CENTRAL TIRE INFLATION SYSTEM (CTIS)

Table 1. Central Tire Inflation System (CTIS)  
Troubleshooting Procedures

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. TWO STEADY MODE LIGHTS ILLUMINATE ON CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU		Notify Field Maintenance.
2. FOUR FLASHING LIGHTS ON CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU		Notify Field Maintenance.
3. FIVE FLASHING LIGHTS ON CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU		Notify Field Maintenance.
4. CENTRAL TIRE INFLATION SYSTEM (CTIS) REPEATEDLY RESUMES CYCLING 30 SECONDS AFTER INDICATOR LIGHTS STOP FLASHING		Notify Field Maintenance.

## CENTRAL TIRE INFLATION SYSTEM (CTIS) TROUBLESHOOTING

0088 00

### CENTRAL TIRE INFLATION SYSTEM (CTIS) - Continued

Table 1. Central Tire Inflation System (CTIS)

Troubleshooting Procedures- Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
5. CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU LIGHTS ILLUMINATE, BUT CTIS FAILS TO INFLATE OR DEFLATE TIRES		Notify Field Maintenance.
6. CTIS OVERSPEED PRESSURE CHANGE DOES NOT OPERATE		Notify Field Maintenance.
7. CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU DOES NOT ILLUMINATE		Perform Electrical System Troubleshooting (WP 0080 00, malfunction 89, Central Tire Inflation System (CTIS) Does Not Operate).
8. CENTRAL TIRE INFLATION SYSTEM (CTIS) ECU INDICATOR LIGHTS SEQUENTIALLY FLASHING		Notify Field Maintenance.
9. CTIS OVERSPEED INDICATOR ILLUMINATES SOLIDLY		Notify Field Maintenance.


# **CENTRAL TIRE INFLATION SYSTEM (CTIS) TROUBLESHOOTING**

0088 00

## **CENTRAL TIRE INFLATION SYSTEM (CTIS) - Continued**

**Table 1. Central Tire Inflation System (CTIS)**

**Troubleshooting Procedures- Continued.**

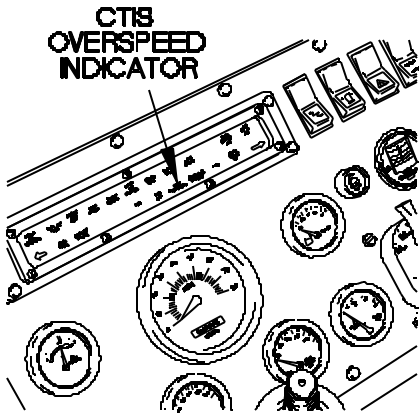MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
10. CTIS OVERSPEED INDICATOR REMAINS ILLUMINATED	1. Check to see if CTIS OVERSPEED indicator remains illuminated after test drive.	1. Start engine (WP 0018 00).  2. Test drive vehicle.  3. Check to see if CTIS OVERSPEED indicator remains illuminated.
<p style="text-align: center;"><b>STEERING WHEEL REMOVED FOR CLARITY</b></p>  <p>The diagram shows a close-up of the instrument cluster. A label 'CTIS OVERSPEED INDICATOR' points to a specific indicator light on the dashboard. Below the dashboard, several circular gauges are visible, including a speedometer and other vehicle instruments. The steering wheel is partially visible at the bottom right, with a note indicating it has been removed for clarity.</p>		
		<p style="text-align: center;">8400 801 -</p> 4. Shut down engine (WP 0018 00).  5. If CTIS OVERSPEED indicator remains illuminated, notify Field Maintenance.

**END OF WORK PACKAGE.**



---

**AXLE TROUBLESHOOTING**

---

**0089 00**

---

**THIS WORK PACKAGE COVERS:**

Axle

---

**INITIAL SETUP:**

**Maintenance Level**

Operator

---

**AXLE**

**Table 1. Axle Troubleshooting Procedures.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
AXLE DIFFERENTIAL(S) NOISY		Notify Field Maintenance.

**END OF WORK PACKAGE.**



# STEERING SYSTEM TROUBLESHOOTING

0090 00

## THIS WORK PACKAGE COVERS:

Steering System

## INITIAL SETUP:

### Maintenance Level

Operator

### References

WP 0018 00

WP 0021 00

WP 0022 00

WP 0088 00

WP 0092 00


WP 0103 00

### Tools/Special Tools

Inflator-Gage, Tire (Item 31,  
Table 2, WP 0117 00)

## STEERING SYSTEM

Table 1. Steering System Troubleshooting Procedures.

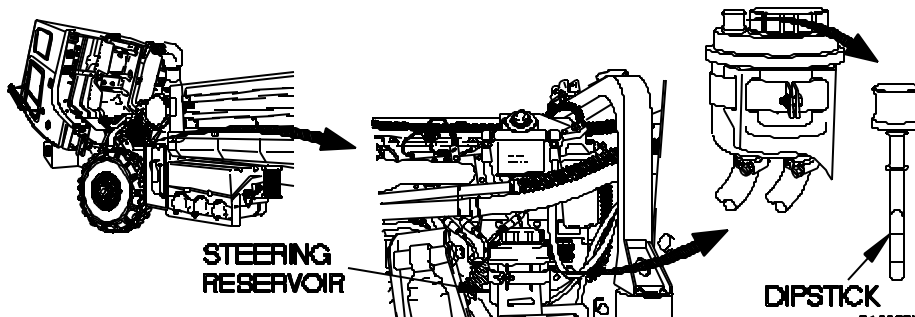MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. HARD TO STEER	1. Check that steering reservoir is filled to proper level.	1. Raise cab (WP 0021 00).
<p style="text-align: center;"><b>CAUTION</b></p> <p>Do not overfill power steering reservoir. Failure to comply may result in damage to equipment.</p>		
		2. Oil should be level with full mark on dipstick. Add oil as required (WP 0103 00, Table 4, Item 23).
		

**STEERING SYSTEM TROUBLESHOOTING - Continued 0090 00****STEERING SYSTEM - Continued****Table 1. Steering System Troubleshooting Procedure - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. HARD TO STEER - Continued	<p>2. Check if tire pressures is sufficient in CTIS HWY mode.</p> <p>3. Check to see if vehicle is hard to steer.</p>	<p>3. If oil level is over full mark, notify Field Maintenance.</p> <p>4. Lower cab (WP 0021 00).</p> <p>1. Set CTIS to HWY mode WP 0022 00, Normal CTIS Operation).</p> <p>2. Check pressure of each tire with tire inflator-gage.</p> <p>3. If tire pressures are greater than or less than those given below, perform CTIS troubleshooting (WP 0088 00, Malfunction 5, CTIS ECU Lights Illuminate but CTIS Fails to Inflate or Deflate).</p> <p><u>All Models Except M1088A1 and M1089A1:</u></p> <p>HWY Mode      60 psi (414 kPa)</p> <p><u>Models M1088A1 and M1089A1:</u></p> <p>HWY Mode      81 psi (558 kPa)</p> <p>4. Shut down engine (WP 0018 00).</p> <p>1. Start engine.</p> <p>2. Road test vehicle.</p> <p>3. If vehicle is still hard to steer, notify Field Maintenance.</p> <p>4. Shut down engine.</p>



**STEERING SYSTEM TROUBLESHOOTING - Continued 0090 00**

**STEERING SYSTEM - Continued**

**Table 1. Steering System Troubleshooting Procedure - Continued.**

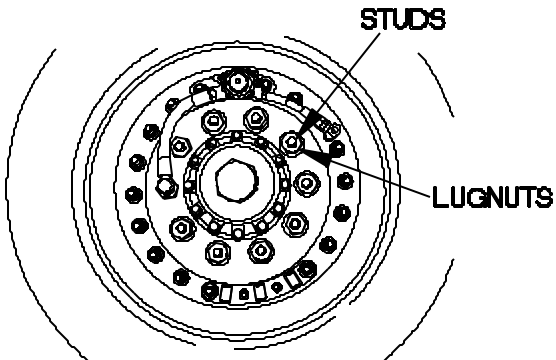MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b><u>NOTE</u></b></p> <p>Perform Brake System Troubleshooting (WP 0085 00, Malfunction 5, Vehicle Brakes Unevenly, or Brakes Pull to One Side or Grab), before starting here.</p>		
2. WANDERS, PULLS TO ONE SIDE, OR SHIMMIES	1. Check wheel studs and lugnuts for obvious looseness.	<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Notify Field Maintenance that lugnuts need to be tightened to 415-475 lb-ft (563-644 N·m) as soon as possible. Wheel may come loose if lugnuts are not tightened to proper torque. Failure to comply may result in serious injury or death to personnel.</b></p> <p>If loose, tighten.</p> <p>Notify Field Maintenance if two or more lugnuts or studs on the same wheel are missing, broken, or bent.</p>
	2. Check for bent or broken studs and missing or loose lugnuts.	
<div></div>		
	3. Check if tire pressures is sufficient in CTIS HWY mode.	1. Set CTIS to HWY mode (WP 0022, Normal CTIS Operation).

8600802 -

**STEERING SYSTEM TROUBLESHOOTING - Continued 0090 00**

**STEERING SYSTEM - Continued**

**Table 1. Steering System Troubleshooting Procedure - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. WANDERS, PULLS TO ONE SIDE, OR SHIMMIES - Continued	4. Check if vehicle wanders, pulls to one side, or shimmies.	<p>2. Check pressure of each tire with tire inflator-gage.</p> <p>3. If tire pressures are greater than or less than those given below, perform CTIS troubleshooting (WP 0088 00, Malfunction 5, CTIS ECU Lights Illuminate but CTIS Fails to Inflate or Deflate).</p> <p><u>All Models Except M1088A1 and M1089A1:</u></p> <p>HWY Mode      60 psi (414 kPa)</p> <p><u>Models M1088A1 and M1089A1:</u></p> <p>HWY Mode      81 psi (558 kPa)</p> <p>4. Shut down engine (WP 0018 00).</p> <p>1. Start engine.</p> <p>2. Road test vehicle.</p> <p>3. If vehicle still wanders, pulls to one side, or shimmies, notify Field Maintenance.</p> <p>4. Shut down engine (WP 0018 00).</p>

**STEERING SYSTEM TROUBLESHOOTING - Continued 0090 00**

**STEERING SYSTEM - Continued**

**Table 1. Steering System Troubleshooting Procedure - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. EXCESSIVE PLAY WHEN TURNING STEERING WHEEL	Check to see if vehicle has excessive play when turning steering wheel.	<ol style="list-style-type: none"> <li>1. Start engine (WP 0018 00,).</li> <li>2. Road test vehicle.</li> <li>3. If vehicle still has excessive play when turning steering wheel, notify Field Maintenance.</li> <li>4. Shut down engine (WP 0018 00).</li> </ol>
4. NO RESPONSE WHEN TURNING STEERING WHEEL	1. Check that steering reservoir is filled to proper level.	<ol style="list-style-type: none"> <li>1. Raise cab (WP 0021 00).</li> </ol> <p><b>CAUTION</b></p> <p>Do not overfill power steering reservoir. Failure to comply may result in damage to equipment.</p> <ol style="list-style-type: none"> <li>2. Oil should be level with full mark on dipstick. Add oil as required (WP 0103 00, Table 4, Item 23)</li> </ol>

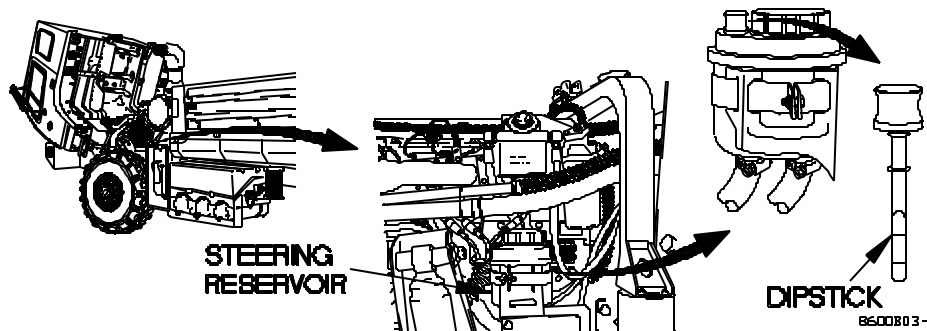

**STEERING SYSTEM TROUBLESHOOTING - Continued 0090 00****STEERING SYSTEM - Continued****Table 1. Steering System Troubleshooting Procedure - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
4. NO RESPONSE WHEN TURNING STEERING WHEEL - Continued	2. Check to see if vehicle responds when turning steering wheel.	3. If oil level is over full mark, notify Field Maintenance.  4. Lower cab (WP 0021 00). 1. Start engine (WP 0018 00).  2. Turn steering wheel all the way to left and right. 3. If vehicle does not respond when turning steering wheel, notify Field Maintenance. 4. Shut down engine (WP 0018 00).

**END OF WORK PACKAGE.**

# FIFTH WHEEL TROUBLESHOOTING

0091 00

## THIS WORK PACKAGE COVERS:

Fifth Wheel

## INITIAL SETUP:

### Maintenance Level

Operator

### References

WP 0103 00

## FIFTH WHEEL

Table 1. Fifth Wheel Troubleshooting Procedures.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. FIFTH WHEEL DOES NOT LOCK WHEN COUPLING TRAILER TO TRACTOR	<ol style="list-style-type: none"> <li>1. Check fifth wheel for proper lubrication (WP 0103 00, Table 12, Item 1).</li> <li>2. Check that coupler jaws lock open.</li> </ol>	<p>Lubricate fifth wheel (WP 0103 00, Table 12, Item 1).</p> <ol style="list-style-type: none"> <li>1. Pull out secondary lock release handle and latch in position.</li> <li>2. Pull out primary lock release two times.</li> <li>3. Put primary lock release handle in locked position.</li> <li>4. Check that coupler jaws stay open with primary lock release handle in locked position.</li> </ol>

8700B01-

**FIFTH WHEEL TROUBLESHOOTING - Continued**

**0091 00**

**FIFTH WHEEL TROUBLESHOOTING - Continued**

**Table 1. Fifth Wheel Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. FIFTH WHEEL DOES NOT LOCK WHEN COUPLING TRAILER TO TRACTOR - Continued		5. If fifth wheel still does not lock when coupling trailer to tractor, notify Field Maintenance.
2. EXCESSIVE MOVEMENT OF TRAILER KING PIN IN FIFTH WHEEL		Notify Field Maintenance.
3. FIFTH WHEEL DOES NOT UNLOCK WHEN DISCONNECTING TRAILER FROM TRACTOR	1. Check fifth wheel for proper lubrication (WP 0103 00, Table 12, Item 1).	Lubricate fifth wheel (WP 0103 00, Table 12, Item 1).
	2. Check that coupler jaws lock open.	1. Pull out secondary lock release handle and latch in position. 2. Pull out primary lock release two times. 3. Put primary lock release handle in locked position. 4. Check that coupler jaws stay open with primary lock release handle in locked position.

B700802-

**FIFTH WHEEL TROUBLESHOOTING - Continued****0091 00****FIFTH WHEEL TROUBLESHOOTING - Continued****Table 1. Fifth Wheel Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
3. FIFTH WHEEL DOES NOT UNLOCK WHEN DISCONNECTING TRAILER FROM TRACTOR - Continued		5. If fifth wheel still does not lock when coupling trailer to tractor, notify Field Maintenance.
4. FIFTH WHEEL SLIDING MECHANISM DOES NOT OPERATE		Notify Field Maintenance.

**END OF WORK PACKAGE.**





**SUSPENSION SYSTEM TROUBLESHOOTING****0092 00****THIS WORK PACKAGE COVERS:**

Suspension System

**INITIAL SETUP:****Maintenance Level**

Operator

**References**

WP 0084 00

WP 0090 00

**SUSPENSION SYSTEM****Table 1. Suspension System Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
<p style="text-align: center;"><u><b>NOTE</b></u></p> <p>Perform (WP 0090 00, Malfunction 2, Wanders, Pulls to One Side, or Shimmies), before starting here.</p>		
1. WANDERS, PULLS TO ONE SIDE, OR SHIMMIES		If vehicle wanders, pulls to one side, or shimmies, notify Field Maintenance.
2. LEANS TO ONE SIDE, OR REAR OF VEHICLE SAGS	Check to see if vehicle leans to one side or rear of vehicle sags.	If vehicle leans to one side or rear of vehicle sags, notify Field Maintenance.

**END OF WORK PACKAGE.**



---

**15K SELF-RECOVERY WINCH (SRW)  
TROUBLESHOOTING**


---

**0093 00****THIS WORK PACKAGE COVERS:**

15K Self-Recovery Winch (SRW)

**INITIAL SETUP:****Maintenance Level**

Operator

**References**

WP 0065 00

WP 0083 00

WP 0103 00

**15K SELF-RECOVERY WINCH (SRW)**

**Table 1. 15K Self-Recovery Winch (SRW) System  
Troubleshooting Procedures.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. 15K SELF-RECOVERY WINCH (SRW) DOES NOT OPERATE	1. Check to see if PTO engages (WP 0065 00).	If PTO does not engage, perform PTO troubleshooting (WP 0083 00, Malfunction 1, Power Take-Off (PTO) Does Not Engage).

**15K SELF-RECOVERY WINCH (SRW)  
TROUBLESHOOTING - Continued**

0093 00

**15K SELF-RECOVERY WINCH (SRW) - Continued**

**Table 1. 15K Self-Recovery Winch (SRW) System  
Troubleshooting Procedures - Continued.**

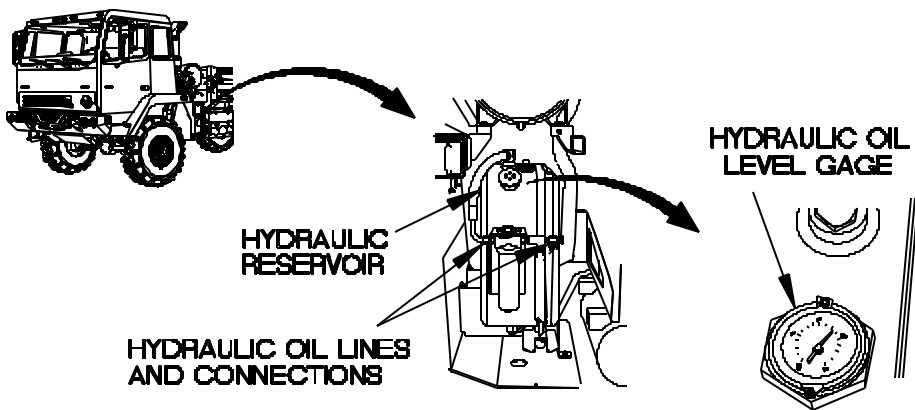MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. 15K SELF-RECOVERY WINCH (SRW) DOES NOT OPERATE - Continued		
<p style="text-align: center;"><b>NOTE</b></p> <p>Perform step 2 on all models except M1089A1.</p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
	2. Check hydraulic oil level gage to determine hydraulic oil level (WP 0103 00, Table 3, Item 8).	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p>The diagram illustrates the hydraulic system components on a truck. An arrow points from the truck to a detailed view of the winch assembly. Labels indicate the 'HYDRAULIC RESERVOIR' and 'HYDRAULIC OIL LINES AND CONNECTIONS'. Another arrow points from the reservoir to a 'HYDRAULIC OIL LEVEL GAGE', which is shown as a circular gauge with a needle and a scale.</p>		


8900801 -

**15K SELF-RECOVERY WINCH (SRW)  
TROUBLESHOOTING - Continued**

0093 00

**15K SELF-RECOVERY WINCH (SRW) - Continued**

**Table 1. 15K Self-Recovery Winch (SRW) System  
Troubleshooting Procedures - Continued.**

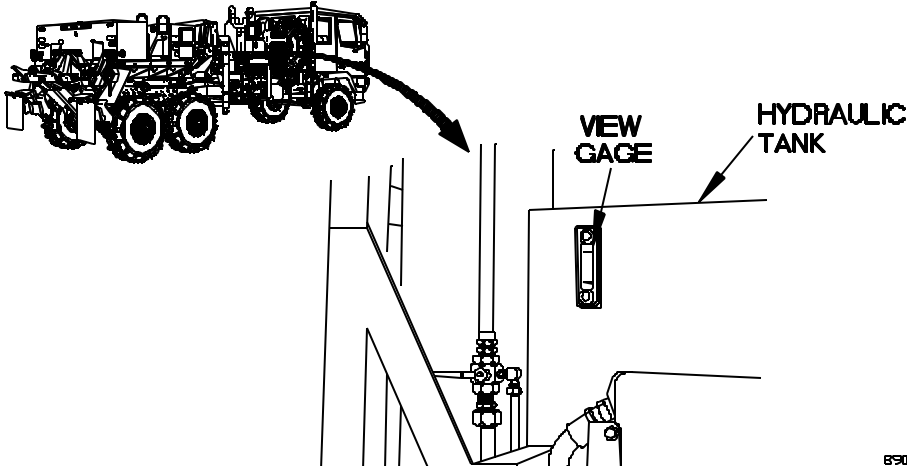MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p> <p style="text-align: center;"><b><u>NOTE</u></b></p> <p>Perform step 3 on M1089A1.</p>		
1. 15K SELF-RECOVERY WINCH (SRW) DOES NOT OPERATE - Continued	3. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 14, Item 9).	<p>1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 14, Item 9).</p> <p>2. Install hydraulic tank cap.</p>
 <p style="text-align: right;">8500 802 -</p>		

**15K SELF-RECOVERY WINCH (SRW)  
TROUBLESHOOTING - Continued**

**0093 00**

**15K SELF-RECOVERY WINCH (SRW) - Continued**

**Table 1. 15K Self-Recovery Winch (SRW) System  
Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. 15K SELF-RECOVERY WINCH (SRW) DOES NOT OPERATE - Continued	4. Check hydraulic lines and fittings for class III leaks (WP 0103 00, Table 14, Item 3).	If class III leaks are found, notify Field Maintenance.
	5. Check to see if 15K SRW operates (WP 0065 00).	If 15K SRW does not operate, notify Field Maintenance.

**END OF WORK PACKAGE.**

# STEERING HYDRAULIC SYSTEM TROUBLESHOOTING 0094 00

## THIS WORK PACKAGE COVERS:

Steering Hydraulic System

## INITIAL SETUP:

### Maintenance Level

Operator


### References

WP 0021 00

WP 0103 00

## STEERING HYDRAULIC SYSTEM

Table 1. Steering Hydraulic System Troubleshooting Procedures.

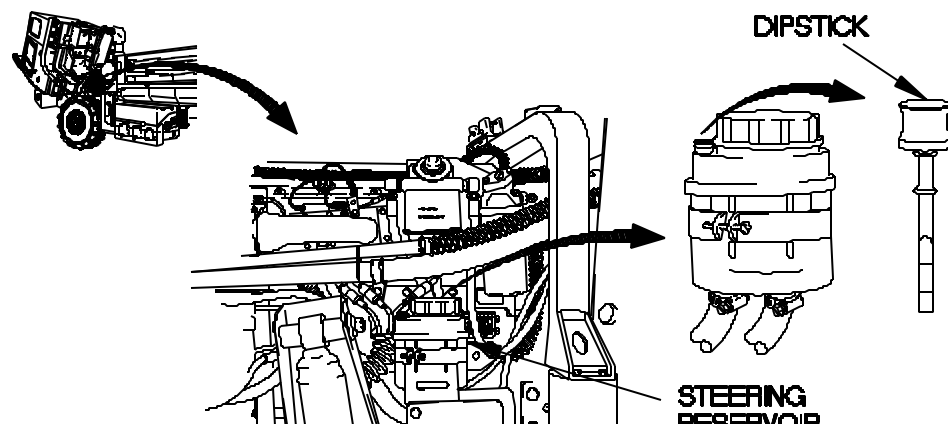MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b>CAUTION</b></p> <p>Do not overfill power steering reservoir. Failure to comply may result in damage to equipment.</p>		
1. STEERING HARD OR DOES NOT OPERATE	1. Check that steering reservoir is filled to proper level. Oil should be level with full mark on dipstick.	<p>1. Raise cab (WP 0021 00).</p> <p>2. Add oil as required (WP 0103 00, Table 4, Item 23).</p>
 <p style="text-align: right;">9000801 -</p>		

## STEERING HYDRAULIC SYSTEM TROUBLESHOOTING - 0094 00 Continued

### STEERING HYDRAULIC SYSTEM - Continued

Table 1. Steering Hydraulic System Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. STEERING HARD OR DOES NOT OPERATE - Continued	2. Check hydraulic hoses and fittings for Class III leaks.	<p>3. If oil is over full mark, notify Field Maintenance.</p> <p>1. If Class III leaks are found or steering is still hard or does not work, notify Field Maintenance.</p> <p>2. Lower cab (WP 0021 00).</p>

END OF WORK PACKAGE.



**AIR TRANSPORT SYSTEM TROUBLESHOOTING****0095 00****THIS WORK PACKAGE COVERS:**

Air Transport System

**INITIAL SETUP:****Equipment Conditions**Engine Shutdown (WP 0018 00)  
PMCS Performed (WP 0103 00)**References**WP 0018 00  
WP 0021 00  
WP 0044 00  
WP 0059 00  
WP 0085 00  
WP 0087 00  
WP 0103 00  
WP 0105 00**AIR TRANSPORT SYSTEM****Table 1. Air Transport Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. CAB TILT, SPARE TIRE RETAINER, AND SUSPENSION COMPRESSION DO NOT OPERATE	1. Check hydraulic hoses, air hoses, and fittings for Class III leaks.	If Class III leaks are found or cab tilt, spare tire retainer, and suspension compression still do not work, notify Field Maintenance.

**AIR TRANSPORT SYSTEM TROUBLESHOOTING -  
Continued**
**0095 00****AIR TRANSPORT SYSTEM - Continued****Table 1. Air Transport Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
2. SUSPENSION DOES NOT COMPRESS OR RETURN TO NORMAL PROPERLY	1. Check to see if cab tilt operates (WP 0021 00).	If cab tilt does not operate, perform Air Transport troubleshooting (WP 0094 00, Malfunction 1, Cab Tilt, Spare Tire Retainer, and Suspension Compression do Not Operate).
	2. Check hydraulic hoses, air lines, and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.
	3. Check to see if suspension compresses and returns to normal properly (WP 0059 00).	If suspension does not compress and returns to normal properly, notify Field Maintenance.
3. CAB LEVELING AIR SPRINGS DO NOT OPERATE PROPERLY	1. Check to see if suspension compresses and returns to normal properly (WP 0059 00).	If suspension compression does not compress and return to normal properly, perform Air Transport Troubleshooting (WP 0094 00, Malfunction 1, Cab Tilt, Spare Tire Retainer, And Suspension Compression Do Not Operate).
	2. Check to see if air tanks are pressurized.	1. Start engine (WP 0018 00).

# AIR TRANSPORT SYSTEM TROUBLESHOOTING - Continued

0095 00

## AIR TRANSPORT SYSTEM - Continued


Table 1. Air Transport Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. CAB LEVELING AIR SPRINGS DO NOT OPERATE PROPERLY - Continued		<p>2. Allow engine to idle until 120 psi registers on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p> <p>3. Shut down engine (WP 0018 00).</p> <p>4. Check FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p> <p>5. If FRONT BRAKE AIR and REAR BRAKE AIR do not register 120 psi, perform Air System Troubleshooting (WP 0085 00, Malfunction 1, Air System Looses Pressure During Operation/Slow Air Buildup).</p>

STEERING WHEEL  
REMOVED FOR  
CLARITY

FRONT BRAKE  
AIR PRESSURE  
GAGE

REAR BRAKE  
AIR PRESSURE  
GAGE

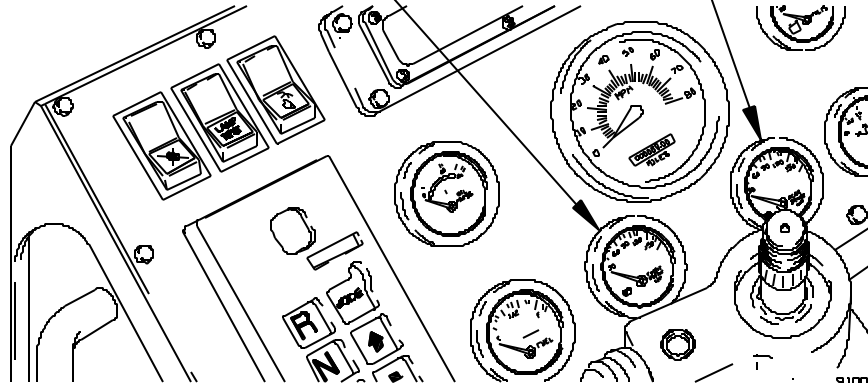

9100803-

**AIR TRANSPORT SYSTEM TROUBLESHOOTING -  
Continued**

**0095 00**

**AIR TRANSPORT SYSTEM - Continued**

**Table 1. Air Transport Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
3. CAB LEVELING AIR SPRINGS DO NOT OPERATE PROPERLY - Continued	3. Check air lines and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.
	4. Check to see if cab air springs deflate and inflate properly (WP 0059 00).	If cab air springs do not deflate and inflate properly, notify Field Maintenance.

**END OF WORK PACKAGE.**

# DUMP BODY HYDRAULIC SYSTEM TROUBLESHOOTING

0096 00

## THIS WORK PACKAGE COVERS:

Dump Body Hydraulic System

## INITIAL SETUP:

### Maintenance Level

Operator

### References

WP 0018 00


WP 0031 00

WP 0087 00

WP 0103 00

## DUMP BODY HYDRAULIC SYSTEM

Table 1. Dump Body Hydraulic System Troubleshooting Procedures.

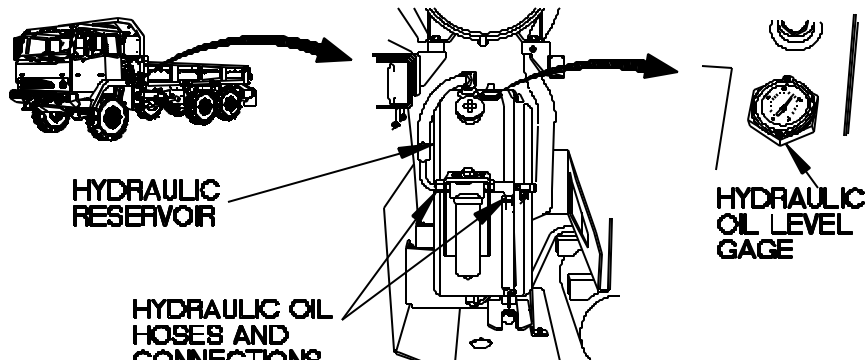MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
1. DUMP BODY DOES NOT RAISE	1. Check hydraulic oil level gage to determine hydraulic oil level (WP 0103 00, Table 3, Item 8).	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p>The diagram illustrates the hydraulic system components. On the left, a dump body truck is shown with an arrow pointing to the hydraulic reservoir. In the center, a detailed view of the hydraulic system shows the reservoir, hoses, and connections. On the right, a close-up of the hydraulic oil level gage is shown with an arrow pointing to it. Labels include: HYDRAULIC RESERVOIR, HYDRAULIC OIL HOSES AND CONNECTIONS, and HYDRAULIC OIL LEVEL GAGE.</p>		

9200801 -

**DUMP BODY HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

**0096 00**

**DUMP BODY HYDRAULIC SYSTEM - Continued**

**Table 1. Dump Body Hydraulic System  
Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1. DUMP BODY DOES NOT RAISE - Continued	2. Check to see if PTO engages.	1. Start engine (WP 0018 00).  2. Position PTO switch to on (WP 0031 00).  3. Check to see if PTO engages.  4. Position PTO to off (WP 0031 00).  5. Shut down engine (WP 0018 00).  6. If PTO does not engage, perform Hydraulic System troubleshooting (WP 0087 00, Malfunction 1, Loss of Hydraulic Pressure [Single Stage Pump]).
	3. Check to see if dump body raises (WP 0031 00).	If dump body does not raise, notify Field Maintenance.

# **DUMP BODY HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0096 00

## **DUMP BODY HYDRAULIC SYSTEM - Continued**

**Table 1. Dump Body Hydraulic System  
Troubleshooting Procedures - Continued.**

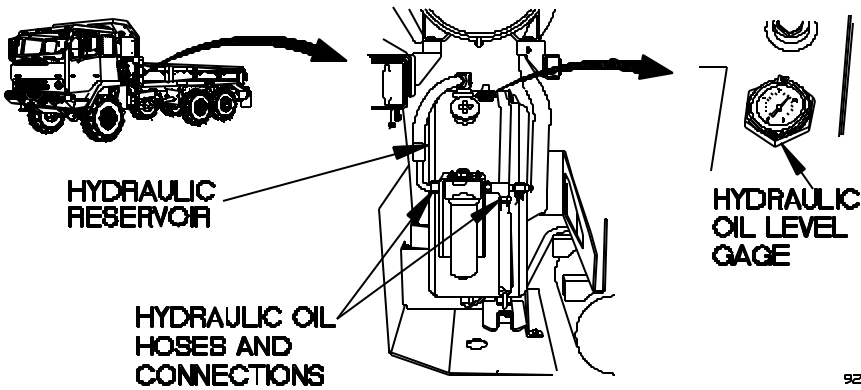
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
2. DUMP BODY DOES NOT LOWER	1. Check hydraulic oil level gage to determine hydraulic oil level (WP 0103 00, Table 3, Item 8).	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p>The diagram illustrates the hydraulic system components of a dump body. On the left, a truck is shown with an arrow pointing to the hydraulic reservoir. The reservoir is a large cylindrical tank with a dipstick. Arrows point from the reservoir to the hydraulic oil hoses and connections, which are shown as a network of pipes and fittings. An arrow also points from the hoses to the hydraulic oil level gage, which is a circular gauge with a needle and a scale. The gage is labeled 'HYDRAULIC OIL LEVEL GAGE'. The diagram is labeled with 'HYDRAULIC RESERVOIR', 'HYDRAULIC OIL HOSES AND CONNECTIONS', and 'HYDRAULIC OIL LEVEL GAGE'. A small number '9200802 -' is visible in the bottom right corner of the diagram area.</p>		
	2. Check to see if PTO engages.	<p>1. Start engine (WP 0018 00).</p> <p>2. Position PTO switch to on (WP 0031 00).</p> <p>3. Check to see if PTO engages.</p> <p>4. Position PTO to off (WP 0031 00).</p> <p>5. Shut down engine (WP 0018 00).</p>

# **DUMP BODY HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0096 00

## **DUMP BODY HYDRAULIC SYSTEM - Continued**

**Table 1. Dump Body Hydraulic System  
Troubleshooting Procedures - Continued.**

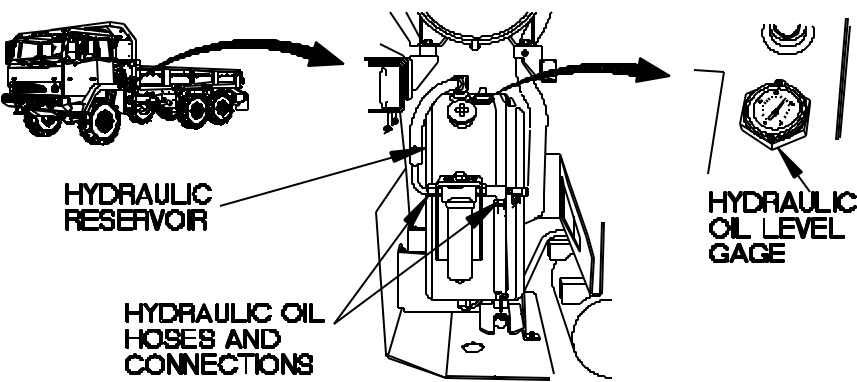MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. DUMP BODY DOES NOT LOWER - Continued	3. Check to see if dump body lowers (WP 0031 00).	6. If PTO does not engage, perform Hydraulic System troubleshooting (WP 0087 00, Malfunction 1, Loss of Hydraulic Pressure [Single Stage Pump]).  If dump body does not lower, notify Field Maintenance.
<p><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
3. DUMP BODY DRIFTS DOWN FROM RAISED POSITION	1. Check hydraulic oil level gage to determine hydraulic oil level (WP 0103 00, Table 3, Item 8).	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p>9200803-</p>		



**DUMP BODY HYDRAULIC SYSTEM  
TROUBLESHOOTING****0096 00****DUMP BODY HYDRAULIC SYSTEM****Table 1. Dump Body Hydraulic System Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
3. DUMP BODY DRIFTS DOWN FROM RAISED POSITION - Continued	2. Check to see if dump body drifts down from raised position (WP 0031 00).	If dump body drifts down from raised position, notify Field Maintenance.

**END OF WORK PACKAGE.**



**WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING 0097 00**

**THIS WORK PACKAGE COVERS:**

Wrecker Hydraulic System

**INITIAL SETUP:**

**Maintenance Level**

Operator

**References - Continued**


**References**

WP 0018 00  
WP 0034 00  
WP 0035 00

WP 0037 00  
WP 0043 00  
WP 0065 00  
WP 0068 00  
WP 0083 00  
WP 0087 00  
WP 0103 00

**WRECKER HYDRAULIC SYSTEM**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures.**

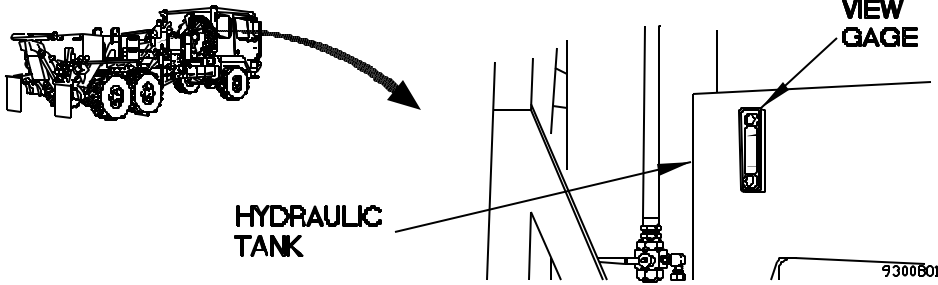MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
<p>1. M1089A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE</p>	<p>1. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).</p>	<p>1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).</p>
		
		<p>2. Install hydraulic tank cap.</p>


# WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued

0097 00

## WRECKER HYDRAULIC SYSTEM - Continued

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. M1089A1 MATERIAL HANDLING CRANE (MHC) DOES NOT OPERATE - Continued	2. Check to see if right 30K winch operates (WP 0037 00).  3. Check to see if MHC operates (WP 0043 00).	If 30K winch does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0097 00, Malfunction 5, M1089A1 Stinger/Telescopic Lift Cylinders/Fold Cylinders/Right 30K Main Winch do Not Operate).  If M1089A1 MHC does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
2. M1089A1 STIFFLEGS/LEFT 30K WINCH/15K SELF-RECOVERY WINCH (SRW) DO NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).  2. Install hydraulic tank cap.

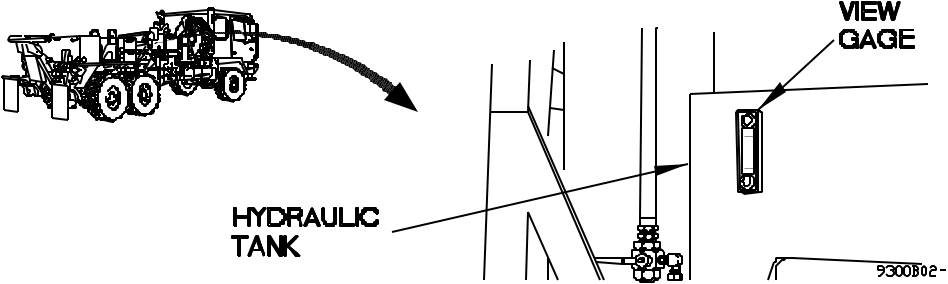


# WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued

0097 00

## WRECKER HYDRAULIC SYSTEM - Continued

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

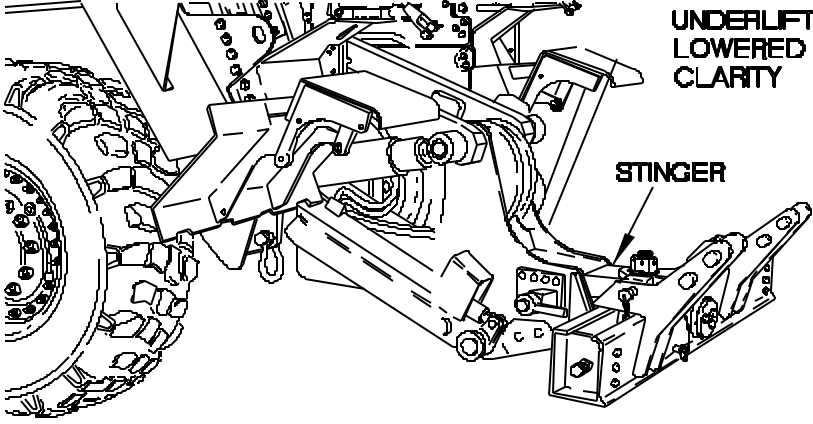
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. M1089A1 STIFFLEGS/LEFT 30K WINCH/15K SELF-RECOVERY WINCH (SRW) DO NOT OPERATE - Continued	2. Check to see if stinger operates (WP 0037 00).	If stinger does not operate, perform Hydraulic System Troubleshooting (WP 0087 00, Malfunction 2, Loss of Hydraulic Pressure).
 <p>9300803-</p>		
	3. Check to see if stifflegs (WP 0034 00), left 30K winch (WP 0035 00), and 15K SRW operate (WP 0060 00).	If stifflegs, left 30K winch, and 15K SRW do not operate, notify Field Maintenance.
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		

# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

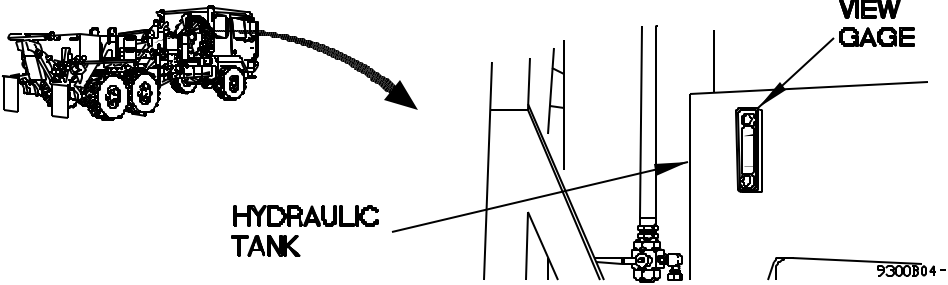
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. M1089A1 STIFFLEG(S) DOES NOT OPERATE OR OPERATES SLOWLY  	1. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).
	2. Check to see if PTO engages (WP 0034 00).  3. Check to see if stifflegs operate (WP 0034 00).	2. Install hydraulic tank cap.  If PTO does not engage, perform Power Take-Off Troubleshooting (WP 0083 00, Malfunction 1, PTO Does Not Engage).  If stifflegs do not operate or operate slowly, notify Field Maintenance.
4. M1089A1 LEFT 30K WINCH DOES NOT OPERATE OR OPERATES SLOWLY	1. Check to see if left 30K winch will pay out (WP 0035 00)?	1. If left 30K winch will not pay-out, go to test 2 of this malfunction.  2. If left 30K winch will pay-out, perform Electrical System Troubleshooting (WP 0080 00, Malfunction 166, 30K Winch Does Not Pay-In).

**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

0097 00

**WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

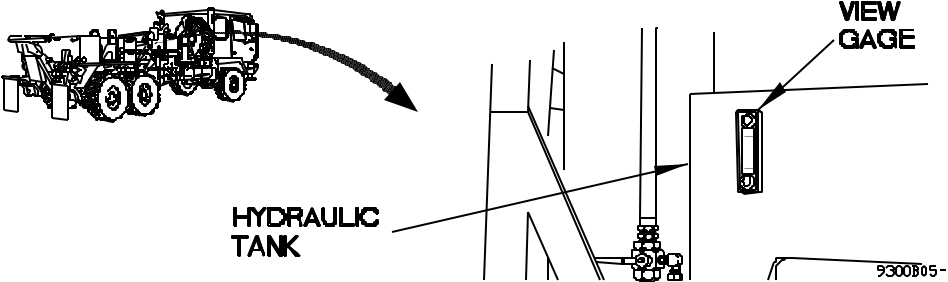
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
4. M1089A1 LEFT 30K WINCH DOES NOT OPERATE OR OPERATES SLOWLY - Continued	2. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).
		
	3. Check to see if 15K SRW operates (WP 0065 00).	2. Install hydraulic tank cap.  If 15K SRW does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 2, M1089A1 Stifflegs/Left 30K Winch/15K Self-Recovery Winch Do Not Operate).
	4. Check to see if left 30K Winch operates (WP 0035 00).	If left 30K Winch does not operate, notify Field Maintenance.

**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

**0097 00**

**WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

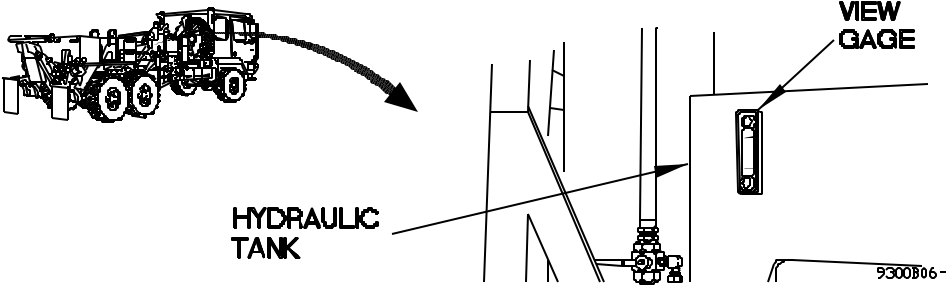MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
<p>5. M1089A1 STINGER /TELESCOPIC LIFT CYLINDERS/FOLD CYLINDERS/RIGHT 30K WINCH DO NOT OPERATE</p>	<p>1. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).</p>	<p>1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).</p>
		
	<p>2. Check to see if 15K SRW operates (WP 0065 00).</p> <p>3. Check to see if stinger, telescopic lift cylinders, fold cylinders, and right 30K winch operate (WP 0035 00).</p>	<p>2. Install hydraulic tank cap.</p> <p>If 15K SRW does not operate, perform Hydraulic System Troubleshooting (WP 0082 00, Malfunction 2, Loss of Hydraulic Pressure [Three Stage Pump]).</p> <p>If stinger, telescopic lift cylinders, fold cylinders, and right 30K operate do not operate, notify Field Maintenance.</p>




# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

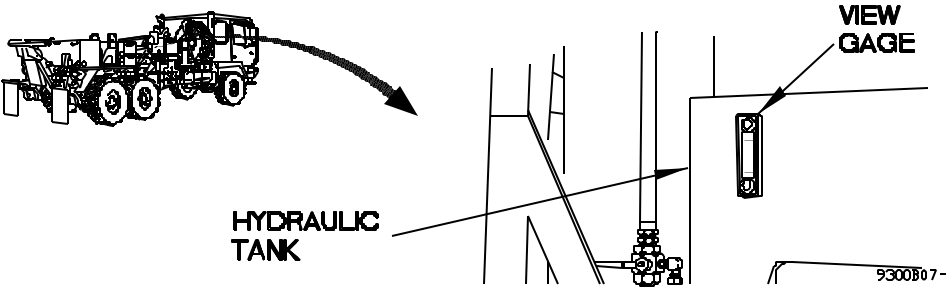
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
5. M1089A1 STINGER /TELESCOPIC LIFT CYLINDERS/FOLD CYLINDERS/RIGHT 30K WINCH DO NOT OPERATE - Continued	3. Check to see if stinger, telescopic lift cylinders, fold cylinders, and right 30K winch operate (WP 0035 00).	If stinger, telescopic lift cylinders, fold cylinders, and right 30K operate do not operate, notify Field Maintenance.
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
6. M1089A1 STINGER DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage.	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).
		
		2. Install hydraulic tank cap.

# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

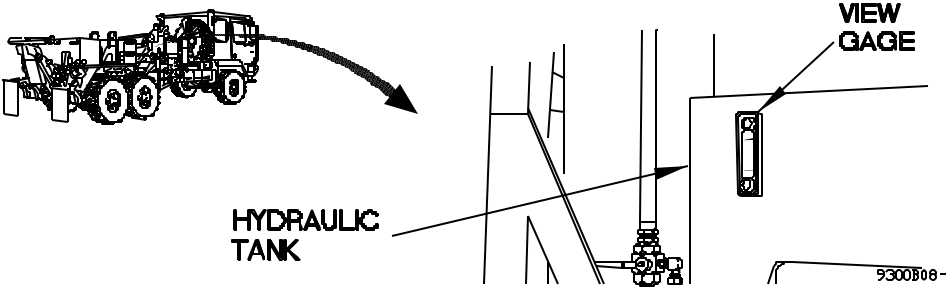MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
6. M1089A1 STINGER DOES NOT OPERATE - Continued	2. Check to see if right 30K Winch operates (WP 0035 00).  3. Check to see if stinger operates (WP 0035 00).	If right 30K winch does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 5, M1089A1 Stinger/Telescopic Lift Cylinders/Fold Cylinders/Right 30K Winch Do Not Operate).  If stinger does not operate, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
7. M1089A1 UNDERLIFT TELESCOPIC LIFT CYLINDER(S) DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).
<div style="display: flex; align-items: center; justify-content: space-around;">  </div>		
		2. Install hydraulic tank cap.


# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
7. M1089A1 UNDERLIFT TELESCOPIC LIFT CYLINDER(S) DOES NOT OPERATE - Continued	2. Check to see if stinger operates (WP 0035 00).  3. Check to see if underlift telescopic lift cylinder operates (WP 0035 00).	If stinger does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 5, M1089A1 Stinger/Telescopic Lift Cylinders/Right 30K Winch Do Not Operate).  If underlift telescopic lift cylinder does not operate, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
8. M1089A1 FOLD CYLINDER DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).  2. Install hydraulic tank cap.

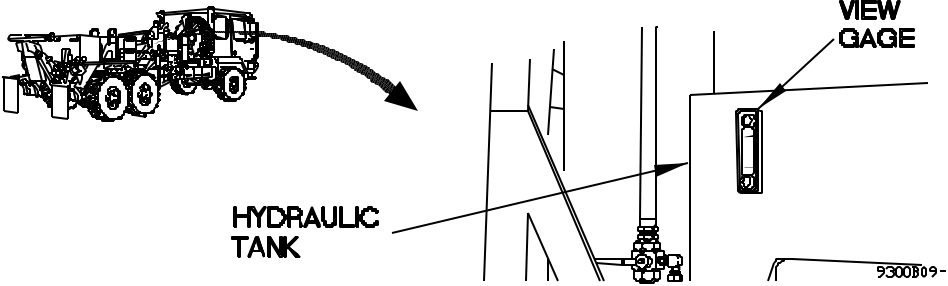

**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

**0097 00**

**WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**


<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
8. M1089A1 FOLD CYLINDER DOES NOT OPERATE - Continued	2. Check to see if stinger operates (WP 0035 00).	If stinger does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 5, M1089A1 Stinger/Telescopic Lift Cylinders/Right 30K Winch Do Not Operate).
	3. Check to see if fold cylinder operates (WP 0035 00).	If fold cylinder does not operate, notify Field Maintenance.
9. M1089A1 RIGHT 30K WINCH DOES NOT OPERATE	1. Check to see if right 30K winch will pay out (WP 0035 00)?	1. If right 30K winch will not pay-out, go to test 2 of this malfunction.
		2. If right 30K winch will pay-out, perform Electrical System Troubleshooting (WP 0080 00, Malfunction 166, 30K Winch Does Not Pay In).

# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

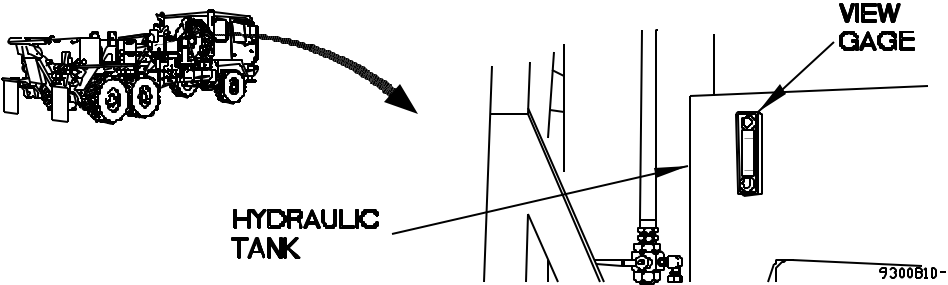MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
9. M1089A1 RIGHT 30K WINCH DOES NOT OPERATE - Continued	2. Check hydraulic oil level at hydraulic oil view gage (WP 0103 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0103 00, Table 15, Item 9).
		
	3. Check to see if stinger operates (WP 0035 00).	2. Install hydraulic tank cap.  If stinger does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 5, M1089A1 Stinger/Telescopic Lift Cylinders/Right 30K Winch Do Not Operate).
	4. Check to see if right 30K winch operates (WP 0035 00).	If right 30K winch does not operate, notify Field Maintenance.

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**


0097 00-12

# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

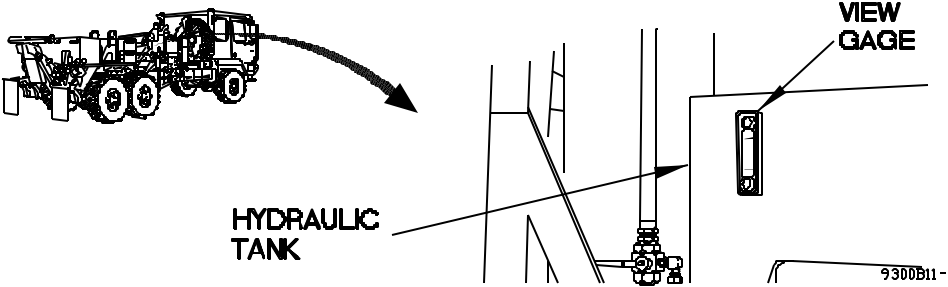
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
11. NO SERVICE OR EXTERNAL HYDRAULIC POWER FROM M1089A1	Check to see if service hydraulic power is present from M1089A1 (WP 0063 00).	If service hydraulic power is not present from M1089A1, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
12. M1089A1 MATERIAL HANDLING CRANE (MHC) LEFT OR RIGHT OUTRIGGER DRIFTS OR DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
	2. Check hydraulic tubes and fittings for Class III leaks.	2. Install hydraulic tank cap.  If Class III leaks are found, notify Field Maintenance.

# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

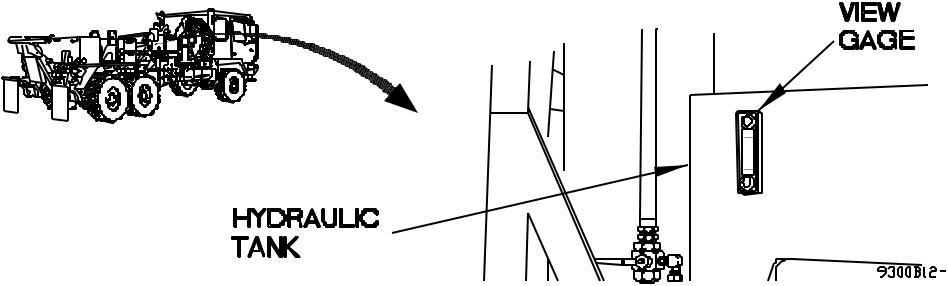MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
12. M1089A1 MATERIAL HANDLING CRANE (MHC) LEFT OR RIGHT OUTRIG-GER DRIFTS OR DOES NOT OPERATE - Continued	3. Check to see if MHC left or right outriggers drift or operate (WP 0041 00).	If MHC left or right outrigger drift or does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
13. M1089A1 MATERIAL HANDLING CRANE (MHC) MAST DOES NOT ERECT	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
	2. Check hydraulic tubes and fittings for Class III leaks.	2. Install hydraulic tank cap.  If Class III leaks are found, notify Field Maintenance.




# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

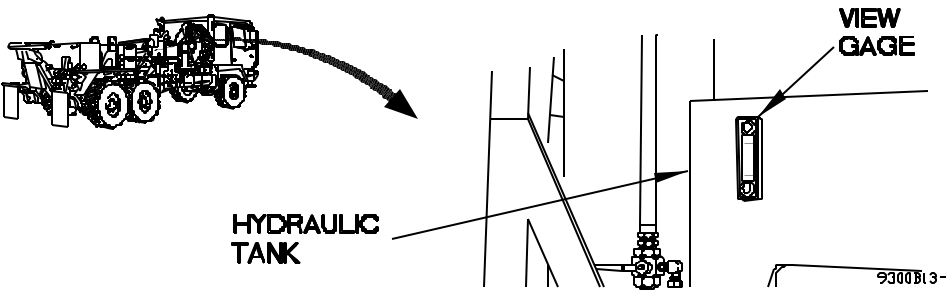MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
13. M1089A1 MATERIAL HANDLING CRANE (MHC) MAST DOES NOT ERECT - Continued	3. Check to see if MHC mast will erect(WP 0041 00).	If MHC mast does not erect, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
14. M1089A1 MATERIAL HANDLING CRANE (MHC) OUTRIGGER EXTENSION CYLINDER DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
	2. Check hydraulic tubes and fittings for Class III leaks.	2. Install hydraulic tank cap.  If Class III leaks are found, notify Field Maintenance.


# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
14. M1089A1 MATERIAL HANDLING CRANE (MHC) OUTRIGGER EXTENSION CYLINDER DOES NOT OPERATE - Continued	3. Check to see if left and right outriggers (jack) operate (WP 0041 00).  4. Check to see if MHC outrigger extension operates (WP 0041 00).	If left or right outrigger does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 12, M1089A1 Material Handling Crane (MHC) Left or Right Outrigger (Jack) Drifts or Does Not Operate).  If MHC outrigger extension cylinder does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
15. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM SWING DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).  2. Install hydraulic tank cap.

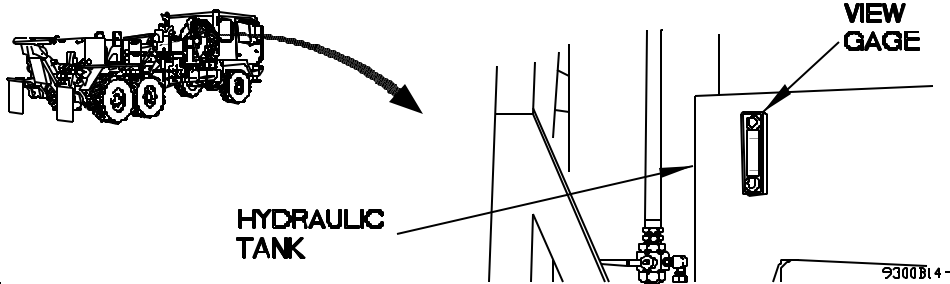


# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

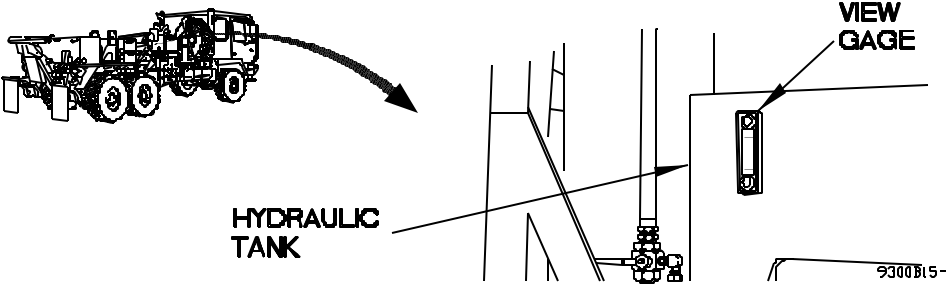MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
15. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM SWING DOES NOT OPERATE - Continued	2. Check hydraulic tubes and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.
	3. Check to see if MHC boom swing operates (WP 0041 00).	If MHC boom swing does not operate, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
16. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT LIFT UP OR DOWN OR HOLD UNDER LOAD	1. Check hydraulic oil level at hydraulic oil view gage.	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
		2. Install hydraulic tank cap.


# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
16. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT LIFT UP OR DOWN OR HOLD UNDER LOAD - Continued	2. Check hydraulic tubes and fittings for Class III leaks.  3. Check to see if MHC boom lifts up or down or holds under load (WP 0041 00).	If Class III leaks are found, notify Field Maintenance.  If MHC boom does not lift up or down, or hold under load, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
17. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT TELESCOPE IN OR OUT	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).  2. Install hydraulic tank cap.

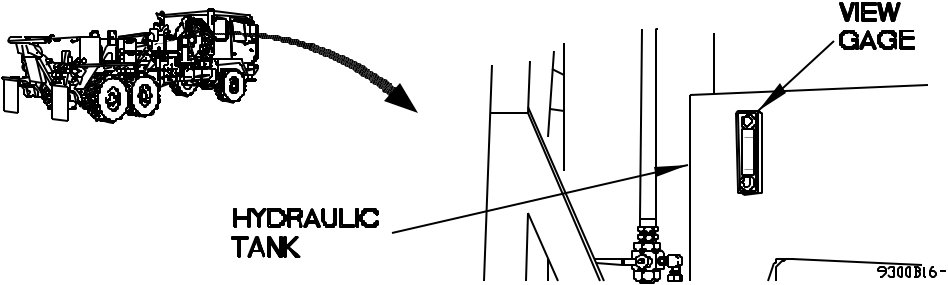


**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

0097 00

**WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

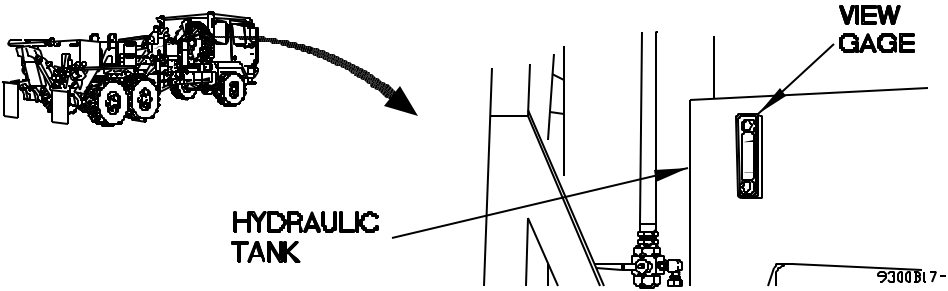
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
17. M1089A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT TELESCOPE IN OR OUT - Continued	2. Check hydraulic tubes and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.
	3. Check to see if MHC boom telescopes in and out (WP 0041 00).	If MHC boom does not telescope in or out notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
18. M1089A1 MATERIAL HANDLING CRANE (MHC) HOIST DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
		2. Install hydraulic tank cap.

# **WRECKER HYDRAULIC SYSTEM TROUBLESHOOTING - Continued**

0097 00

## **WRECKER HYDRAULIC SYSTEM - Continued**

Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.

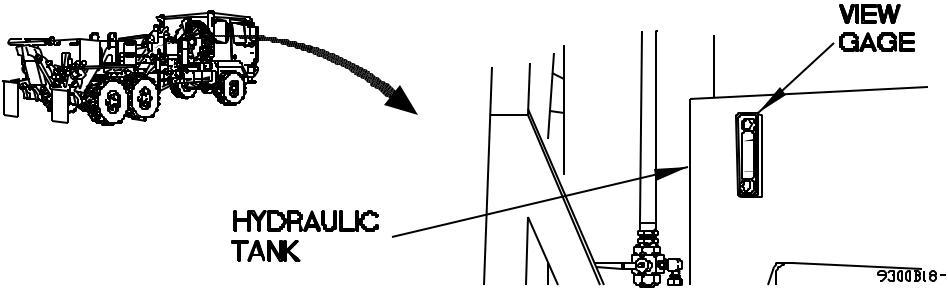
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
18. M1089A1 MATERIAL HANDLING CRANE (MHC) HOIST DOES NOT OPERATE - Continued	2. Check hydraulic tubes and fittings for Class III leaks.  3. Check to see if MHC hoist operates (WP 0041 00).	If Class III leaks are found, notify Field Maintenance.  If MHC hoist does not operate, notify Field Maintenance.
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
19. M1089A1 LEFT STIFFLEG DRIFTS OR DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
	2. Check hydraulic tubes and fittings for Class III leaks.	2. Install hydraulic tank cap.  If Class III leaks are found, notify Field Maintenance.

**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

0097 00

**WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

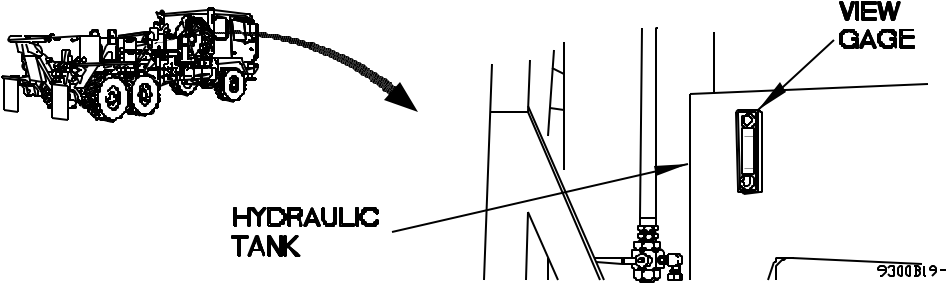MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
19. M1089A1 LEFT STIFFLEG DRIFTS OR DOES NOT OPERATE - Continued	<p>3. Check to see if 15K SRW operates (WP 0060 00).</p> <p>4. Check to see if left stiffleg drifts or does not operate (WP 0034 00).</p>	<p>If 15K SRW does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 2, M1089A1 Stifflegs/Left Main Winch/Self-Recovery Winch Do Not Operate).</p> <p>If left stiffleg drifts or does not operate, notify Field Maintenance.</p>
<p style="text-align: center;"><b>CAUTION</b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
20. M1089A1 RIGHT STIFFLEG DRIFTS OR DOES NOT OPERATE	<p>1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).</p>	<p>1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).</p>
<div style="display: flex; align-items: center; justify-content: space-around;">  </div>		
		<p>2. Install hydraulic tank cap.</p>

**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**
**0097 00****WRECKER HYDRAULIC SYSTEM - Continued****Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
20. M1089A1 RIGHT STIFFLEG DRIFTS OR DOES NOT OPERATE - Continued	2. Check hydraulic tubes and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.
	3. Check to see if 15K SRW operates (WP 0060 00).	If 15K SRW does not operate, perform Wrecker Hydraulic System Troubleshooting (WP 0096 00, Malfunction 2, M1089A1 Stifflegs/Left 30K Winch/15 K Self-Recovery Winch (SRW) Do Not Operate)
	4. Check to see if right stiffleg drifts or does not operate (WP 0034 00).	If right stiffleg drifts or does not operate, notify Field Maintenance.




**WRECKER HYDRAULIC SYSTEM  
TROUBLESHOOTING - Continued**

0097 00

**WRECKER HYDRAULIC SYSTEM - Continued**

**Table 1. Wrecker Hydraulic System Troubleshooting Procedures - Continued.**

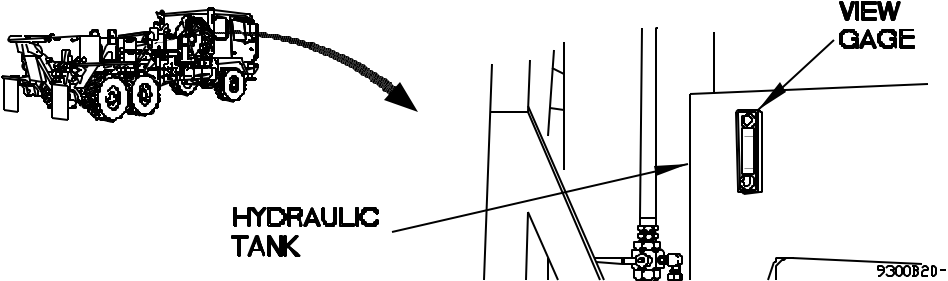MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Hydraulic oil level must not be above or more than 0.75 in. (1.9 cm) below black line on hydraulic oil view gage. Failure to comply may result in damage to equipment.</p>		
21. M1089A1 PAY-OUT HYDRAULIC MOTOR ASSEMBLY DOES NOT OPERATE	1. Check hydraulic oil level at hydraulic oil view gage (WP 0098 00, Table 15, Item 9).	1. If hydraulic oil view gage registers below black line, remove hydraulic tank cap and fill hydraulic oil to appropriate level (WP 0098 00, Table 15, Item 9).
		
	2. Check hydraulic tubes and fittings for Class III leaks.	2. Install hydraulic tank cap. If Class III leaks are found, notify Field Maintenance.
	3. Check to see if M1089A1 pay-out hydraulic motor assembly operates (WP 0035 00).	If M1089A1 pay-out hydraulic motor assembly does not operate, notify Field Maintenance.

**END OF WORK PACKAGE.**



**SPECIAL PURPOSE KITS TROUBLESHOOTING**

**0098 00**

**THIS WORK PACKAGE COVERS:**

Special Purpose Kits

**INITIAL SETUP:**

**Maintenance Level**

Operator

**References**

WP 0004 00  
WP 0018 00  
WP 0023 00  
WP 0057 00  
WP 0058 00  
WP 0103 00  
WP 0113 00

**SPECIAL PURPOSE KITS**

**Table 1. Special Purpose Kits Troubleshooting Procedures.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. CARGO AREA ARCTIC HEATER DOES NOT OPERATE	1. Start engine (WP 0018 00).  2. Attempt to start cargo area arctic heater (WP 0058 00).  3. Shut down engine (WP 0018 00).	If cargo area arctic heater does not operate or control panel indicator light is flashing, notify Field Maintenance.  Notify Field Maintenance.
2. CARGO AREA ARCTIC HEATER INDICATOR LAMP BLINKS TWICE WHILE HEATER IS RUNNING		

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

0098 00

**SPECIAL PURPOSE KITS - Continued**
**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. CARGO AREA HEATER SHUTS DOWN AUTOMATICALLY		Notify Field Maintenance.
4. CARGO AREA ARCTIC OVERRIDE SWITCH DOES NOT OPERATE	1. Start engine (WP 0018 00) 2. Attempt to start cargo area arctic heater (WP 0058 00) 3. Shut down engine (WP 0018 00)	If cargo area arctic heater does not start, notify Field Maintenance.  If cargo area arctic heater does start, notify Field Maintenance.
5. CAB ARCTIC HEATER COMBUSTION STARTS IMMEDIATELY WHEN SWITCHED ON		Notify Field Maintenance.
6. CAB ARCTIC HEATER DOES NOT START	1. Check vehicle fuel level (WP 0017 00). 2. Check to see if cab arctic heater starts.	If fuel level is low, fill vehicle fuel tank.  If cab arctic heater does not start, notify Field Maintenance.
7. CAB ARCTIC HEATER SWITCHES ON AND OFF REPEATEDLY	1. Attempt to start cab arctic heater (WP 0057 00).	If cab arctic heater will not start, perform Special Purpose Kits Troubleshooting (WP 0097 00, Malfunction 3, Cab Arctic Heater Does Not Start).

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

**0098 00**

**SPECIAL PURPOSE KITS - Continued**

**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
7. CAB ARCTIC HEATER SWITCHES ON AND OFF REPEATEDLY - Continued	2. Check to see if cab arctic heater switches on and off repeatedly.	1. Start cab arctic heater (WP 0057 00).  2. Shut down cab arctic heater (WP 0057 00).  3. If cab arctic heater switches on and off repeatedly, notify Field Maintenance.
8. CAB ARCTIC HEATER HARD TO START	1. Attempt to start cab arctic heater (WP 0057 00).  2. Check to see if troopseat furnace fails to start without producing white smoke.	1. If cab arctic heater will not start, perform Special Purpose Kits Troubleshooting (WP 0097 00, Malfunction 3, Cab Arctic Heater Does Not Start).  2. Shut down cab arctic heater (WP 0057 00).  1. Attempt to start cab arctic heater (WP 0057 00).  2. Check for smoke at exhaust port.  3. Shut down cab arctic heater (WP 0057 00).

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued****0098 00****SPECIAL PURPOSE KITS - Continued****Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
8. CAB ARCTIC HEATER HARD TO START - Continued	3. Check to see if cab arctic heater is hard to start.	<p>4. If heater fails to start and emits white smoke, perform Special Purpose Kits Troubleshooting (WP 0097 00, Malfunction 8, Cab Arctic Heater Emits White Smoke More Than 20 Seconds).</p> <p>1. Start cab arctic heater (WP 0057 00).</p> <p>2. Shut down cab arctic heater (WP 0057 00).</p> <p>3. If cab arctic heater is hard to start, notify Field Maintenance.</p>
9. CAB ARCTIC HEATER TURNS ITSELF OFF	<p>1. Attempt to start cab arctic heater (WP 0057 00).</p> <p>2. Check vehicle fuel level.</p> <p>3. Check to see if cab arctic heater turns itself off.</p>	<p>1. If cab arctic heater will not start, perform Special Purpose Kits Troubleshooting (WP 0097 00, Malfunction 3, Cab Arctic Heater Does Not Start).</p> <p>2. Shut down cab arctic heater (WP 0057 00).</p> <p>If vehicle fuel level is low, fill vehicle fuel tank (WP 0017 00).</p> <p>1. Start cab arctic heater (WP 0057 00).</p> <p>2. If cab arctic heater turns itself off, notify Field Maintenance.</p>

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

0098 00

**SPECIAL PURPOSE KITS - Continued**
**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**



MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
9. CAB ARCTIC HEATER TURNS ITSELF OFF - Continued		3. Shut down cab arctic heater (WP 0057 00).
10. CAB ARCTIC HEATER EMITS BLACK SMOKE	1. Attempt to start cab arctic heater (WP 0057 00)	If cab arctic heater will not start, perform Special Purpose Kits Troubleshooting (WP 0097 00, Malfunction 3, Cab Arctic Heater Does Not Start).
	2. Check to see if cab arctic heater emits black smoke.	1. If cab arctic heater emits black smoke, notify Field Maintenance. 2. Shut down cab arctic heater (WP 0057 00).
11. CAB ARCTIC HEATER EMITS WHITE SMOKE MORE THAN 20 SECONDS AFTER START-UP	1. Attempt to start cab arctic heater (WP 0057 00)	If cab arctic heater will not start, perform Special Purpose Kits Troubleshooting (WP 0097 00, Malfunction 3, Cab Arctic Heater Does Not Start).
	2. Check to see if cab arctic heater emits white smoke more than 20 seconds after starting.	1. If cab arctic heater emits white smoke more than 20 seconds after starting, notify Field Maintenance. 2. Shut down cab arctic heater (WP 0057 00).
12. CAB ARCTIC HEATER CANNOT BE SWITCHED OFF		Notify Field Maintenance.

**SPECIAL PURPOSE KITS TROUBLESHOOTING - Continued**

**0098 00**

**SPECIAL PURPOSE KITS - Continued**

**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

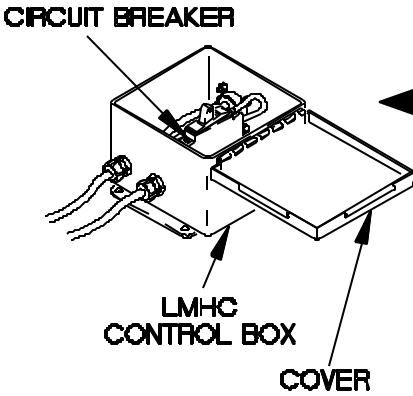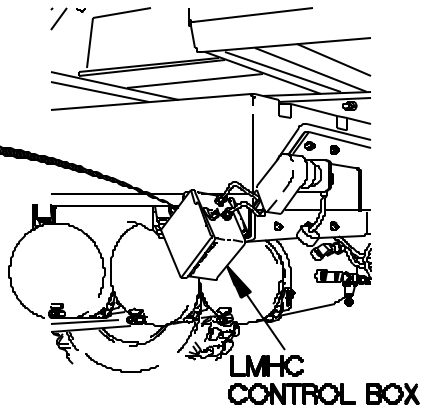MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
13. LIGHT MATERIAL HANDLING CRANE (LMHC) DOES NOT OPERATE	1. Check to see if LMHC control box circuit breaker tripped.	1. Disconnect NATO cable.  2. Open cover on LMHC control box (WP 0023 00).  3. If LMHC control box circuit breaker is tripped, position LMHC control box circuit breaker to ON.  4. Connect NATO cable.  5. Check LMHC control box circuit breaker to see if it is tripped again.  6. Close cover on LMHC control box.
		 <p style="text-align: right;">Bc 94b02-</p>
	2. Check to see if LMHC operates.	1. If LMHC does not operate, notify Field Maintenance.



**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**
**0098 00****SPECIAL PURPOSE KITS - Continued****Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**



<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
14. LIGHT MATERIAL HANDLING CRANE (LMHC) HOIST IN DOES NOT OPERATE	1. Check to see if LMHC hoist in operates.	If LMHC hoist out does not operate, perform Special Purpose Kits Troubleshooting (WP 0097 00 Malfunction 10, Light Material Handling Crane [LMHC] Does Not Operate).
	2. Check to see if LMHC hoist in operates.	If LMHC hoist in does not operate, notify Field Maintenance.
15. LIGHT MATERIAL HANDLING CRANE (LMHC) HOIST OUT DOES NOT OPERATE	1. Check to see if LMHC hoist in operates.	If LMHC hoist in does not operate, perform Special Purpose Kits Troubleshooting (WP 0097 00 Malfunction 10, Light Material Handling Crane [LMHC] Does Not Operate).
	2. Check to see if LMHC hoist out operates.	If LMHC hoist out does not operate, notify Field Maintenance.
16. CAB ARCTIC HEATER DOES NOT IGNITE		Notify Field Maintenance.

**SPECIAL PURPOSE KITS TROUBLESHOOTING - Continued**

0098 00

**SPECIAL PURPOSE KITS - Continued**

**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

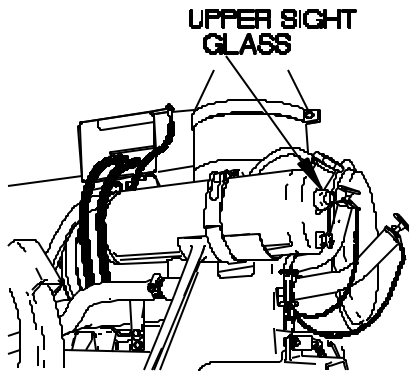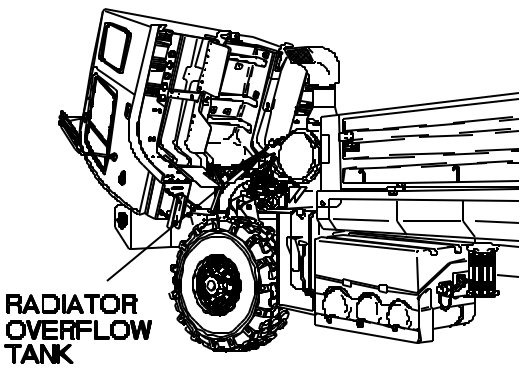
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>17. SWINGFIRE DOES NOT OPERATE</p>	<p>1. Check top radiator overflow tank sight glass for proper level of coolant.</p>	<p>If upper sight glass indicates low coolant level, fill radiator overflow tank with coolant (WP 0103 00, Table 1, Item 3).</p>
<div data-bbox="337 772 743 1140">  <p>UPPER SIGHT GLASS</p> </div> <div data-bbox="760 825 1279 1192">  <p>RADIATOR OVERFLOW TANK</p> </div> <div data-bbox="1206 1192 1287 1213"> <p>8c94b03-</p> </div>		
	<p>2. Check to see if circuit breaker CB50 is tripped.</p>	<p>1. Remove PDP cover (WP 0113 00).</p>

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

**0098 00**

**SPECIAL PURPOSE KITS - Continued**

**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

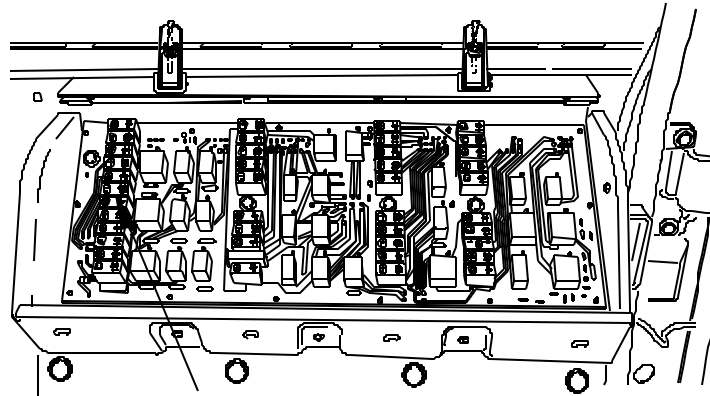MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>17. SWINGFIRE DOES NOT OPERATE - Continued</p>		<p>2. If circuit breaker CB50 is tripped, push button to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. Check circuit breaker CB50 to see if it is tripped again.</p>
<div data-bbox="440 856 1146 1312">  <p data-bbox="565 1255 797 1312"><b>CIRCUIT BREAKER CB50</b></p> <p data-bbox="1211 1297 1284 1312">8C94B04 -</p> </div>		<p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p>

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

**0098 00**

**SPECIAL PURPOSE KITS - Continued**

**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>18. ARCTIC ENGINE PREHEAT INDICATOR DOES NOT OPERATE</p>	<p>1. Check to see if circuit breaker CB89 is tripped</p>	<p>1. Remove PDP cover (WP 0113 00).</p> <p>2. If circuit breaker CB89 is tripped, push button to reset.</p> <p>3. Position master power switch to on (WP 0004 00).</p> <p>4. If circuit breaker CB89 is tripped again, notify Field Maintenance.</p>
<div data-bbox="440 1003 1144 1396" data-label="Image"> </div> <p data-bbox="565 1402 797 1457"><b>CIRCUIT BREAKER CB89</b></p>		<p data-bbox="1209 1444 1284 1461">8C94805-</p> <p>5. Position master power switch to off (WP 0004 00).</p> <p>6. Install PDP cover (WP 0113 00).</p>

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

0098 00

**SPECIAL PURPOSE KITS - Continued**
**Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
18. ARCTIC ENGINE PREHEAT INDICATOR DOES NOT OPERATE - Continued	2. Visual inspection.	1. Position master power switch to on (WP 0004 00).  2. If arctic engine preheat indicator does not illuminate, notify Field Maintenance.  3. Position master power switch to off (WP 0004 00).  Notify Field Maintenance.
19. ARCTIC ENGINE PREHEAT INDICATOR FLASHES SPECIAL FAILURE CODE FOR 60 SECONDS		
20. ARCTIC ENGINE PREHEAT INDICATOR FLASHES SLOWLY INDICATING "READY" WHEN IGNITION IS SWITCHED ON ALTHOUGH WATER TEMPERATURE IS BELOW 77°F (25°C).		Notify Field Maintenance.

**SPECIAL PURPOSE KITS TROUBLESHOOTING -  
Continued**

0098 00

**SPECIAL PURPOSE KITS - Continued****Table 1. Special Purpose Kits Troubleshooting Procedures - Continued.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
21. ARCTIC ENGINE PREHEAT INDICATOR ILLUMINATES CONTINUOUSLY ALTHOUGH WATER TEMPERATURE IS ABOVE 77°F (25°C).		Notify Field Maintenance.
22. ARCTIC ENGINE PREHEAT INDICATOR FLASHES SLOWLY INDICATING "READY" BUT ENGINE WILL NOT START OR IS HARD TO START		Notify Field Maintenance.
23. HEAVY WHITE SMOKE AFTER COLD START.		Notify Field Maintenance.
24. ENGINE BLOCK ARCTIC HEATER DOES NOT OPERATE.		Notify Field Maintenance.

**END OF WORK PACKAGE.**

---

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING** **0099 00**

---

**THIS OPERATE PACKAGE COVERS:**

M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics

---

**INITIAL SETUP:**

**Maintenance Level**

Operator

**References**

WP 0018 00  
WP 0030 00  
WP 0087 00  
WP 0103 00

---

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures.**

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HAND PUMP DOES NOT OPERATE	1. Check to see if MHC functions operate with PTO engaged.	1. Start engine (WP 0018 00).  2. Position PTO switch to on (WP 0030 00).  3. Attempt to operate MHC (WP 0030 00).  4. If MHC does not operate with PTO engaged, perform Hydraulic System troubleshooting (WP 0087 00, Malfunction 2, Loss of Hydraulic Pressure).  5. Position PTO switch to off (WP 0030 00).  6. Shut down engine (WP 0018 00).

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**

**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics  
Troubleshooting Procedures - Continued.**

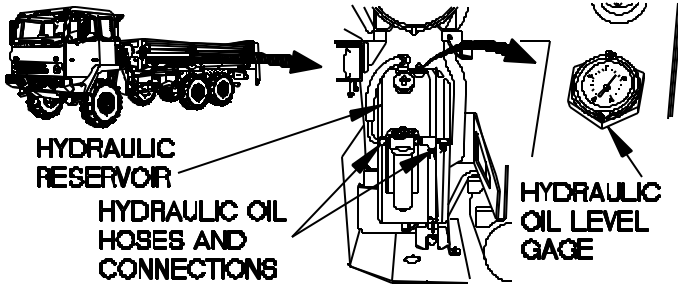
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HAND PUMP DOES NOT OPERATE - Continued	2. Check to see if MHC hand pump operates.	If MHC hand pump still does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
2. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULIC FUNCTIONS OPERATE SLOWLY	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
<div style="text-align: center;">  <p>9300801-</p> </div>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.



**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures - Continued.**

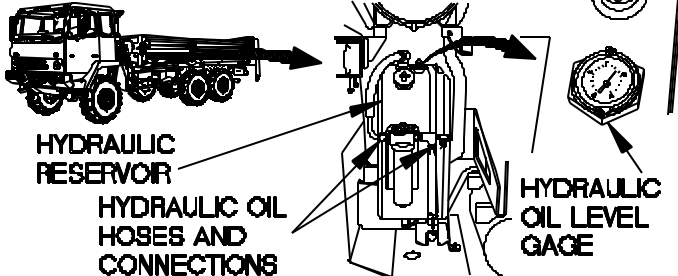MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
2. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAU-LIC FUNCTIONS OPERATE SLOWLY - Continued	3. Check to see if MHC hydraulic functions operate normally (WP 0030 00).	If MHC hydraulic functions operate slowly, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
3. M1084A1/ M1086A1 MATERIAL HAND- LING CRANE (MHC) LEFT OUT-RIGGER (JACK) DRIFTS OR DOES NOT OPERATE	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
<div style="text-align: center;">  <p>HYDRAULIC RESERVOIR</p> <p>HYDRAULIC OIL HOSES AND CONNECTIONS</p> <p>HYDRAULIC OIL LEVEL GAGE</p> <p>9500802-</p> </div>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures - Continued.**

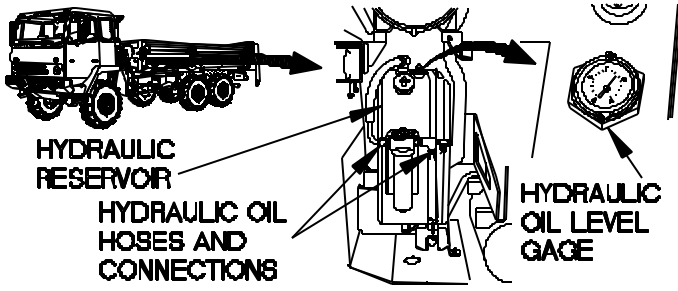MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. M1084A1/ M1086A1 MATERIAL HAND- LING CRANE (MHC) LEFT OUT-RIGGER (JACK) DRIFTS OR DOES NOT OPERATE - Continued	3. Check to see if MHC left outrigger (jack) operates and does not drift (WP 0030 00).	If MHC left outrigger (jack) drifts or does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
4. M1084A1/ M1086A1 MATE- RIAL HANDLING CRANE (MHC) RIGHT OUTRIG- GER (JACK) DRIFTS OR DOES NOT OPERATE	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p style="text-align: right;">9500803-</p>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures - Continued.**

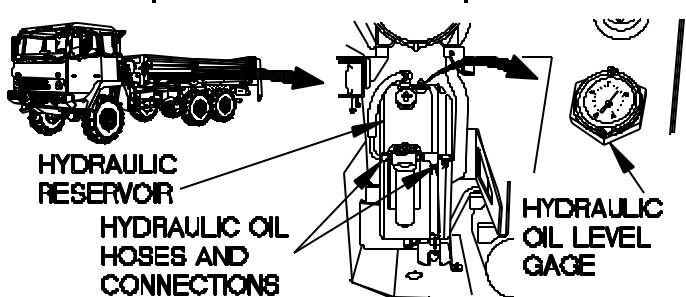MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
4. M1084A1/ M1086A1 MATE- RIAL HANDLING CRANE (MHC) RIGHT OUTRIG- GER (JACK) DRIFTS OR DOES NOT OPERATE - Continued	3. Check to see if MHC right outrigger (jack) operates and does not drift (WP 0030 00).	If MHC right outrigger (jack) drifts or does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
5. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) MAST DOES NOT ERECT	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics  
Troubleshooting Procedures - Continued.**

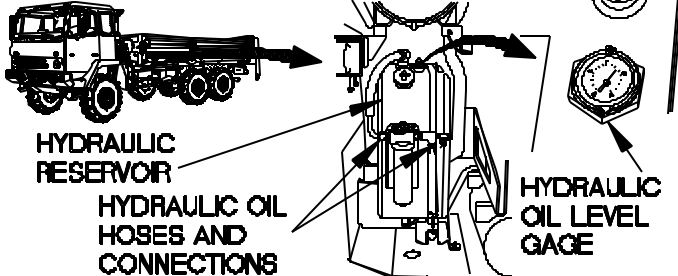MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
5. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) MAST DOES NOT ERECT - Continued	3. Check to see if MHC mast erects (WP 0030 00).	If MHC mast does not erect, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
6. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HOIST DOES NOT OPERATE	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p style="text-align: right;">9500805-</p>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures - Continued.**

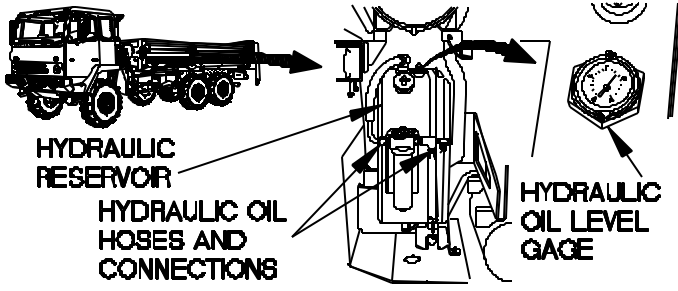MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
6. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) HOIST DOES NOT OPERATE - Continued	3. Check to see if MHC hoist oper- ates (WP 0030 00).	If MHC hoist does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
7. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM SWING DOES NOT OPERATE	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p style="text-align: right;">9500806-</p>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics  
Troubleshooting Procedures - Continued.**

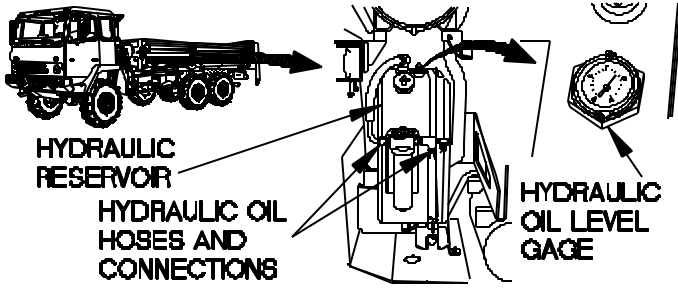MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
7. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM SWING DOES NOT OPERATE - Continued	3. Check to see if MHC swing operates (WP 0030 00).	If MHC swing does not operate, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
8. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT TELESCOPE IN OR OUT	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
<div style="text-align: center;">  <p style="text-align: right;">9500807-</p> </div>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**


**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures - Continued.**

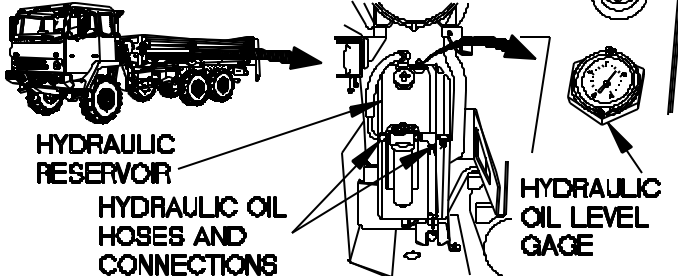MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
8. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT TELESCOPE IN OR OUT - Continued	3. Check to see if MHC boom telescopes in and out (WP 0030 00).	If MHC boom does not telescope in or out, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
9. M1084A1/ M1086A1 MATE- RIAL HANDLING CRANE (MHC) SWING, TELE- SCOPE, BOOM, AND HOIST DO NOT OPERATE	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p style="text-align: right;">9500808-</p>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued**

**Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics Troubleshooting Procedures - Continued.**

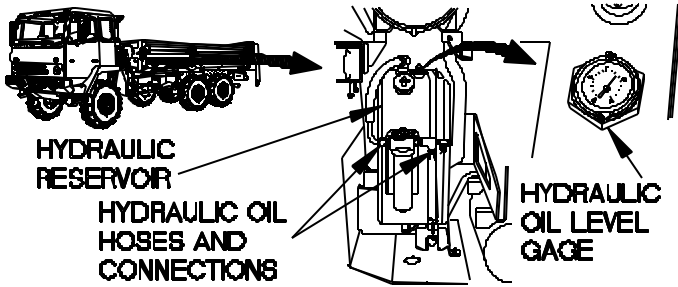MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
9. M1084A1/ M1086A1 MATE- RIAL HANDLING CRANE (MHC) SWING, TELE- SCOPE, BOOM, AND HOIST DO NOT OPERATE - Continued	3. Check to see if MHC swing, telescope, boom, and hoist operate (WP 0030 00).	If MHC swing, telescope, boom, and hoist do not operate, notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads above 3/4 mark.</p>		
10. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT LIFT UP OR DOWN OR HOLD UNDER LOAD	1. Check hydraulic oil level gage to determine hydraulic oil level.	If oil level is low, add hydraulic oil (WP 0103 00, Table 3, Item 8).
 <p>HYDRAULIC RESERVOIR</p> <p>HYDRAULIC OIL HOSES AND CONNECTIONS</p> <p>HYDRAULIC OIL LEVEL GAGE</p> <p style="text-align: right;">9500809-</p>		
	2. Check hydraulic hoses and fittings for Class III leaks.	If Class III leaks are found, notify Field Maintenance.



---

**M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC) HYDRAULICS TROUBLESHOOTING - Continued**

---

M1084A1/M1086A1 MATERIAL HANDLING CRANE (MHC)  
HYDRAULICS - Continued

Table 1. M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulics  
Troubleshooting Procedures - Continued.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
10. M1084A1/ M1086A1 MATERIAL HANDLING CRANE (MHC) BOOM DOES NOT LIFT UP OR DOWN OR HOLD UNDER LOAD - Continued	3. Check to see if MHC boom operates (WP 0030 00).	If MHC boom does not lift up or down or hold under load, notify Field Maintenance.

END OF WORK PACKAGE.



## CAB TILT AND SPARE TIRE RETAINER TROUBLESHOOTING

0100 00

### THIS WORK PACKAGE COVERS:

Cab Tilt and Spare Tire Retainer

### INITIAL SETUP:

#### Maintenance Level

Operator

#### Reference

WP 0103 00

## CAB TILT AND SPARE TIRE RETAINER

Table 1. Cab Tilt and Spare Tire Retainer Troubleshooting Procedures.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. CAB DOES NOT RAISE OR LOWER PROPERLY	1. Check hydraulic oil level in air/hydraulic power unit (WP 0103 00, Table 1, Item 7).  2. Check hydraulic hoses, air lines, and fittings for Class III leaks.	If hydraulic oil level is low, add hydraulic oil (WP 0103 00, Table 1, Item 7).  If Class III leaks are found or cab tilt still does not raise or lower properly, notify Field Maintenance.
2. SPARE TIRE RETAINER DOES NOT RAISE OR LOWER PROPERLY	1. Check hydraulic oil level in air/hydraulic power unit (WP 0103 00, Table 1, Item 7).  2. Check hydraulic hoses, air lines, and fittings for Class III leaks.	If hydraulic oil level is low, add hydraulic oil (WP 0103 00, Table 1, Item 7).  If Class III leaks are found or spare tire retainer still does not raise or lower properly, notify Field Maintenance.

END OF WORK PACKAGE.



**M1089A1 AIR SYSTEM TROUBLESHOOTING**

**0101 00**

**THIS WORK PACKAGE COVERS:**

M1089A1 Air System

**INITIAL SETUP:**

**Maintenance Level**

Operator

**References - Continued**

WP 0035 00

WP 0037 00

**References**

WP 0018 00

WP 0080 00

WP 0089 00

WP 0103 00

**M1089A1 AIR SYSTEM**

**Table 1. M1089A1 Air System Troubleshooting Procedures.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
1. ONE WRECKER FUNCTION DOES NOT OPERATE FROM WRECKER REMOTE CONTROL	Check to see if any wrecker function operates from WRECKER REMOTE CONTROL (WP 0037 00).	<p>1. If all wrecker functions do not operate from WRECKER REMOTE CONTROL, perform Electrical System Troubleshooting (WP 0080 00, Malfunction 140, All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL).</p> <p>2. If one wrecker function does not operate from WRECKER REMOTE CONTROL, notify Field Maintenance.</p>
<p style="text-align: center;"><b><u>NOTE</u></b></p> <p>Perform Electrical System Troubleshooting (WP 0080 00, Malfunction 142, 30K Winch Left Or Right Speed Function Does Not Operate From Wrecker Control Panel), before starting here.</p>		

**M1089A1 AIR SYSTEM TROUBLESHOOTING**

**0101 00**

**M1089A1 AIR SYSTEM - Continued**

**Table 1. M1089A1 Air System Troubleshooting Procedures - Continued.**

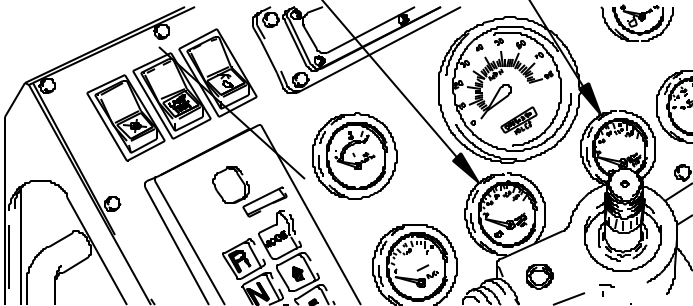
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. WRECKER LEFT OR RIGHT 30K WINCH FREESPOOL DOES NOT OPERATE</p>	<p>1. Check to see if air tanks are pressurized.</p>	<p>1. Start engine (WP 0018 00).</p> <p>2. Allow engine to idle until 120 psi is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p>
<div data-bbox="337 814 571 898">STEERING WHEEL REMOVED FOR CLARITY</div> <div data-bbox="597 850 787 934">FRONT BRAKE AIR PRESSURE GAGE</div> <div data-bbox="808 819 998 903">REAR BRAKE AIR PRESSURE GAGE</div>  <div data-bbox="1201 1270 1274 1291">9700801-</div>		
		<p>3. Shut down engine (WP 0018 00).</p> <p>4. If FRONT BRAKE AIR or REAR BRAKE AIR pressure gage does not register 120 PSI, perform Air System Troubleshooting (WP 0085 00, Malfunction 1, Air System Loses Pressure During Operation/Slow Air Buildup).</p>

**M1089A1 AIR SYSTEM TROUBLESHOOTING**

**0101 00**

**M1089A1 AIR SYSTEM - Continued**

**Table 1. M1089A1 Air System Troubleshooting Procedures - Continued.**

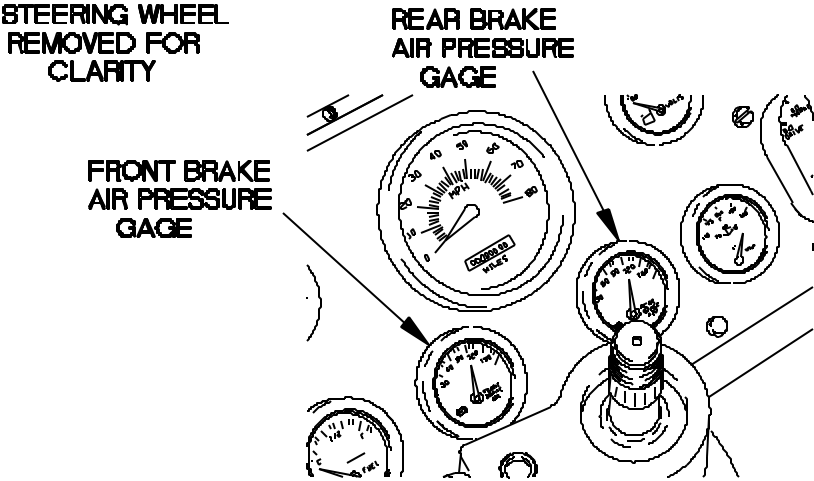MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>2. WRECKER LEFT OR RIGHT 30K WINCH FREESPOOL DOES NOT OPERATE - Continued</p> <p>3. WRECKER LEFT OR RIGHT 30K WINCH CABLE DRUM TENSIONER DOES NOT OPERATE</p>	<p>2. Attempt to operate wrecker left or right 30K winch freespool (WP 0035 00).</p> <p>1. Check to see if air tanks are pressurized.</p>	<p>If wrecker left or right 30K winch freespool does not operate, notify Field Maintenance.</p> <p>1. Start engine (WP 0018 00).</p> <p>2. Allow engine to idle until 120 PSI is registered on FRONT BRAKE AIR and REAR BRAKE AIR pressure gages.</p>
	<p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p>  <p><b>REAR BRAKE AIR PRESSURE GAGE</b></p> <p><b>FRONT BRAKE AIR PRESSURE GAGE</b></p> <p>9700802-</p>	<p>3. Shut down engine (WP 0018 00).</p>


**M1089A1 AIR SYSTEM TROUBLESHOOTING**

**0101 00**

**M1089A1 AIR SYSTEM - Continued**

**Table 1. M1089A1 Air System Troubleshooting Procedures - Continued.**


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. WRECKER LEFT OR RIGHT 30K WINCH CABLE DRUM TENSIONER DOES NOT OPERATE - Continued</p>	<p>2. Check hydraulic oil level (WP 0103 00, Table 15, Item 9).</p>	<p>4. If FRONT BRAKE AIR or REAR BRAKE AIR pressure gage does not register 120 psi, perform Air System Troubleshooting (WP 0085 00, Malfunction 1, Air System Loses Pressure During Operation/Slow Air Buildup).</p> <p>If hydraulic oil level is low, fill hydraulic oil (WP 0103 00, Table 15, Item 9).</p>

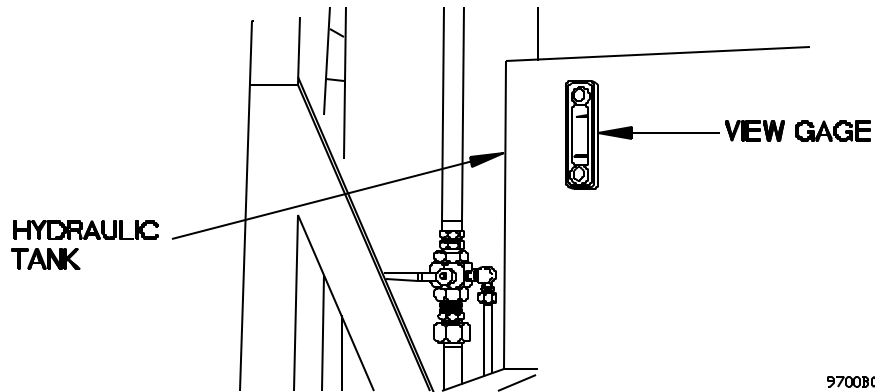

9700803-



**M1089A1 AIR SYSTEM TROUBLESHOOTING****0101 00****M1089A1 AIR SYSTEM - Continued****Table 1. M1089A1 Air System Troubleshooting Procedures - Continued.**

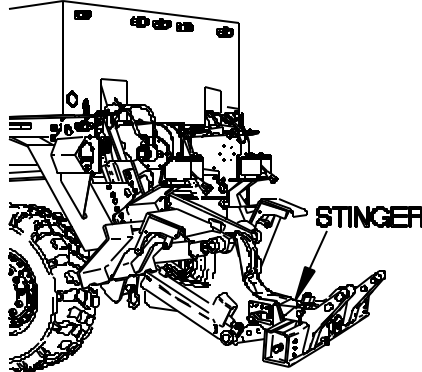MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
3. WRECKER LEFT OR RIGHT 30K WINCH CABLE DRUM TENSIONER DOES NOT OPERATE - Continued	3. Check to see if stinger operates (WP 0037 00).	If stinger does not operate, perform Hydraulic System Troubleshooting (WP 0082 00, Malfunction 2, Loss of Hydraulic Pressure [Three Stage Pump]).
<div data-bbox="537 737 956 1106">  </div> <div data-bbox="950 751 1208 840"> <p><b>UNDERLIFT SHOWN LOWERED FOR CLARITY</b></p> </div> <div data-bbox="1192 1094 1273 1110"> <p>9700804 -</p> </div>		
4. 30K WINCH LH OR RH DOES NOT PAY-IN	4. Attempt to operate wrecker left or right 30K winch cable drum tensioner (WP 0035 00).  <p style="text-align: center;"><b><u>NOTE</u></b></p> <p>Perform Electrical System Troubleshooting (WP 0080 00, Malfunction 167., 30K Winch Does Not Pay-In).</p>	If wrecker left or right 30K winch cable drum tensioner does not operate, notify Field Maintenance.  1. Notify Field Maintenance.

**END OF WORK PACKAGE.**



---

**FRAME TROUBLESHOOTING**

---

**0102 00****THIS WORK PACKAGE COVERS:**Frame

---

**INITIAL SETUP:****Maintenance Level**Operator

---

**FRAME****Table 1. Frame Troubleshooting Procedures.**

<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
TIRES CONTINUE TO WEAR AFTER FRONT END ALIGNMENT, AND/OR VEHICLE DRIVES SIDEWAYS DOWN ROAD		Notify Field Maintenance.

**END OF WORK PACKAGE.**



## **CHAPTER 4**

# **PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) AND MAINTENANCE INSTRUCTIONS FOR THE M1083A1 SERIES VEHICLES**



# M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)

0103 00

## THIS WORK PACKAGE COVERS:

Introduction, Leakage Definition, Inspection Lubrication Service Intervals - Normal Conditions, Lubrication Service Intervals - Unusual Conditions, Cleaning and Lubrication, PMCS Procedures

## INITIAL SETUP:

### Maintenance Level

Operator

### Tools/Special Tools

Bar, Socket Wrench Handle (Item 4, Table 2, WP 0117 00)  
Gloves, Leather (NSN 8415-00-634-4658, WP 0117 00)  
Goggles, Industrial (Item 25, Table 2 WP 0117 00)  
Inflator-Gage, Tire W/Hose (Item 31, Table 2, WP 0117 00)  
Jack, Adapter Assembly (Item 32, Table 2, WP 0117 00)  
Jack, Hydraulic, Hand Operated (Item 33, Table 2, WP 0117 00)  
Pliers, Slip Joint (Item 36, Table 2, WP 0117 00)  
Screwdriver, Crosstip (Item 37, Table 2, WP 0117 00)  
Screwdriver, Crosstip (Item 38, Table 2, WP 0117 00)  
Screwdriver, Flattip (Item 39, Table 2, WP 0117 00)  
Wrench, Adjustable, 8 In. (Item 52, Table 2, WP 0117 00)  
Wrench, Adjustable, 12 In. (Item 51, Table 2, WP 0117 00)  
Wrench, Plier (Item 53, Table 2, WP 0117 00)  
Wrench, Plier (Item 54, Table 2 WP 0117 00)  
Wrench, Socket (Item 55, Table 2 WP 0117 00)

### Materials/Parts

Antifreeze (Item 1, WP 0119 00)  
Grease, Automotive and Artillery (GAA) (Item 11, WP 0119 00)  
Hydraulic Fluid (Item 12, WP 0119 00)  
Oil, Lubricating, OE/HD, Arctic (Item 22, WP 0119 00)  
Oil, Lubricating, OE/HDO 10 (Item 17, WP 0119 00)  
Oil, Lubricating, OE/HDO 15W-40 (Item 19, WP 0119 00)  
Oil, Lubricating, OE/HDO 30 (SAE 30) (Item 20, WP 0119 00)  
Rag, Wiping (Item 25, WP 0119 00)  
Soap, Laundry (Item 26, WP 0119 00)  
Solvent, Dry Cleaning (Item 27, WP 0119 00)

### Personnel

Two

### References

AR 385-55  
DA PAM 738-750  
FM 9-207  
WP 0001 00

---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00****INTRODUCTION****General**

Preventive Maintenance Checks and Services (PMCS) are performed to keep the vehicle in operating condition. The checks are used to find, correct, or report problems. Crewmembers are to do the PMCS jobs as shown in the PMCS tables. PMCS is done every day the vehicle is operated using the PMCS tables. Pay attention to WARNING and CAUTION statements. A WARNING means someone could be hurt. A CAUTION means equipment could be damaged.

**Explanation of Table Entries**

**Item Number Column.** Numbers in this column are for reference. When completing DA Form 2404 (Equipment Inspection and Maintenance Worksheet), include the Item Number for the Check/Service indicating a fault. Item Numbers also appear in the order that you must perform Checks and Services for the intervals listed.

**Interval Column.** This column tells you when you must perform the procedure in the procedure column. BEFORE procedures must be performed before you operate or use the vehicle. DURING procedures must be performed during operation of the vehicle. AFTER procedures must be performed immediately after you have operated the vehicle. WEEKLY procedures must be performed every seven days. MONTHLY procedures must be performed approximately every 30 days.

**Man-hour Column.** This column describes the number of man-hours required to complete all prescribed lubrication service. It is stated to the nearest tenth of an hour.

**Item to Check/Service Column.** This column provides the location and the Item(s) to be checked or serviced.

**Procedure Column.** This column provides the procedure to check or to service the Item(s) listed in the check/service column.

**Equipment Not Ready/Available If: Column.** This column tells you what faults will keep your vehicle from being capable of performing the primary mission. If you perform check and service procedures that show faults listed in this column, do not operate the vehicle. Follow standard operating procedures for maintaining the vehicle or reporting equipment failure.



---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00**

**INTRODUCTION - Continued**

**LEAKAGE DEFINITION**

**CAUTION**

Equipment operation is allowable with minor leakages (Class I or II) except for fuel leaks. Consideration must be given to the fluid capacity of the item or system being checked. When in doubt, ask your supervisor.

When operating with Class I or II leaks, continue to check fluid levels as required in your PMCS.

Class III leaks must be reported to Field Maintenance. Failure to comply may result in damage to equipment.

It is necessary to know how fluid leakage affects the status of the vehicle. The following are definitions of the classes of leakage an operator or crewmember needs to know to be able to determine the condition of the leak. Learn and then be familiar with them, and REMEMBER - WHEN IN DOUBT, ASK YOUR SUPERVISOR.

**Leakage Definitions for Crew/Operator PMCS**

CLASS I - Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.

CLASS II - Leakage of fluid great enough to form drops but not enough to cause drops to drip from item being checked.

CLASS III - Leakage of fluid great enough to form drops that fall from the item being checked.

**INSPECTION**

Look for signs of a problem or trouble. Senses help here. You can feel, smell, hear, or see many problems. Be alert when on the vehicle.

Inspect to see if items are in good condition. Are they correctly assembled, stowed, secured, excessive worn, leaking, corroded, or properly lubricated? Correct any problems found or notify Field Maintenance.

---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00****INSPECTION - Continued**

There are some common items to check all over the vehicle. These include the following:

1. Bolts, clamps, nuts, and screws: Continuously check for looseness. Look for chipped paint, rust, or corrosion around bolt and screw heads and nuts. Tighten them when you find them loose. If tools are not available, notify Field Maintenance.
2. Welds: Many items on the vehicle are welded. To check these welds, look for chipped paint, rust corrosion, or gaps. When these conditions exist, notify Field Maintenance on DA Form 2404.
3. Electrical wires, connectors, and harnesses: Tighten loose connectors. Look for cracked or broken insulation, bare wires, and broken connectors. If any are found, notify Field Maintenance.
4. Hoses and fluid lines: Look for wear, damage and leaks, and make sure clamps and fittings are tight. Wet spots mean a leak. A stain by a fitting or connector can also mean a leak. When you find a leak, notify Field Maintenance.

**LUBRICATION SERVICE INTERVALS - NORMAL CONDITIONS****General**

For safer, more trouble-free operations, make sure that your vehicle is serviced when it needs it. Proper lubrication and service intervals which are the responsibility of the Operator/Crew are found in this work package.

**Adherence.** Intervals (hard time) and the related man-hour times are based on normal operation. The man-hour time specified is the time needed to do all the services prescribed for a particular interval. The calendar interval may be extended during periods of low activity. If extended, adequate preservation precautions must be taken. Hard time intervals must be applied during the warranty period.

Intervals shown in this work package are based on mileage/calendar times. The lubrication for the vehicle is to be performed at whichever interval occurs first.

---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00****LUBRICATION SERVICE INTERVALS - NORMAL CONDITIONS - Continued**

---

**WARNING**

---

Dry Cleaning Solvent (P-D-680) is TOXIC and flammable. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes, and clothes; and do not breath vapors. Keep away from heat or flame. Never smoke when using Dry Cleaning Solvent; the flashpoint for Type I Dry Cleaning Solvent is 100° F (38° C) and for Type II is 138° F ( 50° C). Failure to comply may result in serious injury or death to personnel.

If personnel become dizzy while using Dry Cleaning Solvent immediately get fresh air and medical help. If Dry Cleaning Solvent contacts skin or clothes, flush with cold water. If Dry Cleaning Solvent contacts eyes, immediately flush eyes with water and get medical attention. Failure to comply may result in serious injury or death to personnel.

**Cleaning Fittings Before Lubrication.** Clean parts with Dry Cleaning Solvent (SD II, P-D-680) or equivalent. Dry before lubricating. Dashed arrows indicate lubrication on both sides of equipment.

**Lubrication After Fording.** If a fording operation occurs, lubricate all fittings below fording depth and check submerged gear boxes for presence of water.

**Lubrication After High-Pressure Washing.** After a through washing, lubricate all grease fittings and oil can points outside and underneath vehicle.

**Lubrication Local Views.** A reference to the appropriate localized view is given after most lubrication entries.

**Corrosion Control**

Refer to WP 0001 00 for appropriate corrosion control procedures.

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00****LUBRICATION SERVICE INTERVALS - NORMAL CONDITIONS - Continued****Hard Time Lubrication Intervals**

For equipment under manufacturer's warranty, hard time oil service intervals shall be followed. Intervals shall be shortened if lubricants are known to be contaminated or if operation is under adverse conditions (e.g. longer than usual operating hours, extending idling periods, extreme dust, etc.).

**Lubrication Intervals****INTERVALS**

D ..... Daily  
W ..... Weekly  
M ..... Monthly

VEHICLES	Total Man-hours for Each Interval		
	D	W	M
Truck, Cargo, MTV, M1083A1	0.3	N/A	0.2
Truck, Cargo, MTV, W/MHC, M1084A1	0.3	N/A	0.3
Truck, Cargo, MTV, LWB, M1085A1	0.3	N/A	0.2
Truck, Cargo, MTV, W/MHC, LWB, M1086A1	0.3	N/A	0.3
Truck, Tractor, MTV, M1088A1	0.3	0.3	0.4
Truck, Wrecker, MTV, M1089A1	0.3	0.3	0.4
Truck, Dump, MTV, M1090A1	0.3	N/A	0.4
Truck, Chassis, MTV, M1092A1	0.3	N/A	0.2
Truck, Chassis, MTV, LWB, M1096A1	0.3	N/A	0.2

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00****LUBRICATION SERVICE INTERVALS - NORMAL CONDITIONS - Continued****Lubrication Key**

<b>LUBRICANTS</b>	
<b>Specification</b>	<b>Type</b>
MIL-L-2104 (OE/HDO)	Lubricating Oil, Internal Combustion Engine, Combat/Tactical Service
MIL-PRF-46167C (OEA)	Lubricating Oil, Internal Combustion Engine, Arctic
MIL-PRF-5606H (OHA)	Hydraulic Fluid, Petroleum Base, Aircraft, Missile, and Ordnance
MIL-G-10924 (GAA)	Grease, Automotive and Artillery
VV-D-1078	Damping Fluid

<b>COOLANT</b>	
<b>Specification</b>	<b>Type</b>
A-A-52624A	Antifreeze, Multi-Engine Type
MIL-A-11755	Antifreeze, Arctic Type <sup>1</sup>

<sup>1</sup> For Arctic Operation, refer to FM 9-207.

<b>CLEANING AGENT</b>	
<b>Specification</b>	<b>Type</b>
P-D-680	Dry Cleaning Solvent, SD II
O-C-1901	Cleaning Compound Window

**LUBRICATION SERVICE INTERVALS - UNUSUAL CONDITIONS**

Your vehicle will require extra service and care when you operate under unusual conditions. High or low temperatures, long periods of hard use, or continued use in sand, water, mud, or snow will break down the lubricant requiring you to add or change lubricant more often.

---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00**

**CLEANING AND LUBRICATION**

**WARNING**

Adhesives, solvents, and sealing compounds can burn easily, can give off harmful vapors, and are harmful to skin and clothing. Keep away from open fire and use in a well-ventilated area. If adhesive, solvent, or sealing compound gets on skin or clothing, wash immediately with soap and water. Failure to comply may result in injury or death to personnel.

**Cleanliness**


Dirt, grease, oil, and debris only get in the way and may cover up a serious problem. Use Dry Cleaning Solvent on metal surfaces where directed.

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

## **Before PMCS Procedures for All Models**

These illustrations will help you perform BEFORE vehicle PMCS. The callouts match PMCS item number/procedures.

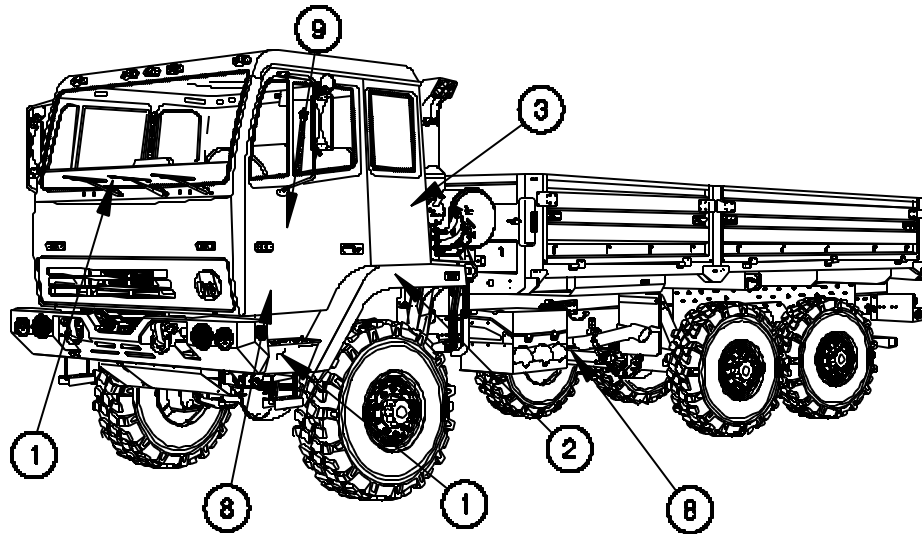

b6199601-

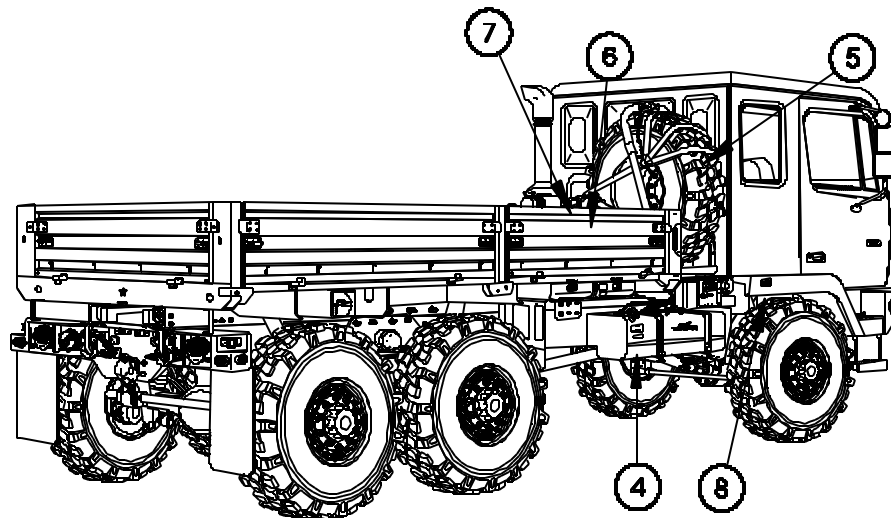


b6199602-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) -  
Before - All Models.**

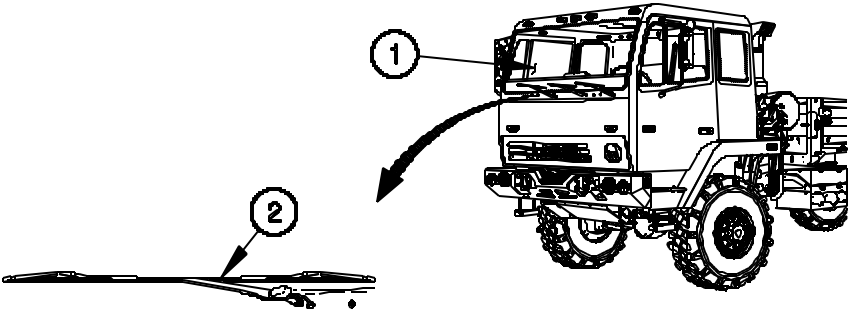ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Windshield Wipers, and Washer Reservoir		
<p><b>NOTE</b></p> <p>Operating the vehicle with damaged windshield may violate AR 385-55.</p>					
				<p>1. Check windshield (1) for damage that would impair Operator's vision.</p> <p>2. Check for missing or damaged windshield wiper blade (2). Notify Field Maintenance if windshield wiper blade is missing or unserviceable.</p>	Windshield is cracked sufficiently to impair Operator's vision.
					


8099803-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

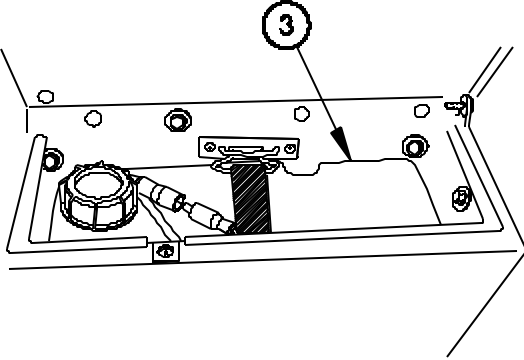ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before	0.1	Windshield, Windshield Wipers, and Washer Reservoir - Continued	3. Check windshield washer reservoir (3). Check windshield washer fluid level. Add windshield washer fluid as required.	
					
DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)	
Windshield Washer Reservoir	7.5 qt (7.1L)	2/3 water to 1/3 O-C-1901	1/2 water to 1/2 O-C-1901	1/3 water to 2/3 O-C-1901	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Before		Exterior of Vehicle	<ol style="list-style-type: none"> <li>1. Look under vehicle for signs of fluid leakage (fuel, oil, and coolant).</li> <li>2. Check front and rear shackles are secure.</li> <li>3. Verify cab air springs are unpinned and pin is stowed in stowage bracket.</li> </ol>	Class III leak is evident.


The diagram shows a side view of the M1083A1 vehicle. A callout points to a 'STOWAGE BRACKET' on the cab. Another callout points to the 'FRONT SHACKLES' on the front axle. A third callout points to a 'SHACKLE PIN' which is shown separately. A fourth callout points to the 'REAR SHACKLES' on the rear axle. The vehicle is shown from a side profile, highlighting the front and rear suspension areas.

bo99b041

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

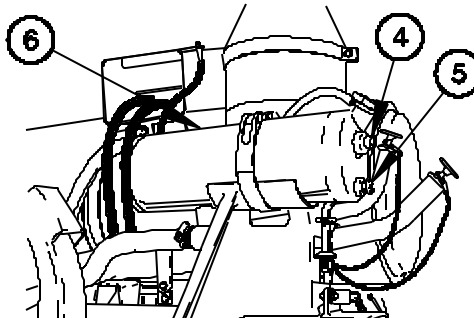ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Before		Coolant		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Extreme care should be taken when removing radiator cap if WATER TEMP gage reads above 180° F (82° C). Contact with steam or hot coolant under pressure may result. Failure to comply may result in injury to personnel.</p> <p>Pressure in radiator overflow tank must be released before removing radiator cap. Failure to comply may result in injury to personnel.</p> <p>Do not operate vehicle if radiator cap is damaged or missing. Failure to comply will result in injury to personnel or damage to equipment.</p>					
		0.1		1. Verify coolant level is between upper sight glass (4) and lower sight glass (5) on radiator overflow tank (6) with engine not running. Add coolant as required.	1. Coolant level below lower sight glass.
					

6099605-


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**
**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Before		Coolant - Continued	2. Check for oil in coolant.  3. Check radiator cap.	2. If engine oil is present, notify Field Maintenance.  3. Radiator cap damaged or missing, notify Field Maintenance.
DESCRIPTION		CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
			Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Cooling System Engine Only		14 qt (13 L)	A-A-52624A	A-A-52624A	N/A
Cooling System (Total System except M1088A1 and M1089A1)		50.3 qt (47.6 L)	A-A-52624A	A-A-52624A	N/A
Cooling System (Total System M1088A1 and M089A1)		52.8 qt (49.9 L)	A-A-52624A	A-A-52624A	N/A
Cooling System - Arctic (Total System except M1088A1 and M1089A1)		64.8 qt (61.3 L)	N/A	N/A	MIL-A-11755
Cooling System - Arctic (Total System, M1088A1 and M1089A1)		76.5 qt (72.4 L)	N/A	N/A	MIL-A-11755

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

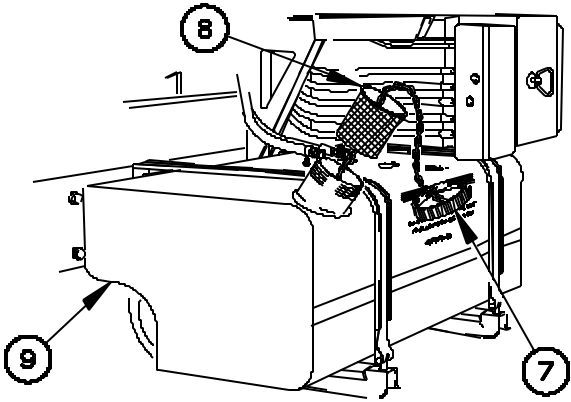ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Before		Fuel Tank		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Diesel fuel is flammable. Do not fill fuel tank with engine running, while smoking, or when near an open flame. Never overfill fuel tank or spill fuel. If fuel is spilled, clean it up immediately. Failure to comply may result in serious injury or death to personnel.</p>					
				<ol style="list-style-type: none"> <li>1. Remove fuel cap (7) and fuel strainer (8).</li> <li>2. Check for presence of fuel in fuel tank (9).</li> <li>3. Install fuel strainer (8) and fuel cap (7).</li> </ol>	
					


8199806-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Before		Spare Tire Strap	<ol style="list-style-type: none"> <li>1. Check that spare tire strap (10) is tight.</li> <li>2. Check that spare tire strap (10) is not torn, frayed, or damaged.</li> <li>3. Check that SPARE TIRE knob (11) is in RAISE position.</li> <li>4. Check that CAB knob (12) is pushed in. If not, push knob in and turn to right.</li> </ol>	

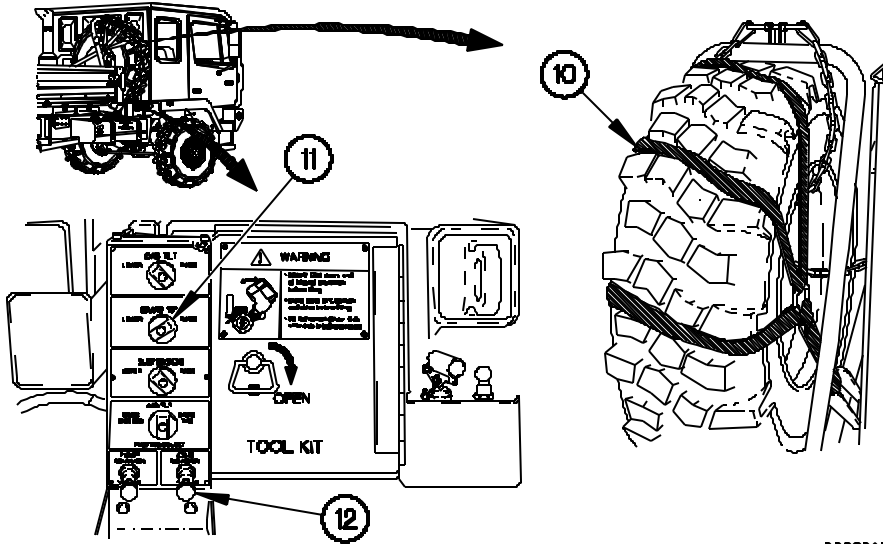

The diagram illustrates the locations of the components mentioned in the procedure. On the left, a side view of the vehicle shows the spare tire mounted on the rear. An arrow points from the vehicle to a detailed view of the spare tire assembly on the right. In this view, the spare tire strap (10) is shown securing the tire. Below the vehicle, a tool kit (12) is shown with its lid open, revealing the SPARE TIRE knob (11) in the RAISE position. The tool kit also contains various tools and a warning label.



BD99807-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
6	Before		Cab Hydraulic Latch	Check that cab latch indicator button is in the latched position (13).	If cab will not securely latch.

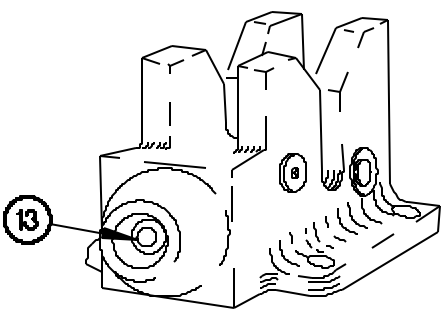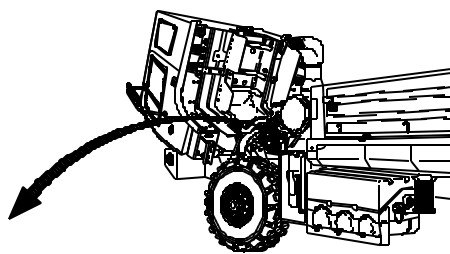



8099808 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**


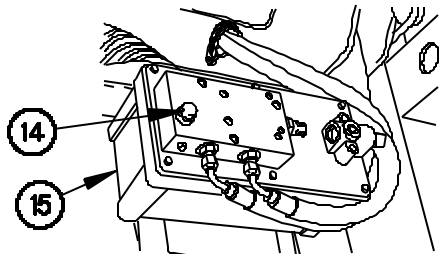
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
7	Before	0.1	Air/Hydraulic Power Unit		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Hydraulic fluid (MIL-PRF-5606H) is TOXIC. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes, and clothes. Skin and clothing that come in contact with hydraulic fluid should be washed immediately. Saturated clothing should be removed immediately. Failure to comply may result in serious injury to personnel.</p>					
				Check oil level on dipstick (14). Add oil as required to air/hydraulic power unit (15).	
 <p style="text-align: right;">8099809-</p>					
DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)	
Air/Hydraulic Unit	3 qt (2.8L)	OHA	OHA	OHA	



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

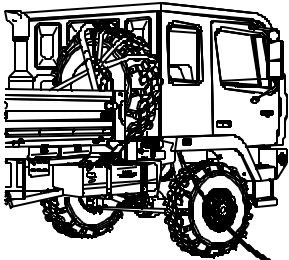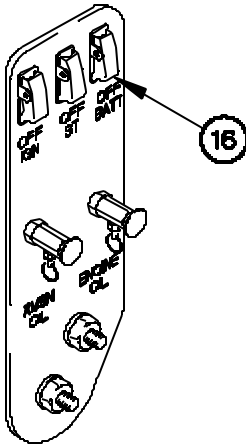
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
<p align="center"><b>NOTE</b></p> <p align="center">CREWMEMBER PROCEDURE. Steps 1 through 4 apply to vehicle S/N 18,550 or higher.</p>					
8.	Before		Remote Battery Disconnect Switch, Manual Battery Disconnect Switch (MBDS), and Battery Disconnect Switch/	<ol style="list-style-type: none"> <li>1. Lift RH cab mud flap.</li> <li>2. Check that remote battery disconnect switch (16) is off (down and guarded) (WP 0016 00).</li> </ol>	
<div style="display: flex; align-items: center; justify-content: space-around;">   </div> <p align="right">810998101</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Before		Remote Battery Disconnect Switch, Manual Battery Disconnect Switch (MBDS), and Battery Disconnect Switch. (Continued)	3. Check that Manual Battery Disconnect Switch (MBDS) (17) is on. (WP 0016 00).	

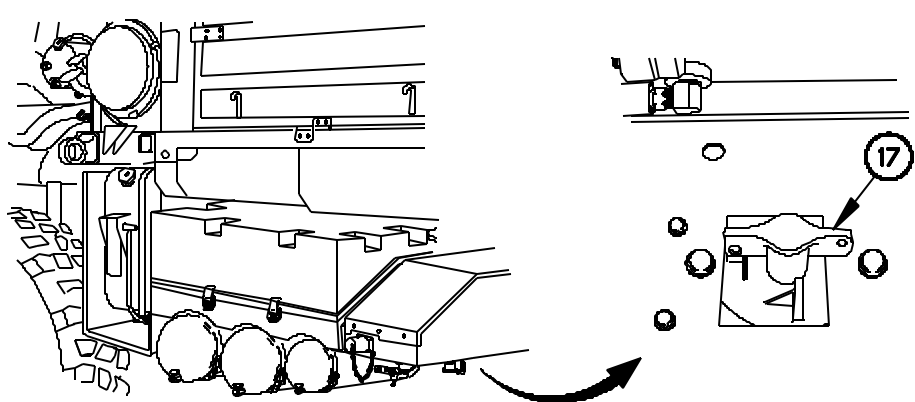


8D998102

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**


0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Before		Remote Battery Disconnect Switch, Manual Battery Disconnect Switch (MBDS), and Battery Disconnect Switch. (Continued)	4. Check that Battery Disconnect Switch (18) switch is off (down and guarded). (WP 0016 00).	

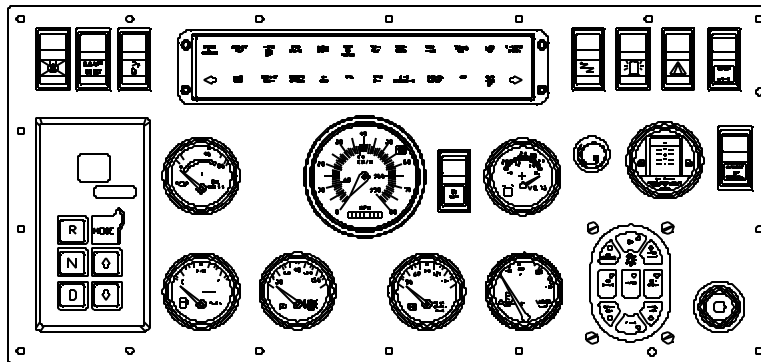

STEERING WHEEL  
REMOVED FOR CLARITY





8D998103

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

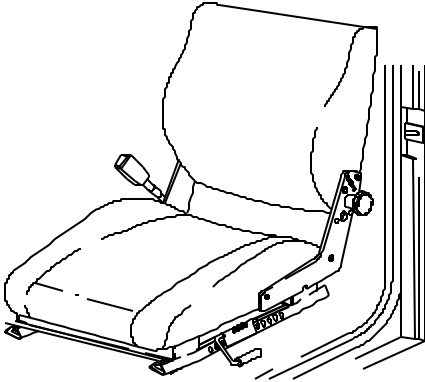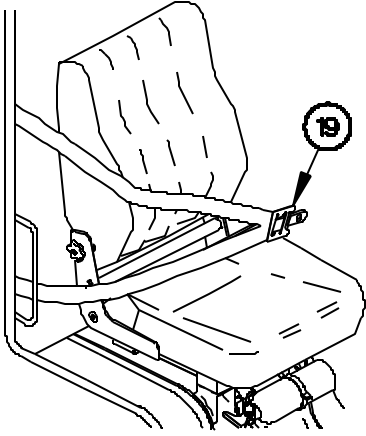ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components		
<p align="center"><b>NOTE</b></p> <p>Operating the vehicle with inoperative seat belts may violate AR 385-55.</p> <p>If vehicle mission requires three personnel, all three seat belts are required to be in working condition.</p>					
				1. Check all three seat belts (19) for security, damage, and proper operation.	Driver's Seat belt and at least one other seat belt not in good working condition.
					
				2. Check operation of driver's seat forward/backward adjustment control (WP 0017 00).	Forward/backward adjustment control is broken or missing.
					

BD99B10-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued	<p>3. Check for missing or damaged fire extinguisher (20).</p> <p>4. Check that fire extinguisher (20) pressure is approximately 150 psi (1,034 kPa).</p>	<p>Fire extinguisher is damaged or missing.</p> <p>Fire extinguisher pressure gage needle is within discharge band.</p> <p>Seal is missing.</p>


8099811 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components -Continued	<p>5. Position Master Power Switch (21) to On.</p> <p>6. Check windshield washer switch (22) for proper operation (WP 0007 00).</p> <p>7. Check windshield wiper switch (23) for proper operation (WP 0007 00).</p>	<p>Notify Field Maintenance if windshield washer switch is inoperative.</p> <p>Notify Field Maintenance if windshield wiper switch is inoperative.</p>

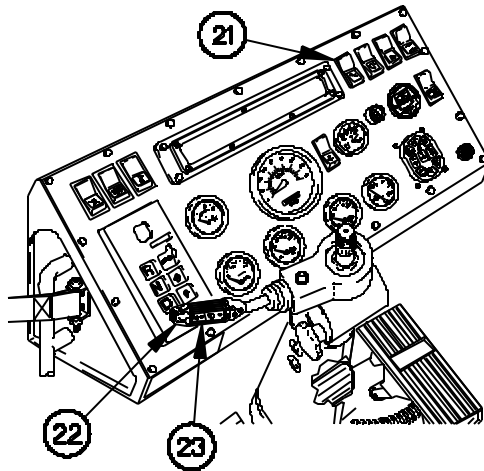


8D998104

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

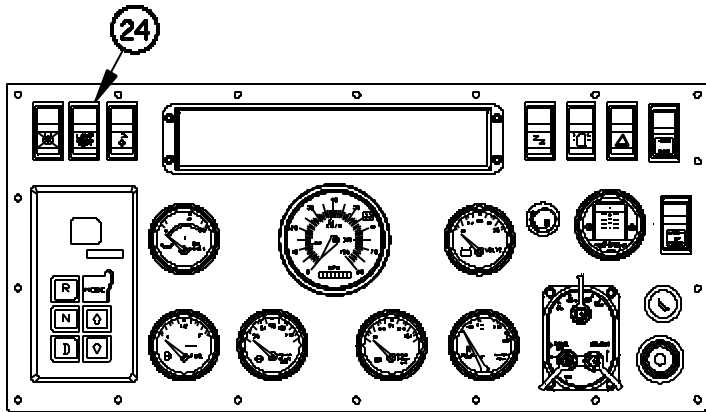ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued		
<p align="center"><b>NOTE</b></p> <p>PARK BRAKE indicator will not illuminate if SYSTEM PARK control is not pulled out. LOW REAR AIR and LOW FRONT AIR indicators will not illuminate if air system pressure exceeds 75 psi (Vehicle S/N 18,549 or lower).</p> <p>PARK BRAKE indicator will not illuminate if SYSTEM PARK control is not pulled out. LOW AIR indicator will not illuminate if air system pressure exceeds 75 psi (Vehicle S/N 18,550 or higher).</p>					
				8. Position LAMP TEST switch (24) to on.	
 <p align="center"><b>STEERING WHEEL REMOVED FOR CLARITY</b></p>					


8099 81 3-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued	9. Check that the following indicator lights are illuminated:  a. ENGINE OIL PRESSURE (25) b. CHECK ENGINE (26) c. INLET AIR HEATER (27) d. CHECK TRANS (28)	Any of the listed indicator lights is not illuminated.

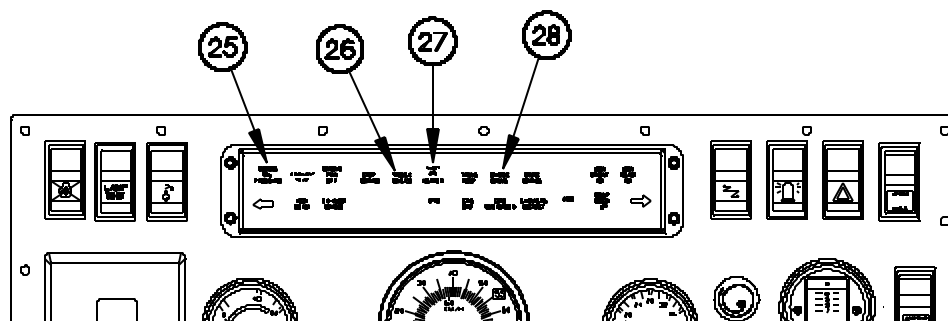

8099 B14 -





**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued	e. PARK BRAKE (29)	
<p align="center"><b>NOTE</b></p> <p align="center">Perform steps f. and g. on vehicles s/n 18,549 or lower.</p>					
				f. LOW FRONT AIR (30)	
				g. LOW REAR AIR (31)	
<p align="center"><b>NOTE</b></p> <p align="center">Perform step h on vehicle s/n 18,550 or higher.</p>					
				h. ABS (32)	
				i. LOW AIR (33)	

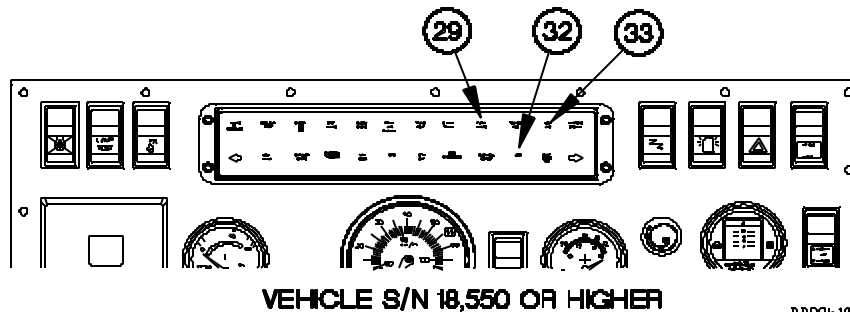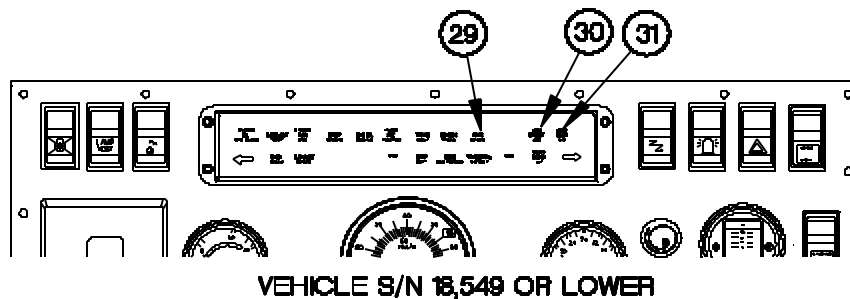

BD996105

<b>M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued</b>	<b>0103 00</b>
---	----------------


Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued		
<p><b><u>CAUTION</u></b></p> <p>If ENGINE OIL PRESSURE indicator does not illuminate momentarily, or illuminates and stays on, vehicle is not fully mission capable. Failure to comply may result in damage to equipment.</p> <p><b><u>NOTE</u></b></p> <p>If OIL PRESS gage reads in red zone (0-7 psi) and ENGINE OIL PRESSURE indicator is not illuminated, shut down engine, then restart engine. Indicator should illuminate momentarily to indicate proper function. If ENGINE OIL PRESSURE indicator illuminates and then goes out, continue with the mission.</p>					
				10. Start engine (WP 0018 00).	Engine will not start.

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

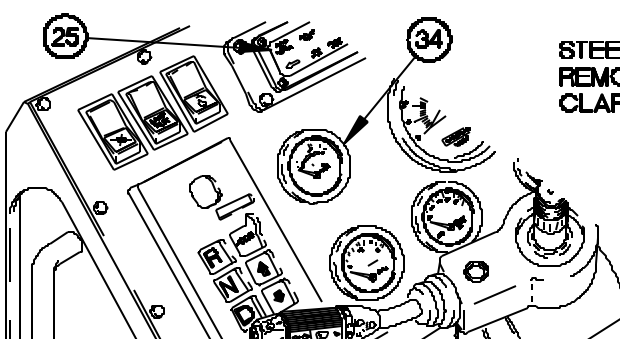
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued		
<p style="text-align: center;"><b>NOTE</b></p> <p>Oil pressure will increase when engine speed increases and will decrease when engine speed decreases.</p> <p>Engine oil pressure will be lower when engine is at maximum operating temperature (WATER TEMP gage reads 250°F).</p>					
				11. Check that engine OIL PRESS gage (34) indicates between 15-80 psi.	<p>Engine OIL PRESS Gage (34) indicates in red zone and ENGINE OIL PRESSURE indicator (25) is illuminated.</p> <p>Engine OIL PRESSURE gage indicates less than 15 psi.</p>
 <p style="text-align: right;"><b>STEERING WHEEL REMOVED FOR CLARITY</b></p>					

BD99B16-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

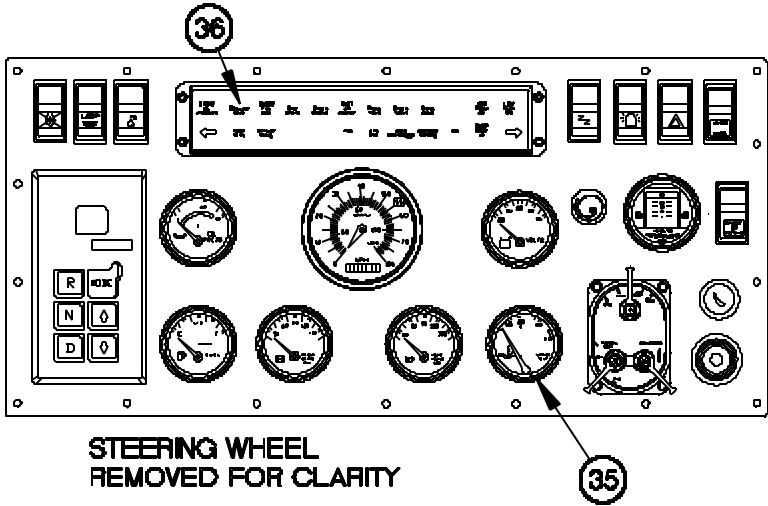
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components -Continued		
<p style="text-align: center;"><b>NOTE</b></p> <p>At idle, WATER TEMP gage may not reach 165°F (71° C).</p> <p>If COOLANT TEMP indicator is illuminated and WATER TEMP gage reads 165° - 230° F (71° - 110° C) and engine fan is NOT running continuously, continue with the mission.</p>					
				12. Check that WATER TEMP gage (35) indicates between 165° - 230° F (71° - 110°C).	WATER TEMP gage indicates in red zone and COOLANT TEMP indicator (36) is illuminated.
<div style="text-align: center;">  <p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p> </div>					
8099817-					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued	13. Check AIR FILTER RESTRICTION GAUGE (37). Press reset button (38) if gauge reads greater than 25 in. (in red area). If gauge still reads in red area after reset button is pressed, shut down engine and service air cleaner (WP 0103 00). Start engine (WP 0018 00). Notify Field Maintenance if gauge still reads in red area.	AIR FILTER RESTRICTION GAUGE (37) reads greater than 25 in. (in red area).

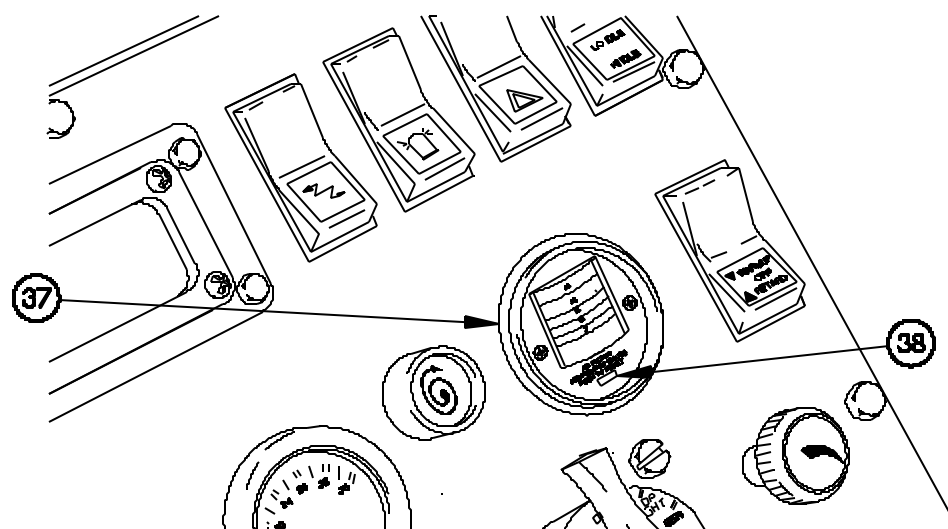

8099818-


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
<p align="center"><b>NOTE</b></p> <p>CREWMEMBER PROCEDURE 14 applies to vehicle S/N 18,549 or lower.</p>					
9	Before		Interior Cab Components - Continued	14. Check that FRONT BRAKE AIR (39) and REAR BRAKE AIR (40) gages read between 75-120 psi.	Either gage indicates less than 75 psi, LOW FRONT AIR (30) or LOW REAR AIR (31) indicators illuminate, audible alarm sounds.

**STEERING WHEEL  
REMOVED FOR  
CLARITY**

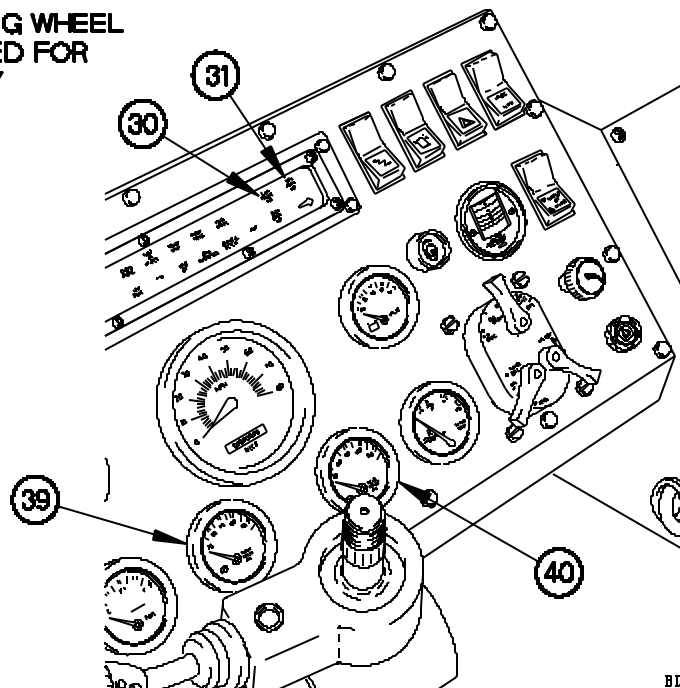


BD99819-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**


**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

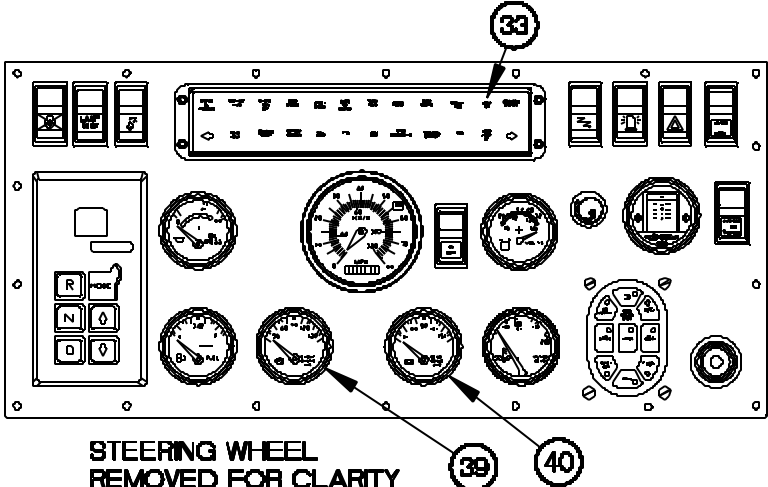ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
<p align="center"><b>NOTE</b></p> <p>CREWMEMBER PROCEDURE 15 applies to vehicle S/N 18,550 or higher.</p>					
9	Before		Interior Cab Components - Continued	15. Check that FRONT BRAKE AIR (39) and REAR BRAKE AIR (40) gage reads between 75-120 psi.	Either gage indicates less than 75 psi, LOW AIR indicator (33) illuminates or audible alarm sounds.
<div style="text-align: center;">  <p>STEERING WHEEL REMOVED FOR CLARITY</p> </div> <p align="right">8D998106</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

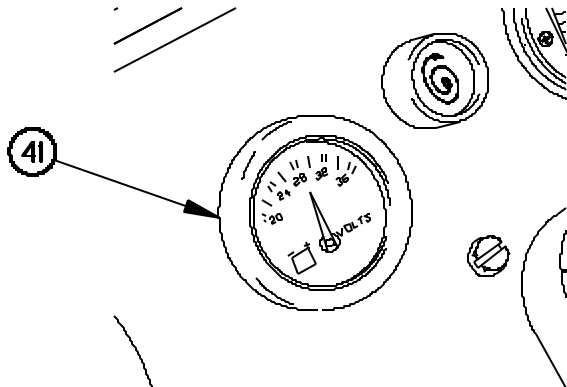ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
<p align="center"><b>NOTE</b></p> <p>CREWMEMBER PROCEDURE 16 applies to vehicle S/N 18,549 or lower.</p>					
9	Before		Interior Cab Components - Continued	16. Check that VOLTS gage (41) reads between 26 and 30 volts.	VOLTS gage indicates more than 30 volts or less than 26 volts.
					



8099820-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**


**Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.**

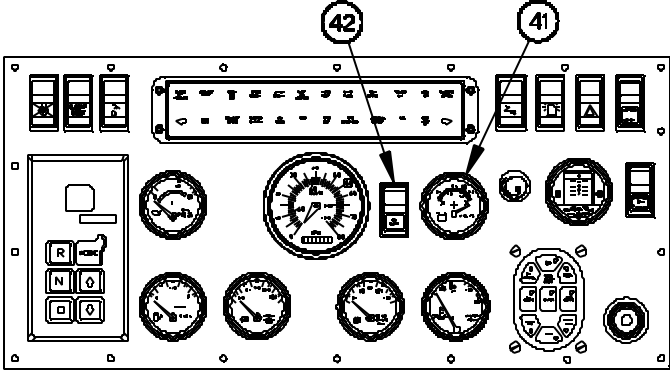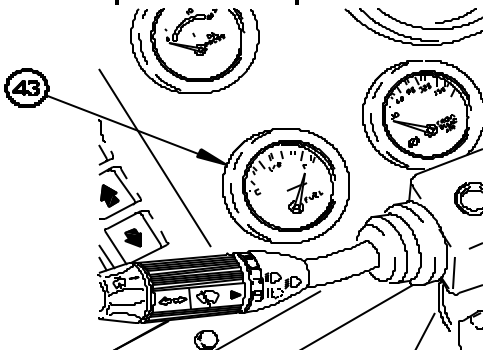ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
<p align="center"><b>NOTE</b></p> <p align="center">CREWMEMBER PROCEDURE 17 applies to vehicle S/N 18,550 or higher.</p>					
				17. Press 12 V BAT switch (42). Check that VOLTS gage (41) reads between 12 and 14 volts.	VOLTS gage indicates more than 14 volts or less than 12 volts.
<div style="text-align: center;">  <p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p> </div> <p align="right">80998107</p>					
				Check that FUEL gage (43) indicates Full (F).	
<div style="text-align: center;">  <p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p> </div> <p align="right">8099821-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

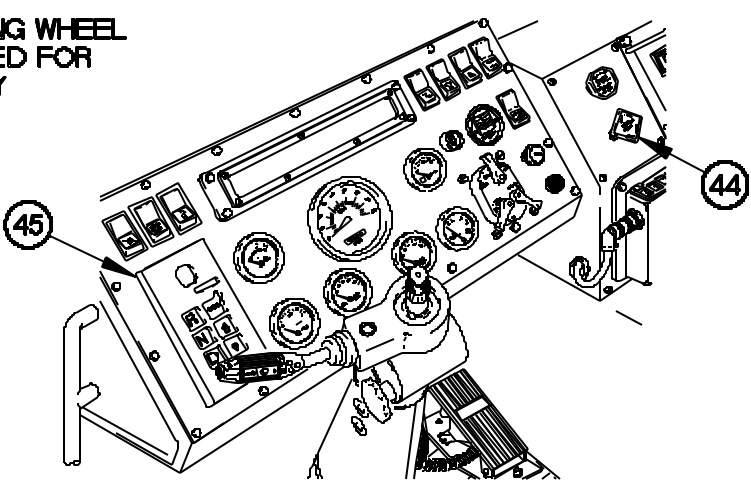
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued		
<b><u>CAUTION</u></b>					
Check SYSTEM PARK control while vehicle is stopped. Failure to comply may result in damage to equipment.					
				19. Pull out SYSTEM PARK control (44).  20. Set WTEC III TPSS (45) to any forward gear (WP 0018 00) while engine is at idle speed (700 rpm). Vehicle should not move.	Vehicle moves with SYSTEM PARK control on.
<p>STEERING WHEEL REMOVED FOR CLARITY</p> 					

8099822-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

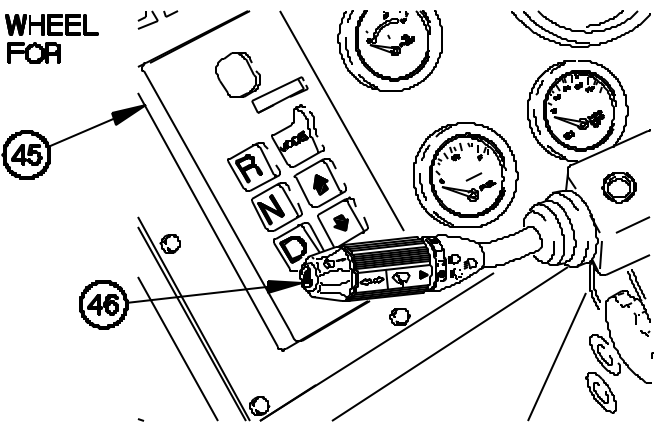ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Interior Cab Components - Continued	21. Check that WTEC III TPSS (45) operates properly in all gears (WP 0018 00).	Notify Field Maintenance if one gear range does not operate properly, or if LED display window does not illuminate or is flashing. Notify Field Maintenance.
<p style="text-align: center;"><b>NOTE</b></p> <p>Turn signal switch will not work unless the main selector lever on the main light switch is in the SER DRIVE position.</p>					
				22. Check turn signal switch (46) and indicators for proper operation (WP 0007 00).	
<p><b>STEERING WHEEL REMOVED FOR CLARITY</b></p> 					

8D99823-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 1. Preventive Maintenance Checks and Services (PMCS) - Before -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/AVAILABLE IF:
9	Before		Interior Cab Components - Continued	23. Check hazard lights switch (47) for proper operation (WP 0004 00).	

The diagram illustrates the interior cab components of the vehicle. It shows several rectangular control panels with various symbols and labels. A callout circle containing the number 47 is connected by a line to a specific switch labeled 'HAZARD LIGHTS'. Other visible components include a panel with a lightning bolt symbol, a panel with a triangle symbol, and a circular gauge or indicator at the bottom center.


81199824 -

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

## **DURING PMCS Procedures for All Models**

These illustrations will help you perform DURING vehicle PMCS. The callouts match PMCS item number/procedures.

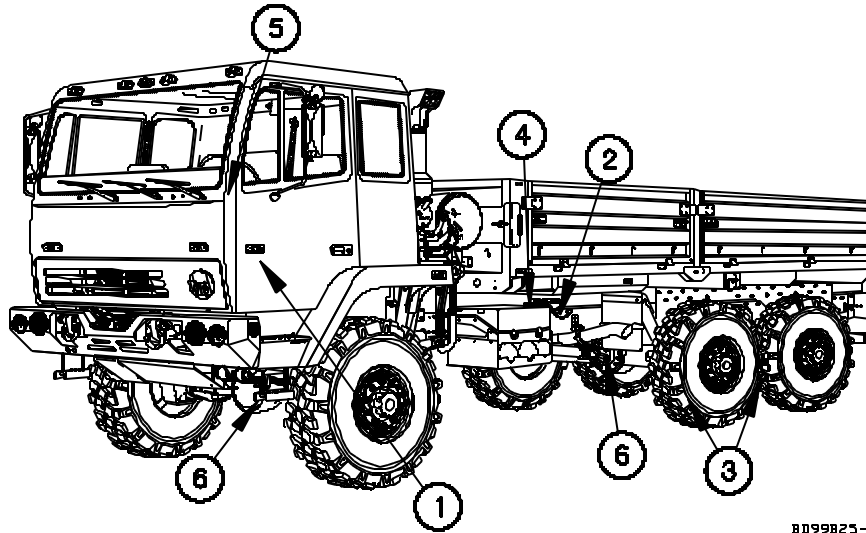

8D99B25-

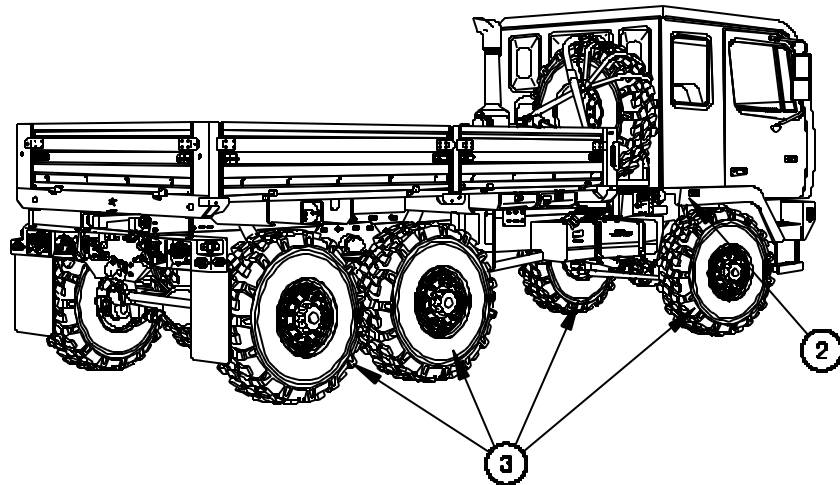

8D99B26-


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**
**Table 2. Preventive Maintenance Checks and Services (PMCS) - During - All Models.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Controls and Indicators		
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>All gages must maintain normal readings as listed in BEFORE checks during vehicle operation. Operating the vehicle for an extended period of time with any of the gages reading outside of normal limits may result in damage to equipment.</p>					
2	During		Engine Operation	Monitor all gages, warning lights, and audible alarms during operation.  Check for excessive exhaust smoke, unusual engine noise, rough running, or misfiring engine.	Warning lights or audible alarms indicate a malfunction and immediate corrective action by the Operator will not correct the problem.  Any of these conditions are found.
3	During		CTIS	Check operation of CTIS (WP 0022 00).	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 2. Preventive Maintenance Checks and Services (PMCS) - During -  
All Models - Continued.**

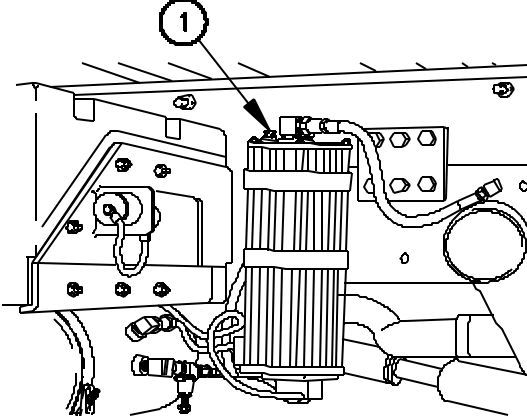ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	During		Air Dryer		
<p><b>NOTE</b></p> <p>Sound of air dryer discharging is normal.</p> <p>Listen for air dryer (1) discharge when system air pressure reaches approximately 120 psi.</p>					
 <p>BD99B27-</p>					
5	During		Steering	Check for any unusual steering noise, binding, or difficulty in turning during operation.	Steering binds or is unresponsive.
6	During		Service Brakes	1. Check to see if service brakes stop vehicle.	Service brakes do not stop vehicle.

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 2. Preventive Maintenance Checks and Services (PMCS) - During -  
All Models - Continued.**

<b>ITEM NO.</b>	<b>INTERVAL</b>	<b>MAN-HOUR</b>	<b>ITEM TO BE CHECKED OR SERVICED</b>	<b><u>CREWMEMBER</u> PROCEDURE</b>	<b>EQUIPMENT NOT READY/ AVAILABLE IF:</b>
6	During		Service Brakes - Continued	<p>2. Check if service brakes pull vehicle to one side when applied.</p> <p>3. Listen for unusual noises (chattering, grinding, groaning, or excessive squealing) during braking. Notify Field Maintenance if unusual noises are present.</p>	Vehicle pulls to one side when service brakes are applied.






**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 3. Preventive Maintenance Checks and Services (PMCS) - After - All Models.

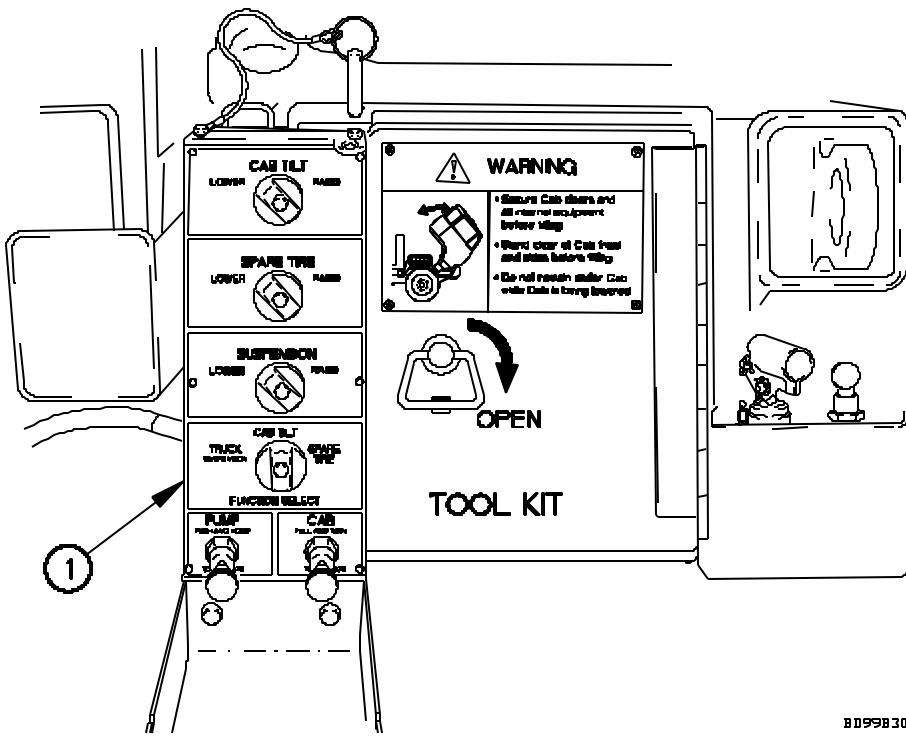
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	After		Hydraulic Manifold	Inspect hydraulic manifold (1) for leakage.	Class III leak is evident.
 <p style="text-align: right;">8199830-</p>					
2	After		Cab Hydraulic Cylinder	1. Raise cab (WP 0021 00).	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	After		Cab Hydraulic Cylinder - Continued	2. Check cab hydraulic cylinder (2) for oil leaks or damage.  3. Check linkage (3) for damage and missing hardware.	Class III leak is evident or cab will not raise or lower.  Linkage is damaged or missing hardware.
3	After		Cab Hydraulic Latch	Check cab hydraulic latch (4) for damage and hoses for oil leaks.	Class III leak is evident and cab will not latch

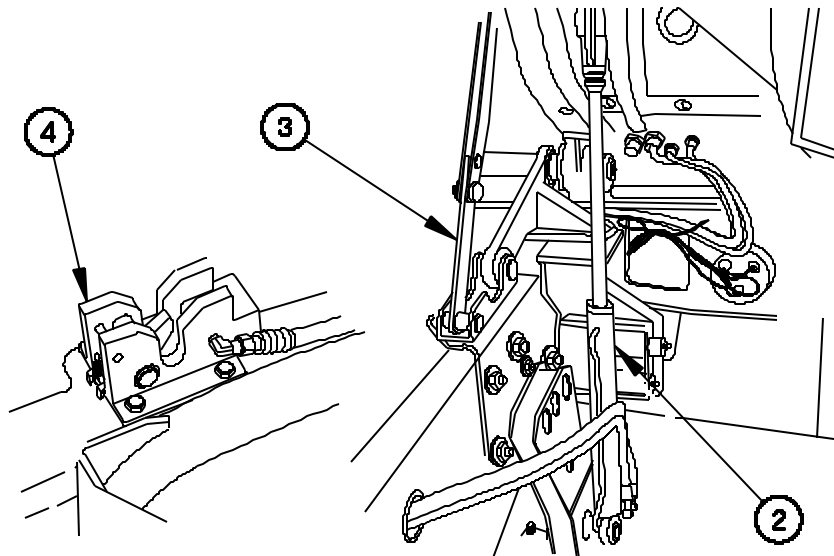


8099 831 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

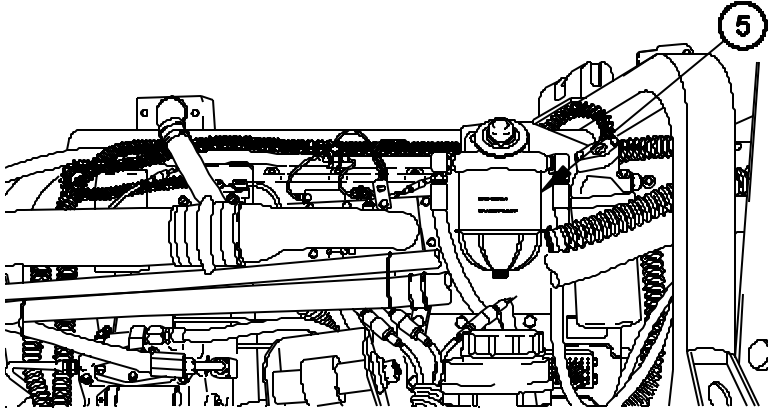
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	After		Fuel/Water Separator		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Do not perform fuel/water separator checks, inspections, or draining while smoking, or when near fire or sparks. Fuel could ignite. Failure to comply may result in serious injury or death to personnel.</p> <p style="text-align: center;"><b><u>NOTE</u></b></p> <p>Operating the vehicle with damaged fuel/water separator may violate AR 385-55.</p>					
				1. Check fuel/water separator (5) for leaks or damage.	Class III leak is evident.
					

BD99B32-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.

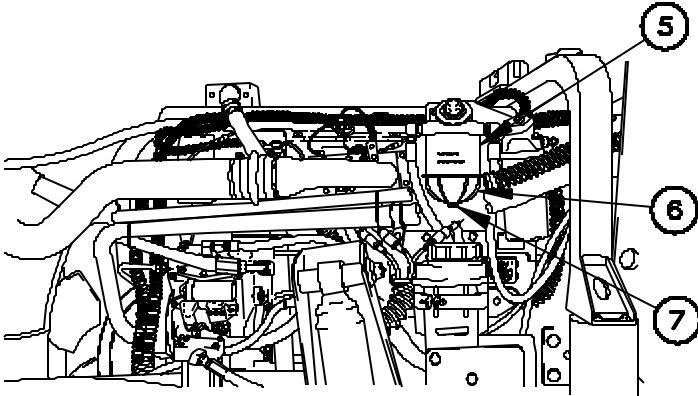ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	After		Fuel/Water Separator - Continued	<p>2. Check for presence of water in bowl (6) of fuel/water separator (5). If there is water in bowl, perform the following steps:</p> <p>a. Turn knurled nut (7) to the left to open drain valve.</p>	
				<p>b. Keep draining until pure fuel is coming out.</p> <p>c. Close drain valve by turning knurled nut to the right.</p>	

8099813-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**


**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	After		Engine Compartment	Visually inspect engine compartment for obvious damage that would impair operation.	Class III leak is evident. Notify Field Maintenance.
6	After		Engine Oil		

**CAUTION**

Do not overfill engine with oil. Failure to comply may result in damage to equipment

	0.1		1. Check engine oil dipstick (8) for oil level. Level should be between ADD line and OPERATING RANGE line.	If engine oil is over OPERATING RANGE line, discolored, or milky, notify Field Maintenance.
--	-----	--	--	---

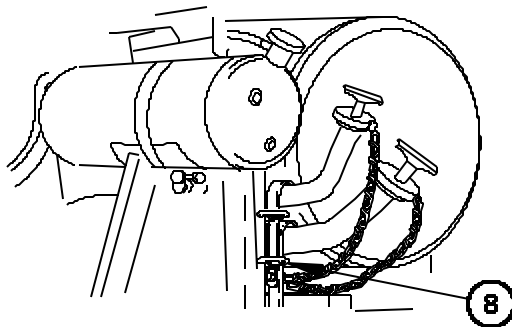

8099834 -


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**
**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:										
6	After		Engine Oil - Continued	2. Add oil as required.											
<table><tr><th rowspan="2">DESCRIPTION</th><th rowspan="2">CAPACITY</th><th colspan="2">TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES</th></tr><tr><th>122° to 5° F (50° to -15° C)</th><th>50° to -50° F (10° to -46° C)</th></tr><tr><td>Engine Crank Case</td><td>25 qt (24 L)</td><td>15W-40</td><td>OEA</td></tr></table>						DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		122° to 5° F (50° to -15° C)	50° to -50° F (10° to -46° C)	Engine Crank Case	25 qt (24 L)	15W-40	OEA
DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES													
		122° to 5° F (50° to -15° C)	50° to -50° F (10° to -46° C)												
Engine Crank Case	25 qt (24 L)	15W-40	OEA												
7	After		Transmission Oil	3. Lower cab (WP 0021 00). 1. Start engine (WP 0018 00).											

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

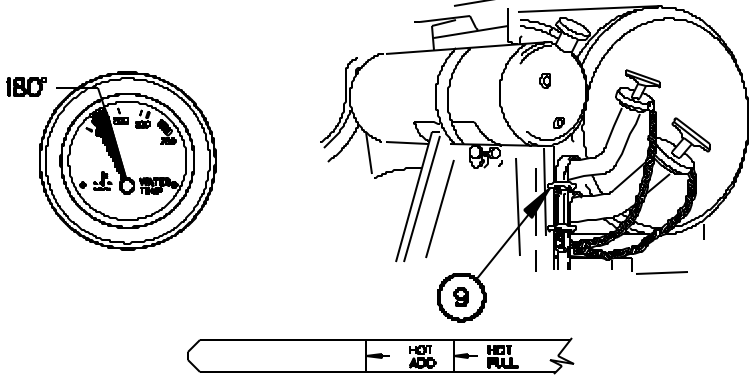ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
7	After		Transmis- sion Oil - Continued		
<p align="center"><b>NOTE</b></p> <p>Perform transmission oil check when engine is at normal operating temperature (160° - 230° F[71° - 110° C]).</p> <p>Perform transmission oil check with vehicle parked on level surface.</p> <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>2. Check TRANSMISSION OIL DIPSTICK (9) for transmission oil level. Level should be between HOT ADD line and HOT FULL line.</p> </div> <div style="width: 45%;"> <p>If Transmission oil is over HOT FULL line, discolored, or milky, notify Field Maintenance.</p> </div> </div> <div style="text-align: center; margin-top: 20px;">  </div>					

8D99835-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
7	After		Transmis- sion Oil - Continued	3. Add oil, 1 quart at a time, until transmission oil level is between HOT FULL and HOT ADD lines.	


DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Transmission (Total System, All Models Except M1088A1 and M1089A1)	44.3 qt (46.7 L)	OE/HDO- 15W40	OE/HDO-10	OEA
Transmission (At Oil Change, All Models Except M1088A1 and M1089A1)	36.8 qt (36.8 L)	OE/HDO- 15W40	OE/HDO-10	OEA
Transmission (Total System, M1088A1 and M1089A1)	58.6 qt (55.5 L)	OE/HDO- 15W40	OE/HDO-10	OEA
Transmission (At Oil Change M1088A1 and M1089A1)	31.8 qt (30.0 L)	OE/HDO- 15W40	OE/HDO-10	OEA

			4. Shut down engine (WP 0018 00).	
--	--	--	--------------------------------------	--

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

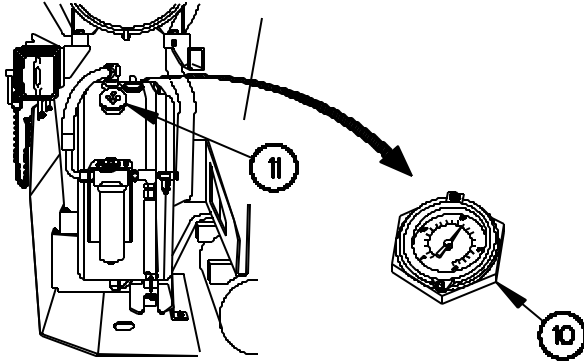ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	After		Hydraulic Reservoir (If Equipped)		
<p style="text-align: center;"><b>NOTE</b></p> <p>Hydraulic reservoir is considered full when oil level gage reads about 3/4 mark.</p>					
				<ol style="list-style-type: none"> <li>1. Check oil level gage (10) to determine oil level.</li> <li>2. Remove hydraulic reservoir cap (11) to visually inspect oil level. Fluid level should be visible in fill port. Add oil as required.</li> <li>3. Install hydraulic reservoir cap (11).</li> </ol>	
					

8099836-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**


**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	After	0.1	Hydraulic Reservoir (If Equipped) - Continued		

DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Hydraulic Reservoir	27 gal (102.2 L)	OE/HDO-10	OE/HDO-10	OEA

9	After		Air Tanks	<div>1. With vehicle parked and engine shut down, listen for sound of air leaks around air tanks (11).</div> <div>2. Open air tank drain valves (12) and drain moisture.</div>	Air leak(s) heard around air tanks.
---	-------	--	-----------	--	-------------------------------------

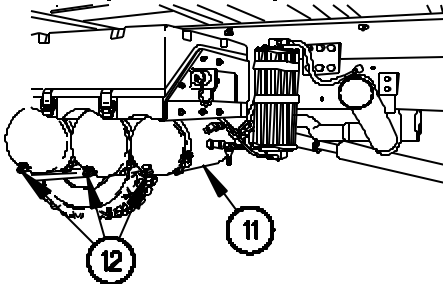


8099837-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.

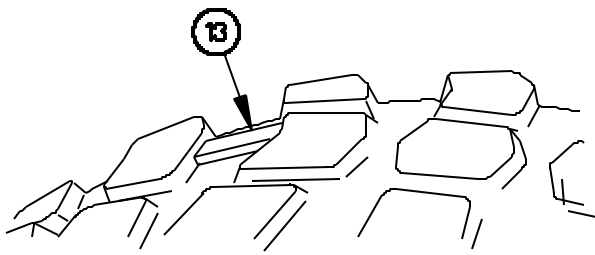
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
10	After		Tires	Check for missing tire treads or improperly inflated tires. Check tires for cuts, gouges, cracks, and unusual bulges. Remove any object that could penetrate tire(s).	Tire tread missing. Tire deflated or worn to wear bar (13).
 <p>The diagram shows a cross-section of a tire tread. A circular callout with the number '13' inside points to a horizontal line across the tread, representing the wear bar. The tread is shown with several blocks of varying heights, and the wear bar is the lowest point across the width of the tread.</p>					

8099838-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**

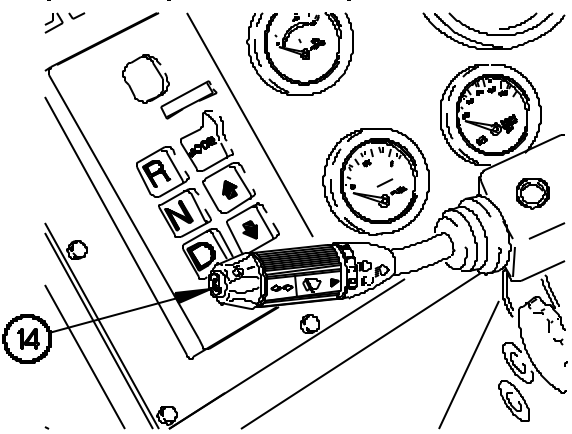ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
11	After		Horn Button	Check horn button (14) for proper operation.	
					
12	After		Lights		
<p align="center"><b>NOTE</b></p> <p>Operating vehicle with damaged or inoperable headlights may violate AR 385-55.</p> <p>Checking lights is a safety task that would not be performed in a tactical mission. See AR 385-55.</p>					
				Check headlights, turn signals, taillights, stoplights, marker lights, blackout drive, and blackout marker lights for damage and proper operation (WP 0018 00).	

8099839-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 3. Preventive Maintenance Checks and Services (PMCS) - After -  
All Models - Continued.**


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	<u>CREWMEMBER</u> PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
13	After		Light Switches		
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Ensure all switches are placed in the OFF position. Batteries could discharge. Failure to comply may result in damage to equipment.</p>					
				Position all light switches to off (WP 0004 00).	

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

## **WEEKLY PMCS Procedures for All Models**

These illustrations will help you perform WEEKLY vehicle PMCS. The callouts match PMCS item number/procedures.

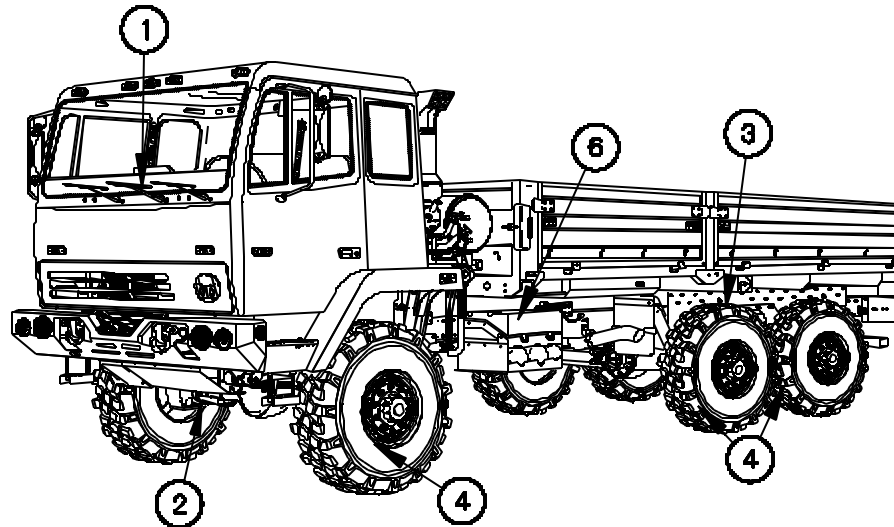


8099840-

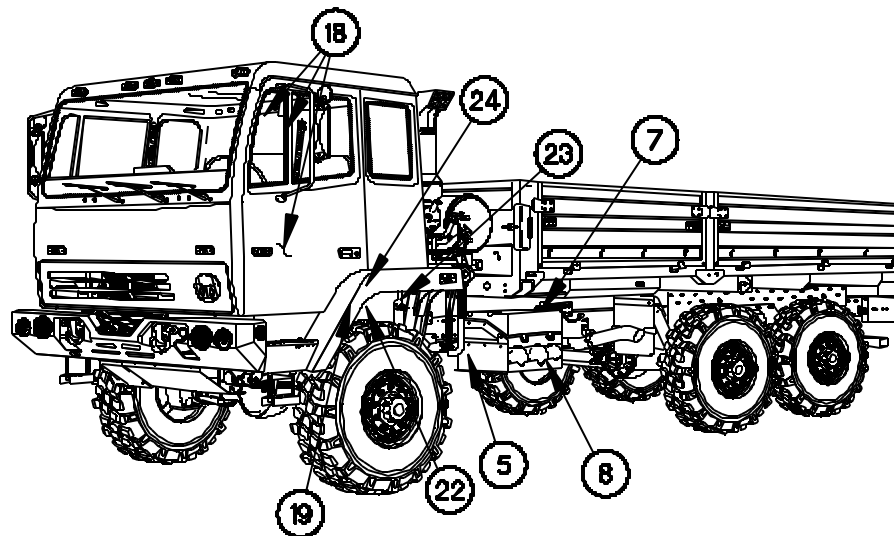


8099841-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

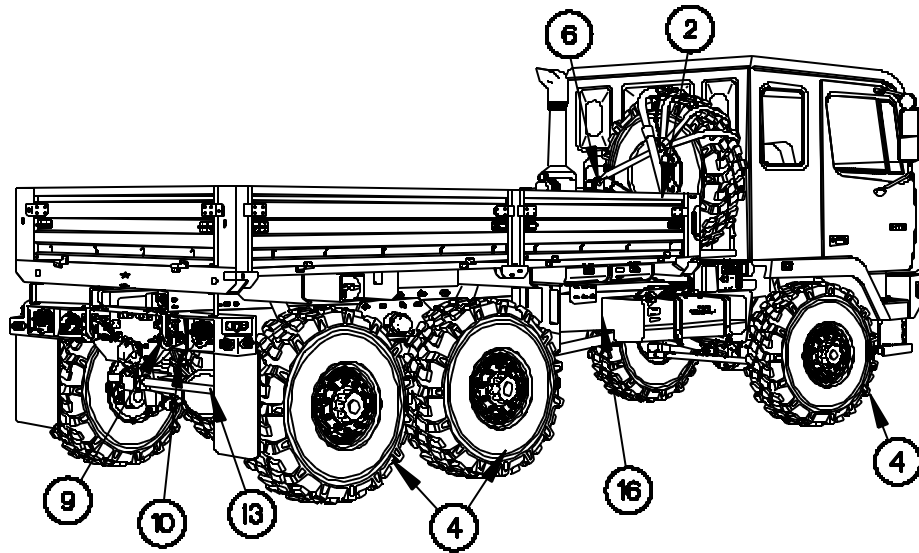

8D99B42-

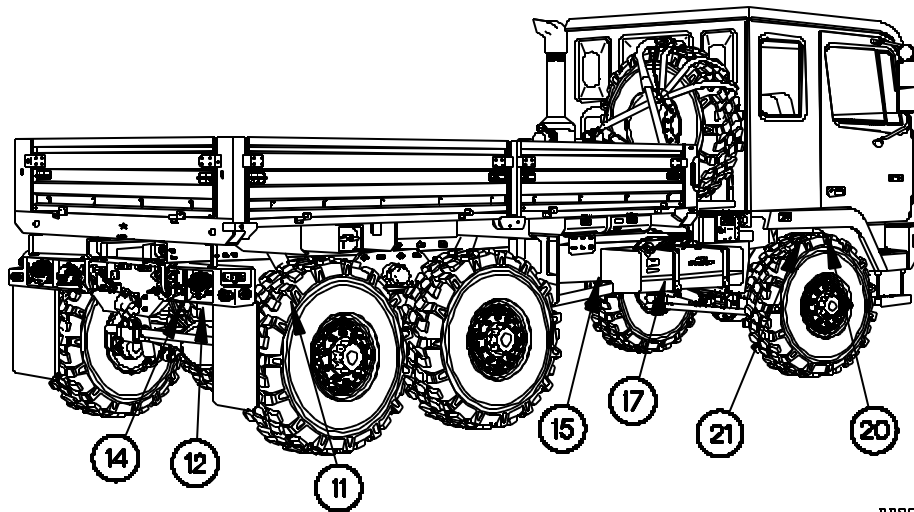

8D99B43-




**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Weekly		Heater/ Defrost Controls	Check FAN switch (1), HEAT control (2), VENT control (3), and DEFR (defrost) control (4) for proper operation (WP 0024 00).	

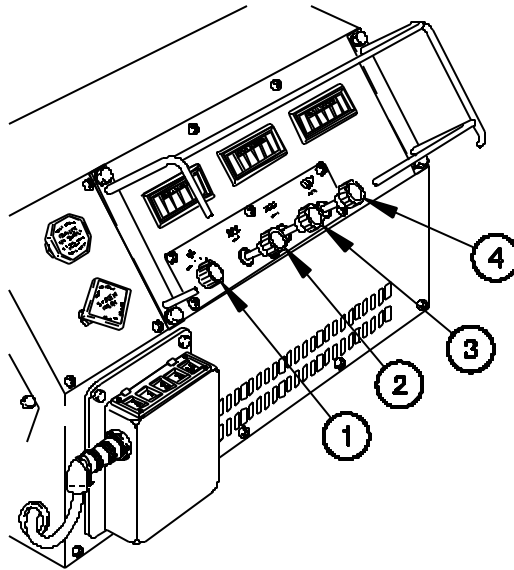


8199844-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

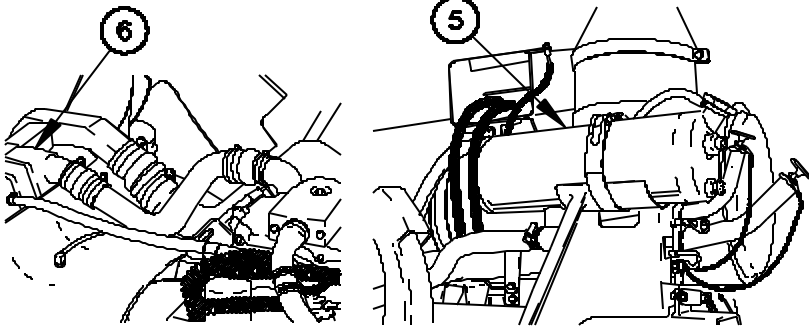ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes	<p>Check bolts, nuts, clamps, hoses, and tubes for looseness and missing, broken, or leaking conditions. Tighten loose bolts, nuts, and clamps. If bolts, nuts, clamps, hoses, or tubes are missing, broken, cannot be tightened, or are damaged to the point of leaking, notify Field Maintenance. The following should be checked:</p> <p>1. Coolant, including radiator overflow tank (5) and radiator (6).</p>	
 <p>The diagram shows two views of the engine compartment. The left view shows the radiator (6) with a callout line pointing to it. The right view shows the radiator overflow tank (5) with a callout line pointing to it. Both components are labeled with circled numbers 5 and 6 respectively.</p>					


8D99B45-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes - Continued	2. Transmission oil cooler (7).	

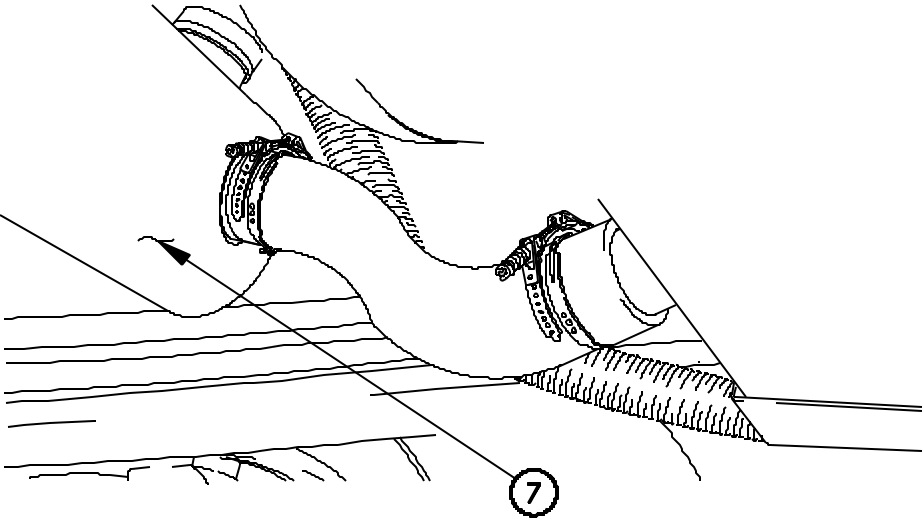

BD99B46-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes - Continued	3. Air intake system, including air cleaner (8), particle extraction hose (9), charge air cooler tubes/hoses (10), and air compressor (11).	

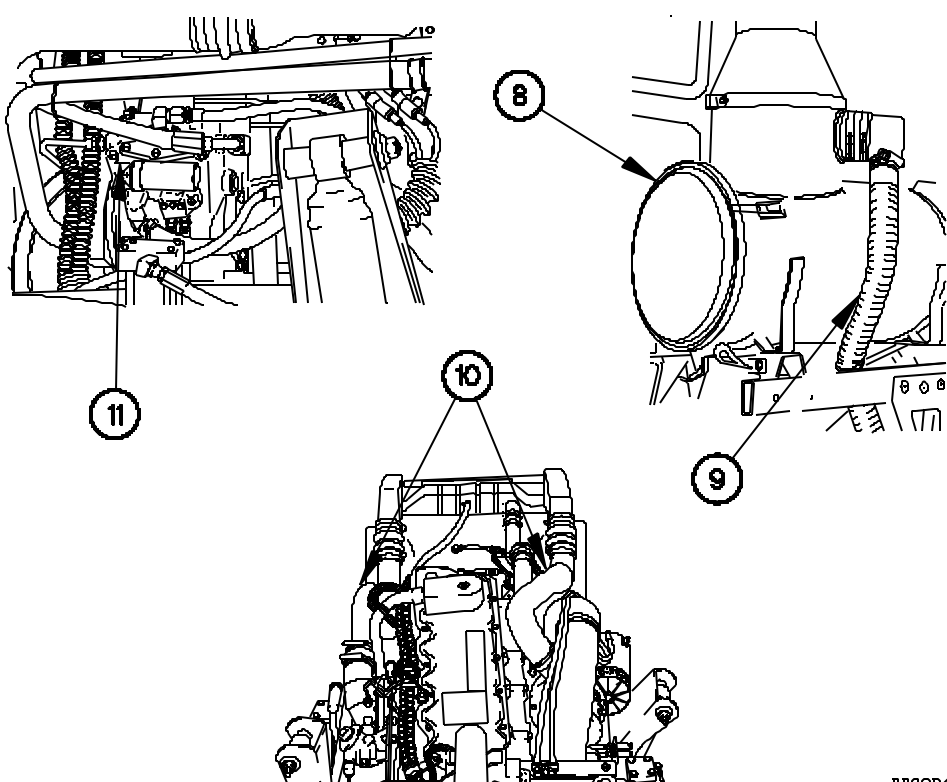


Diagram illustrating the air intake system components labeled 8, 9, 10, and 11. The diagram shows a side view of the engine compartment with the air intake system components labeled. 8 points to the air cleaner, 9 points to the particle extraction hose, 10 points to the charge air cooler tubes/hoses, and 11 points to the air compressor.

8099B47-


0103 00-63

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes	<p>Check nuts, bolts, clamps, hoses, and tubes for looseness and missing, broken, or leaking conditions. If damage is found, notify Field Maintenance. The following should be checked:</p> <p>1. Suspension, including springs, and U-bolts (16).</p>	


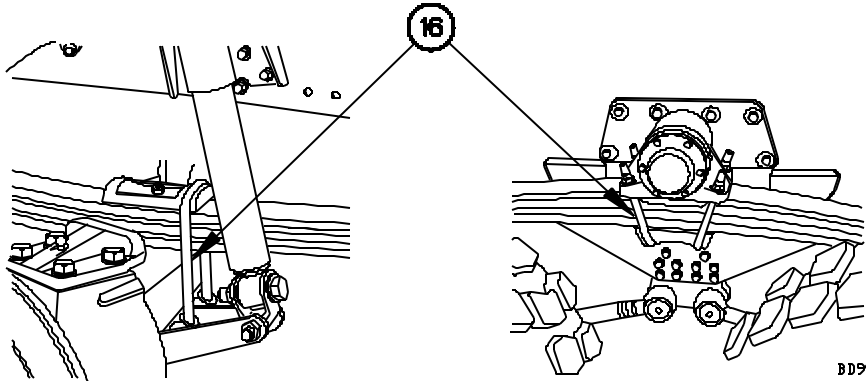


DD99850-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

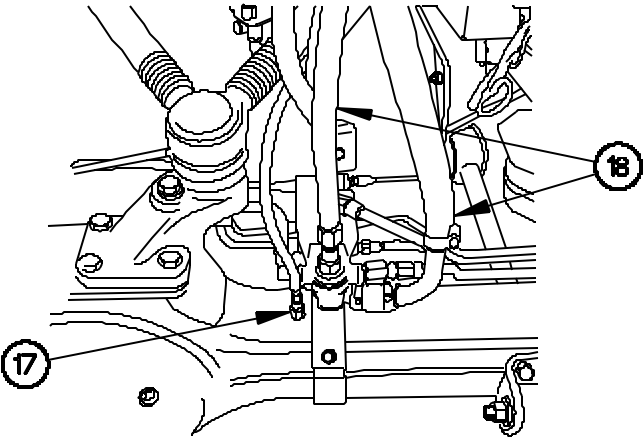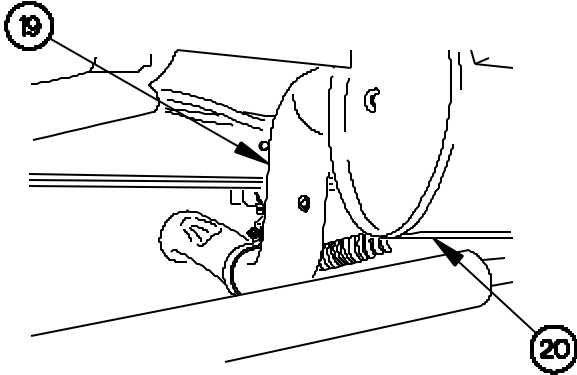ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes - Continued	2. Axles, including vent hoses (17), CTIS hoses (18), and clamps.	
					
				3. Exhaust system, including muffler (19) and tailpipe (20).	
					




8099851-

8099852-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

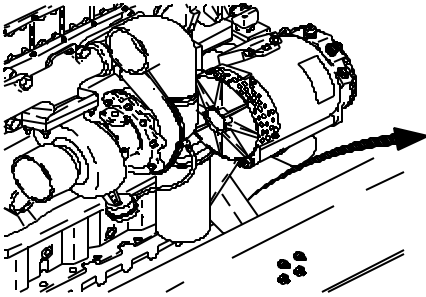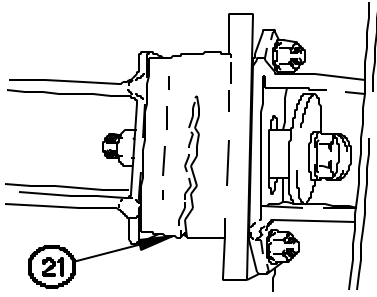
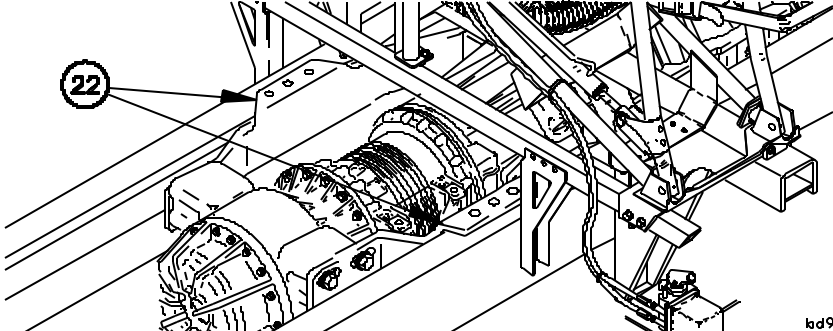
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes - Continued	4. Check engine mount (21) for loose or missing mounting bolts. Check center bolt is not rubbing bracket. Cracks greater than 50% or more on any side of rubber mount.	4. Engine mounts are loose or damaged. Missing bolts, cracks greater than 50% or more on any side of rubber mount.
			 		
					
			<p>5. Engine/transmission supports (cradle mounts) (22).</p>		



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

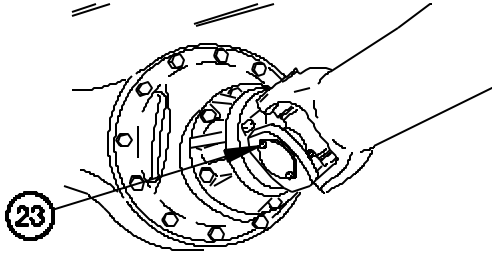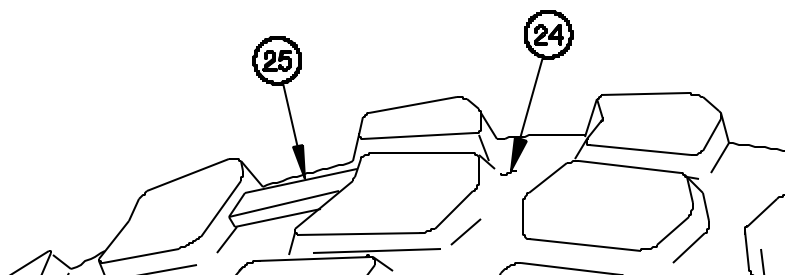
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Mounting/ Coupling Hardware and Hoses/ Tubes - Continued	6. Drive shaft U-joint bolts (23).	
					
4	Weekly		Wheels and Tires	1. Check tire tread depth (24). Tread depth should not be worn beyond level of wear bar (25).	8D99B55- Tire tread is worn even to height of wear bar (depth is 1/8 in. (0.8 cm) or less). Any cut, gouge, or crack that extends to cord body or any unusual bulges.
					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Weekly		Wheels and Tires - Continued	<p>2. Check wheel assembly for damage. If damaged, remove wheel and check wheel for cracked, broken, or bent surfaces</p> <p>3. Check wheel studs (26) and lug nuts (27) for obvious looseness. Check for bent or broken studs and missing or loose nuts. Notify Field Maintenance if any nuts are loose or missing or if any studs are broken or bent.</p>	<p>Wheel is cracked, broken, or bent.</p> <p>Two or more lug nuts or studs on same wheel are missing, loose, or broken.</p>

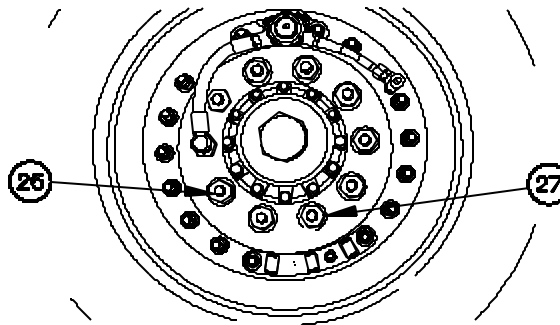

8099857-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Weekly		Wheels and Tires - Continued	4. Check tire pressures with tire gage for each CTIS setting. Notify Field Maintenance if tire pressures do not match those values given:	

DESCRIPTION	TIRE PRESSURES FOR CTIS MODES			
	HWY	X-C	SAND	EMER
ALL MODELS EXCEPT M1088A1/ M1089A1	60 psi (414 kPa)	37 psi (255 kPa)	22 psi (152 kPa)	16 psi (110 kPa)
MODELS M1088A1/ M1089A1	81 psi (558 kPa)	54 psi (372 kPa)	32 psi (221 kPa)	24 psi (165 kPa)

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Weekly		Hydraulic Reservoir (If Equipped)	<ol style="list-style-type: none"> <li>1. Check hydraulic reservoir (28), oil hose (29), and connections for leaks and/or damage.</li> <li>2. Check for clogged, damaged, or missing hydraulic reservoir strainer (30). <ol style="list-style-type: none"> <li>a. Remove hydraulic reservoir cap (31) from hydraulic reservoir (28).</li> </ol> </li> </ol>	Class III leak is evident.

8D99858-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Weekly		Hydraulic Reservoir (If Equipped) - Continued	b. Wipe out inside of hydraulic reservoir strainer with clean rag.  c. Install cap on hydraulic reservoir.	
6	Weekly		Batteries		

**WARNING**

Lead-acid battery gases can explode. Do not smoke, have open flames, or make sparks around a battery, especially if caps are off. Battery may give off gas which can explode. Failure to comply may result in serious injury or death to personnel.

Remove rings, bracelets, wristwatches, neck chains, and any other jewelry before working around vehicle. Jewelry may catch on equipment or may short across an electrical circuit or battery terminal. Failure to comply may result in serious injury or death to personnel.

1. Open battery cover (32)(WP 0109 00).

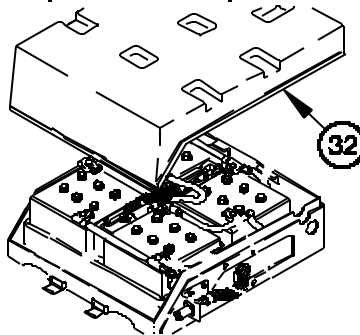


BD99B59-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
6	Weekly		Batteries - Continued	<p>2. Check for damaged casing, terminal posts (33), and security of mounting. Check that cable clamps are secure. Notify Field Maintenance if defects are found.</p> <p>3. Check battery fluid level (34) (WP 0108 00). If fluid level is low, fill with distilled water. If fluid is gassing (to boiling), notify Field Maintenance.</p>	One or more batteries are missing, unserviceable, or leaking. Battery cable clamps are loose. Notify Field Maintenance.

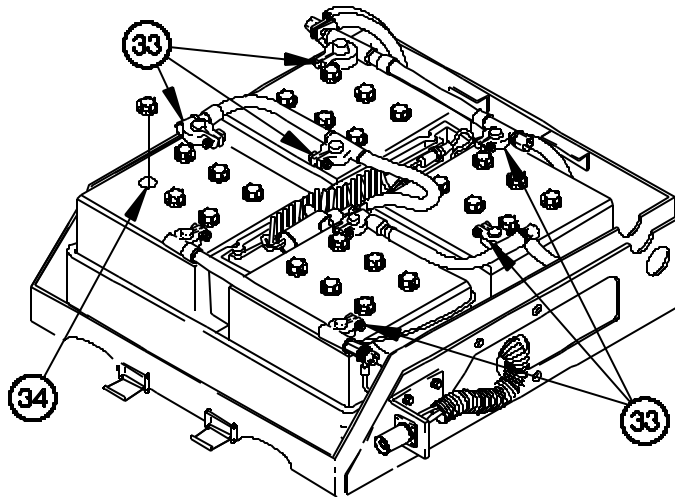


3D99860-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
6	Weekly		Batteries - Continued	<p>4. Check battery box (35) for corrosion. Clean debris from battery box drain holes.</p> <p>5. Close battery cover (32) (WP 0108 00)</p>	

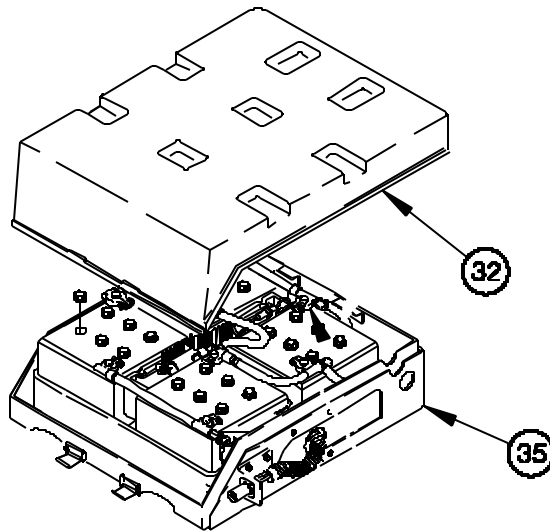


8099861-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

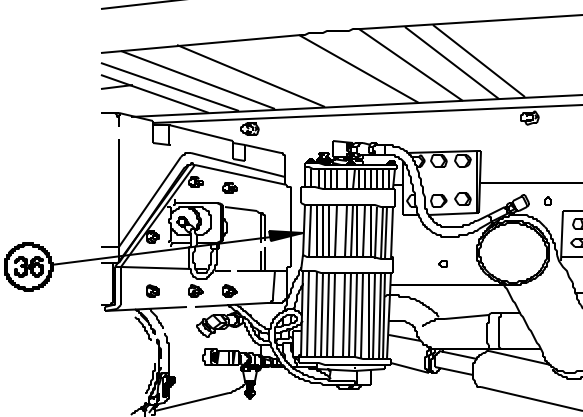ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
7	Weekly		Air Dryer	Check air dryer (36) for damage and loose mounting.	
					
8	Weekly		Underneath Vehicle	<p>1. Check underneath vehicle for obvious damage to leaf springs, engine, transmission, frame rails, and crossmembers.</p> <p>2. Check air hoses and fittings underneath vehicle for obvious damage and leakage.</p>	<p>Any loose or broken frame rails, crossmembers, broken welds, or broken screws are found.</p> <p>Any air leaks or damage to hoses or fittings are found.</p>




8D99862-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

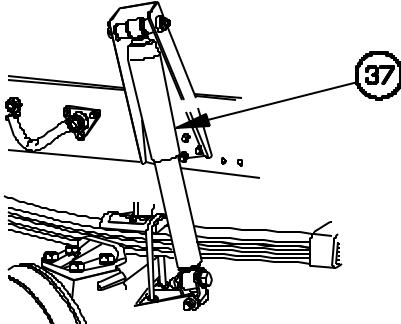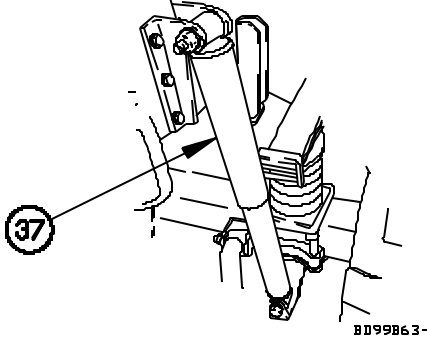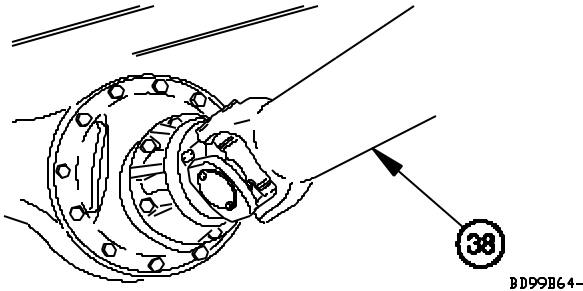ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Weekly		Underneath Vehicle - Continued	3. Check shock absorbers (37) for leaks, missing or loose hardware, and loose shock absorber.	Shock absorber(s) have more than class I leak, missing or loose hardware, or loose shock absorbers are found.
			  <p style="text-align: right;">BD99B63-</p>		
			 <p style="text-align: right;">BD99B64-</p>		
			4. Check drive shafts (38) for loose hardware.	Any loose hardware is found.	


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Weekly		Electrical Connectors	Check electrical connectors for damage.	
10	Weekly	0.1	Gladhands	1. Check gladhands (39) for damage and air leaks  2. Lubricate coupler seals	Air leaks are heard.

DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Gladhand Coupler Seals	As Needed	VV-D-1078	VV-D-1078	VV-D-1078

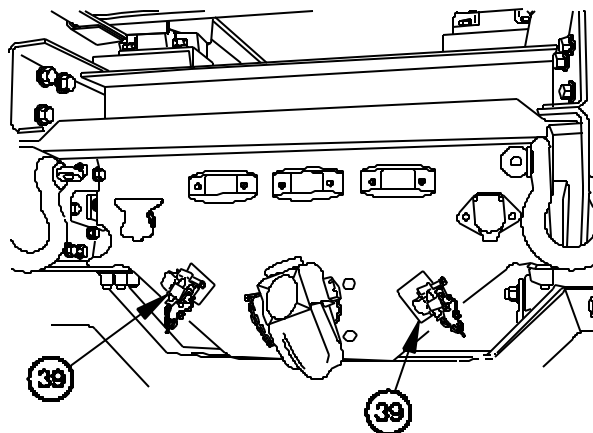

8099865-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
11	Weekly		Reflectors	Check for missing or damaged reflectors.	
12	Weekly		Pintle Hook	Check pintle hook (40) for looseness and/or damaged locking mechanism.	



The diagram is a line drawing of the rear chassis of the M1083A1 vehicle. It shows the main body, various mounting points, and the rear suspension. A callout line points from a circle containing the number '40' to a specific component on the rear chassis, which is the pintle hook. The diagram is used to illustrate the location of the pintle hook for inspection purposes.

8D99866-

# M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly - All Models - Continued.

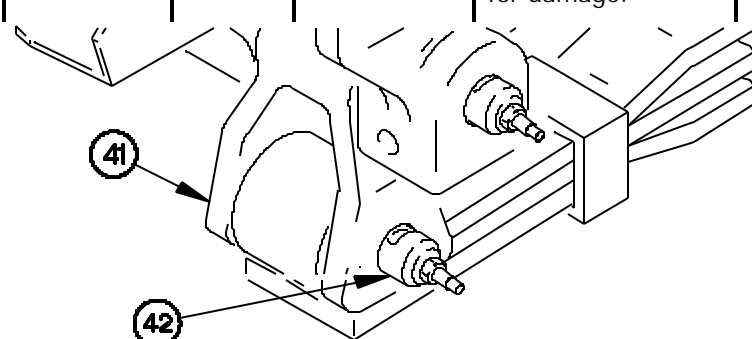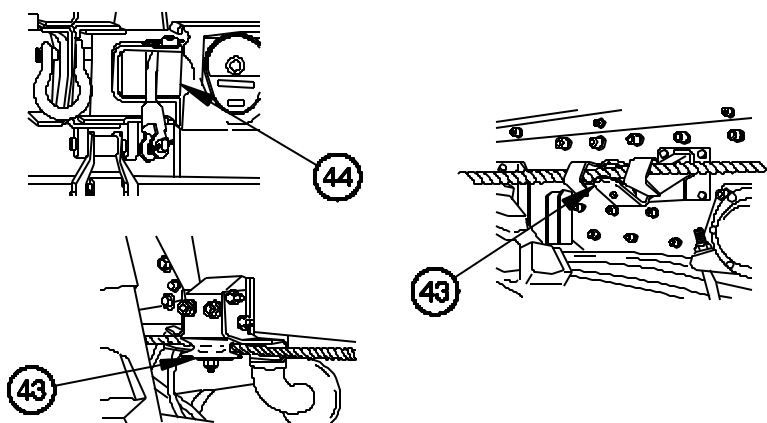ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
13	Weekly		Shackles	Check shackles (41) for damage. Check mounting pin (42) for damage.	
 <p>Diagram showing a shackle assembly. Callout 41 points to the shackle body, and callout 42 points to the mounting pin.</p>					
14	Weekly		15K SRW Rollers (If Equipped)	Check that cable guides (43) and roller fairleads (44) are mounted securely and rotate smoothly.	
 <p>Diagrams showing cable guides (43) and roller fairleads (44). Callout 43 points to a cable guide, and callout 44 points to a roller fairlead.</p>					



8D99867-

8D99868-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

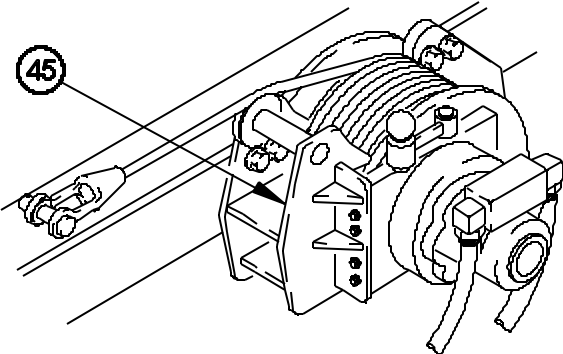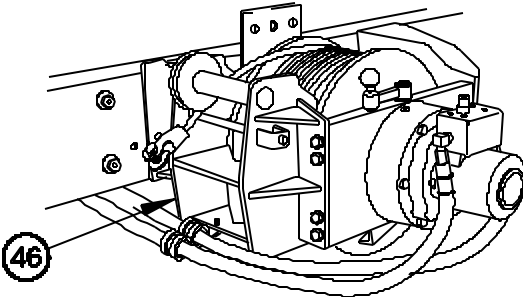ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
15	Weekly		15K SRW (If Equipped)	Inspect 15K SRW (45) for loose parts, oil leaks, and obvious external damage.	
					
16	Weekly		15K Self-Recovery Winch (SRW) Operation (If Equipped)	1. Check 15K SRW (46) for proper operation in both directions (WP 0065 00).	
					

8099869-


8099870-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
16	Weekly		15K Self-Recovery Winch (SRW) Operation (If Equipped) - Continued	<p>2. Check cable (47) for kinks, frays, and breaks.</p> <p>3. Check cable end for missing or damaged pin (48) or cotter pin (49).</p>	

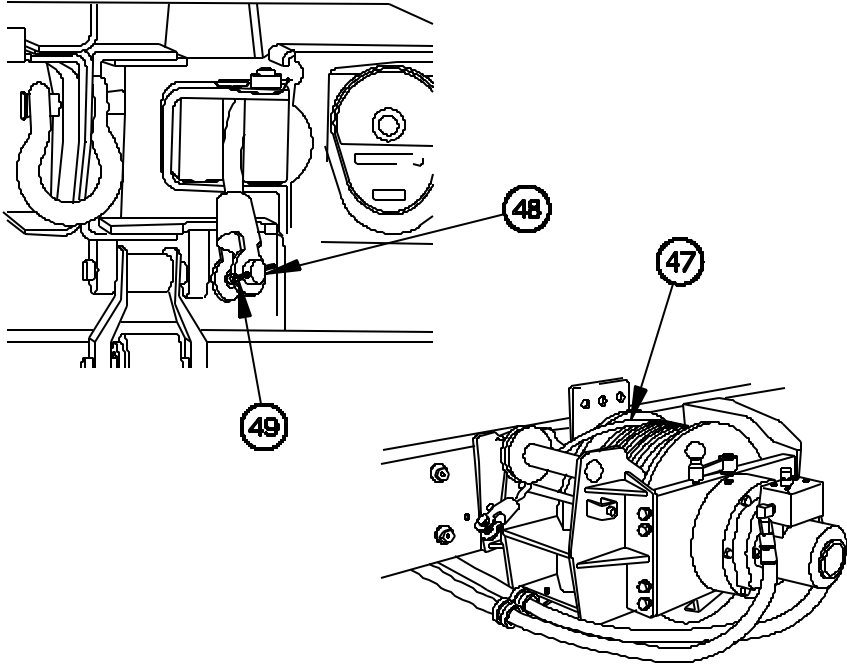


The diagrams illustrate the maintenance points for the 15K Self-Recovery Winch (SRW). The top-left diagram shows a side view of the winch with a cable (47) and a pin (48) at the cable end. The bottom-right diagram shows a front view of the winch with a cable (47) and a cotter pin (49) at the cable end.

8 D99 B71 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**


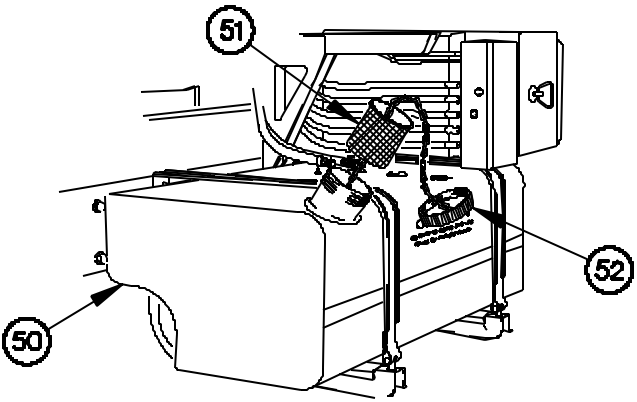
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
17	Weekly		Fuel Tank		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Diesel fuel is flammable. Do not fill fuel tank with engine running, while smoking, or when near an open flame. Never overfill tank or spill fuel. If fuel is spilled, clean it up immediately. Failure to comply may result in serious injury or death to personnel.</p>					
				<ol style="list-style-type: none"> <li>1. Check fuel tank (50) for clogged, damaged, or missing fuel strainer (51).</li> <li>2. Check that fuel cap (52) is not loose or damaged.</li> </ol>	
					

8099873-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

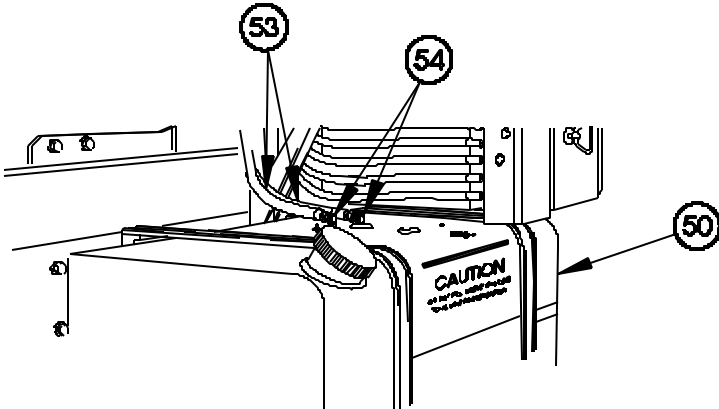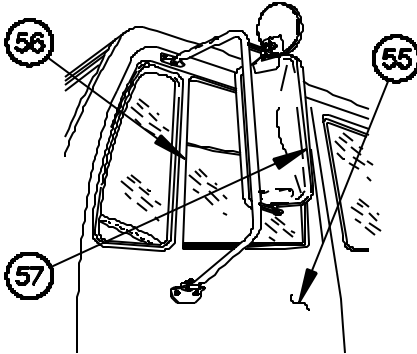ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
17	Weekly		Fuel Tank - Continued	3. Check fuel tank (50), fuel hoses (53), and connections (54) for leaks and damage.	Class III leak is evident.
					
18	Weekly		Door, Window, and Mirror	Check condition and operation of doors (55), windows (56), and mirrors (57).	
					

8D99874-

8D99875-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
19	Weekly		Drive Belts, Fan, and Pulleys		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Ensure engine oil is cool before performing any maintenance. Failure to comply may result in injury or death to personnel.</p> <p>Engine compartment and accessories may be extremely hot when engine is running or has been running recently. Use caution around engine when cab is raised. Failure to comply may result in injury to personnel.</p> <p>Engine compartment contains a partially exposed fan blade. Use extreme caution around front of engine. Failure to comply may result in injury to personnel.</p>					
				1. Raise cab (WP 0021 00).	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
19	Weekly		Drive Belts, Fan, and Pulleys - Continued	2. Check drive belts (58) for cracking, fraying, and breaks.	<p>Any of the following conditions are present:</p> <p>Any drive belt has more than one crack 1/8 in. (0.3 cm) in depth or 50 percent of belt thickness. Notify Field Maintenance.</p> <p>Any drive belt has frays more than 2 in. (5.1 cm) long. Notify Field Maintenance.</p>

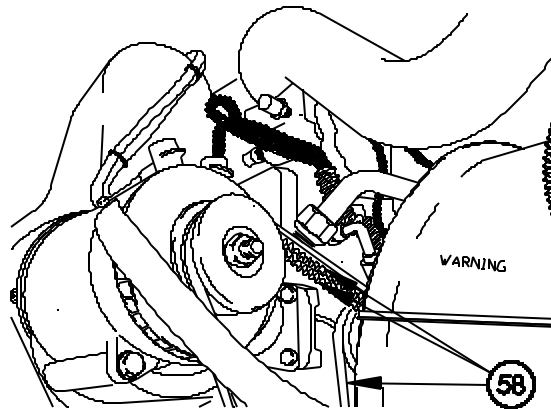


BD99B76-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
19	Weekly		Drive Belts, Fan, and Pulleys - Continued	3. Check tightness of drive belts. Play should be about ½ in. (1.3 cm). Notify Field Maintenance to tighten drive belts.	Any drive belt has excessive play. Notify Field Maintenance.
20	Weekly		Fan Clutch	Check fan clutch (59) for missing or loose mounting hardware	Missing or loose mounting hardware is found. Notify Field Maintenance.

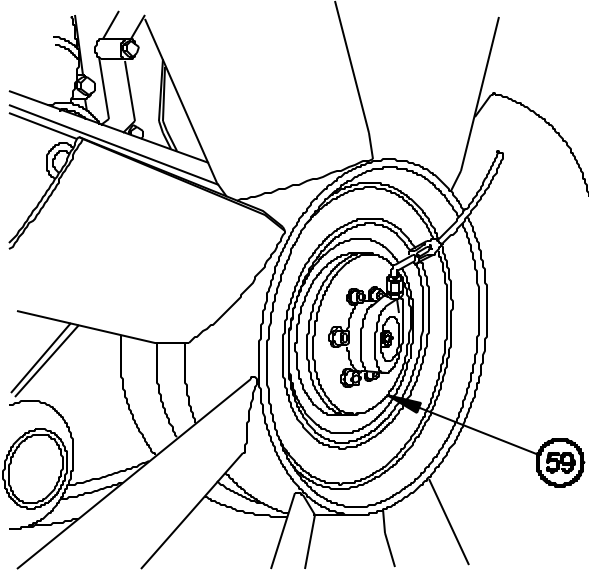
  


8D99B77-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

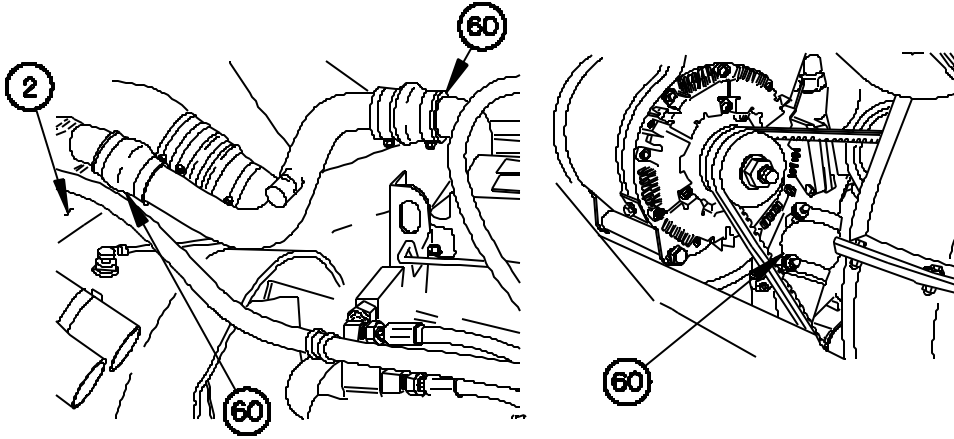ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
21	Weekly		Radiator Hoses	<p>1. Check radiator hoses (60) for cracks and excessive wear which may cause leakage. Check radiator hoses for loose hose clamps.</p> <p>2. Check radiator (2) for leaks and damaged fins.</p>	<p>Class III leak is evident. Notify Field Maintenance.</p> <p>Class III leak is evident. Notify Field Maintenance.</p>
					

81199878-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00


Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
22	Weekly		Fuel Filter	Check fuel filter (61) for leaks or damage.	Class III leak is evident. Notify Field Maintenance.
23	Weekly		Power Steering Reservoir		

**CAUTION**

Do not overfill power steering reservoir. Failure to comply may result in damage to equipment.

			1. Check power steering reservoir (62) for leaks or obvious damage.	Class III leak is evident.
--	--	--	---	----------------------------

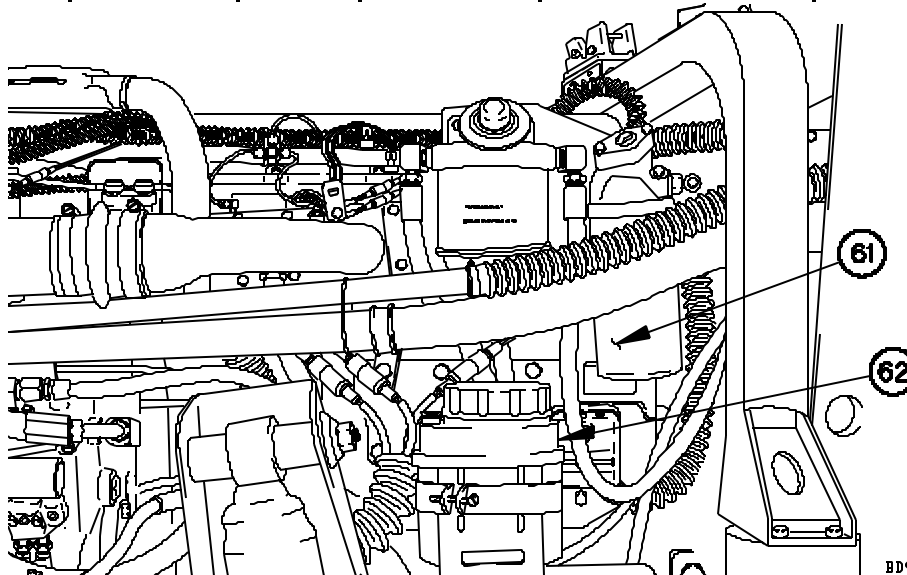


BD99B79-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

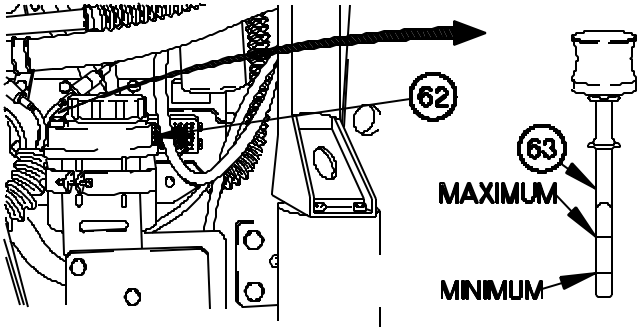ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
23	Weekly		Power Steering Reservoir - Continued	2. Check that power steering reservoir (62) is filled to proper level. Oil should be between maximum and minimum level as marked on dipstick (63). Add oil as required. If oil level is over maximum level, notify Field Maintenance.	
 <p>The diagram illustrates the power steering reservoir (62) and its dipstick (63). The dipstick has two markings: 'MAXIMUM' and 'MINIMUM'. An arrow points from the reservoir to the dipstick. The part number 8D99880- is indicated at the bottom right of the diagram.</p>					
DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)	
Power Steering System	5 qt (4.8 L)	OE/HDO-10	OE/HDO-10	OEA	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
24	Weekly		Charge Air	1. Check for missing or loose clamps at: a. Intake air filter (4). b. Turbocharger inlet coupling (64).	Any clamp missing or unable to be tightened.

The diagram is a technical line drawing of an engine's intake system. It shows a large circular air filter assembly on the left, connected to a complex network of pipes and structural supports. Two specific points are highlighted with circled numbers and leader lines: '4' points to a clamp on the intake air filter assembly, and '64' points to a clamp on the turbocharger inlet coupling. The drawing is a perspective view showing the engine's internal components and their mounting structure.

8099 881 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
24	Weekly		Charge Air - Continued	c. Charge air cooler (65).  d. Charge air cooler to air inlet elbow tubes (66).	



8D99882-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 4. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
All Models - Continued.**

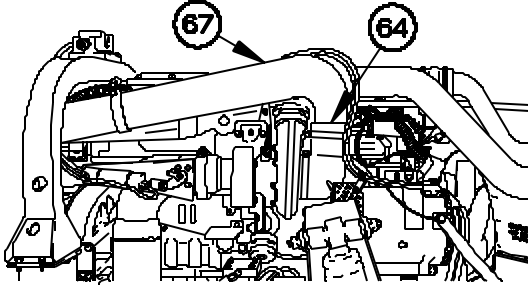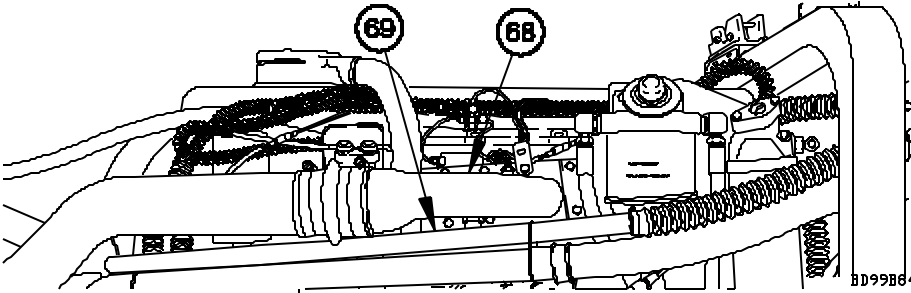
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
24	Weekly		Charge Air - Continued	<p>2. Check intake air hoses at:</p> <p>a. Intake air filter to turbocharger inlet (64).</p> <p>b. Turbocharger to charge air cooler inlet (67).</p>	Any hose with damage.
				 <p>BD99B83-</p> <p>c. Charge air cooler to air inlet elbow (68).</p> <p>d. Air compressor to air inlet elbow (69).</p>  <p>BD99B84-</p>	

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

## **MONTHLY** PMCS Procedures for All Models

These illustrations will help you perform MONTHLY vehicle PMCS. The callouts match PMCS item number/procedures.

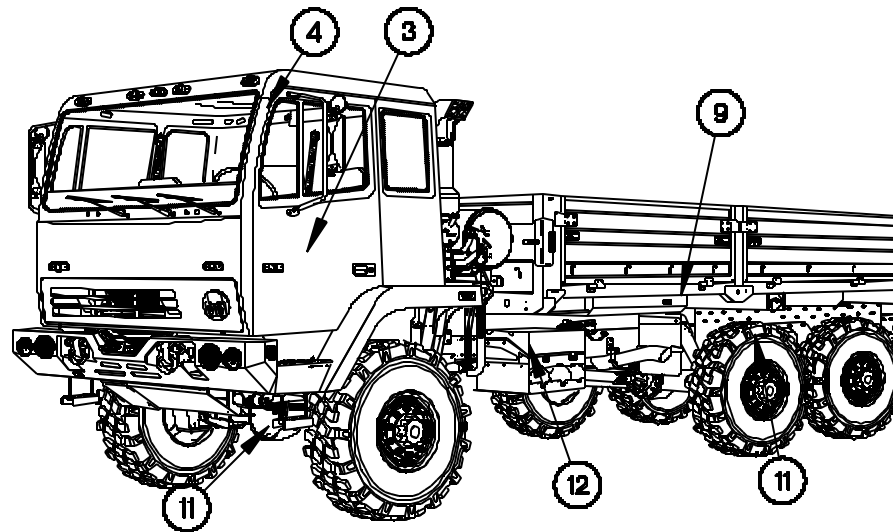

8D99885-

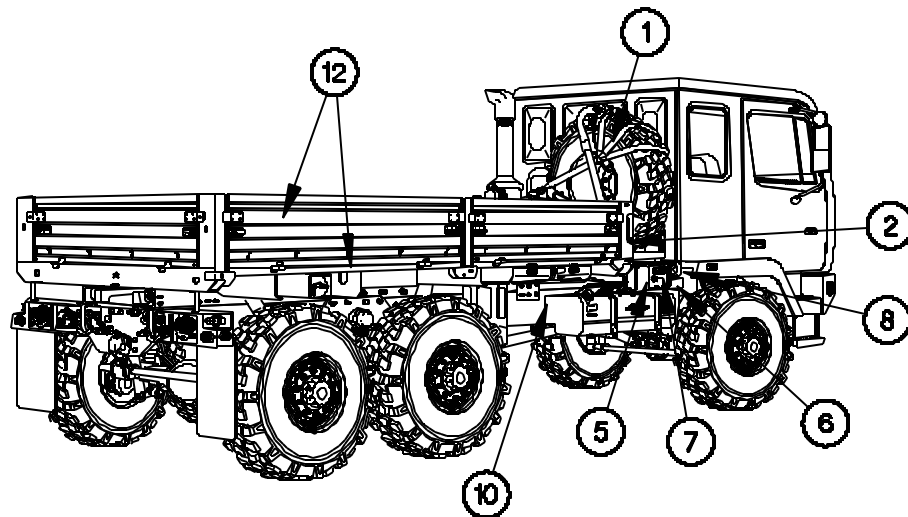


8D99886-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly - All Models.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Spare Tire	<p>1. Check that spare tire (1) lowers properly (para 3-5).</p> <p>2. Check spare tire (1) for cuts, gouges, and cracks. Remove any objects that could penetrate tire.</p> <p>3. Check that spare tire (1) has not worn beyond wear bar (3). Replace spare tire (WP 0105 00) if tire has worn beyond bar.</p>	Tire treads (2) are worn even to height of wear bar (3) (depth is 1/8 in. (3 m) or less). Any cut, gouge, or crack that extends to cord body or any unusual bulges.

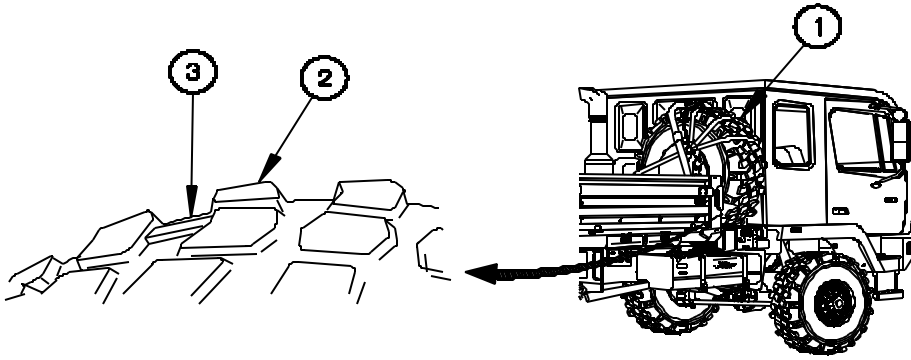

The diagram illustrates the location of the spare tire (1) on the rear of the M1083A1 truck. An arrow points from the spare tire to a detailed cross-section of a tire tread. In this cross-section, label 2 points to the tread surface, and label 3 points to the wear bar, which is a raised edge on the tread.


BD99B87-

**1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Spare Tire - Continued	<p>4. Check that spare tire (1) is properly secured to spare tire retainer (4). Ensure spare tire retainer is securely stowed in up position.</p> <p>5. Check spare tire (1) for correct air pressure. Inflate tire to 60 psi (414 kPa) if air pressure is low.</p>	Spare tire retainer cannot be secured in its up position.

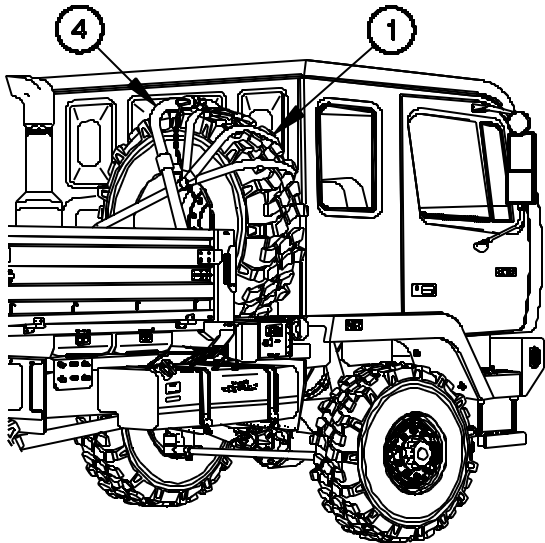


8099888-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

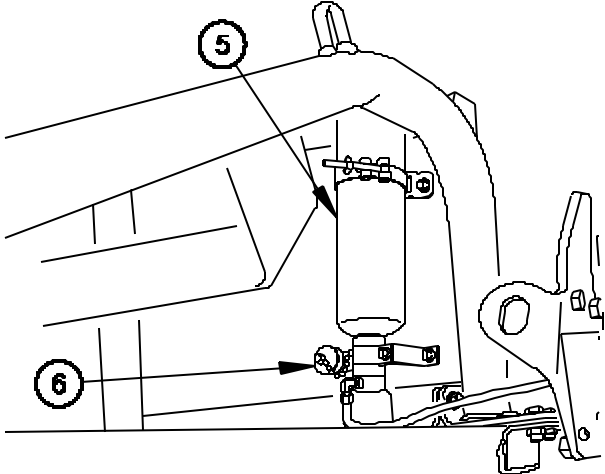
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Monthly		Ether Starting Aid	Check ether cylinder (5) for loose or damaged mounts and hardware. Check ether cylinder and injection valve (6) for damage.	
					

8199889-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.**

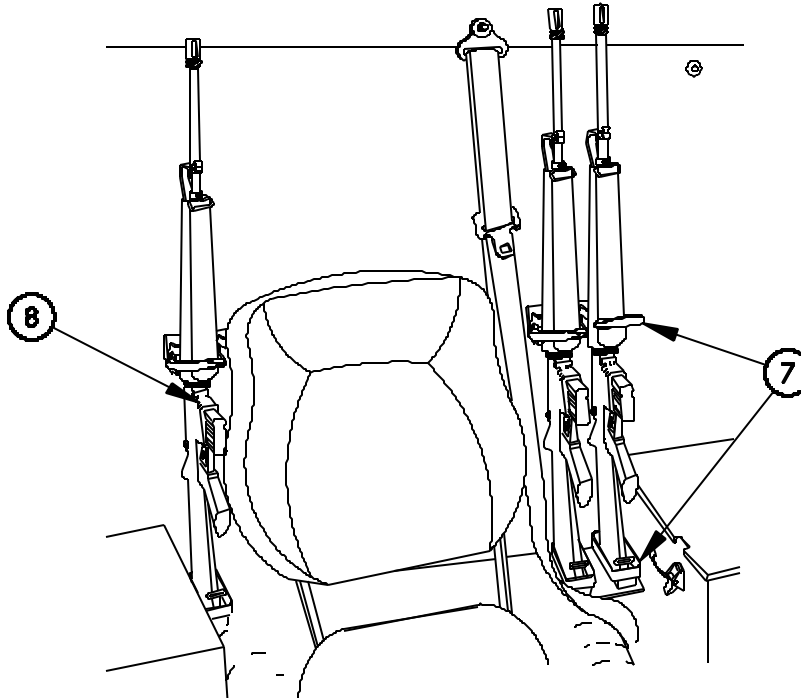
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Monthly		Rifle Stowage Mount	<p>1. Check that rifle stowage top mount and lower mount (7) bolts are not broken or missing.</p> <p>2. Check rifle stowage mount latches (8) for excessive looseness or binding.</p>	
					

8099890-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.**

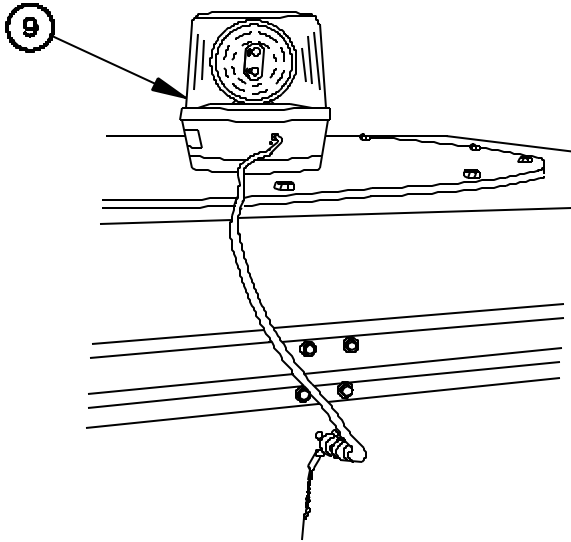ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Monthly		Amber Warning Light (If Equipped)		
<p align="center"><b>NOTE</b></p> <p>Checking amber warning light is a safety task that would not be performed in a tactical mission. See AR 385-55.</p>					
				Check vehicle amber warning light (9) for proper operation (WP 0018 00).	
					


8099 891 -

# M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly - All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Monthly		Hydraulic Manifold	Inspect hydraulic manifold (10) for leakage.	Class III leak is evident.
6	Monthly		Back-up Hydraulic Pump	1. Remove handle (11) from tool box and install in back-up hydraulic pump (12).  2. Pump back-up hydraulic pump 5-8 cycles (to lubricate seals).	
7	Monthly		Tool Kit	Check inside tool box for water in bottom of tool kit or other obvious damage. Clean inside too kit with rag as necessary.	

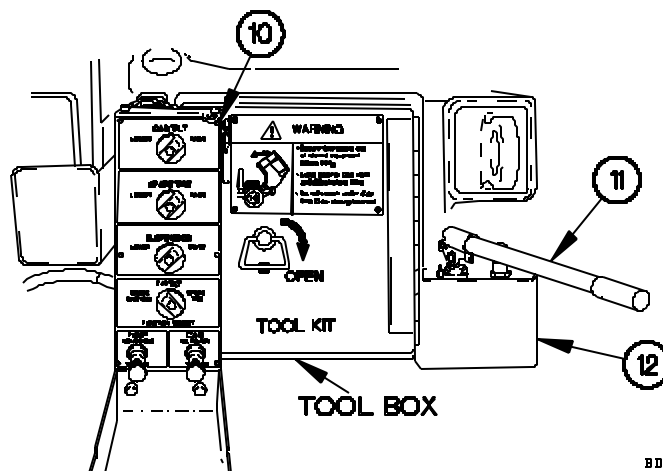

8099892-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Monthly		Front Lifting Beams	<ol style="list-style-type: none"> <li>1. Remove two retaining pins (13) from front lifting beam (14).</li> <li>2. Pull front lifting beam (14) out as far as it will go.</li> </ol>	


The diagram illustrates the front lifting mechanism of the equipment. It shows a horizontal beam (14) that can be pulled outwards. Two retaining pins (13) are shown at the ends of the beam, which are used to secure it in its retracted position. The diagram is a line drawing showing the mechanical components and their assembly.

8099893-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

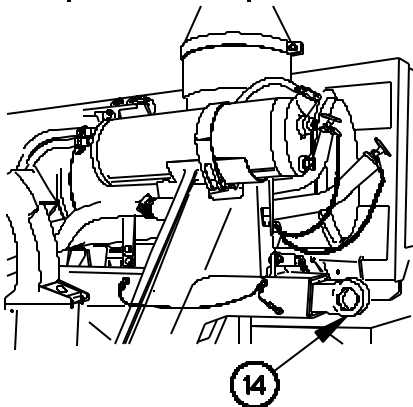
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Monthly		Front Lifting Beams - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Dry Cleaning Solvent (P-D-680) is TOXIC and flammable. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes and clothes; and do not breath vapors. Keep away from heat or flame. Never smoke when using Dry Cleaning Solvent; the flashpoint for Type I Dry Cleaning Solvent is 100° F (38° C) and for Type II is 138° F (50° C). Failure to comply may result in serious injury or death to personnel.</p> <p>If personnel become dizzy while using Dry Cleaning Solvent, immediately get fresh air and medical help. If Dry Cleaning Solvent contacts skin or clothes, flush with cold water. If Dry Cleaning Solvent contacts eyes, immediately flush eyes with water and get medical attention. Failure to comply may result in serious injury or death to personnel.</p>					
				3. Clean front lifting beam (14) with Dry Cleaning Solvent.	
					

BD99B94-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

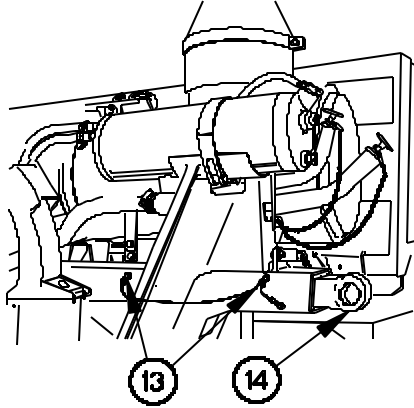ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Monthly		Front Lifting Beams - Continued	<p>4. Lubricate top, bottom, and sides of front lifting beam (14).</p> <p>5. Push front lifting beam (14) back into place.</p> <p>6. Install two retaining pins (13) on front lifting beam (14).</p>	
 <p style="text-align: right;">8099 893 -</p>					
DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)	
Front Lifting Beam	As required	GAA	GAA	GAA	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Monthly		Spreader Bar	<ol style="list-style-type: none"> <li>1. Remove retaining pin (15) and hitch pin (16) from spreader bar (17).</li> <li>2. Pull spreader bar (17) out as far as it will go.</li> </ol>	


The diagram illustrates the spreader bar assembly. A central vertical spreader bar (17) is shown. To its left, a hitch pin (16) is inserted into a bracket. To its right, a retaining pin (15) is inserted into a bracket. A chain is attached to the left side of the spreader bar. The entire assembly is mounted on a base with several bolts. Arrows point from the numbered circles (15, 16, 17) to their respective components in the diagram.

8199896-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

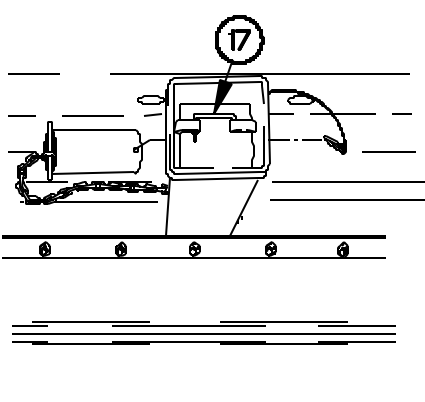ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Monthly		Spreader Bar - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Dry Cleaning Solvent (P-D-680 is TOXIC and flammable. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes and clothes; and do not breath vapors. Keep away from heat or flame. Never smoke when using Dry Cleaning Solvent; the flashpoint for Type I Dry Cleaning Solvent is 100° F (38° C) and for Type II is 138° F (50° C). Failure to comply may result in serious injury or death to personnel.</p> <p>If personnel become dizzy while using Dry Cleaning Solvent, immediately get fresh air and medical help. If Dry Cleaning Solvent contacts skin or clothes, flush with cold water. If Dry Cleaning Solvent contacts eyes, immediately flush eyes with water and get medical attention. Failure to comply may result in serious injury or death to personnel.</p>					
				3. Clean spreader bar (17) with Dry Cleaning Solvent.	
					

8D99897-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Monthly		Spreader Bar - Continued	4. Lubricate top, bottom, and sides of spreader bar (17).	

DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Spreader Bar	As required	GAA	GAA	GAA

			5. Push spreader bar (17) into place.  6. Install hitch pin (16) on spreader bar (17).  7. Install retaining pin (15) on hitch pin (16).
--	--	--	--



8D99J98-

8D99B98-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.**

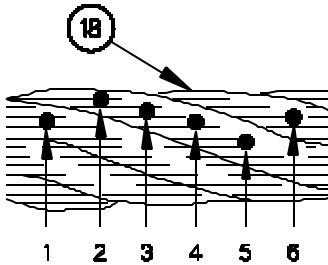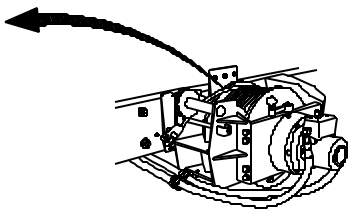
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
10	Monthly		15K Self-Recovery Winch (SRW) Cable (If Equipped)		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</b></p>					
				<p>1. Pay out 15K SRW cable (18) completely and inspect for kinks, sharp bends, abrasion, and broken wires (WP 0065 00).</p>	<p>Six randomly distributed broken wires in any 6 in. (15 cm) section of cable or three broken wires in one bundle (breaks 3, 4, 5) in a 6 in. (15 cm) section.</p>
<div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p style="text-align: right;">8199899-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
10	Monthly		15K Self-Recovery Winch (SRW) Cable (If Equipped) - Continued	2. Inspect for kinking, crushing, or any other damage resulting in distortion of cable structure.	
11	Monthly		Springs	3. Check security of 15K SRW mounting hardware.  After initial 1000 mi. (1609 km), notify Field Maintenance to tighten U-bolts (19) to 390-510 lb-ft (529-692 n•m).	

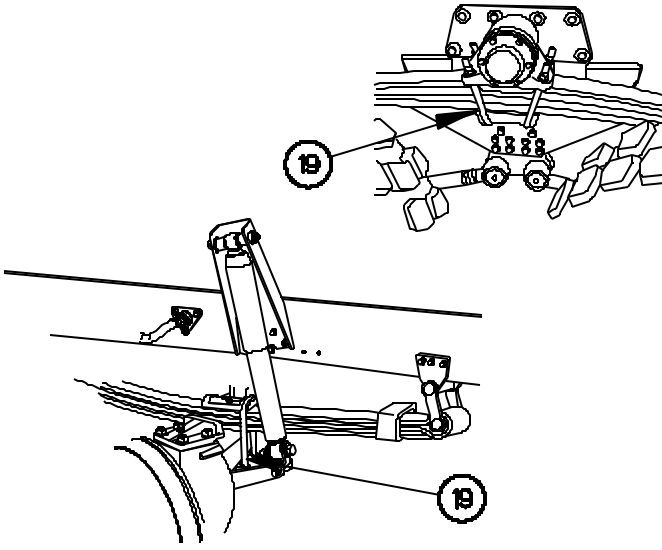

80998K0-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
12	Monthly	0.1	Oil Can Points	Lubricate all oil can points with OE/HDO specified for ambient temperature. The operator/crew is responsible for lubricating the following points:  1. Door latches and hinges  2. Battery box cover latches  3. Cab hydraulic lift cylinder	


DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Oil Can Points	As required	OE/HDO-10	OE/HDO-10	OEA

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 5. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
All Models - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
13	Monthly	0.1	Cab Hydraulic Lift Cylinder (If Equipped)	Lubricate cab hydraulic lift cylinder grease fitting (21) with GAA using low-pressure lubricating gun	

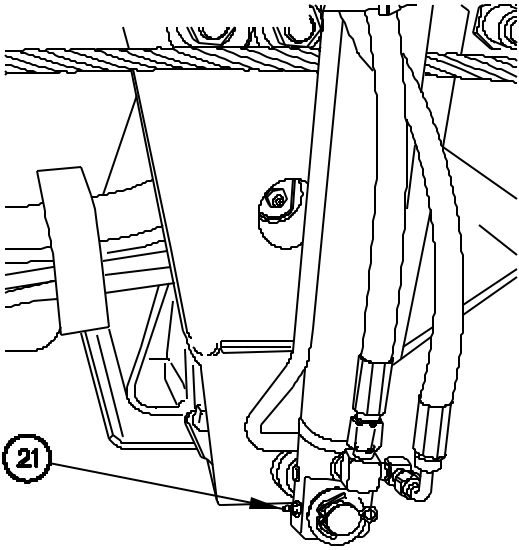


8300ap 7-

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Before** PMCS Procedures for Models M1083A1, M1084A1, M1085A1, and M1086A1.

This illustration will help you perform BEFORE vehicle PMCS. The callout matches PMCS item number/procedures.

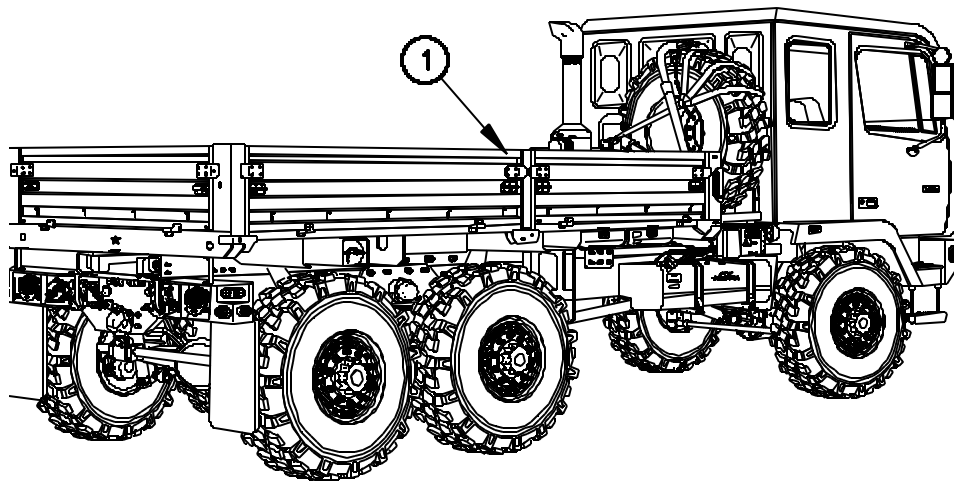


8099 BK1 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Table 6. Preventive Maintenance Checks and Services (PMCS) - Before - Models  
M1083A1, M1084A1, M1085A1, and M1086A1.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Troop Transport Alarm Switch (If Equipped)	<ol style="list-style-type: none"> <li>1. Check that attaching knobs (1) are tight.</li> <li>2. Position master power switch to on (WP 0004 00).</li> <li>3. Position troop transport alarm switch (2) to ON (WP 0012 00).</li> <li>4. Verify that audible alarm (3) sounds in cab.</li> </ol>	

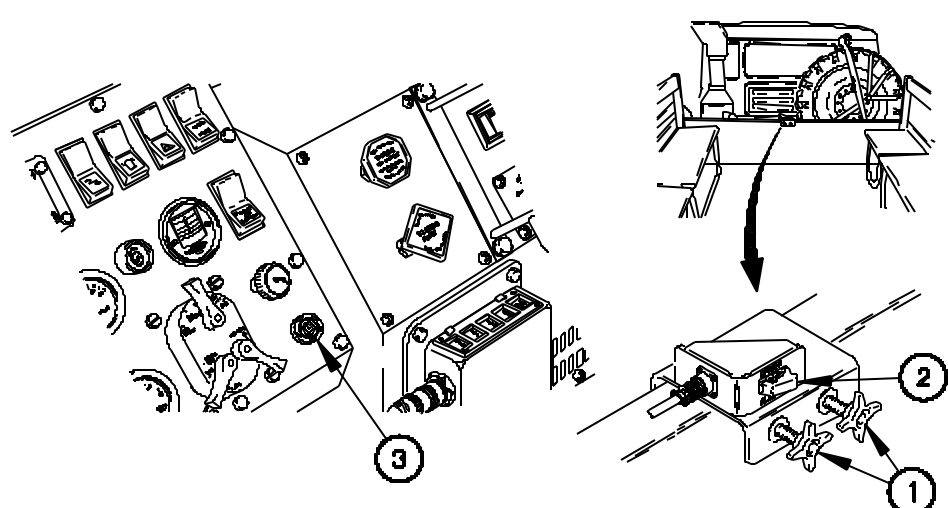

81998K2-

---

<b>M1083A1 SERIES PREVENTIVE MAINTENANCE</b>	<b>0103 00</b>
<b>CHECKS AND SERVICES (PMCS) - Continued</b>	

---

Table 6. Preventive Maintenance Checks and Services (PMCS) - Before - Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Troop Transport Alarm Switch (If Equipped) - Continued	5. Position troop transport alarm switch to OFF (WP 0012 00).  6. Position master power switch to off (WP 0004 00).	

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**During** PMCS Procedures for Models M1083A1, M1084A1, M1085A1, and M1086A1

This illustration will help you perform DURING vehicle PMCS. The callout matches PMCS item number/procedures.

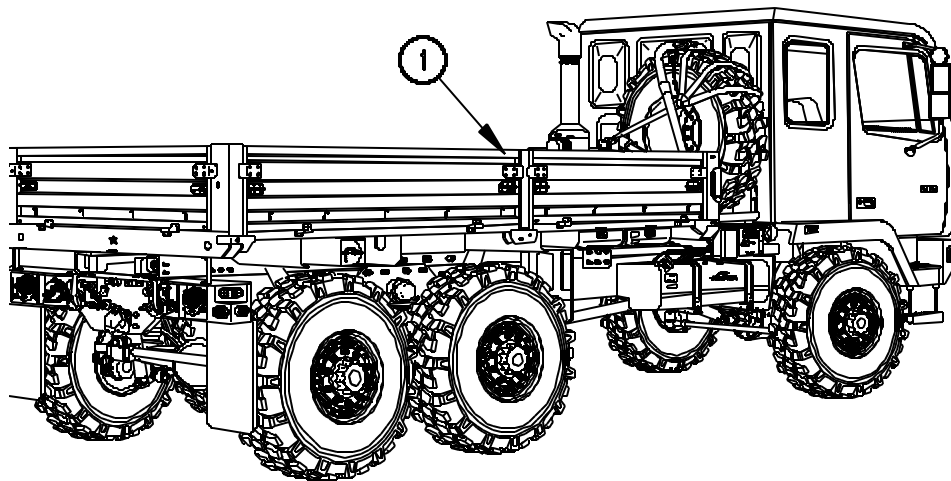


80998K3-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 7. Preventive Maintenance Checks and Services (PMCS) -During - Models M1083A1, M1084A1, M1085A1, and M1086A1.

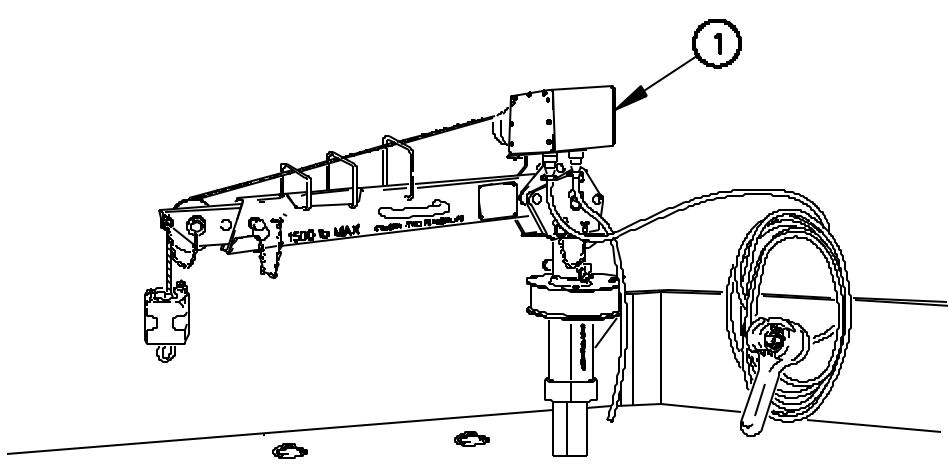ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Light Material Handling Crane (LMHC) (If Equipped		
<p align="center"><b>NOTE</b></p> <p>LMHC is checked during operation when required as part of vehicle mission.</p> <div> <div></div> <div></div> <div></div> <div> <p>1. Check for loose, missing, or damaged drive motor (1) mounting bolts. Tighten loose bolts. If bolts are missing, damaged, or can not be tightened, notify Field Maintenance.</p> </div> <div></div> </div> <div>  <p>The diagram shows a side view of the LMHC. A circular callout with the number '1' points to the drive motor assembly at the base of the crane's boom. The boom is labeled '1500 Lb MAX' and 'CAPACITY 1500 LBS'. A coiled cable is visible on the right side of the crane's base.</p> </div> <p align="right">8D998K4 -</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 7. Preventive Maintenance Checks and Services (PMCS) - During - Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Light Material Handling Crane (LMHC) (If Equipped - Continued	<p>2. Using LMHC remote control (2), check that LMHC cable (3) pays out and reels in properly (WP 0023 00).</p> <p>3. Rotate LMHC to right and to left, checking for binding or any restriction to movement of all LMHC components (WP 0023 00).</p>	

The diagram illustrates a Light Material Handling Crane (LMHC) mounted on a base. A remote control, labeled with a circled '2', is shown connected to the crane's cable system. The cable, labeled with a circled '3', is shown extending from the crane's arm. The crane's arm is labeled '1000 lb MAX' and 'LIFTING CAPACITY'. The crane is shown in a retracted position, with the cable coiled on a reel. The diagram is a line drawing showing the mechanical components of the crane and the remote control.


80998K5-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 7. Preventive Maintenance Checks and Services (PMCS) - During - Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

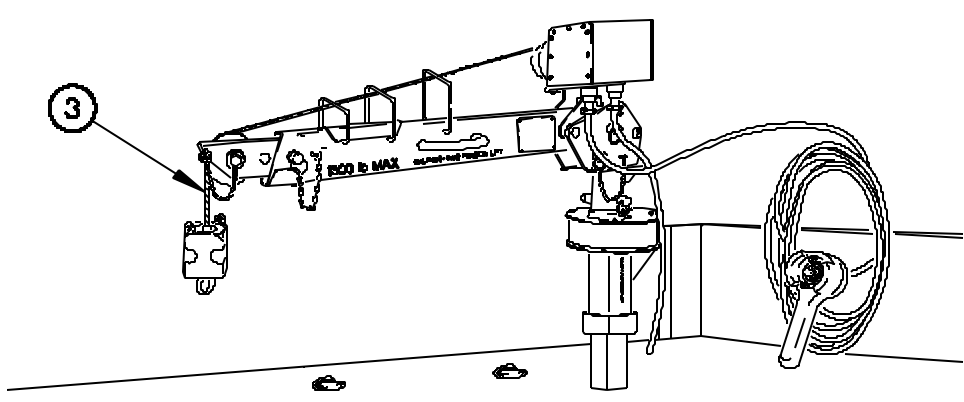
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		LMHC (If Equipped - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling wire rope. Never let moving wire rope slide through hands, even when wearing gloves. Failure to comply may result in serious injury to personnel.</p>					
				4. Check cable (3) for kinks, frays, and breaks.	Evidence of kinks, frays, or breaks.
 <p style="text-align: right;">80998K6-</p>					

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**AFTER** PMCS Procedures for Models M1083A1, M1084A1, M1085A1, and M1086A1.

These illustrations will help you perform AFTER vehicle PMCS. The callouts match PMCS item number/procedures.

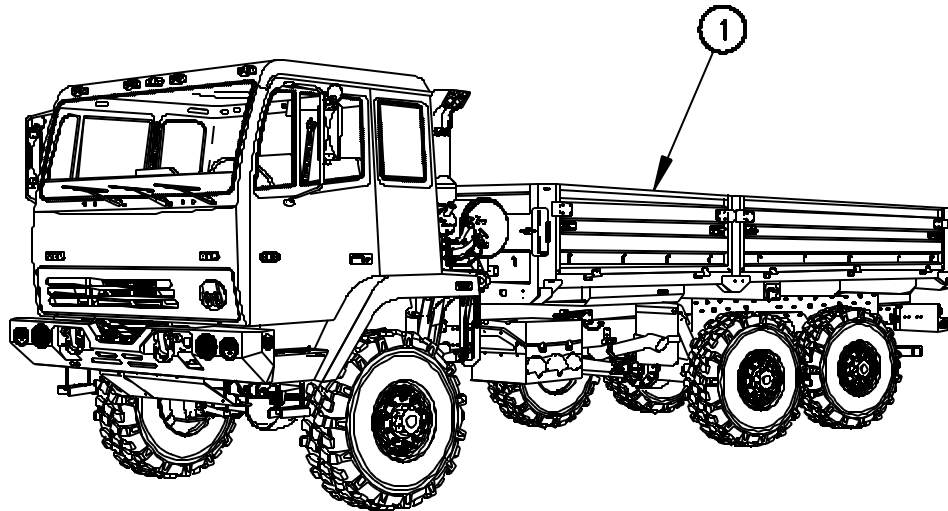

8099BK7-


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 8. Preventive Maintenance Checks and Services (PMCS) - After -  
Models M1083A1, M1084A1, M1085A1, and M1086A1.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	After		Light Material Handling Crane (LMHC) (If Equipped)	1. Lubricate cable (1).  2. Lubricate boom sheave (2).	

DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
LMHC Cable	As required	OE/HDO-10	OE/HDO-10	OEA
LMHC Boom Sheave	As required	GAA	GAA	GAA

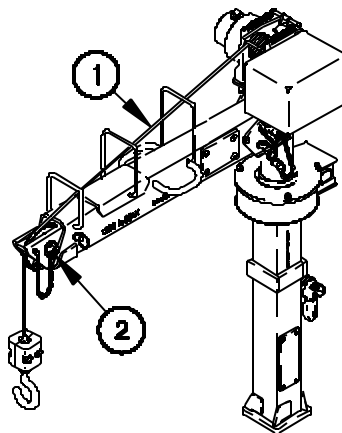


BD99BK8-

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Weekly** PMCS Procedures for Models M1083A1, M1084A1, M1085A1, AND M1086A1

These illustrations will help you perform WEEKLY vehicle PMCS. The callouts match PMCS item number/procedures.

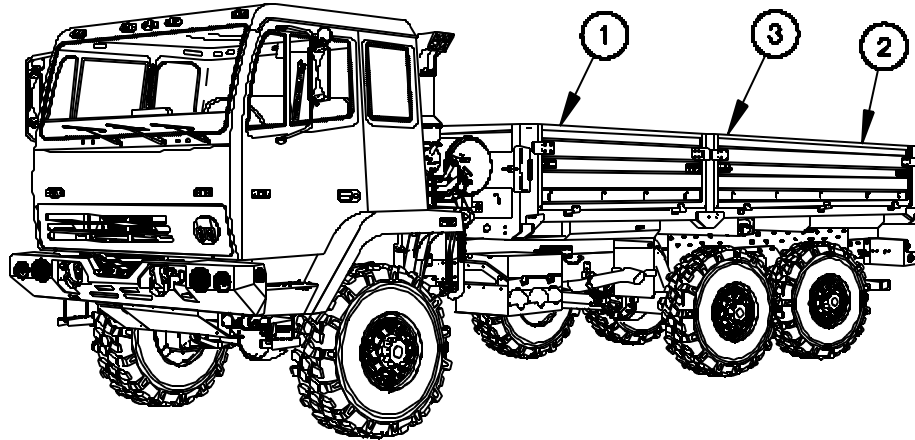


80998K9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, AND M1086A1.**

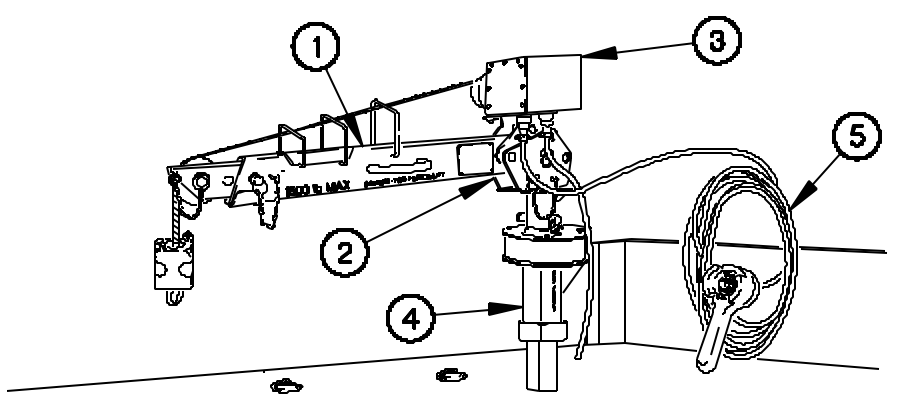ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Weekly		Light Material Handling Crane (LMHC) (If Equipped)		
<p align="center"><b>NOTE</b></p> <p>LMHC is checked before vehicle operation when required as part of mission.</p>					
				<p>1. Check boom assembly (1), turret (2), winch assembly (3), and mast assembly (4) for damage or broken welds.</p> <p>2. Check LMHC power cord (5) for damage or cracks in insulation.</p>	<p>Boom assembly, turret, winch assembly, or mast assembly are damaged or broken welds are found.</p> <p>Any damage or cracks in insulation which expose bare wire.</p>
					

80998L0-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, AND M1086A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Weekly		Light Material Handling Crane (LMHC) (If Equipped) - Continued	<p>3. Check that the following pins are present and not damaged:</p> <p>a. Pin securing mast (4) to cargo bed.</p> <p>b. Pin securing boom (1) in raised and lowered positions.</p> <p>c. Pin securing boom (1) in extended and retracted positions.</p>	One or more pins are missing or damaged.


The diagram illustrates a side view of a Light Material Handling Crane (LMHC) mounted on a cargo bed. A boom, labeled with a circled '1', is extended upwards and to the left. A mast, labeled with a circled '4', is positioned vertically and secured to the cargo bed. A large spool of cable is visible on the right side of the crane. The diagram is a technical line drawing showing the mechanical components and their assembly points.

8099 8L1-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, AND M1086A1 - Continued.

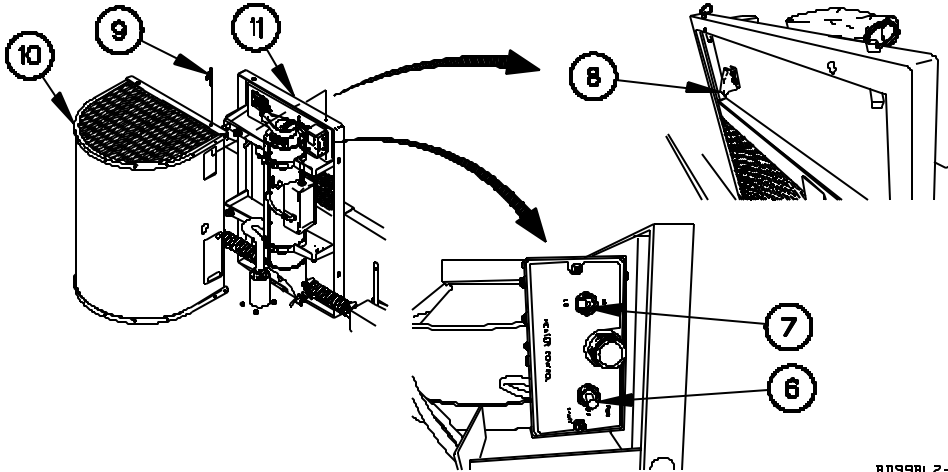ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Cargo Area Arctic Heater (if equipped)		
<p style="text-align: center;"><b>NOTE</b></p> <p>Cargo area arctic heater is checked before vehicle operation if it will be operated as part of vehicle mission.</p>					
				<p>1. Check cargo area arctic heater Start/Off/Run switch (6), LO/HI switch (7), and override switch (8) for proper operation (WP 0058 00).</p> <p>2. Remove four pins (9) and cover (10) from heater bracket (11).</p>	Cargo area arctic heater is inoperable.
					


80998L2-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1- Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Cargo Area Arctic Heater (if equipped) - Continued	<p>3. Check fuel lines and fittings for leaks.</p> <p>4. Check electrical cables for secure connections and for frayed or broken wires.</p> <p>5. Check Cargo area arctic heater header (12) for exhaust leaks, security of mounting, and missing components.</p>	<p>Any fuel leak is evident.</p> <p>Cable connections cannot be secured or bare or broken wires are found.</p> <p>Cargo area arctic heater header leaks or mounting hardware cannot be secured.</p>

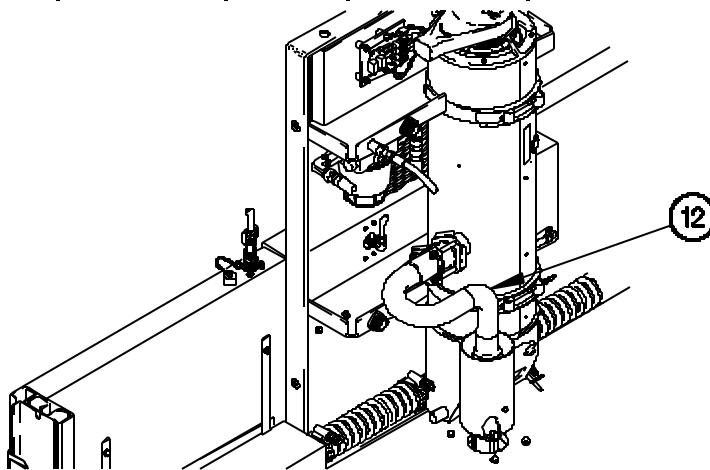

8D998L 3-





**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, AND M1086A1- Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Cargo Area Arctic Heater (if equipped) - Continued	<p>6. Check cargo area arctic heater fuel filter (13) for leaks or damage.</p> <p>7. Install cover (10) on heater bracket (11) with four pins (9).</p>	Any fuel leak is evident.

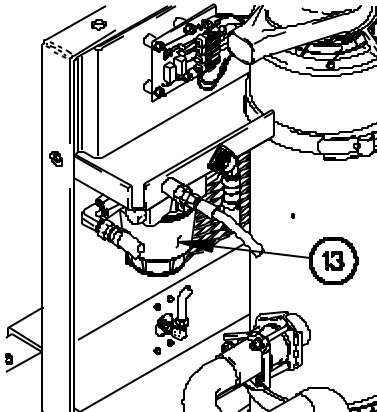
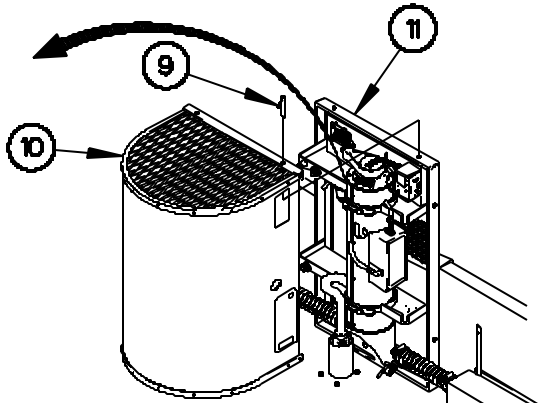



80998L 4 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, AND M1086A1- Continued.

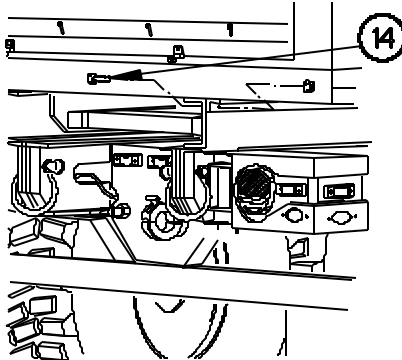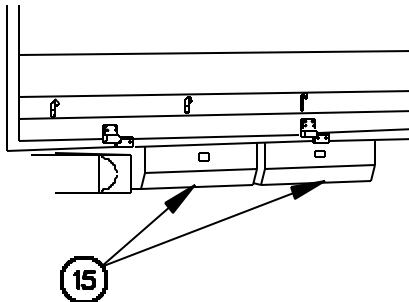ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Cargo Bed	1. Check that cargo bed mounting screws (14) on both sides of vehicle are not broken or missing.	One or more cargo bed mounting screws are broken or missing.
				 <p>2. Check inside panel stowage compartments (15) underneath cargo bed for obvious damage.</p> 	




80998L5-

80998L6-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Table 9. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Models M1083A1, M1084A1, M1085A1, AND M1086A1 - Continued.**

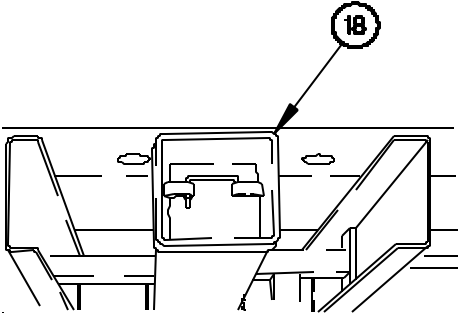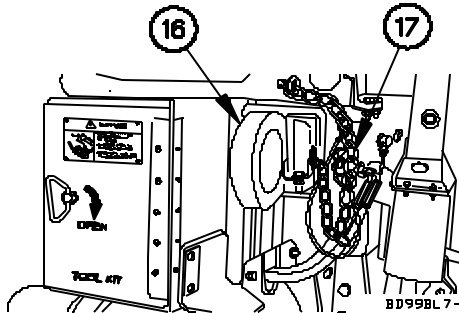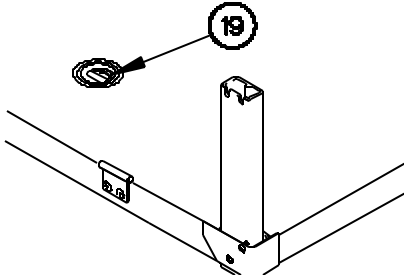
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Cargo Bed - Continued	<p>3. Check lift beam (16) on both sides of vehicle for damage. Check that lift beam lock pin (17) is not missing or damaged.</p> <p>4. Check spreader bar (18) on both sides for damage.</p>	Lift beam is damaged, or lock pin is missing or damaged, and lift beam is required for vehicle mission.
			 	<p>5. Check for missing or damaged cargo bed tiedown rings (19).</p> 	

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Monthly** PMCS Procedures for Models M1083A1, M1084A1, M1085A1, AND M1086A1

This illustration will help you perform MONTHLY vehicle PMCS. The callouts match PMCS item number/procedures.

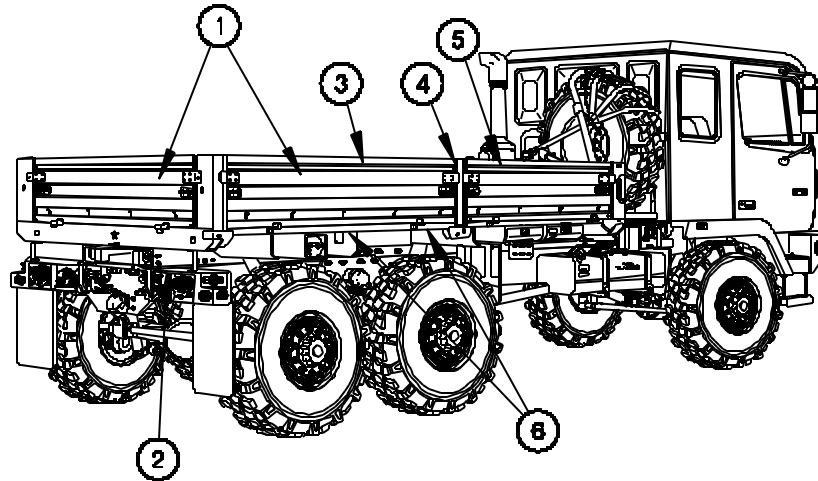


8D998L9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1.**

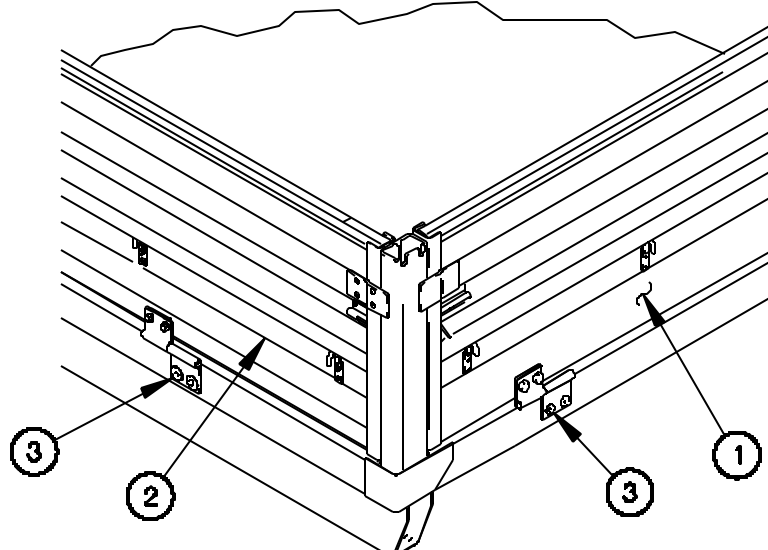ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Cargo Bed Side Panels and Tailgate	1. Check that cargo bed side panels (1) and tailgate (2) are not bent or damaged.	
<p align="center"><b>NOTE</b></p> <p>Hinges and latches on cargo bed side panels and tailgate are the same.</p>					
				2. Check cargo bed side panel and tailgate hinges (3) for damage and broken welds.	Cargo bed side panel or tailgate hinge is damaged, or weld is broken.
					

80998M0-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Cargo Bed Side Panels and Tailgate - Continued	3. Check cargo bed side panels (1) and tailgate (2) for missing or damaged latches (4). Ensure that latches securely lock cargo bed side panels and tailgate in raised position.	Latch is missing, damaged, or does not securely lock cargo bed side panel or tailgate in raised position.

The diagram shows a perspective view of the cargo bed side panels and tailgate. It illustrates the latching mechanism for the side panels and the tailgate. Callout 1 points to a latch on the side panel. Callout 2 points to a latch on the tailgate. Callout 3 points to a latch on the side panel. Callout 4 points to a latch on the tailgate.

80998M1 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Monthly		Ladder	<ol style="list-style-type: none"> <li>1. Remove ladder (5) from stowage compartment (WP 0025 00).</li> <li>2. Check ladder (5) for cracked or broken welds.</li> <li>3. Stow ladder (5) in stowage compartment (WP 0025 00).</li> </ol>	

81998M2-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Monthly		Troopseats (if equipped)		
<p align="center"><b>NOTE</b></p> <p>Troopseats are checked before vehicle operation only as required to perform mission.</p> <div> <div> <p>1. Check that troopseat drop legs (6) are not bent or damaged.</p> </div> <div> <p>Drop leg(s) is bent or damaged.</p> </div> </div> <div> <div> <p>2. Check that drop leg hinge pins (7) are not missing or damaged.</p> </div> <div> <p>One or more drop leg hinge pins are missing or damaged.</p> </div> </div> <p align="right">AD838M2A</p> <p align="right">AD838M3A</p>					




**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Monthly		Troopseats (if equipped) - Continued	<p>3. Check that seat assembly (8) and/or backrest (9) are not damaged.</p> <p>4. Check that bungee cords (10) are not missing or damaged.</p> <p>5. Check that bungee cord (10) keeps seat assembly (8) secure in raised and lowered positions.</p>	Seat assembly and/or backrest are damaged.

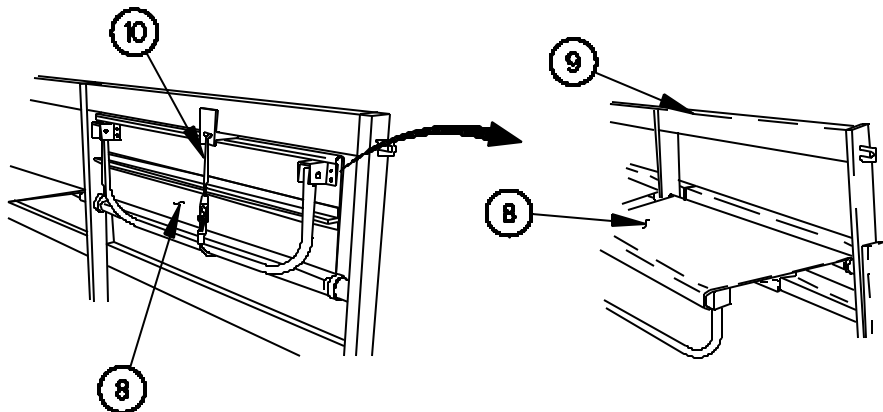

A10838N4A

Change 1

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Monthly		Cargo Cover		
<p align="center"><b>NOTE</b></p> <p>Cargo cover is checked before vehicle operation only if required to perform vehicle mission.</p> <div> <div></div> <div></div> <div></div> <div> <ol style="list-style-type: none"> <li>1. Check for missing, damaged, or bent bows (11).</li> <li>2. Check for missing, damaged, or bent braces (12).</li> <li>3. Check cargo cover (13) for tears, punctures, and ripped seams that would interfere with proper operation.</li> </ol> </div> </div> <div> </div>					

8199886-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00


Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

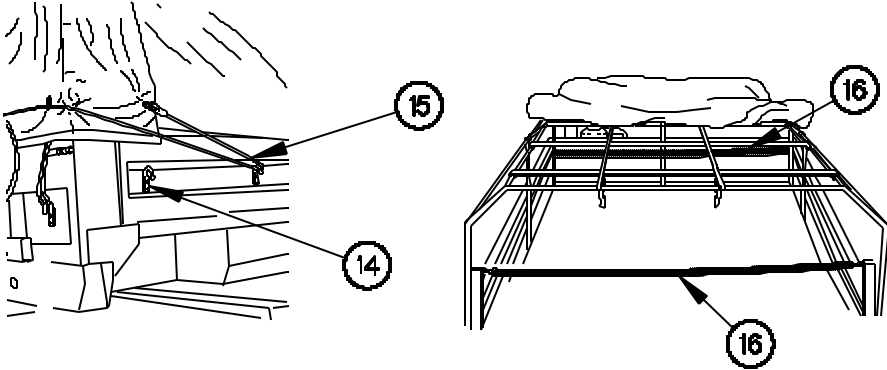ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Monthly		Cargo Cover - Continued	<p>4. Check that hook assemblies (14) used to secure cargo cover shock cords (15) are secure and not damaged.</p> <p>5. Check that safety straps (16) are not missing or damaged.</p>	Any strap is missing or damaged.
 <p style="text-align: right;">BD998M7-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

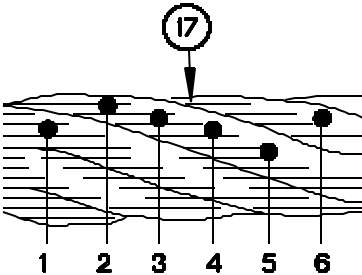ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Monthly		Light Material Handling Crane (LMHC) (If Equipped)	1. Check LMHC for corrosion, cracks, and security of mounting hardware.	LMHC is damaged or not securely mounted.
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p>					
				2. Pay out cable (17) completely and inspect for kinks, sharp bends, and broken wires (WP 0023 00).	<p>Cable is damaged or excessively worn.</p> <p>Six, randomly-distributed, broken wires in any 6 in. (15 CM) section or three broken wires on bundle (breaks 3, 4, 5) in a 6 in. (15 cm) section.</p>
					

DD9988N8-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Monthly		Light Material Handling Crane (LMHC) (If Equipped) - Continued	3. Check for kinking, crushing, or any other damage resulting in distortion of the cable structure.  4. Check security of electrical connectors on overload shutdown box.  5. Inspect electrical cable for cracking, fraying, and chaffing.	Wiring is frayed, cracked, or excessively worn.
6	Monthly	0.1	Oil Can Points	Lubricate all oil can points with OE/HDO specified for ambient temperature. The operator/crew is responsible for lubricating the following points:  1. Tailgate hinge pins  2. Intermediate hinge pins  3. Side hinge pins	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 10. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1083A1, M1084A1, M1085A1, and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
6	Monthly	0.1	Oil Can Points - Continued	4. Cargo bed tiedown rings.  5. Cab Hydraulic Lift Cylinder.	

DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Oil Can Points	As required	OE/HDO-10	OE/HDO-10	OEA

---


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00**

**Before** PMCS Procedures for Models M1084A1 and M1086A1

These illustrations will help you perform BEFORE vehicle PMCS. The callouts match PMCS item number/procedures.

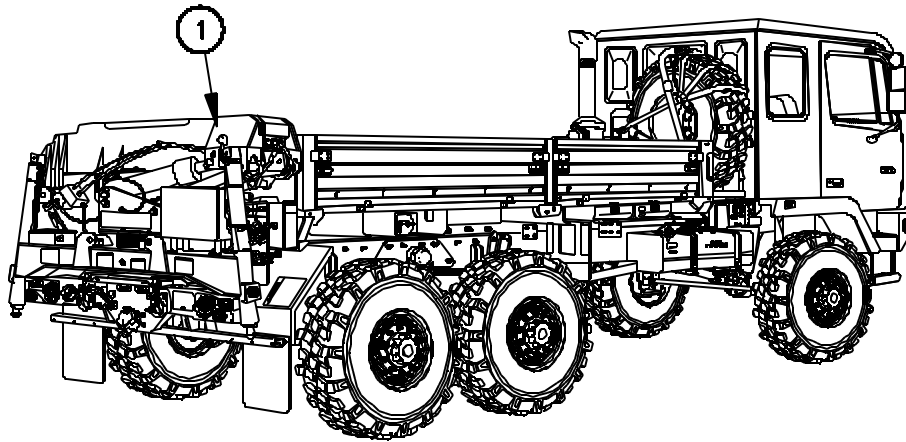


80998N9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 11. Preventive Maintenance Checks and Services (PMCS) - Before -  
Models M1084A1 and M1086A1.

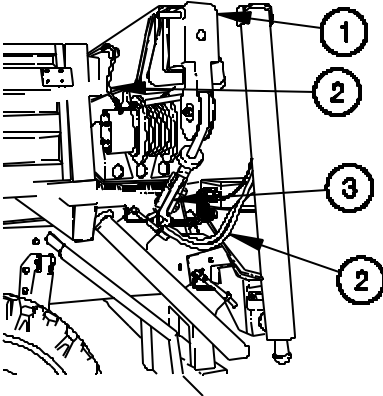ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Material Handling Crane (MHC)		
<p align="center"><b>NOTE</b></p> <p>M1084A1/M1086A1 Material Handling Crane (MHC) is checked before vehicle operation if it will be operated as part of vehicle mission.</p>					
				<p>1. Check M1084A1/M1086A1 MHC (1) for loose parts, oil leaks, damage to hydraulic hoses (2) and tubes, and other obvious damage.</p> <p>2. Check hook assembly (3) for presence of safety latch and retaining pin.</p>	<p>Class III leak is evident.</p> <p>Safety latch or retaining pin is missing or inoperable.</p>
				DD998ND-	




---

## CHECKS AND SERVICES (PMCS) - Continued

---

**During** PMCS Procedures for Models M1084A1 and M1086A1

These illustrations will help you perform DURING vehicle PMCS. The callouts match PMCS item number/procedures.

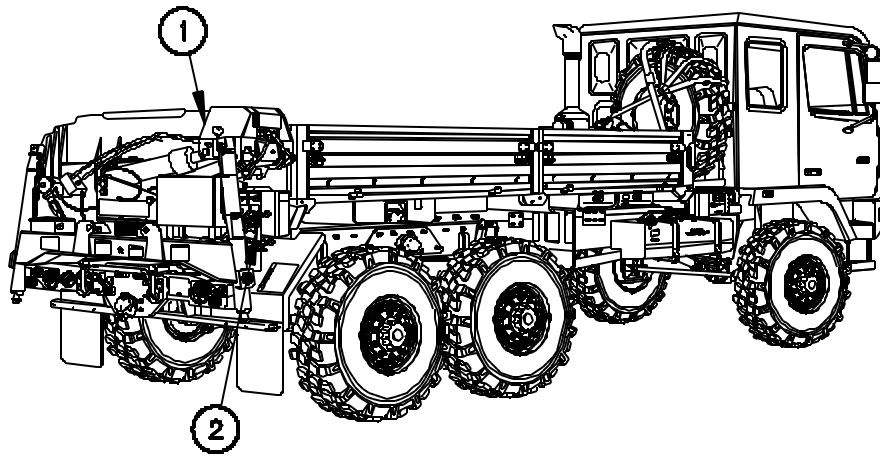


8099 8N1 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1.**

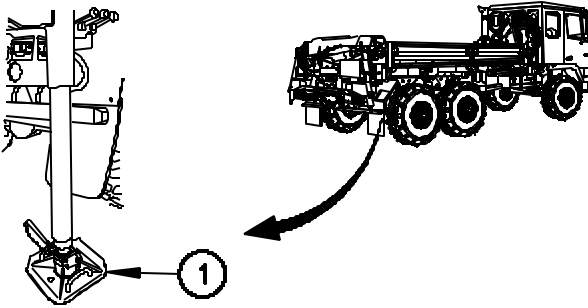ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Keep hands and feet clear of outriggers during operation. Failure to comply may result in injury to personnel.</b></p> <p style="text-align: center;"><b><u>NOTE</u></b></p> <p>Position outrigger pads as required so that ends of outriggers lower to outrigger pad sockets.</p> <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"></div> <div style="width: 45%;"> <p>1. Prepare M1084A1/ M1086A1 MHC for use (WP 0030 00).</p> <p>2. Set up outrigger pads (1) (WP 0030 00).</p> </div> </div> <div style="text-align: center; margin-top: 20px;">  </div> <p style="text-align: right; margin-top: 10px;">81998N2-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	<p>3. Check that two pins (2) are attached to each pad.</p> <p>4. Place LH (3) and RH (4) O/R JACK lever in down position until outrigger (5) lowers to ground.</p>	<p>Pin(s) is damaged or missing.</p> <p>Outrigger cylinder will not lower completely to ground.</p>

BD99BN3-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	5. Check boom angle indicator (6) for damage.	Boom angle indicator is damaged and does not give proper reading.

The diagram consists of two parts. On the left is a side-view line drawing of the Material Handling Crane (MHC) mounted on a vehicle chassis. An arrow points from the crane's boom area to a larger, more detailed line drawing on the right. This second drawing is a close-up of the boom angle indicator, which is a mechanical device with a pointer and a scale. A circled number '6' is placed next to the indicator. Below the close-up drawing, the text '8D99BN4 -' is printed.

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	<p>6. Move HOIST lever (7) to DOWN position and pay out cable (8) approximately 12 in. (31 cm).</p> <p>7. Disconnect load hook (9).</p>	Cable drum will not pay out.


The diagram illustrates the Material Handling Crane (MHC) in two states. On the left, the crane is in its stowed position. On the right, the crane arm is extended, and the hoist lever (7) is moved to the DOWN position. Cable (8) is shown being paid out from the drum, and the load hook (9) is shown at the end of the cable. A curved arrow indicates the movement of the crane arm from the stowed position to the extended position.

BD998N5-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

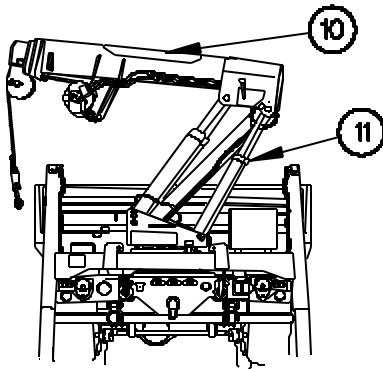ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p><b>Do not operate Material Handling Crane (MHC) unless outriggers are set up and MHC is level from side to side. Failure to comply may result in serious injury or death to personnel.</b></p> <p style="text-align: center;"><b><u>NOTE</u></b></p> <p>MHC will not operate if vehicle is not level or outriggers are not extended to the ground.</p>					
				8. Raise boom (10) and mast (11) to operating position (WP 0030 00).	Lift and erection cylinders do not raise mast and boom completely before stopping.
					

811998N6 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	9. Check that turntable bearing retaining pin (12) is not missing or damaged.	



8D998N7-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	<p>10. Place SWING lever (13) to CW position (WP 0030 00) to move boom (10) to right.</p> <p>11. Place SWING lever (13) to CCW position (WP 0030 00) to move boom (10) to left.</p>	<p>Boom does not rotate to right.</p> <p>Boom does not rotate to left.</p>

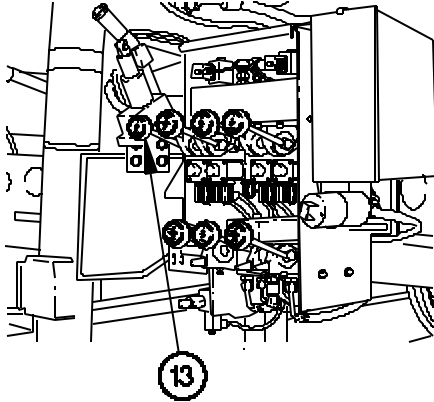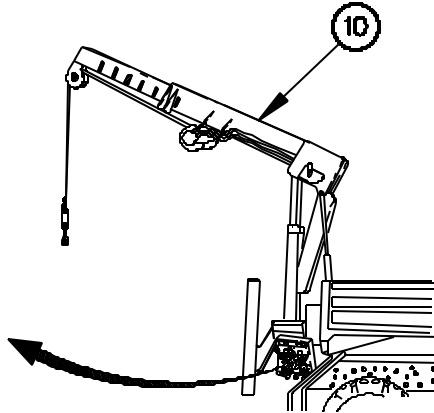
8099888-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

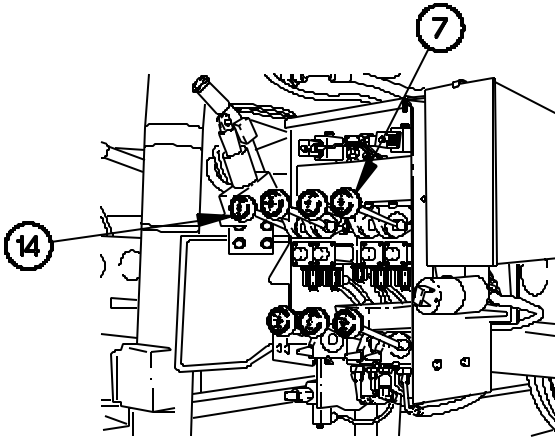ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued		
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Keep hook assembly at least 2 ft (0.6 m) from end of boom. If hook assembly hits end of boom, Material Handling Crane (MCH) will lose power for several seconds. Failure to comply will result in damage to equipment.</p>					
				12. Place TELESCOPE lever (14) to OUT position and HOIST lever (7) to DOWN position (WP 0030 00) to extend boom.	Boom does not extend or cable does not pay out.
					



81998N9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	<p>13. Check all three sections of boom extension (15) for broken welds and other obvious damage.</p> <p>14. Place TELESCOPE lever (14) to IN position and HOIST lever (7) to UP position (WP 0030 00) to retract boom.</p>	<p>Any broken welds or other obvious damage are found.</p> <p>Boom does not retract or cable does not pay in.</p>

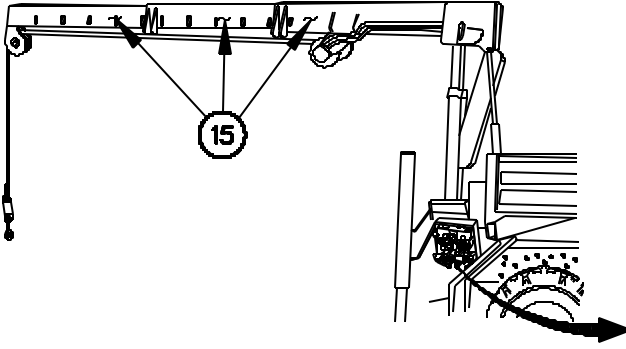
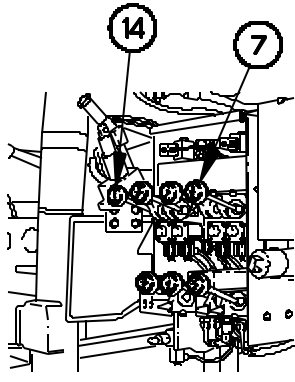
81998P0-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handline Crane (MHC) Operation - Continued	<p>15. Place BOOM lever (16) to UP position (WP 0030 00) to increase boom (10) angle.</p> <p>16. Place BOOM lever (16) to DOWN position (WP 0030 00) to decrease boom (10) angle.</p>	<p>Boom angle does not increase.</p> <p>Boom angle does not decrease.</p>

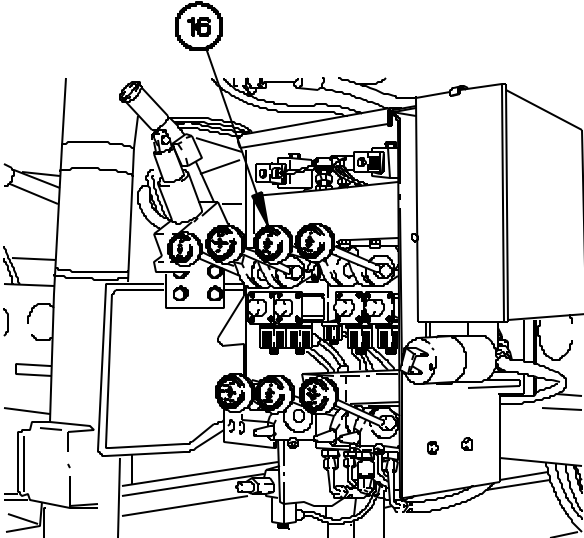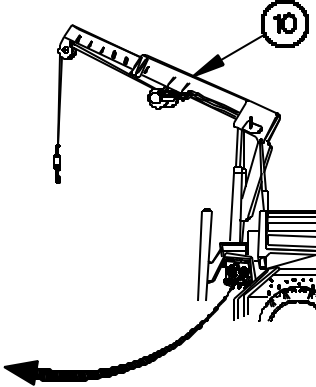



8099 BP1 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**



**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

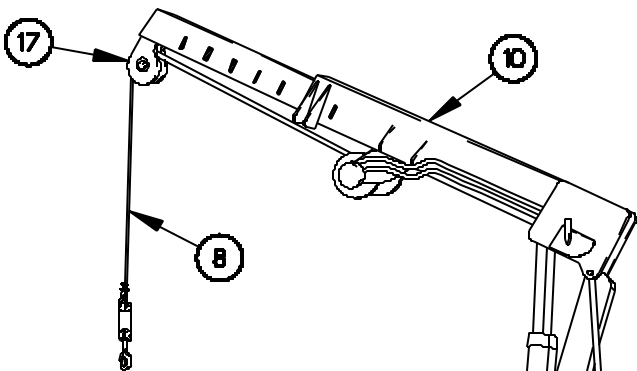ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p>					
				<p>17. Check that part of cable (8) which is visible for kinks, frays, or breaks.</p> <p>18. Check that pulley (17) at end of boom (10) is mounted securely, turns smoothly, and is not damaged.</p>	<p>Kinks, frays, or breaks in cable are found.</p> <p>Pulley is damaged, not mounted securely, or does not turn smoothly.</p>
 <p style="text-align: right;">80998P2-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

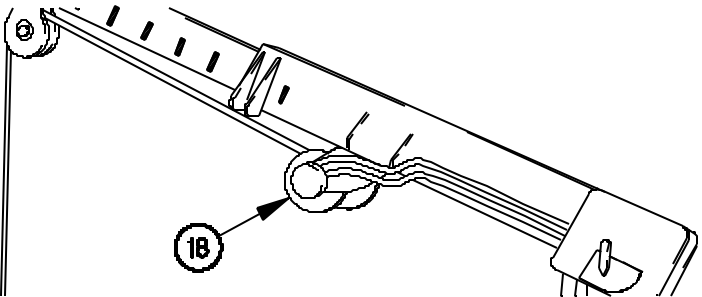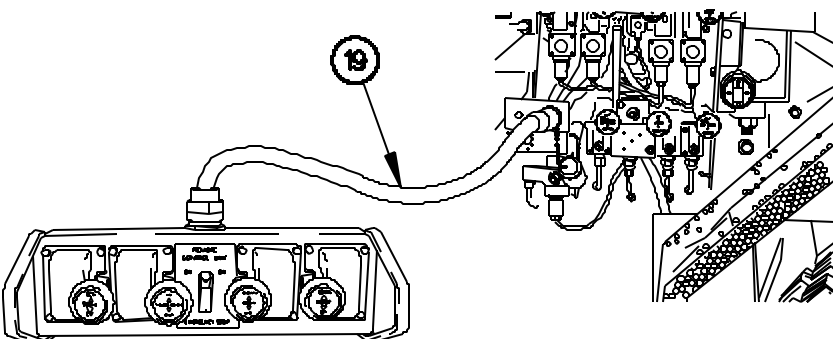
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) Operation - Continued	19. Check that hoist (18) is mounted securely and is not damaged.	Hoist is not mounted securely or is damaged.
 <p style="text-align: right;">81998P3-</p>					
2	During		Material Handling Crane (MHC) Remote Controls	1. Check remote control cable (19) for cracked insulation and damage to plugs on cable ends.	Insulation is cracked and bare wire is exposed or cable plugs are damaged.
 <p style="text-align: right;">81998P4-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>2. Check REMOTE CONTROL UNIT (20) for broken controls or other obvious damage.</p> <p>3. Check receptacle (21) on REMOTE CONTROL UNIT (21) for damaged or missing pins.</p>	Damaged or missing pins are found.

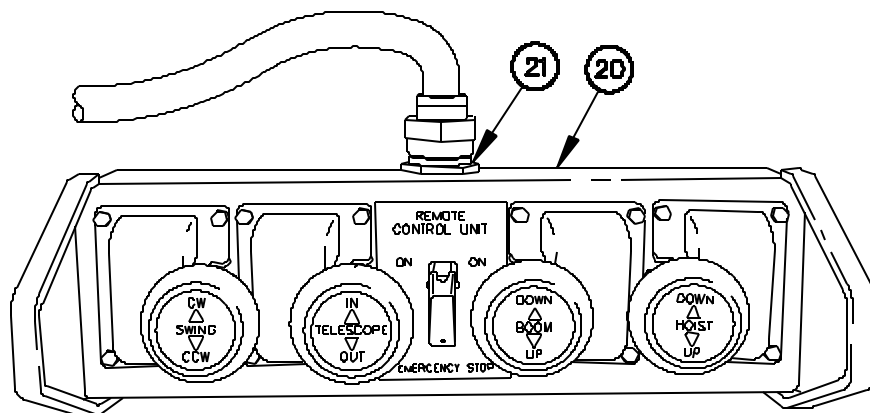


811998P5-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	4. Check remote control receptacle (22) on MHC control panel for damaged or missing pins (23).	Damaged or missing pins are found.

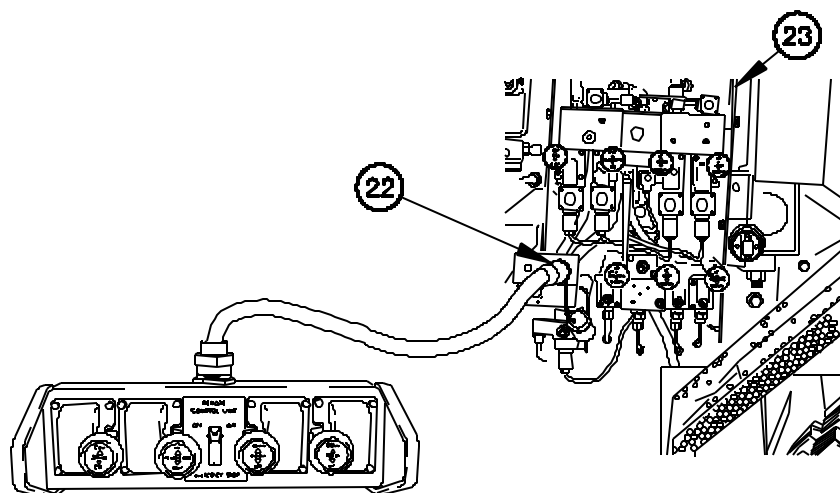


81998P6-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

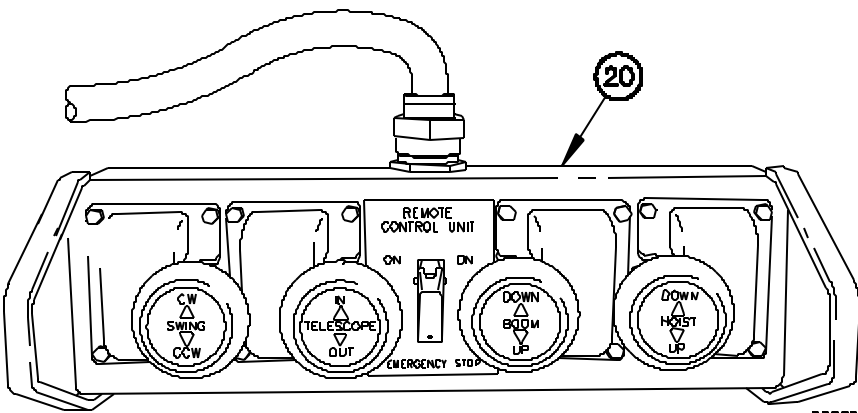ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Area must be clear of personnel before rotating or telescoping boom. Boom must be rotated and telescoped slow enough so Operator has control of load. If Operator cannot see load during operation, operate Material Handling Crane (MHC) with REMOTE CONTROL UNIT. Failure to comply may result in serious injury or death to personnel.</p> <p>Keep boom clear of all electrical lines and other obstacles while operating Material Handling Crane (MHC). Failure to comply may result in serious injury or death to personnel.</p>					
				5. Connect REMOTE CONTROL UNIT (20) (WP 0030 00).	
 <p style="text-align: right;">81099BP7-</p>					




**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>6. Place SWING lever (24) to CW position to move boom to right.</p> <p>7. Place SWING lever (24) to CCW position to move boom to left.</p>	<p>Boom does not rotate to right.</p> <p>Boom does not rotate to left.</p>

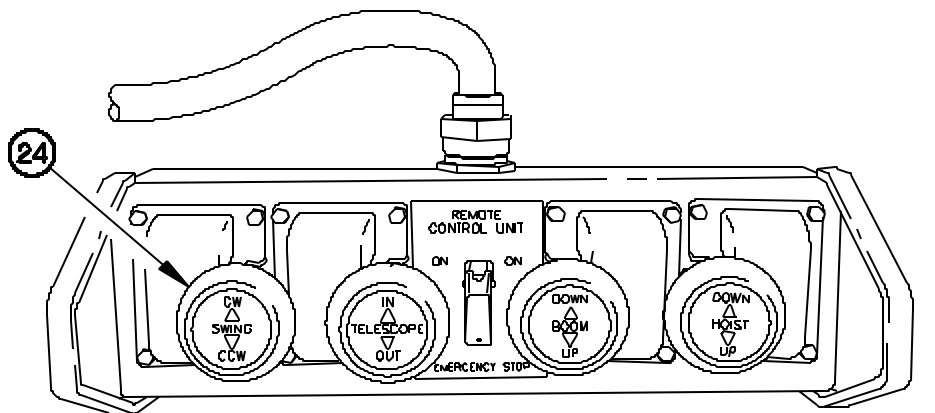


81998P8-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

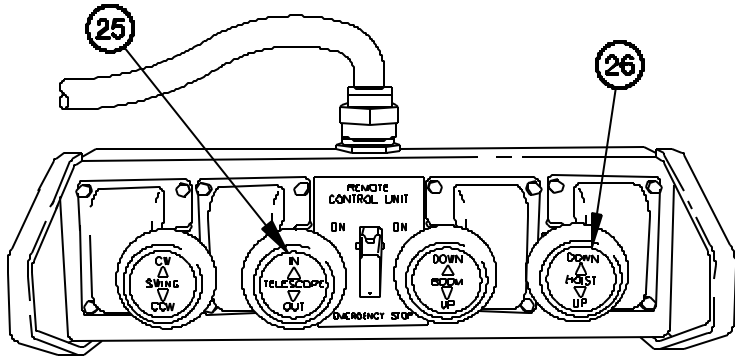ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued		
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Keep hook assembly at least 2 ft (0.6 m) from end of boom. If hook assembly hits end of boom, Material Handling Crane (MHC) will lose power for several seconds. Failure to comply may result in damage to equipment.</p>					
				8. Place TELESCOPE lever (25) to OUT position and HOIST lever (26) to DOWN position to extend boom.	Boom does not extend or cable does not pay out.
					


B1199BP9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>9. Place TELESCOPE lever (25) to IN position and HOIST lever (26) to UP position to retract boom.</p> <p>10. Place BOOM lever (27) to UP position to increase boom angle.</p>	<p>Boom does not retract or hoist does not reel in cable.</p> <p>Boom angle does not increase.</p>


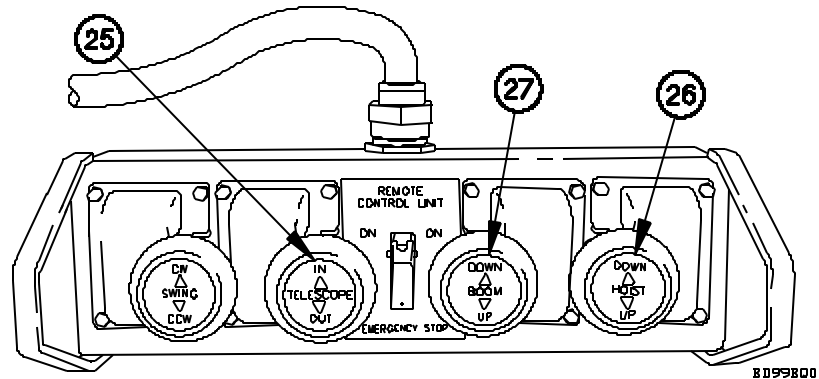


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>11. Place BOOM lever (27) to DOWN position to decrease boom (10) angle.</p> <p>12. Place HOIST lever (26) to DOWN position to pay out cable (8).</p> <p>13. Place HOIST lever (26) to UP position to reel in cable (8).</p>	<p>Boom angle does not decrease.</p> <p>Hoist does not pay out cable.</p> <p>Hoist does not reel in cable.</p>

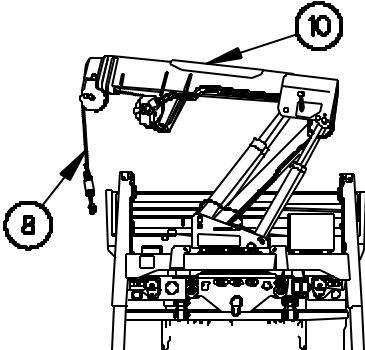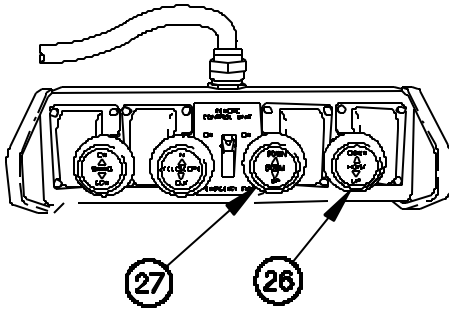
8099 801 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	14. Operate SWING lever (24) to align holes in turntable (28) bearing and install turntable bearing retaining pin (12).	

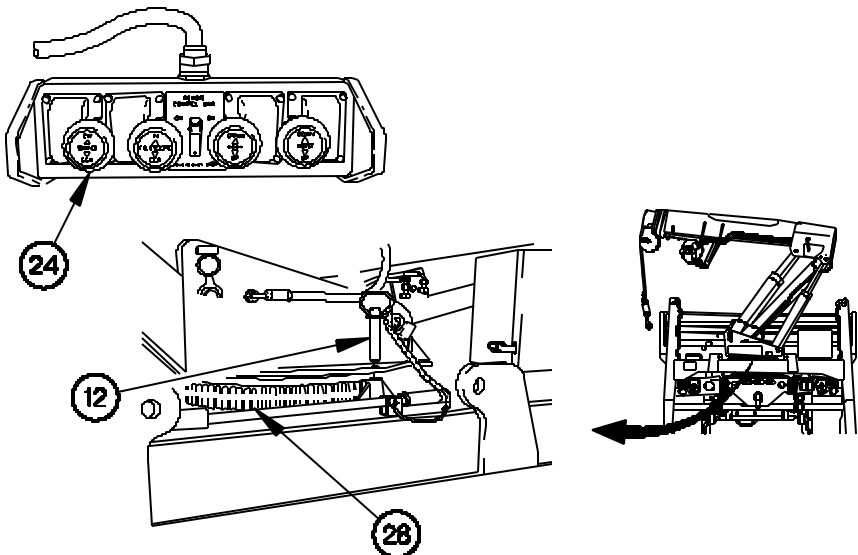


81199802-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 12. Preventive Maintenance Checks and Services (PMCS) - During -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>15. Position REMOTE CONTROL UNIT switch (29) to OFF.</p> <p>16. Disconnect REMOTE CONTROL UNIT (20) (WP 0030 00).</p> <p>17. Stow MHC (WP 0030 00).</p> <p>18. Stow outriggers (5) (WP 0030 00).</p>	

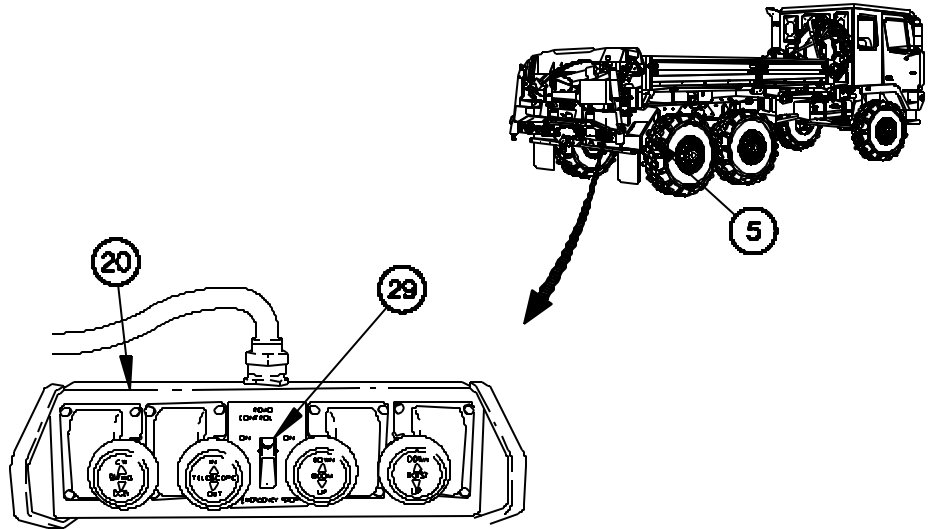


8099803-

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

## **Monthly** PMCS Procedures for Models M1084A1 and M1086A1

These illustrations will help you perform MONTHLY vehicle PMCS. The callouts match PMCS item number/procedures.

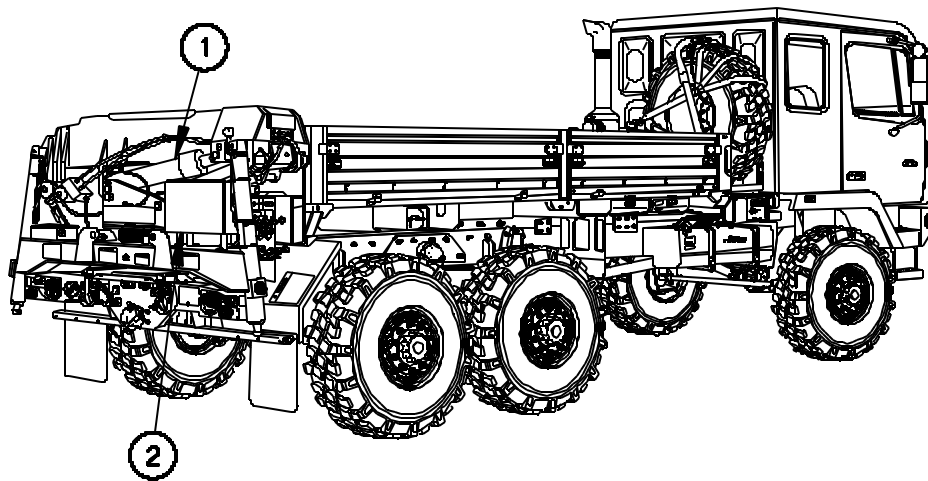



8099804-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 13. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1084A1 and M1086A1.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Material Handling Crane (MHC)	1. Check MHC (1) for corrosion, cracks, and security of mounting hardware (2).	MHC is damaged or not securely mounted.

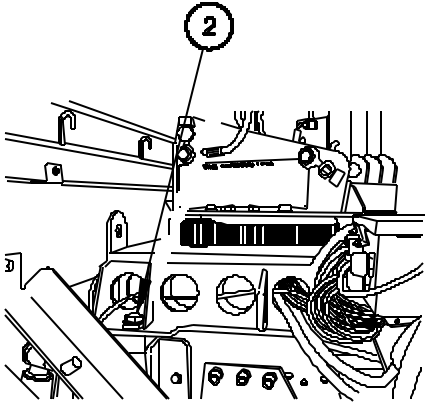
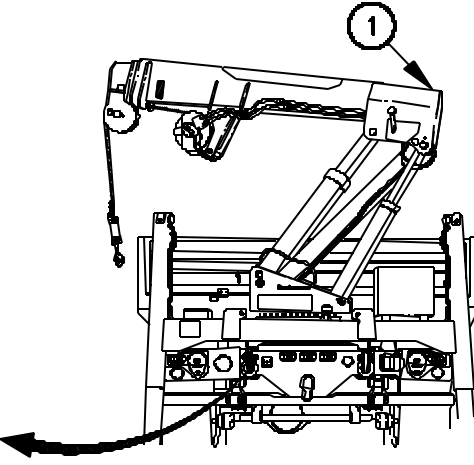
8199805-



# M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued

0103 00

Table 13. Preventive Maintenance Checks and Services (PMCS) - Monthly - Models M1084A1 and M1086A1 - Continued.

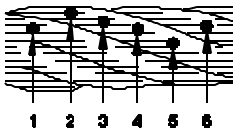
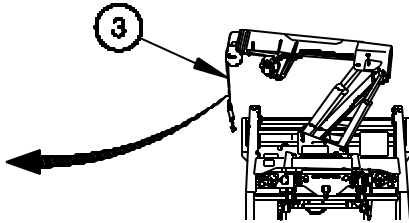
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Material Handling Crane (MHC) - Continued		
<p style="text-align: center;"><b>WARNING</b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p>					
				2. Pay out MHC cable (3) completely (WP 0030 00) and inspect for kinks, sharp bends, abrasions, and broken wires.	Six randomly distributed broken wires in any 6 in. (15 cm) section of cable or three broken wires in one bundle (e.g., breaks 3, 4, 5) in a 6 in. (15 cm) section.
<div style="display: flex; justify-content: space-around; align-items: center;">   </div>					

8099806-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 13. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1084A1 and M1086A1 - Continued.

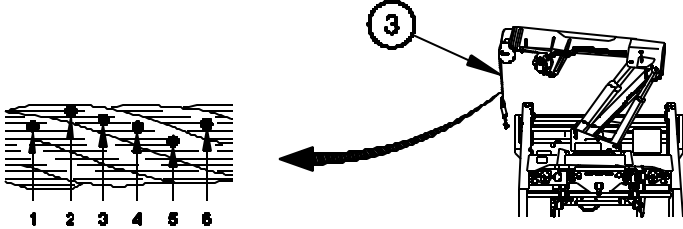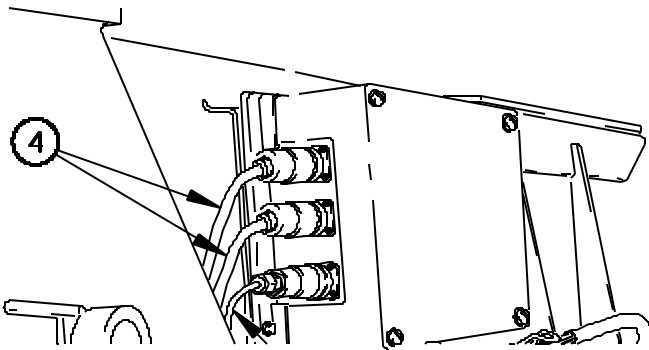ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Material Handling Crane (MHC) - Continued	3. Check for kinking, crushing, or any other damage resulting in distortion of cable (3) structure.	Cable is kinked or crushed.
					
				4. Inspect electrical cables (4) for cracking, fraying, and excessive wear.	Electrical cables are frayed, cracked, or excessively worn.
					


BD99B07-

BD99B08-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 13. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1084A1 and M1086A1 - Continued.

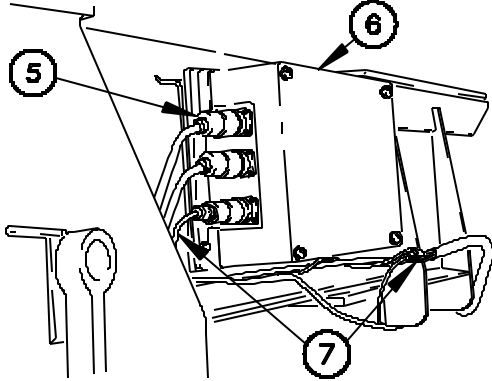ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Material Handling Crane (MHC) - Continued	<p>5. Check security of electrical connectors (4) on overload shutdown box (5).</p> <p>6. Inspect electrical wiring (6) for cracking, fraying, and excessive wear.</p>	Wiring is frayed, cracked, or excessively worn.
					
2	Monthly	0.1	Oil Can Points	<p>Lubricate all oil can points with OE/HDO specified for ambient temperature. The operator/crew is responsible for lubricating the following points:</p> <p>1. MHC control lever pivot points on manual controls.</p>	8199809-

<b>M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued</b>	<b>0103 00</b>
---	----------------

Table 13. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Models M1084A1 and M1086A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Monthly	0.1	Oil Can Points - Continued	2. MHC hand pump handle mounting/ hinge pins.  3. MHC turntable locking pin.  4. MHC cable hook swivel points.	
<b>DESCRIPTION</b>		<b>CAPACITY</b>	<b>TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES</b>		
			Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Oil Can Points		As required	OE/HDO-10	OE/HDO-10	OEA

---


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00**

**Before** PMCS Procedures for Model M1088A1

These illustrations will help you perform BEFORE vehicle PMCS. The callouts match PMCS item number/procedures.

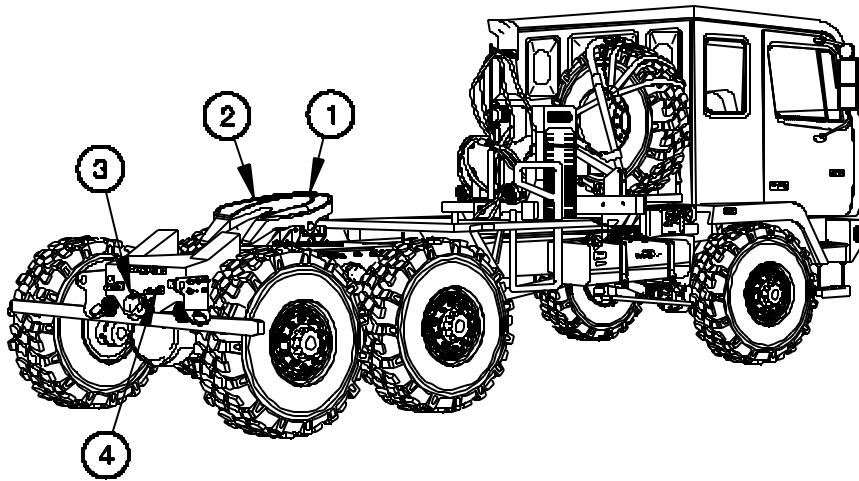


ED99BR0-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 14. Preventive Maintenance Checks and Services (PMCS) -Before -  
Model M1088A1.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Fifth Wheel without Semitrailer Coupled	<p>1. Check coupler jaws (1), primary lock-release handle (2), secondary lock-release handle (3), linkage, and locking plunger for damage and proper operation.</p> <p>2. Check that coupler jaws lock open:</p> <p>a. Pull out secondary lock-release handle (3) and hook assembly into position.</p> <p>b. Pull out primary lock-release handle (2).</p>	<p>Coupler jaws are broken or primary and/or secondary lock-release handles will not operate properly.</p> <p>Coupler jaws fail to lock open.</p>

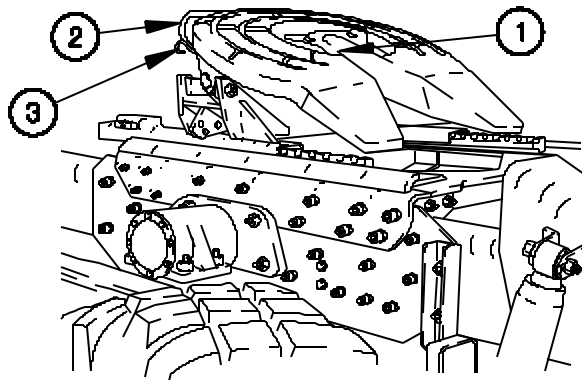


80998R1 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 14. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1088A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Fifth Wheel without Semitrailer Coupled - Continued	<p>3. Place primary lock-release handle (2) in locked position.</p> <p>4. Check that coupler jaws (1) stay open with primary lock-release handle (2) in locked position.</p>	

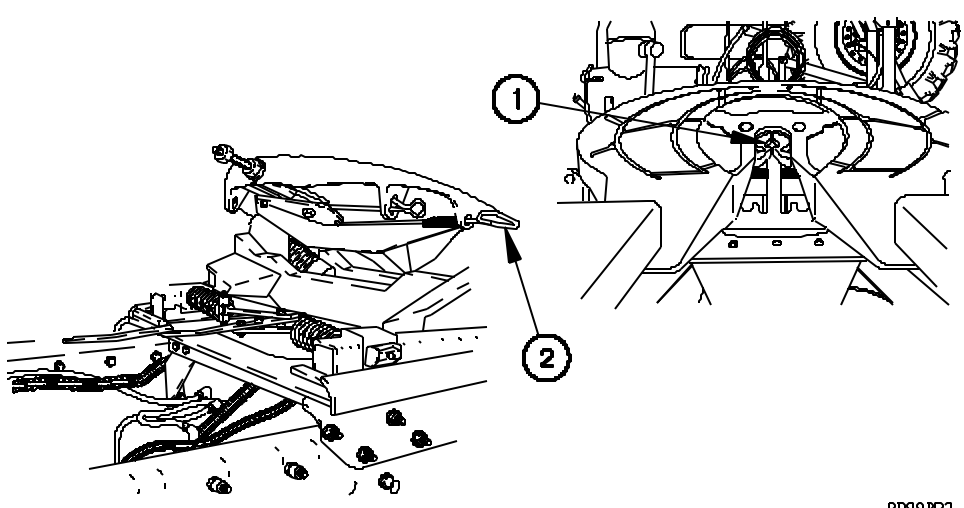


8D99DR2-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 14. Preventive Maintenance Checks and Services (PMCS) -Before -  
Model M1088A1 - Continued.


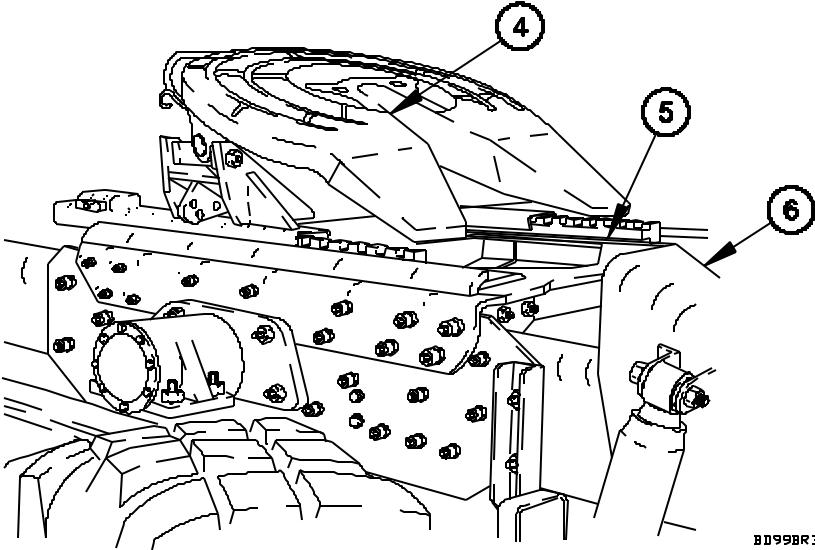
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before	0.1	Fifth Wheel without Semitrailer Coupled - Continued	5. Check that top surface of fifth wheel (4), slide path (5), and guide ramps (6) are lubricated.	
 <p style="text-align: right;">8199BR3-</p>					
DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26° C)	-15° to -50°F (-26° to -46° C)	
Fifth Wheel and Slide Path	As required	GAA	GAA	GAA	



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 14. Preventive Maintenance Checks and Services (PMCS) -Before -  
Model M1088A1 - Continued.

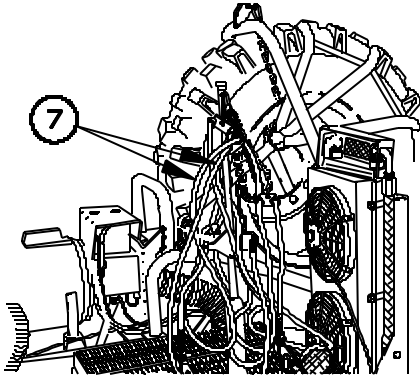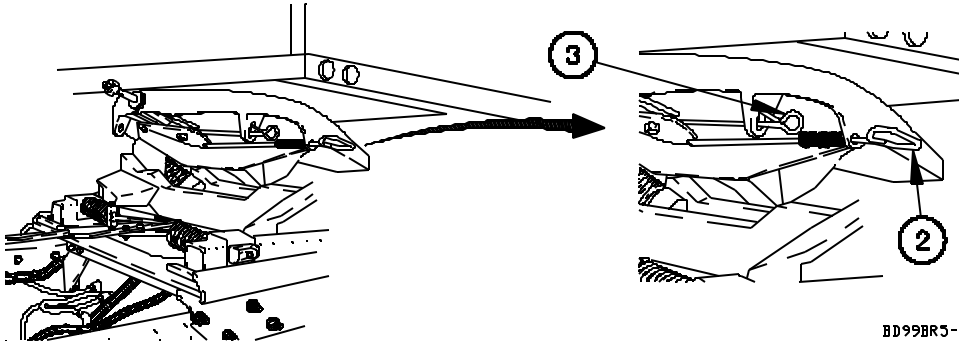ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Fifth wheel without Semitrailer Coupled-Continued	6. Check that air brake hoses (7) do not drag on work platform. Refer to WP 0032 00 for adjustment.	
 <p>BD99BR4 -</p>					
2	Before		Fifth Wheel with Semitrailer Coupled	Check that primary lock-release handle (2) and secondary lock-release handle (3) are completely in.	
 <p>BD99BR5 -</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 14. Preventive Maintenance Checks and Services (PMCS) -Before -  
Model M1088A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Before		Semitrailer Air-brake hoses with Semitrailer Coupled	<p>1. Check that air brake hoses (7) are securely connected to semitrailer.</p> <p>2. Check semitrailer air brake hoses (7) and gladhands (8) for leaks and other obvious damage.</p>	<p>Both air brake hoses cannot be connected to semitrailer.</p> <p>Semitrailer air brake hoses or gladhands are leaking or damaged.</p>

811998R6-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 14. Preventive Maintenance Checks and Services (PMCS) -Before -  
Model M1088A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Before		Semitrailer Air-brake hoses with Semitrailer Coupled - Continued	3. Check that semitrailer air brake hoses (7) do not drag on work platform. Refer to WP 0032 00 for adjustment.	


8D99BR7-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 14. Preventive Maintenance Checks and Services (PMCS) -Before -  
Model M1088A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Before		Intervehicular Cable with Semitrailer Coupled	1. Check for secure attachment of intervehicular cable (9) to semitrailer.  2. Check intervehicular cable (9) for cracked insulation or bare wires.	Interverhicular cable cannot be securely attached to semitrailer.  Interverhicular cable has bare wires or cracked insulation.

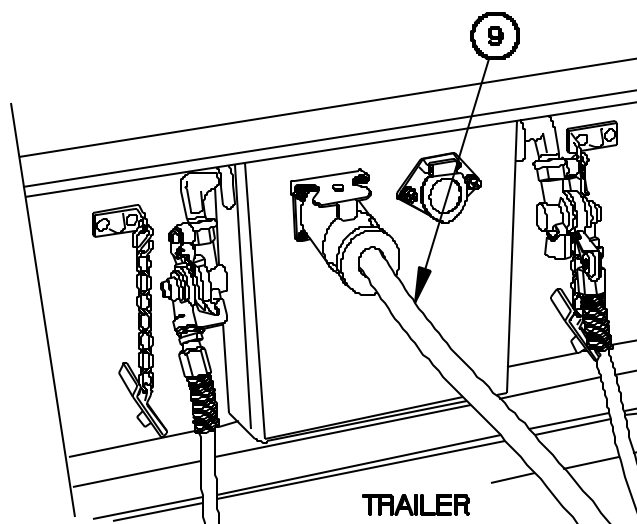


81998R8-

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

## **Weekly PMCS Procedures for Model M1088A1**

These illustrations will help you perform WEEKLY vehicle PMCS. The callouts match PMCS item number/procedures.


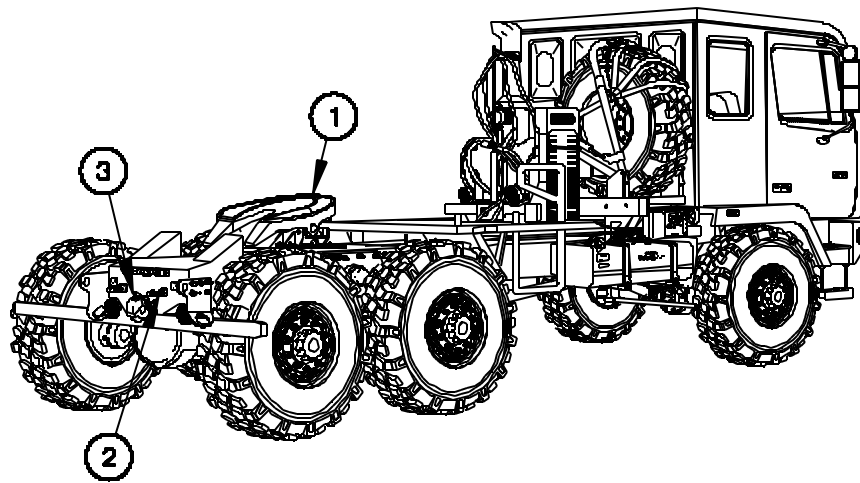


B099BR9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**



**Table 15. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Model M1088A1.**

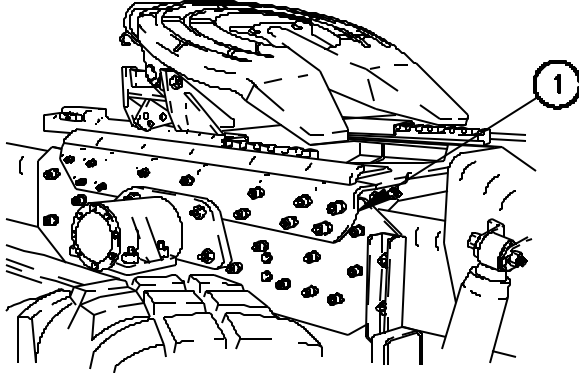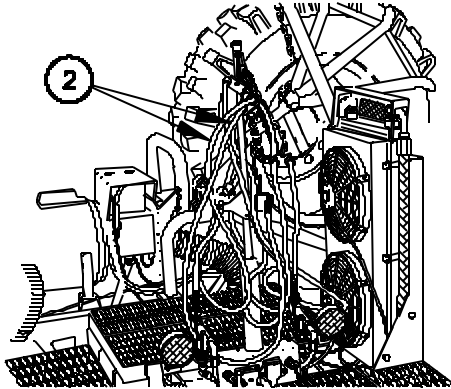ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Weekly		Fifth Wheel without Semitrailer Coupled	Check for loose mounting hardware (1) at fifth wheel base.	Mounting hardware is loose.
 <p>8099850-</p>					
2	Weekly		Semitrailer Air-brake Hoses without Semitrailer Coupled	1. Check semitrailer air brake hoses (2) and gladhands for leaks and other obvious damage.	Air leak is detected.
 <p>8099851-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 15. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Model M1088A1 - Continued.

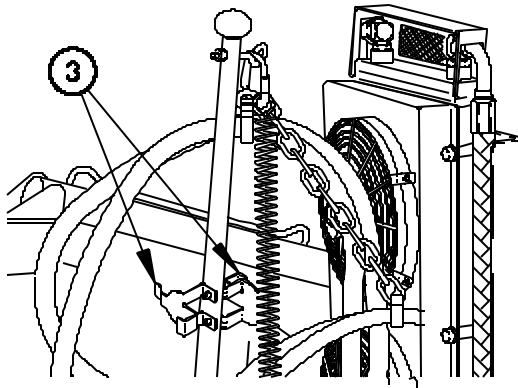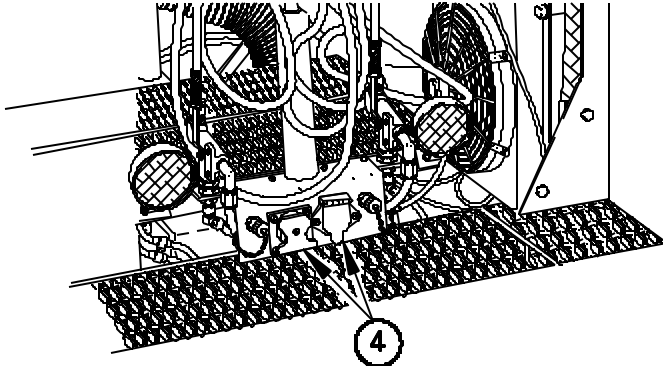
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Weekly		Semitrailer Air-brake Hoses without Semitrailer Coupled - Continued	2. Remove dummy couplings (3) from gladhands and check condition of seals.	Seals are damaged.
 <p>BD99BS2-</p>					
3	Weekly		Semitrailer Electrical Connectors	Check electrical connectors (4) and seals for damage.	
 <p>BD99BS3-</p>					

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

## **Monthly** PMCS Procedures for Model M1088A1

These illustrations will help you perform MONTHLY vehicle PMCS. The callouts match PMCS item number/procedures.

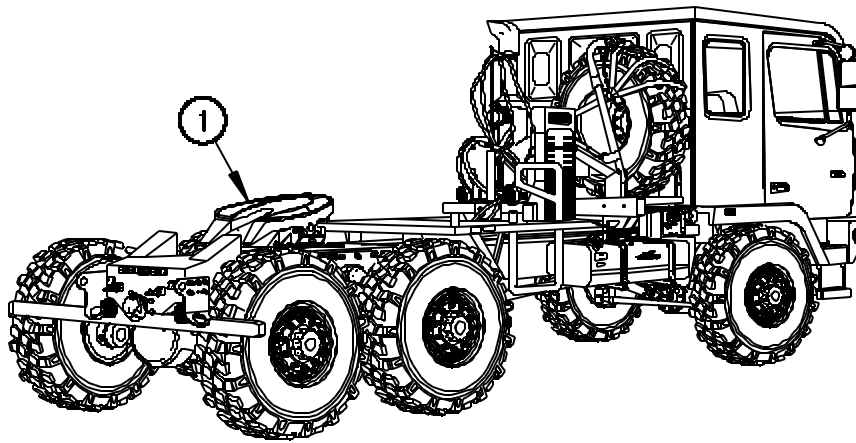

8099854-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**
**Table 16. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1088A1.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly	0.1	Oil Can Points	Lubricate all oil can points with OE/HDO specified for ambient temperature. The operator/crew is responsible for lubricating the following points:  1. Plunger lock latch  2. Coupler jaw linkage.	


DESCRIPTION	CAPACITY	TYPE OF FLUID USED AT THESE EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Oil Can Points	As required	OE/HDO-10	OE/HDO-10	OEA

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

**Before** PMCS Procedures for Model M1089A1

These illustrations will help you perform BEFORE vehicle PMCS. The callouts match PMCS item number/procedures.

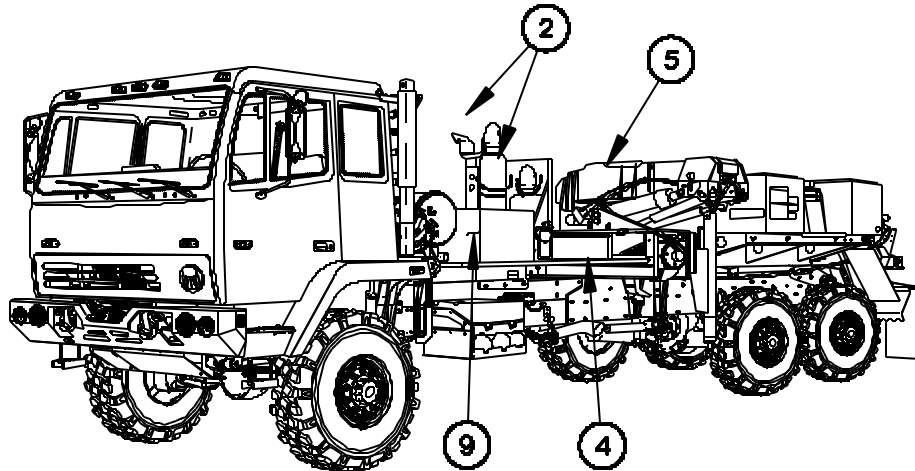

8099855-


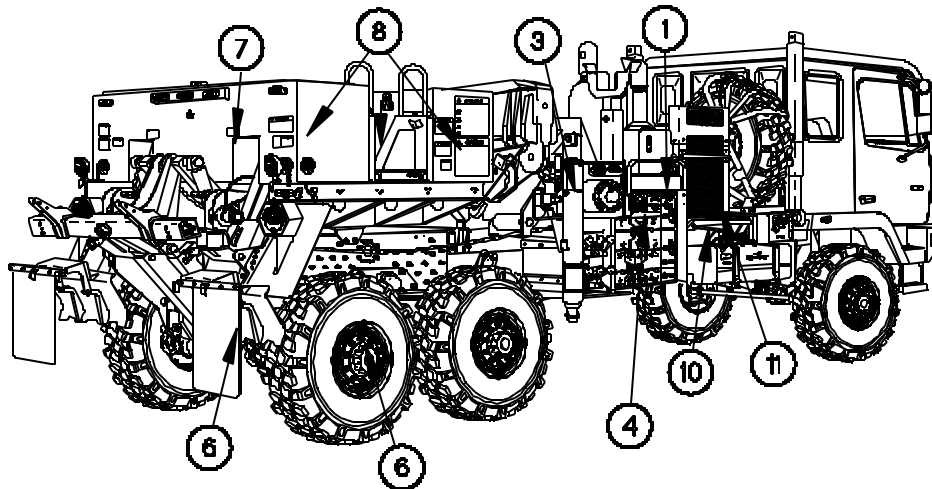


8099856-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**



**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1.**

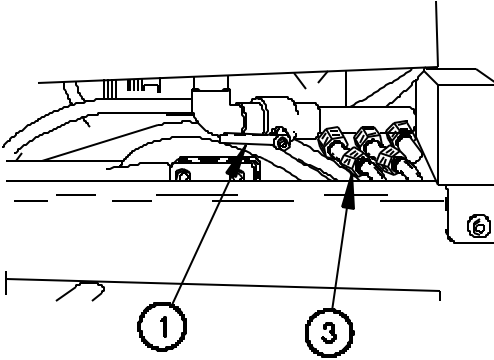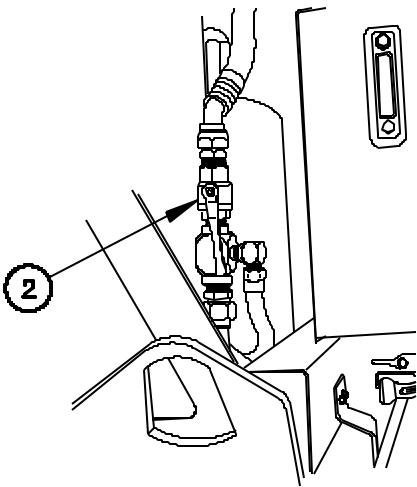ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Shutoff and Return Valve		
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Shutoff valve and return valve must be opened before Material Handling Crane (MHC), underlift assembly, stifflegs, or 30K winches are operated. Failure to comply may result in damage to equipment.</p>					
				<ol style="list-style-type: none"> <li>1. Check that shutoff (1) and return (2) valves are open. Open valves as required.</li> <li>2. Check that hydraulic hoses (3) are not damaged or leaking.</li> </ol>	Class III leak is evident.
<div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> <p style="text-align: right; font-size: small;">8D99857-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.

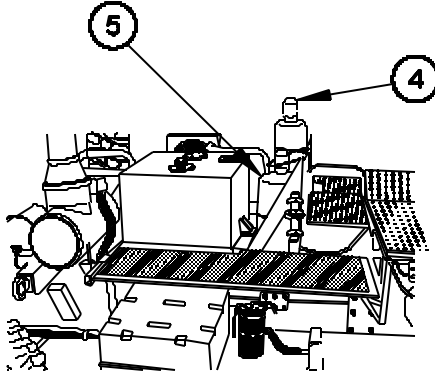
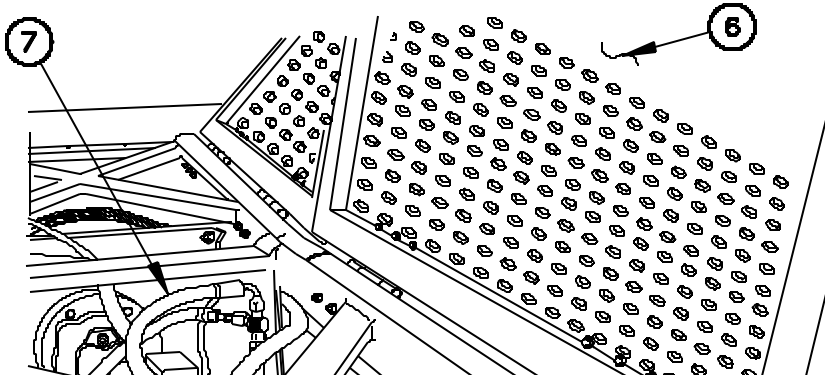
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Before		Oxygen Tank and Acetylene Cylinder	Check that oxygen tank (4) and acetylene cylinder (5) are properly mounted and securely fastened.	
					
3	Before		Hydraulic Hoses and Fittings	Raise catwalk (6) and check hydraulic hoses (7) and fittings for leakage and damage.	Class III leak is evident.
					

RD99RTD-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.

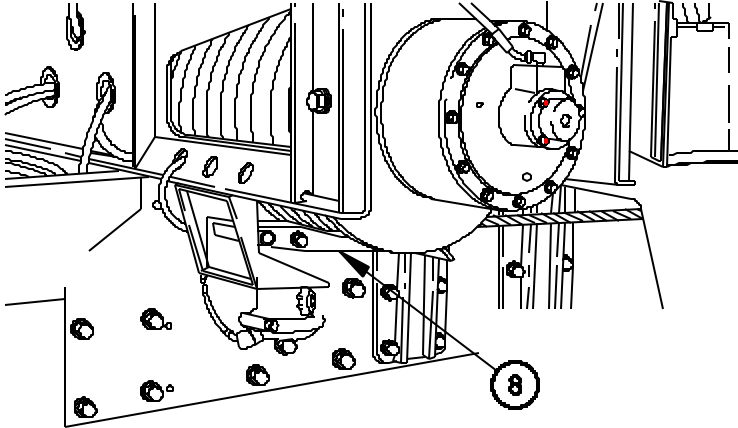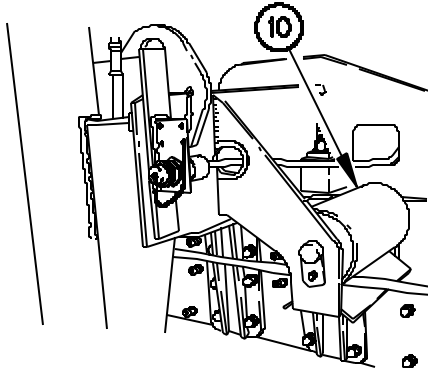ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Before		30K Winches - Continued	4. Check 30K winch tensioner (8) for proper operation. Check that tensioner moves freely.	
					
				5. Check that rollers (10) turn freely and are not damaged.	
					


8099871-

8099872-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00


Table 15. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.

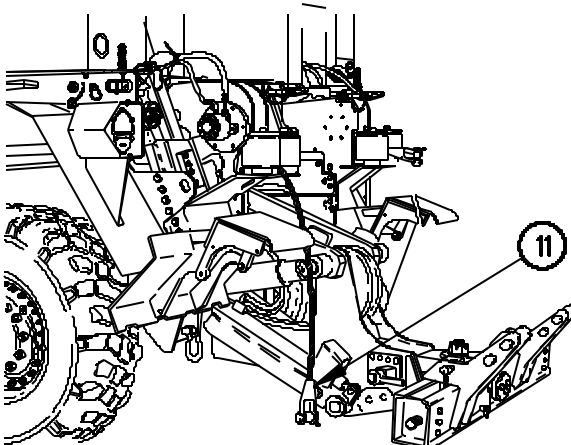ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Before		30K Winches - Continued	6. Check that 30K winch cable clevis pin (11) is not missing or damaged and is secure.	Clevis pin is missing or damaged and 30K winch is required for mission.
<p><b>UNDERLIFT SHOWN LOWERED AND 30K WINCH CABLE SHOWN PAYED OUT FOR CLARITY</b></p>  <p style="text-align: right;">8099813-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.**

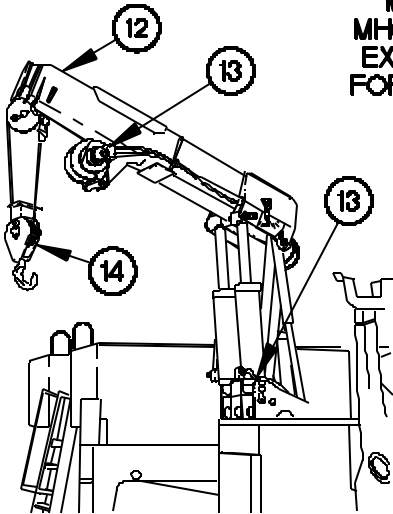ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
5	Before		Material Handling Crane (MHC)		
<p align="center"><b>NOTE</b></p> <p>M1089A1 MHC is checked before vehicle operation if it will be operated as part of vehicle mission.</p>					
				<p>1. Inspect MHC (12) for loose parts, oil leaks, damage to hydraulic hoses (13) and tubes, and other obvious damage.</p> <p>2. Check hook assembly (14) for cracks and other obvious damage.</p>	<p>Class III leak is evident or damaged hoses, tubes, or fittings are found.</p> <p>Hook block is damaged.</p>
<p align="center">  <b>M1089A1 MHC SHOWN EXTENDED FOR CLARITY</b> </p>					


BD99BT4 -



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.**

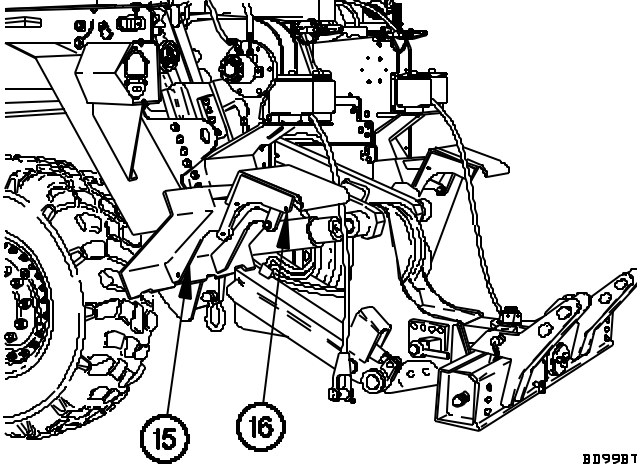
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
6	Before		Stifflegs		
<p align="center"><b>NOTE</b></p> <p>The underlift assembly is checked before vehicle operation if it will be operated as part of vehicle mission.</p>					
				<p>1. Check stifflegs (15) for oil leaks and other obvious damage.</p> <p>2. Check sandshoes (16) for damage.</p> <p>3. Check that two pins are installed in each sandshoe (16) and that pins are not damaged.</p>	Class III leak is evident or damaged hardware is found.
<p><b>UNDERLIFT SHOWN LOWERED FOR CLARITY</b></p>					

8D99875-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.**

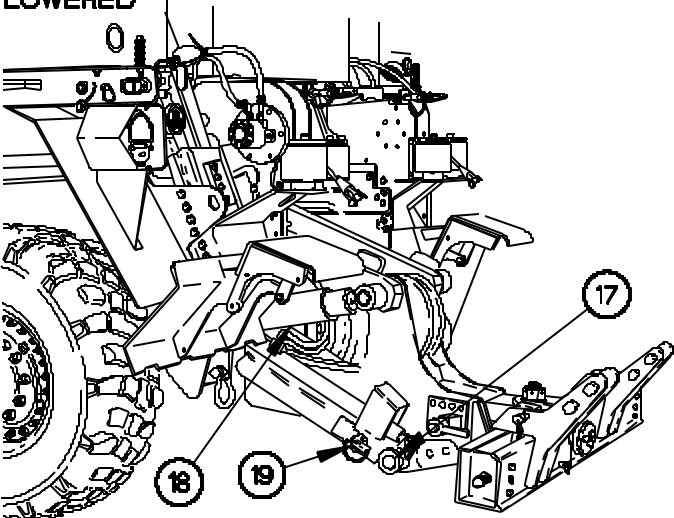ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
7	Before		Underlift Assembly		
<p align="center"><b>NOTE</b></p> <p>The underlift assembly is checked before vehicle operation if it will be operated as part of vehicle mission.</p>					
				<p>1. Check underlift fold (17) and lift cylinders (18) for leaks and obvious damage.</p> <p>2. Check that underlift lock pin (19) is installed and is not damaged.</p>	<p>Class III leak is evident.</p> <p>Underlift lock pin is missing or damaged.</p>
<p><b>UNDERLIFT SHOWN LOWERED FOR CLARITY</b></p> 					

8099816-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
7	Before		Underlift Assembly - Continued	<p>3. Check that stinger cam lock (20) is in locked position and is not damaged.</p> <p>4. Check that crossbar (21) is not damaged.</p> <p>5. Check that crossbar pin (22) is installed.</p>	<p>Stinger cam lock cannot be secured stinger.</p> <p>Crossbar is damaged.</p> <p>Crossbar pin is missing.</p>

**UNDERLIFT SHOWN  
LOWERED FOR  
CLARITY**


8099817-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
8	Before		Tool Boxes, Ladder, and Vise	1. Pull spring pin (23) and lower ladder (24).  2. Check ladder (24) for damaged rungs and for broken welds.	Ladder is damaged to the point that it is unsafe.

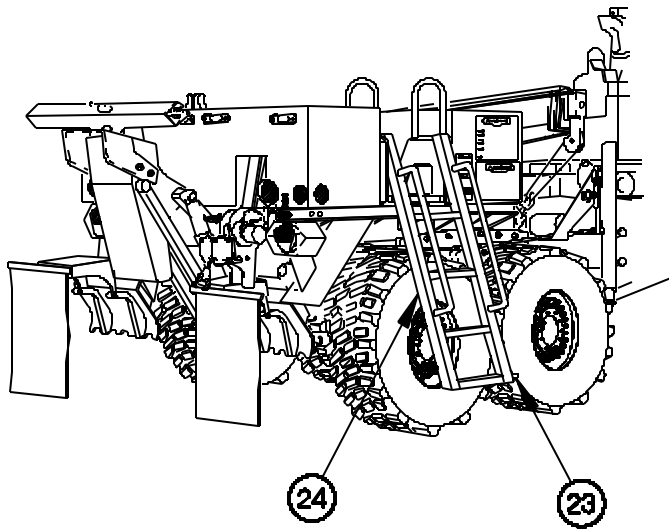


8D99878-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.

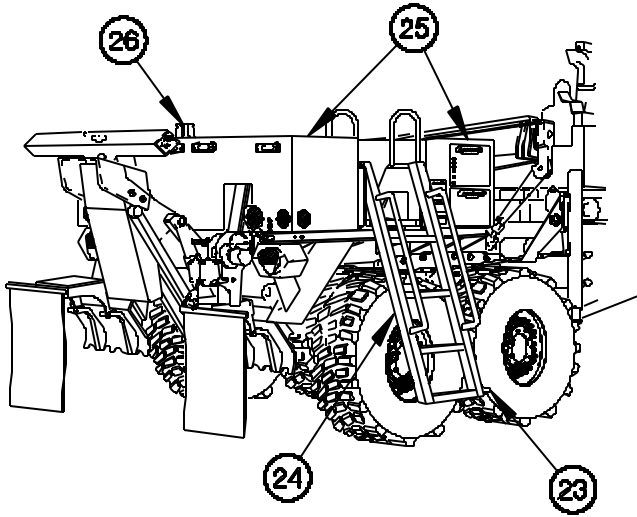ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/AVAILABLE IF:
8	Before		Tool Boxes, Ladder, and Vise - Continued	<p>3. Check both tool boxes (25) for damaged latches.</p> <p>4. Check that vise (26) is mounted securely and is not damaged.</p> <p>5. Stow ladder (24). Check that spring pin (23) locks ladder securely in stowed position.</p>	
					
8199879-					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Hydraulic Oil	<p><b>CAUTION</b></p> <p>Oil level must not be above FULL line or below FILL line on hydraulic tank. Failure to comply may result in damage to equipment.</p> <ol style="list-style-type: none"> <li>1. Check hydraulic oil level at sight gage (27)</li> <li>2. Remove cap (28) from hydraulic tank (29) and fill hydraulic tank to proper level.</li> <li>3. Install cap (28) on hydraulic tank (29).</li> </ol>	Oil level is above FULL line.

The diagram shows a side view of a hydraulic tank. A sight gauge is mounted on the side, with two horizontal lines labeled 'FULL' and 'FILL'. A cap is shown being removed from the top of the tank. The cap is labeled with a circled '28' and the tank body with a circled '29'. The sight gauge is labeled with a circled '27'.

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**


**0103 00**

**Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
9	Before		Hydraulic Oil - Continued		

DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
M1089A1 Hydraulic tank	74 GAL (280 L)	OE/HDO-10	OE/HDO-10	OEA

10	Before		Catwalk Ladder	<div>1. Pull spring pin (30) and lower ladder (31).</div> <div>2. Check ladder (31) for damaged rungs and for broken welds.</div>	Ladder is damaged to the point that it is unsafe.
----	--------	--	-------------------	---	---

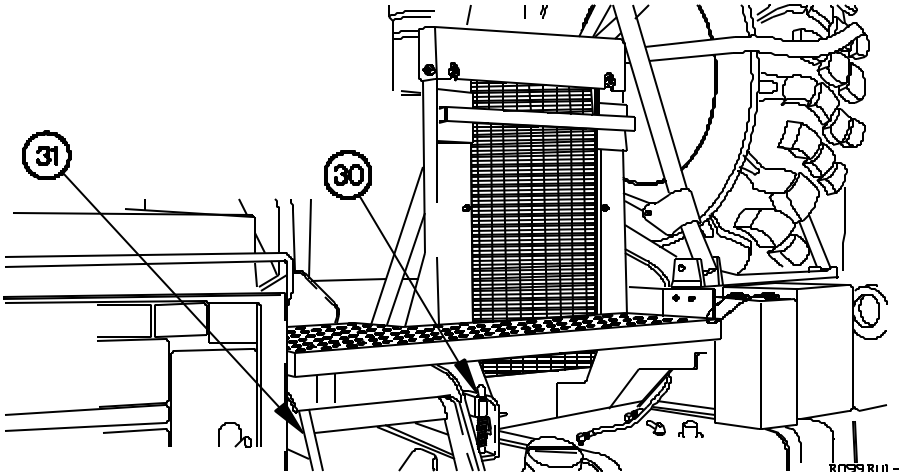


8059 BUI -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 17. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
10	Before		Catwalk Ladder - Continued	3. Stow ladder (31). Check that spring pin (30) locks ladder securely in stowed position.	
11	Before		Auxiliary Oil Cooler	Check auxiliary oil cooler (32) for debris around coils.	

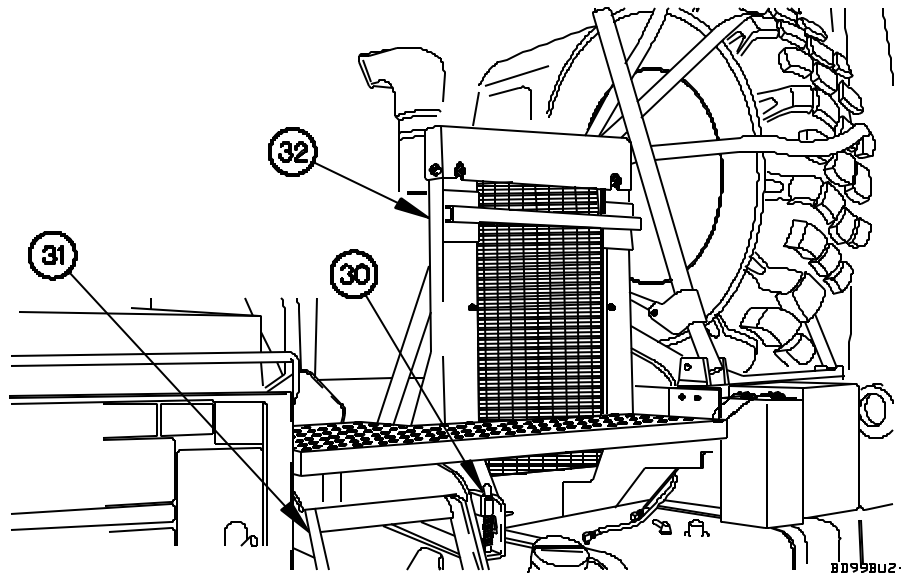

8095BU2-




# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

**During** PMCS Procedures for Model M1089A1

These illustrations will help you perform DURING vehicle PMCS. The callouts match PMCS item number/procedures.

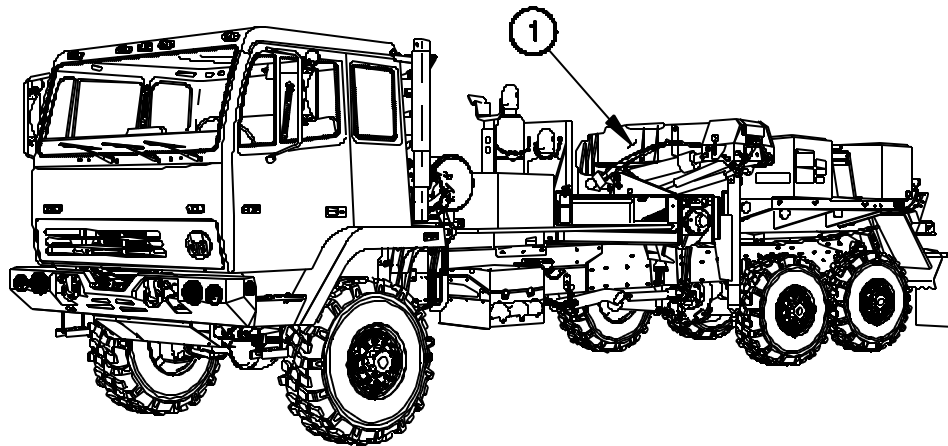

8D998U3-

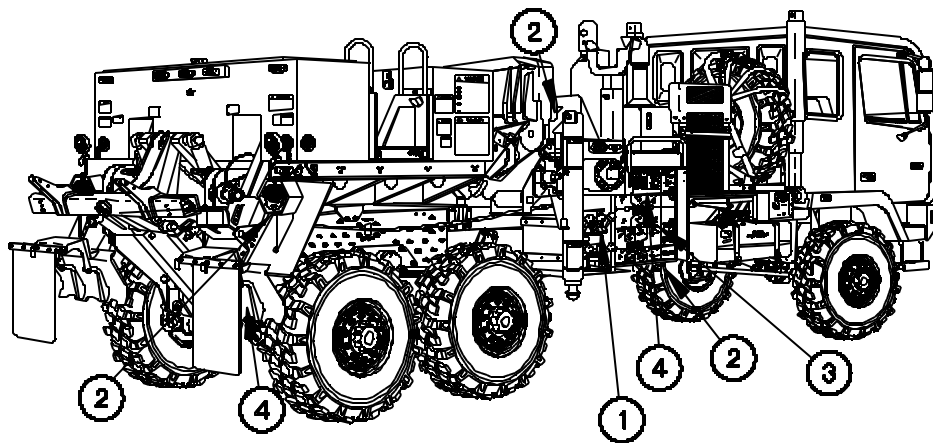

8D998U4-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC)	<p>1. Check that hydraulic system operates properly as follows:</p> <p>a. Start engine (WP 0018 00).</p> <p>b. Pull out SYSTEM PARK control (1).</p> <p>c. Position PTO switch (2) to on</p>	PTO does not engage.

The diagram shows a close-up of the MHC control panel. It features several toggle switches and a rotary switch. A callout line labeled '1' points to a switch labeled 'SYSTEM PARK'. Another callout line labeled '2' points to a switch labeled 'PTO'. The panel is mounted on a metal structure, and there are various other controls and gauges visible in the background.

8099805-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1- Continued.


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Material Handling Crane (MHC) - Continued	d. Position MAIN POWER ON/OFF switch (3) to ON.	

8D998U6-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

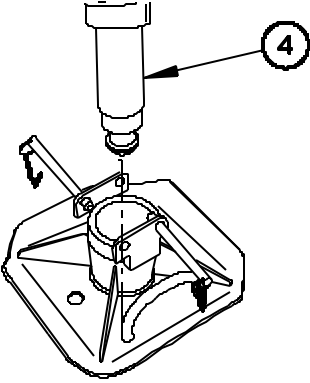ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Do not operate Material Handling Crane (MHC) unless outriggers are set up and MHC is level from side to side. Failure to comply may result in serious injury or death to personnel.</p> <p>Keep hands and feet clear of outriggers during operation. Failure to comply may result in injury to personnel.</p> <p style="text-align: center;"><b>NOTE</b></p> <p>Operate MHC control levers using even pressure. Moving lever slightly will cause slow movement of MHC. Moving lever to full travel will cause faster movement of MHC.</p> <p>Check MHC controls one at a time for proper operation, obvious damage, missing parts, binding, and looseness.</p>					
				1. Set up outriggers (4) (WP 0043 00).	
					


8D998U7-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued	<p>2. Check that two pins (5) are attached to each pad (6).</p> <p>3. Move O/R EXT lever (7) to OUT position until outriggers (4) have fully extended.</p> <p>4. Move LH O/R JACK lever (8) to DOWN position until end of outrigger (4) lowers to outrigger pad socket (9).</p> <p>5. Install two pins (5) in outrigger pad (6).</p>	<p>Pin(s) is damaged or missing.</p> <p>Outriggers will not extend.</p> <p>Outrigger cylinder will not come out or will not lower completely to outrigger pad.</p>


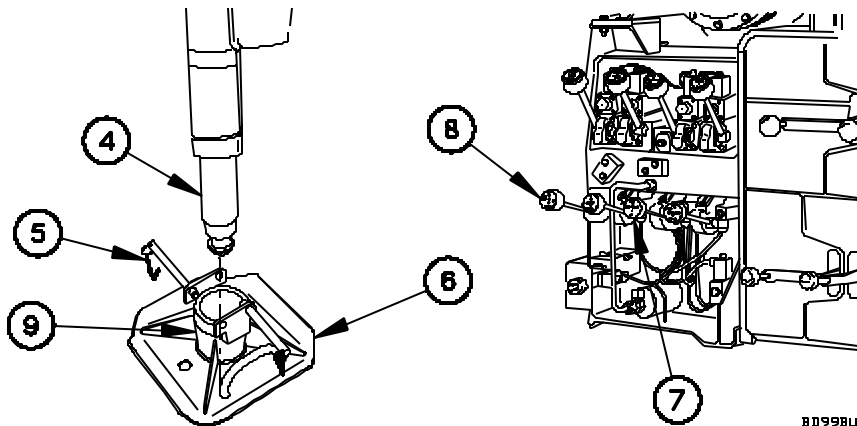


8099808-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

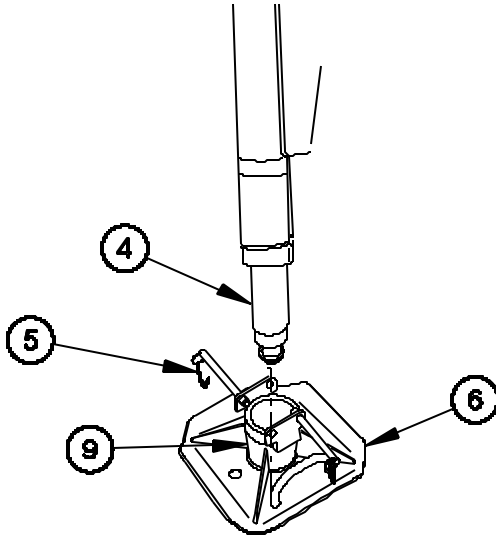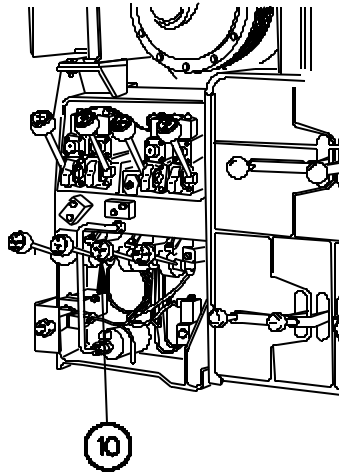
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
<p align="center"><b>NOTE</b> MHC can operate on up to 5-degree side slope</p>					
2	During		Material Handling Crane (MHC) Operation - Continued	<p>6. Move RH O/R JACK lever (10) to DOWN position until end of outrigger (4) lowers to outrigger pad socket (9).</p> <p>7. Install two pins (5) in outrigger pad (6).</p> <p>8. Check that outriggers (4) level vehicle from side to side.</p>	<p>Outrigger cylinder will not come out or will not lower completely to outrigger pad.</p> <p>Outriggers will not level vehicle from side to side.</p>
<div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> <p align="right">8099809-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued	<p>9. Check boom angle indicator (11) for damage.</p> <p>10. Raise boom (12) and mast (13) to operating position (WP 0043 00).</p>	<p>Boom angle indicator is damaged and does not give proper boom angle reading.</p> <p>Cylinders do not raise boom and mast completely.</p>


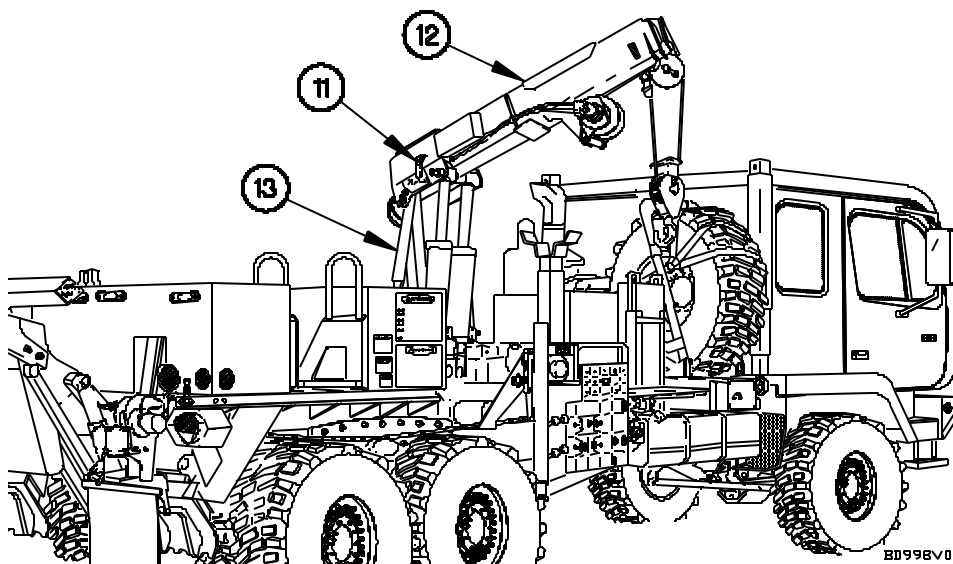


80998V0-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

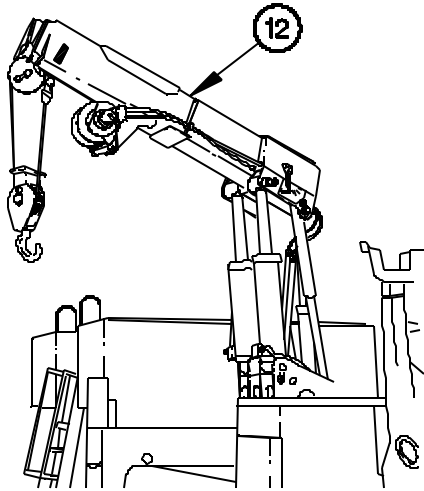
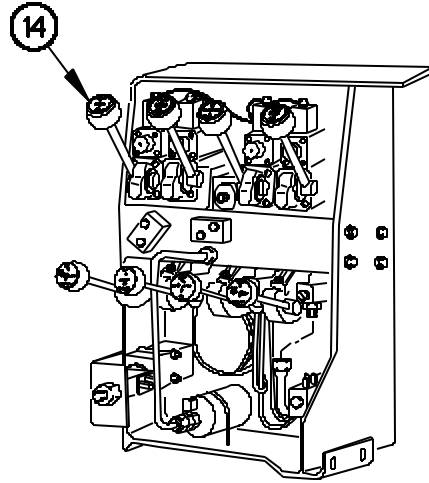
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued	<p>11. Move SWING lever (14) to CW position (WP 0043 00) to move boom (12) to the right.</p> <p>12. Move SWING lever (14) to CCW position (WP 0043 00) to move boom (12) to the left.</p>	<p>Boom does not move to the right.</p> <p>Boom does not move to the left.</p>
<div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> <p style="text-align: right;">BD99BV1 -</p>					



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

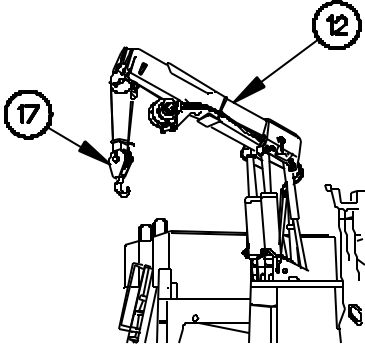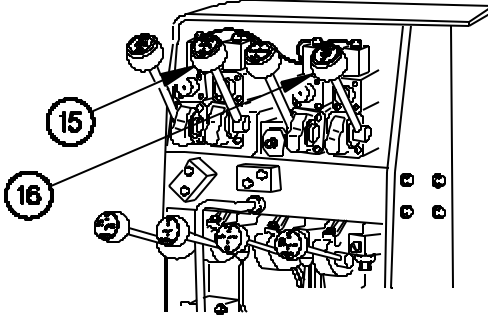ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued		
<p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Keep hook assembly at least 2 ft (0.61 m) from end of boom. If hook assembly hits end of boom, Material Handling Crane (MHC) will lose power for several seconds. Failure to comply may result in damage to equipment.</p>					
				13. Move TELESCOPE lever (15) to OUT position and HOIST lever (16) to DOWN position (WP 0043 00) to extend boom (12).	Boom does not extend or hook block (18) does not lower.
					



8D998V2-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued	<p>14. Check all three stages of boom extension for broken welds and other obvious damage.</p> <p>15. Move TELESCOPE lever (15) to IN position and HOIST lever (16) to UP position (WP 0043 00) to retract boom (12).</p> <p>16. Move BOOM lever (18) to UP position (WP 0043 00) to increase boom (12) angle.</p>	<p>Any broken welds or other obvious damage are found.</p> <p>Boom does not retract or hook assembly does not raise.</p> <p>Boom angle does not increase.</p>

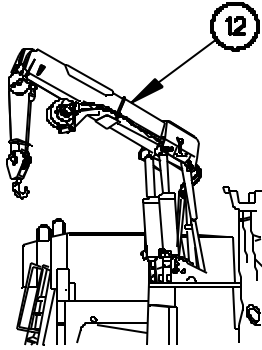
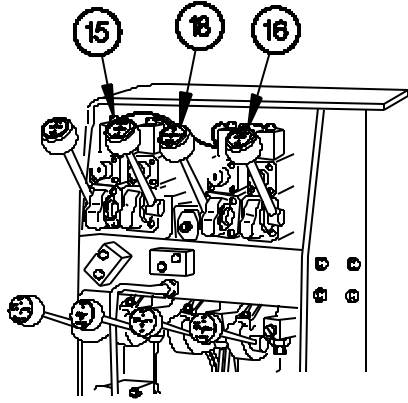



8D998V3-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00



Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

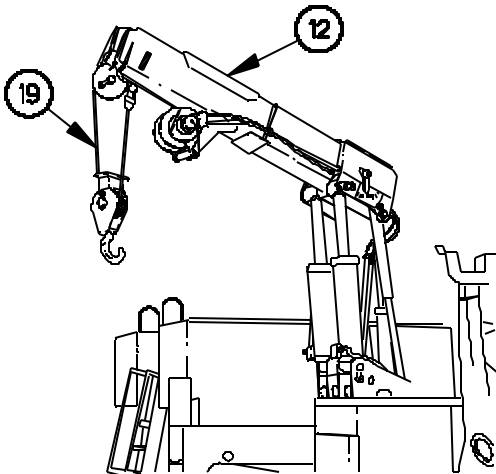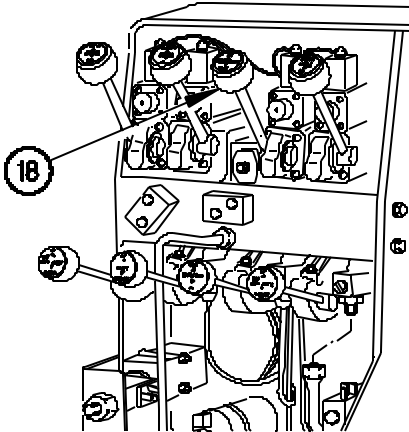ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued	17. Move BOOM lever (18) to UP position (WP 0043 00) to decrease boom (12) angle.	Boom angle does not decrease.
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p>					
				18. Check portion of cable (19) which is visible for kinks, frays, or breaks.	Kinks, frays, or breaks in cable are found.
<div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> <p style="text-align: right; font-size: small;">8D99BV4-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

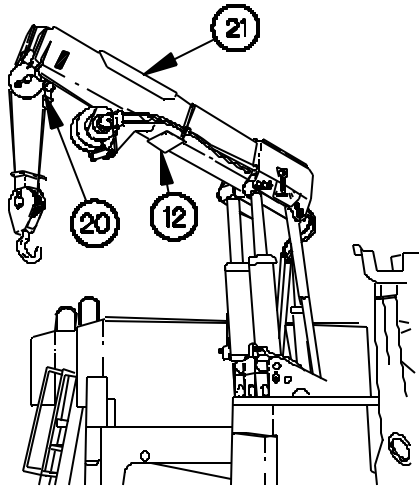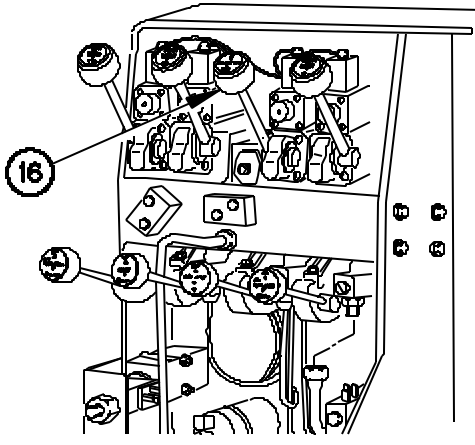
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	During		Material Handling Crane (MHC) Operation - Continued	<p>19. Check that pulley (20) at end of boom (12) is mounted securely, turns smoothly, and is not damaged.</p> <p>20. Check that hoist (21) is mounted securely and is not damaged.</p> <p>21. Move HOIST lever (16) to UP position (WP 0043 00) to reel in cable.</p>	<p>Pulley is damaged, not mounted securely, or does not turn smoothly.</p> <p>Hoist is not mounted securely or is damaged.</p> <p>Hoist does not reel in cable.</p>
<div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div> <p style="text-align: right;">80998V3-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) REMOTE CONTROL UNIT	<p>1. Check remote control cable (22) for cracked insulation and damage to plugs on cable ends.</p> <p>2. Check REMOTE CONTROL UNIT (23) for broken controls or other obvious damage.</p> <p>3. Check receptacle on REMOTE CONTROL UNIT (23) for damaged or missing pins.</p>	<p>Insulation is cracked and bare wire is exposed or cable plug is damaged.</p> <p>Damaged or missing pins are found.</p>

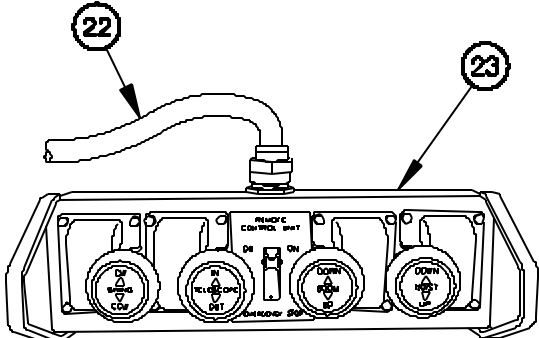



80998V6-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) REMOTE CONTROL UNIT - Continued	<p>4. Check RH REMOTE CONTROL HOOK-UP and LH REMOTE CONTROL HOOK-UP receptacles (24) for damaged or missing pins.</p> <p>5. Connect REMOTE CONTROL UNIT (23) (WP 0043 00).</p>	Damaged or missing pins are found.

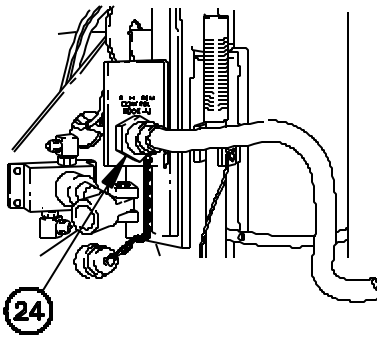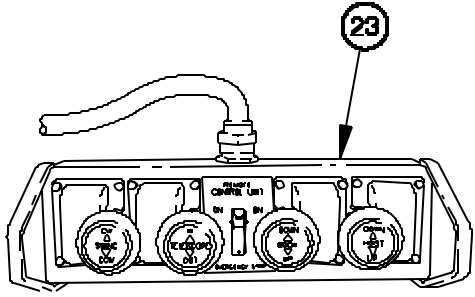8D998V7-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.



ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) REMOTE CONTROL UNIT - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Keep boom clear of all electrical lines and other obstacles while operating Material Handling Crane (MHC). Failure to comply may result in serious injury or death to personnel.</p> <p>Area must be clear of personnel before rotating or telescoping boom. Boom must be rotated and telescoped slow enough so Operator has control of load. If Operator cannot see load during operation, operate Material Handling Crane (MHC) with REMOTE CONTROL UNIT. Failure to comply may result in serious injury or death to personnel.</p> <p style="text-align: center;"><b><u>CAUTION</u></b></p> <p>Keep hook assembly at least 2 ft (0.61 m) from end of boom. If hook assembly hits end of boom, M1089A1 Material Handling Crane (MHC) will lose power for several seconds. Failure to comply may result in damage to equipment.</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) REMOTE CONTROL UNIT - Continued	<p>6. Move SWING lever (14) to CW position to move boom (12) to right.</p> <p>7. Move SWING lever (14) to CCW position to move boom (12) to left.</p> <p>8. Move TELESCOPE lever (15) to OUT position and HOIST lever (16) to DOWN position to extend boom (12).</p>	<p>Boom does not rotate to right.</p> <p>Boom does not rotate to left.</p> <p>Boom does not extend or cable does not lower.</p>

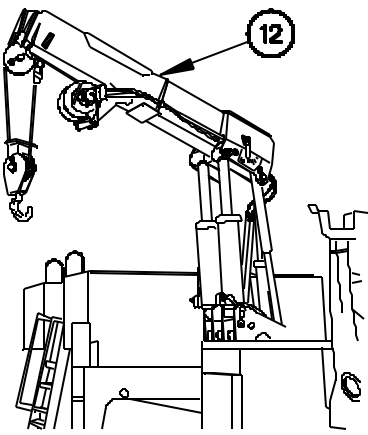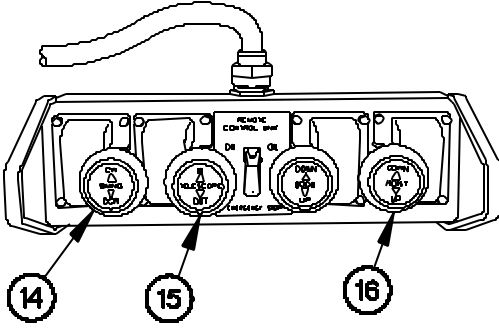8D998V8-





**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) REMOTE CONTROL UNIT - Continued	<p>9. Move TELESCOPE lever (15) to IN position and HOIST lever (16) to UP position to retract boom (12).</p> <p>10. Move BOOM lever (18) to UP position to increase boom (12) angle.</p> <p>11. Move BOOM lever (18) to DOWN position to decrease boom (12) angle.</p>	<p>Boom does not retract or hoist does not reel in cable.</p> <p>Boom angle does not increase.</p> <p>Boom angle does not decrease.</p>

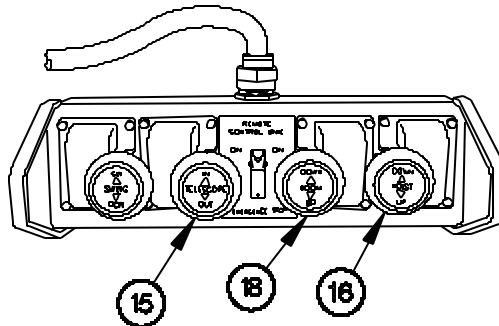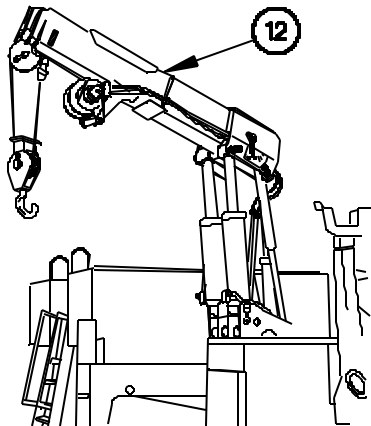



8D998V9-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>12. Move HOIST lever (16) to DOWN position to pay out cable (19).</p> <p>13. Move HOIST lever (16) to UP position to reel in cable (19).</p> <p>14. Disconnect REMOTE CONTROL UNIT (23) (WP 0043 00).</p>	<p>Hoist does not pay out cable.</p> <p>Hoist does not reel in cable.</p>

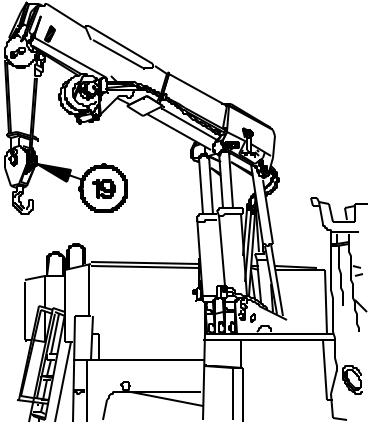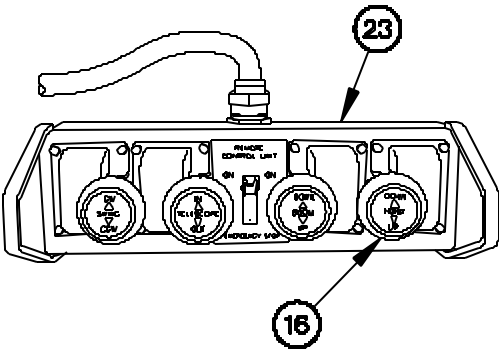



BI998V0-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

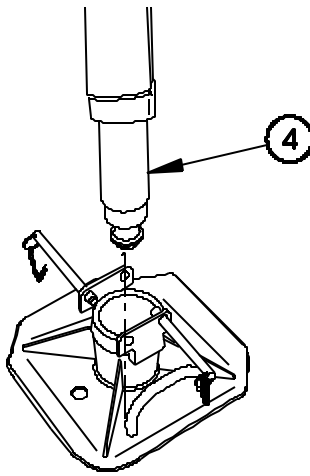ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	During		Material Handling Crane (MHC) Remote Controls - Continued	<p>15. Stow outriggers (5) (WP 0043 00).</p> <p>16. Shut down M1089A1 MHC (WP 0043 00).</p>	
					


8D99BW1-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	During		Stifflegs and 30K Winches	<p>Check that 30K winches operate properly as follows:</p> <ol style="list-style-type: none"> <li>1. Position STATION SELECTOR switch (25) to WRECKER CONTROL PANEL.</li> <li>2. Position MODE SELECTOR switch (26) to NORMAL.</li> </ol>	

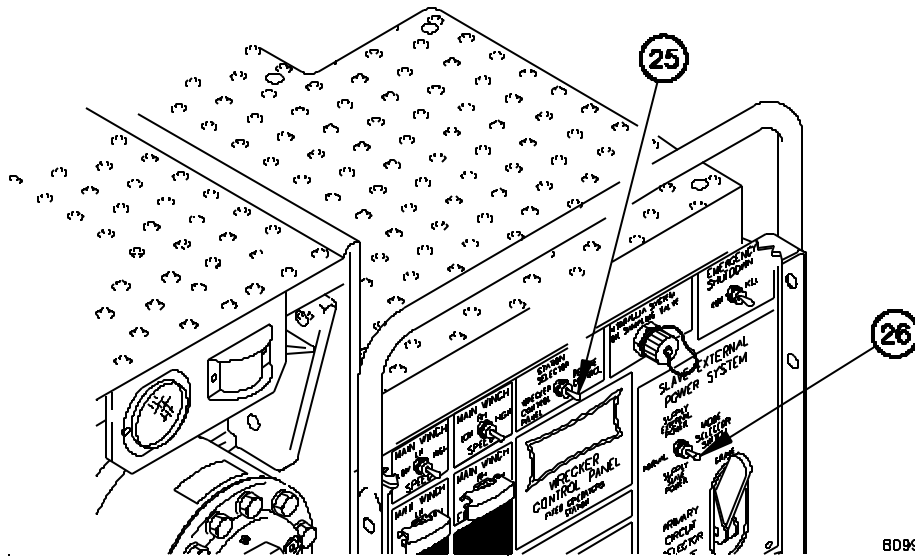


80996W2-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

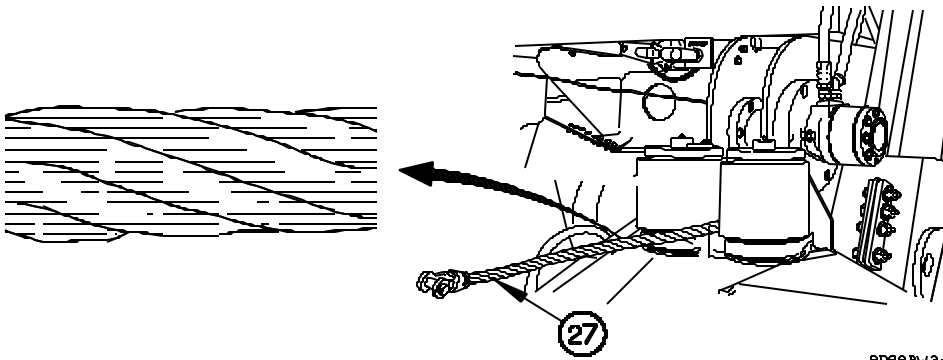
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	During		Stifflegs and 30K Winches - Continued		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p> <p>Keep hands clear of 30K winch during operation. Failure to comply may result in injury to personnel.</p>					
				<p>3. Pay out and reel in 30K winch cable (27) (WP 0035 00). Check that 30K winches operate properly in both directions.</p> <p>4. Check 30K winch cable (27) for kinks, frays, and breaks.</p>	Kinks, frays, or breaks are found.
 <p style="text-align: right;">8D99BW3-</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 18. Preventive Maintenance Checks and Services (PMCS) - During -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	During		Stifflegs and 30K Winches - Continued	5. Check that stifflegs (14) lower when STIFFLEG LH (28) and STIFFLEG RH (29) levers are placed in DOWN position.	Stifflegs do not lower.

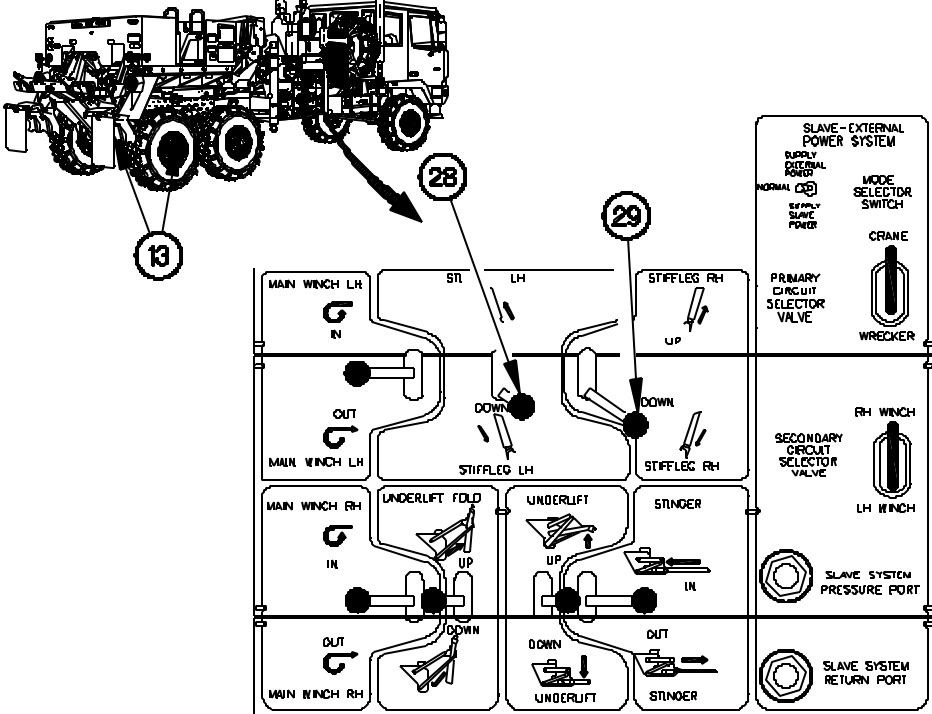

The diagram illustrates the hydraulic control panel for the M1083A1 vehicle. It shows the layout of various levers and valves used for operating the main winches, underlifts, stingers, and stifflegs. Callouts 13, 28, and 29 point to specific components on the vehicle and the panel. The panel includes a 'SLAVE-EXTERNAL POWER SYSTEM' section with a 'MODE SELECTOR SWITCH' and a 'CRANE' selector. It also features a 'PRIMARY CIRCUIT SELECTOR VALVE' and a 'SECONDARY CIRCUIT SELECTOR VALVE'. The 'SLAVE SYSTEM PRESSURE PORT' and 'SLAVE SYSTEM RETURN PORT' are also indicated.

80998W4-


---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00****After** PMCS Procedures for Model M1089A1

These illustrations will help you perform AFTER vehicle PMCS. The callouts match PMCS item number/procedures.

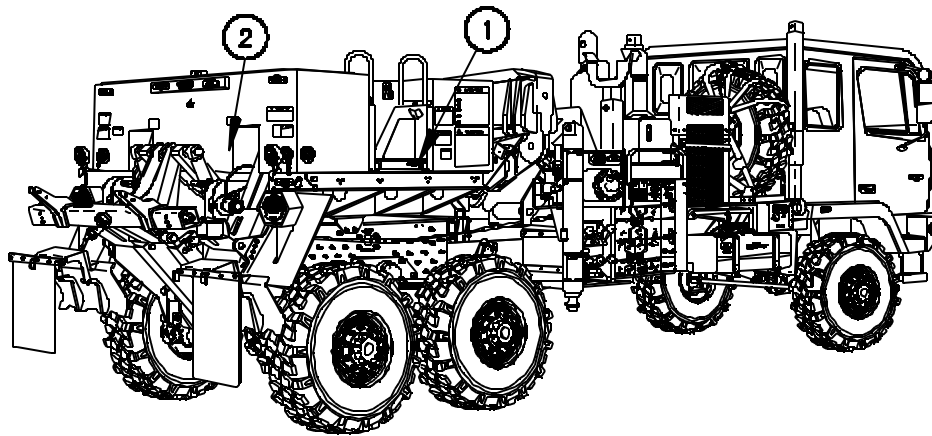


BD998W5-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Table 19. Preventive Maintenance Checks and Services (PMCS) - After - Model  
M1989A1.**


ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	After		30 Ton Snatch Block	Lubricate snatch block (1) after use.	

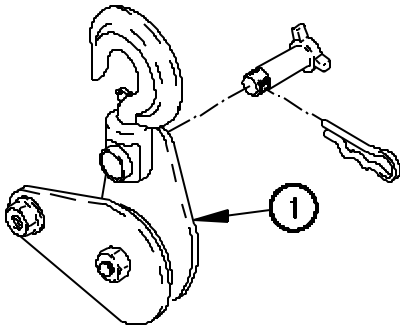

80998W6-

DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
30 Ton Snatch Block	As required	GAA	GAA	GAA

2	After		Towing Pintle Assembly	Lubricate towing pintle (2).	
---	-------	--	------------------------	------------------------------	--

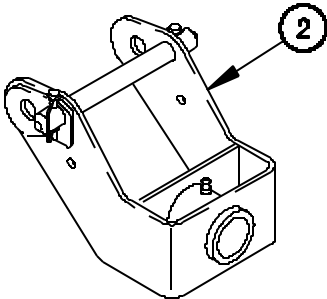

80998W7-



**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 19. Preventive Maintenance Checks and Services (PMCS) - After -  
Model M1989A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	After		Towing Pintle Assembly - Continued		


DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
30 Ton Snatch Block	As required	GAA	GAA	GAA

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

## **Weekly PMCS Procedures for Model M1089A1**

These illustrations will help you perform weekly vehicle PMCS. The callouts match PMCS item number/procedures.

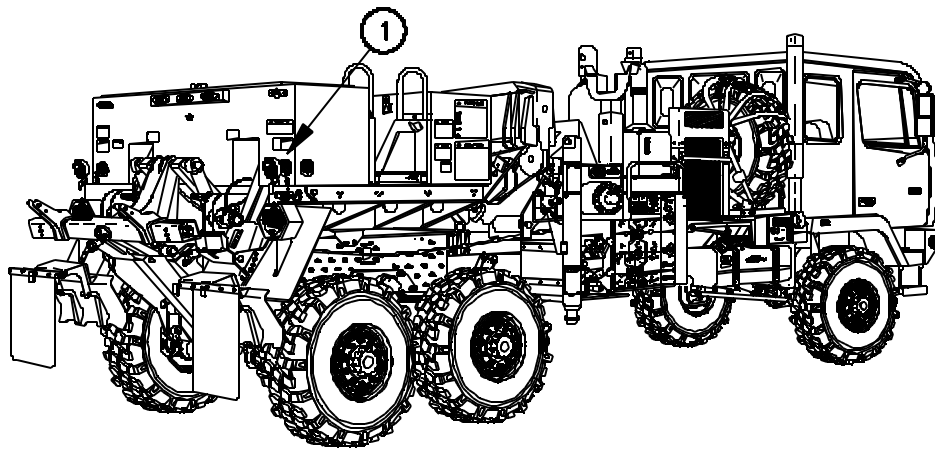


BD998W8-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 20. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Model M1089A1.

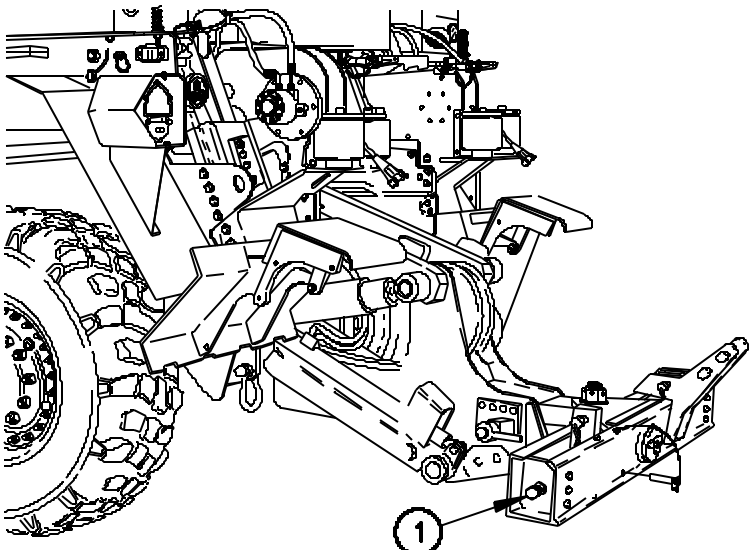
ITEM NO.	INTERVAL	MAN- HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Weekly		Crossbar Screws	Lubricate crossbar screws (1).	
 <p style="text-align: right;">8D99BW9-</p>					
DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)	
Crossbar Screws	As required	GAA	GAA	GAA	

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

## **Monthly PMCS Procedures for Model M1089A1**

These illustrations will help you perform MONTHLY vehicle PMCS. The callouts match PMCS item number/procedures.

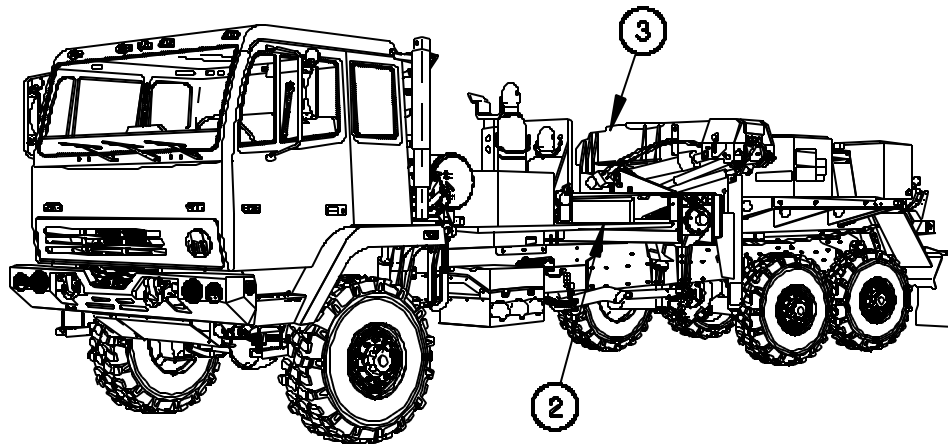

BD99BX0-

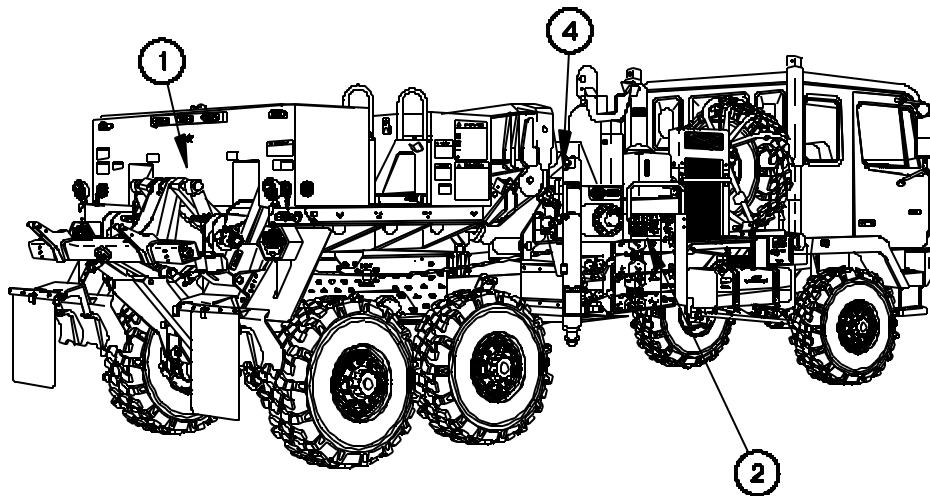


BD99BX1-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**



**Table 21. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1089A1.**

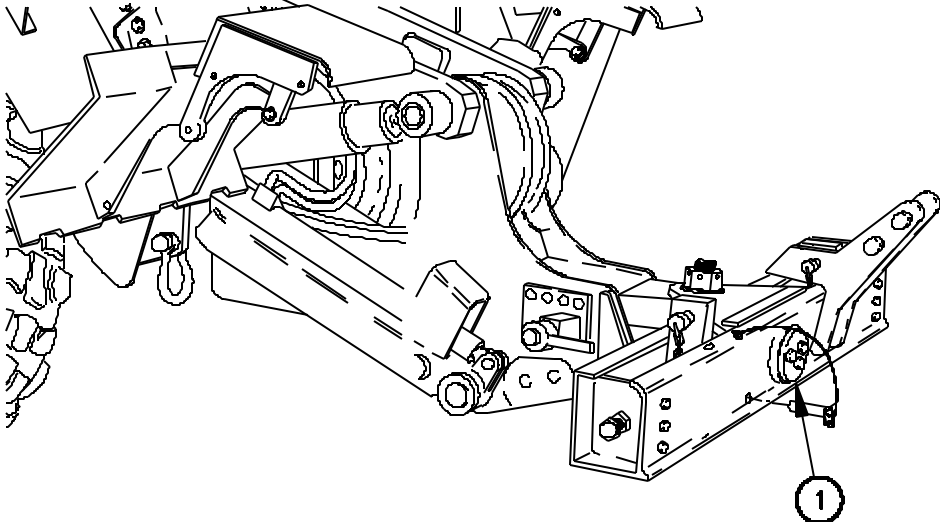ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly		Underlift Assembly Crossbar	Notify Field Maintenance to inspect and lubricate crossbar thrust bearing (1) at 1,000 (1,609 km) miles of tow use.	
 <p style="text-align: right;">8D998X2-</p>					
DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES			
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)	
Crossbar Thrust Bearing	As required	OE/HDO-10	OE/HDO-10	OEA	

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00


Table 21. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1089A1 - Continued.

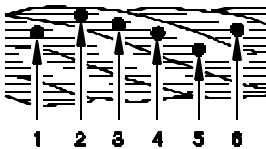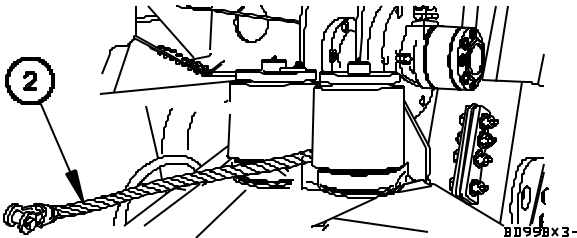ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Monthly		30K Winch Cable		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p>					
				Pay out 30K winch cable (2) completely (WP 0035 00) and inspect for kinks, sharp bends, abrasions, and broken wires.	30K winch cable is damaged or excessively worn.  Six randomly distributed broken wires in any 6 in. (15 cm) section of cable or three broken wires in one bundle (breaks 3, 4, 5) in a 6 in. (15 cm) section.
					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 21. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1089A1 - Continued.


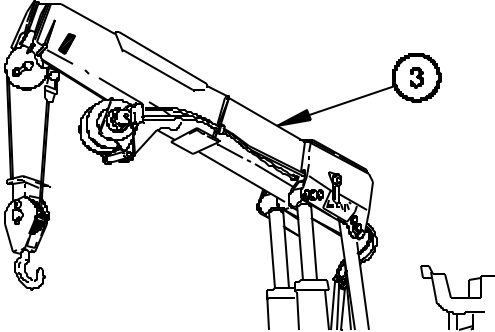
ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
2	Monthly		30K Winch Cable - Continued		Kinking, crushing, or any other damage resulting in distortion of cable structure.
3	Monthly		Material Handling Crane (MHC)		
<p style="text-align: center;"><b><u>WARNING</u></b></p> <p>Wear heavy leather-palmed work gloves when handling cable. Cables can become frayed or contain broken wires. Never let moving cable slide through hands, even when wearing gloves. Failure to comply may result in injury to personnel.</p>					
				1. Check MHC (3) for corrosion, cracks, and security of mounting hardware.	MHC is damaged or not securely mounted.
 <p style="text-align: right;">BD99BX4 -</p>					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 21. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1089A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Monthly		Material Handling Crane (MHC) - Continued	2. Pay out MHC cable (4) completely (WP 0043 00) and inspect for kinks, sharp bends, abrasions, and broken wires.	<p>MHC cable is damaged or excessively worn.</p> <p>Six randomly distributed broken wires in any 6 in. (15 cm) section of cable or three broken wires in one bundle (breaks 3, 4, 5) in a 6 in. (15 cm) section.</p> <p>Kinking, crushing, or any other damage resulting in distortion of cable structure.</p>

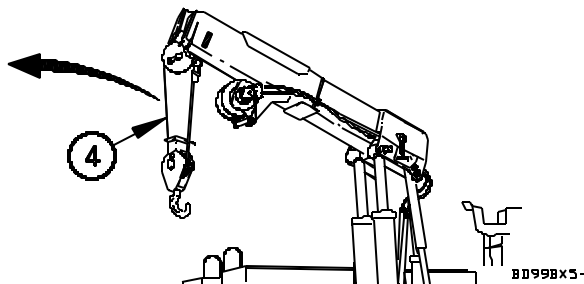
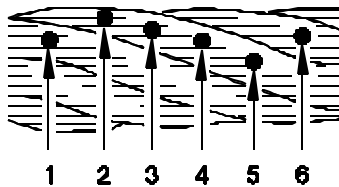




**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 21. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1089A1 - Continued.

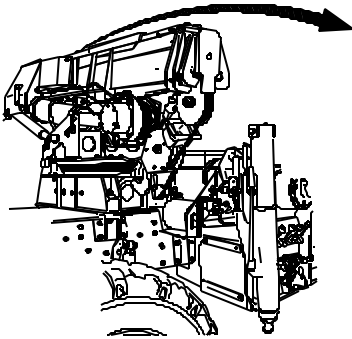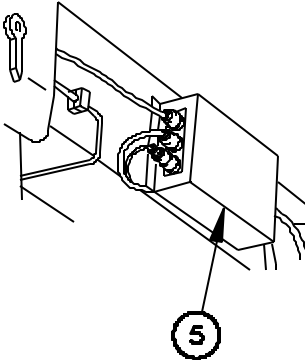ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Monthly		Material Handling Crane (MHC) - Continued	<p>3. Check security of electrical connectors on overload shutdown box (5).</p> <p>4. Inspect electrical wiring for cracking, fraying and excessive wear.</p>	Wiring is frayed, cracked, or excessively worn.
 					
4	Monthly	0.1	Oil Can Points	<p>Lubricate all oil can points with OE/HDO specified for ambient temperature. The operator/crew is responsible for lubricating the following points:</p> <p>1. Tool box latches and hinges</p>	

8D998X6-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**
**0103 00**

**Table 21. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1089A1 - Continued.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Monthly	0.1	Oil Can Points - Continued	2. M1089A1 MHC control lever pivot points on manual controls  3. M1089A1 MHC cable tie off point pin on hook assembly	
CAUTION					
Verify three screws securing thrust bearing are not missing or damaged. Failure to comply may result in damage to equipment.					
				4. Crossbar thrust bearing  5. Upper sheave of pay-out assemblies  6. Fairleads	Screws missing or damaged

DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Oil Can Points	As required	OE/HDO-10	OE/HDO-10	OEA

---


**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00**

**Before** PMCS Procedures for Model M1090A1

These illustrations will help you perform BEFORE vehicle PMCS. The callouts match PMCS item number/procedures.


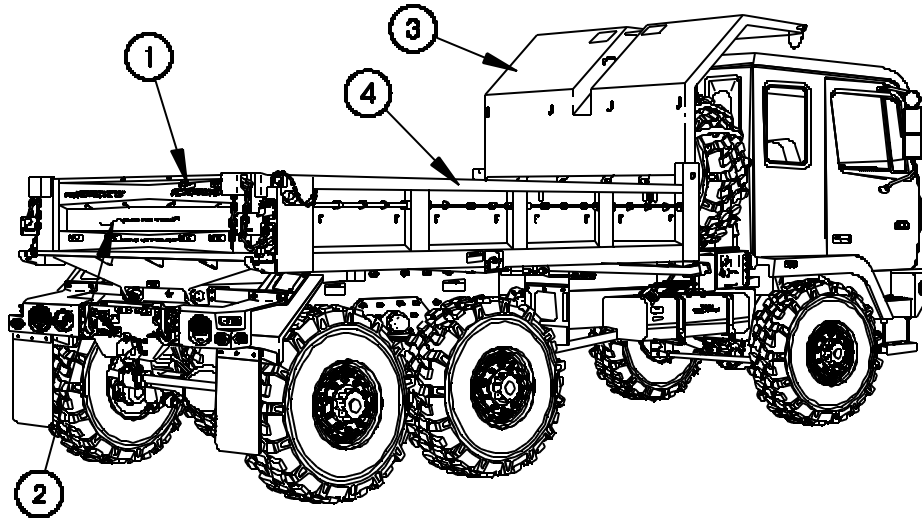


81998x7-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

**0103 00**

**Table 22. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1090A1.**

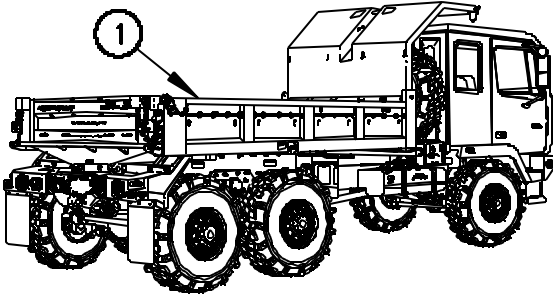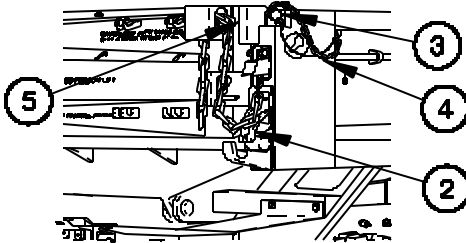ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Before		Dump Body	Check dump body (1) for obvious signs of damage.	
					
2	Before		Tailgate	<p>1. Check hinges (2) for damage.</p> <p>2. Check hinge pins (3) and hinge pin chains (4) for damage.</p> <p>3. Check that tailgate locks (5) securely in closed position.</p>	<p>Hinge is damaged.</p> <p>Hinge pins or hinge pin chains are missing or broken.</p> <p>Tailgate does not lock in the closed position.</p>
					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 22. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1090A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Before		Cab Protector	<ol style="list-style-type: none"> <li>1. Raise cab protector (6) (WP 0031 00).</li> <li>2. Ensure two pins (7) and two bolts (8) are present and securely lock cab protector in raised position.</li> <li>3. Check cab protector (6) for obvious signs of damage.</li> <li>4. Lower cab protector (6) (WP 0031 00) if not required for mission.</li> </ol>	One or more pin(s) or bolt(s) is missing.

The diagram illustrates the cab protector assembly. It shows a side view of the cab structure with the protector in the raised position. Callout 6 points to the main vertical bar of the protector. Callout 7 points to a pin that secures the protector to the cab frame. Callout 8 points to a bolt that also secures the protector. The diagram shows the protector is held in place by these pins and bolts, preventing it from swinging down.


8099810-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 22. Preventive Maintenance Checks and Services (PMCS) - Before -  
Model M1090A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
4	Before		Debris Cover	Check debris cover (9) for tears and ripped seams that would interfere with proper operation.	

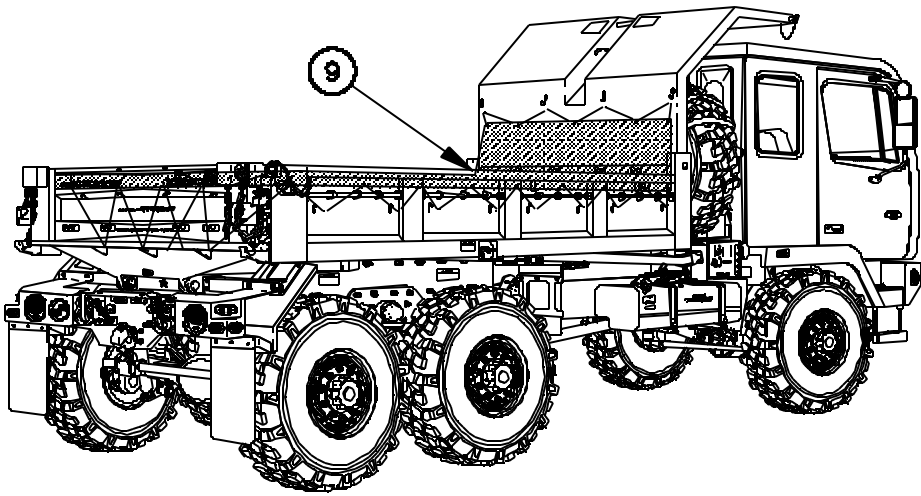

The diagram shows a side profile of a military truck with a large debris cover on its cargo bed. A circular callout with the number '9' inside has an arrow pointing to the debris cover. The truck has multiple large, treaded tires and a heavy-duty frame.


BD99BY1-

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**During** PMCS Procedures for Model M1090A1

These illustrations will help you perform DURING vehicle PMCS. The callouts match PMCS item number/procedures.

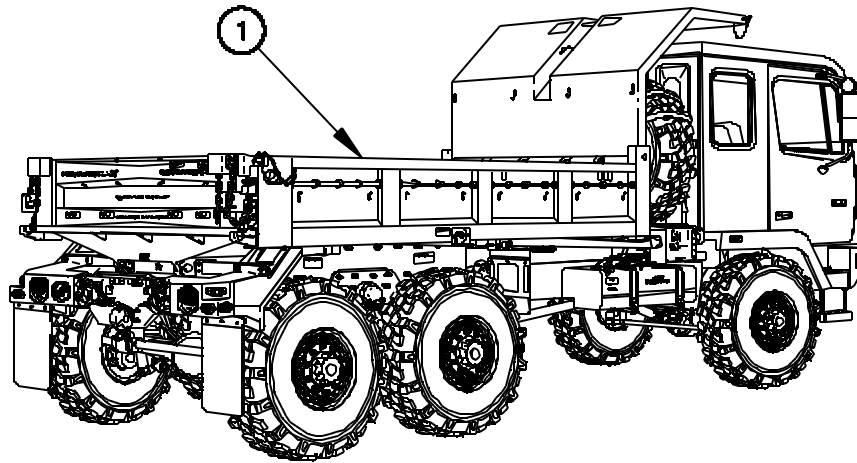


8099812-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

**Table 23. Preventive Maintenance Checks and Services (PMCS) -During - Model  
M1090A1.**

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	During		Dump Body and Tailgate Operation	1. Raise dump body (1) (WP 0031 00).  2. Release tailgate (2) (WP 0031 00).  3. Lower dump body (1) (WP 0031 00).	Dump body does not raise.  Tailgate does not release.  Dump body does not lower.

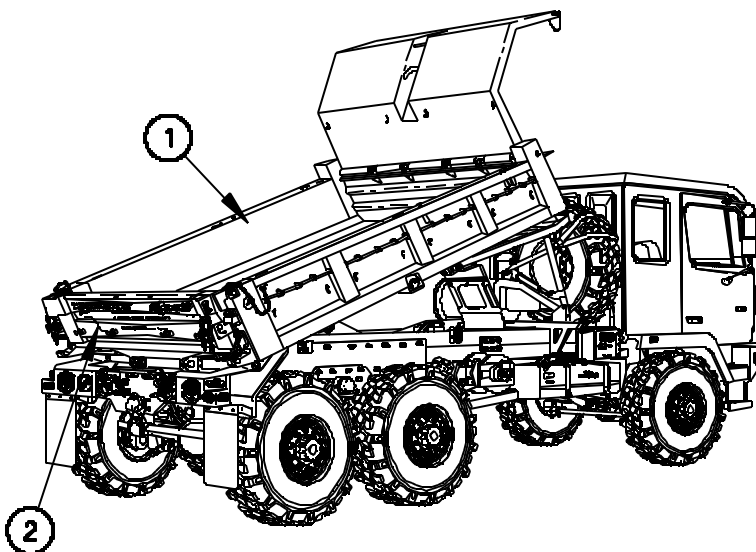

80998Y3-




---

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

---

**0103 00****Weekly** PMCS Procedures for Model M1090A1

These illustrations will help you perform WEEKLY vehicle PMCS. The callouts match PMCS item number/procedures.


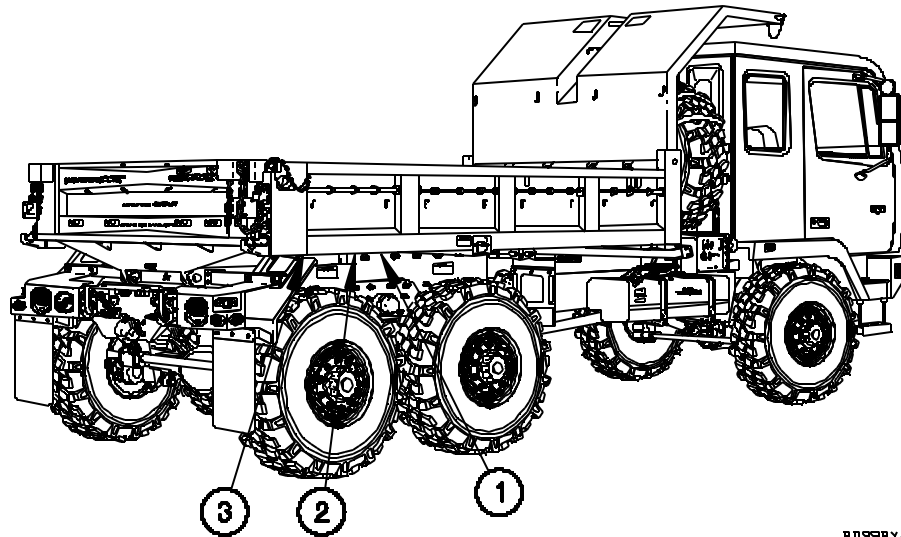


81998Y4 -

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 24. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Model M1090A1.

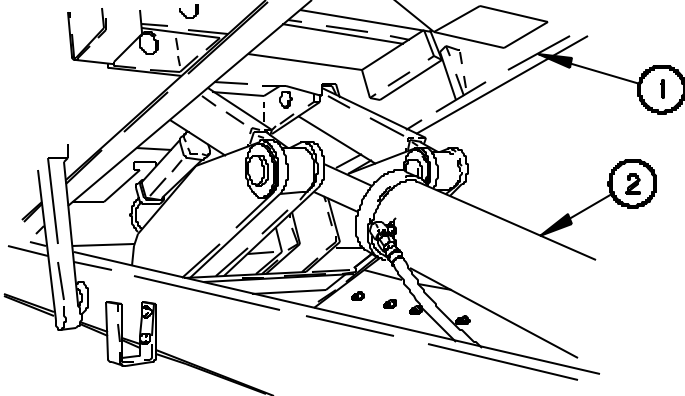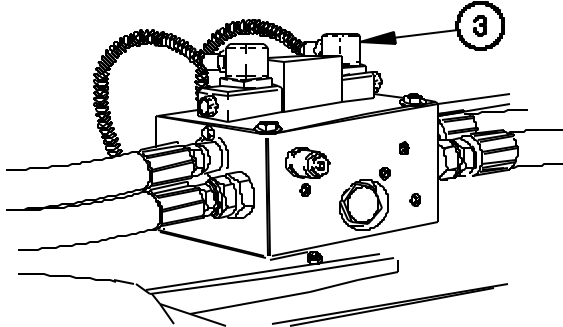ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Weekly		Dump Body Lift Cylinder	1. Raise dump body (1) (WP 0031 00).  2. Check lift cylinder (2) for obvious damage and leaks.	Class III leak is evident or lift cylinder is damaged.
					
2	Weekly		Control Valve	Check control valve (3) for obvious damage.	Control valve is damaged.
					

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 24. Preventive Maintenance Checks and Services (PMCS) - Weekly -  
Model M1090A1 - Continued.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
3	Weekly		Tailgate Pneumatic Cylinder	Check pneumatic cylinder (4) for obvious damage.	Pneumatic cylinder is damaged.


BD99BY7-

# **M1083A1 SERIES PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued**


0103 00

## **Monthly PMCS Procedures for Model M1090A1**

These illustrations will help you perform MONTHLY vehicle PMCS. The callouts match PMCS item number/procedures.

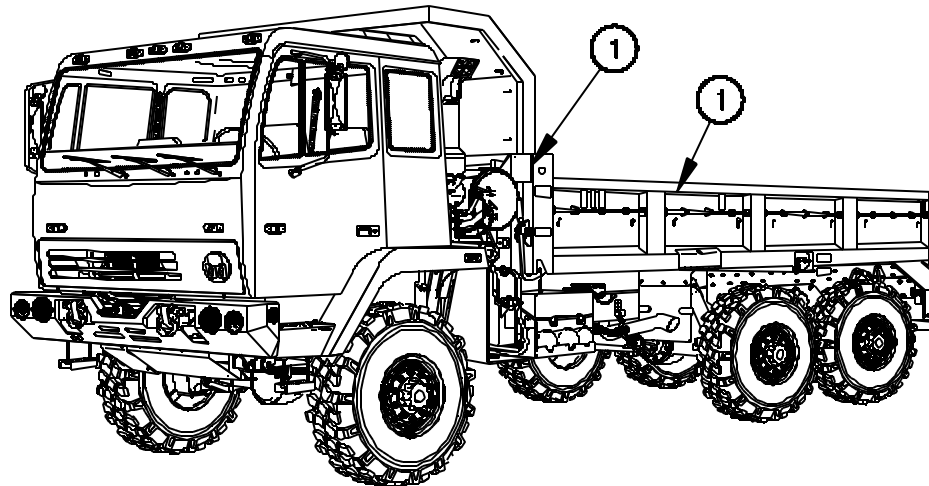

8099818-

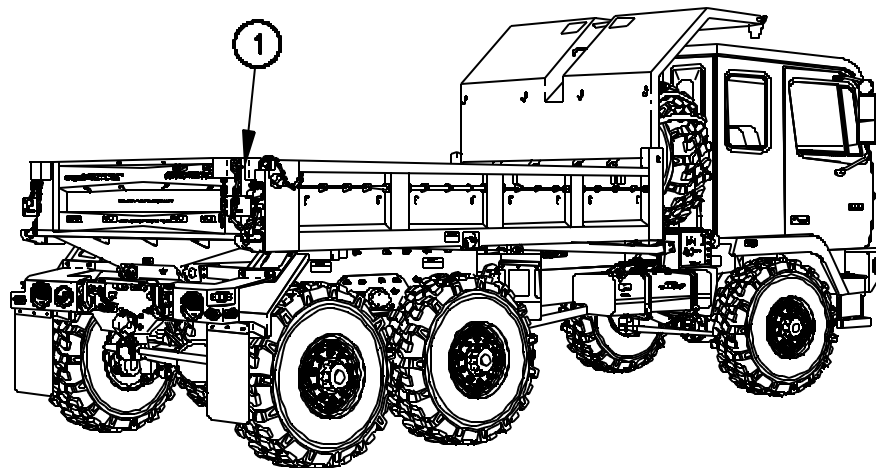

8099819-

**M1083A1 SERIES PREVENTIVE MAINTENANCE  
CHECKS AND SERVICES (PMCS) - Continued**

0103 00

Table 25. Preventive Maintenance Checks and Services (PMCS) - Monthly -  
Model M1090A1.

ITEM NO.	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/ AVAILABLE IF:
1	Monthly	0.1	Oil Can Points	<p>Lubricate all oil can points with OE/HDO specified for ambient temperature. The operator/crew is responsible for lubricating the following points:</p> <p>1. Cab protector locking pins and hinge pins</p> <p>2. Tailgate release handle linkage</p> <p>3. Tailgate post hinge assemblies</p> <p>4. Tool box latches and hinges</p> <p>5. Dump body tiedown rings.</p>	

DESCRIPTION	CAPACITY	EXPECTED TEMPERATURES		
		Above 40°F (Above 4°C)	40° to -15°F (4° to -26°C)	-15° to -50°F (-26° to -46°C)
Oil Can Points	As required	OE/HDO-10	OE/HDO-10	OEA



---

**MAINTENANCE INTRODUCTION**

---

**0104 00**

The following work packages (WP 0106 00 through WP 0113 00) contain instructions for servicing, installing, and removing components at the operator maintenance level.





**CHANGING TIRE****0105 00****THIS WORK PACKAGE COVERS:**

Lower Spare Tire, Tire Removal, Tire Installation, Tire Stowage, and Operational Check

**INITIAL SETUP:****Maintenance Level**

Operator

**Tools and Special Tools**

Jack, Hydraulic (Item 33, Table 2, WP 0117 00)

Wrench, Adjustable (Item 49, WP 0117 00)

Wrench, Socket (Item 55, Table 2, WP 0117 00)

Jack Adapter (Item 32, Table 2, WP 0012 00)

Bar, Socket Wrench Handle (Item 4, Table 2, WP 0117 00)

**Equipment Conditions**

Vehicle parked on level ground.

Engine shut down (WP 0018 00).

Wheels chocked (WP 0018 00).

Cab raised (WP 0021 00).

**Material/Parts**

Gloves, Leather (WP 0118 00)

**Personnel Required**

Two

**References**

WP 0044 00


**GENERAL**

This work package contains information and instructions to change the tire on the M1083A1 series vehicle.

**LOWER SPARE TIRE****WARNING**


**Ensure vehicle is parked on level ground before changing flat tire. Vehicle may roll. Failure to comply may result in serious injury or death to personnel.**

1. Release latch (1) on ratchet (2).

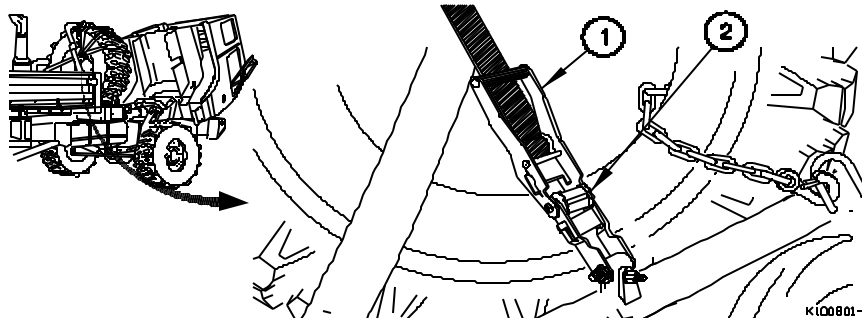

**CHANGING TIRE-Continued****0105 00****LOWER SPARE TIRE - Continued**

2. Lift ratchet (2) and release strap (3).
3. Remove strap (3) from ratchet (2).

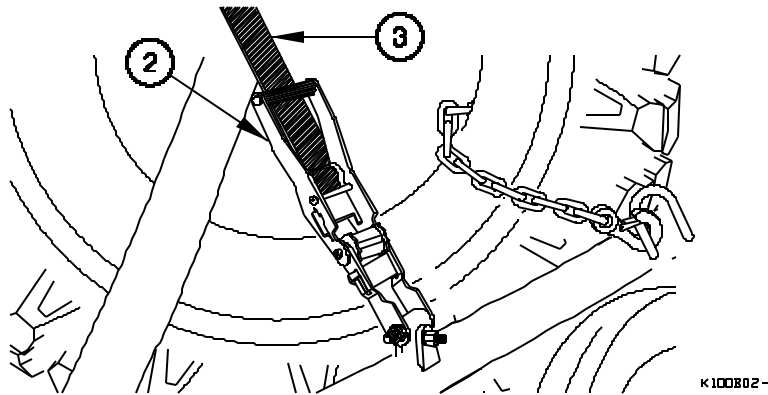


4. Disconnect safety chain (4) from spare tire retainer (5).

**CAUTION**

Ratchet must be in the down position before cab is lowered. Failure to comply may result in damage to equipment.

5. Place ratchet (2) in down position.

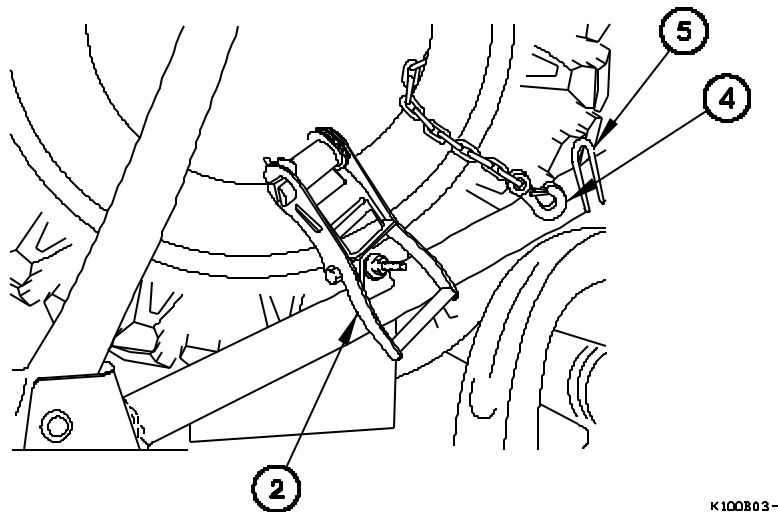

**CHANGING TIRE-Continued****0105 00****LOWER SPARE TIRE - Continued**

6. Remove strap (3) and safety chain (4) from spare tire retainer (5).


**CAUTION**

Cab must remain raised to remove spare tire from M1089A1. Failure to comply may result in damage to equipment.

**NOTE**


Perform step 7 for all models except M1089A1.

7. Lower cab (WP 0021 00).

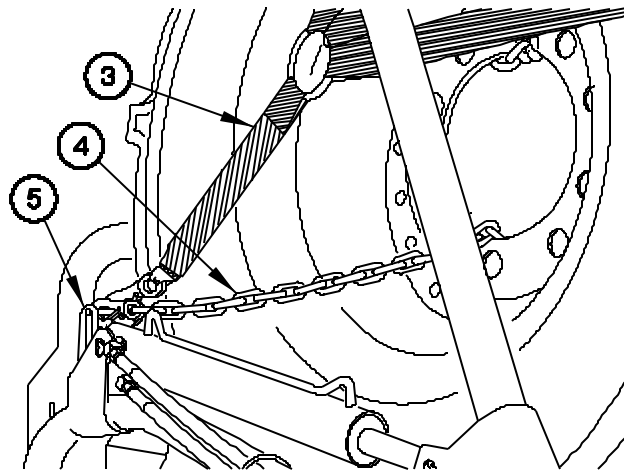

K100804-

8. Position SPARE TIRE knob (6) to the LOWER.
9. Position FUNCTION SELECT knob (7) to the SPARE TIRE.

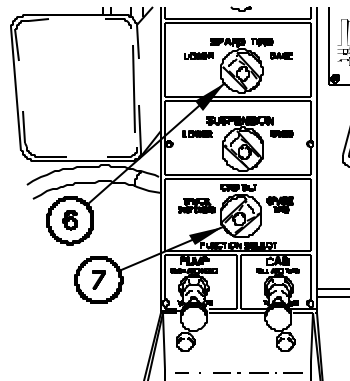

K100805-

**LOWER SPARE TIRE - Continued****WARNING**

Tire weighs approximately 350 lbs (159 kgs). If treads of tire catch on TOOL BOX during lowering, raise tire and pull tire away from TOOL BOX and continue lowering. Use extreme care when handling tire. Failure to comply may result in injury to personnel.


**CAUTION**

Use caution when lowering tire to prevent damage to Central Tire Inflation System (CTIS) wheel valve. Failure to comply may result in damage to equipment.

**NOTE**


Use back-up hydraulic pump (WP 0044 00) if temperature is below -25° F (-32° C) or if pressing PUMP knob does not accomplish step 10.

10. Press and hold PUMP knob (8) to lower spare tire (9) to ground.

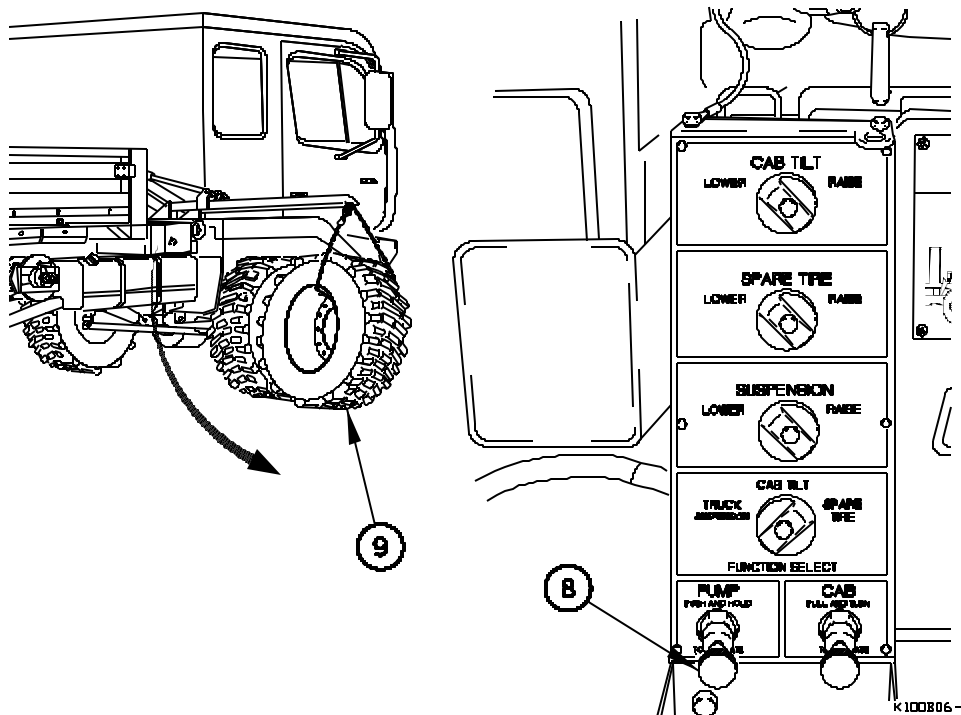

**CHANGING TIRE-Continued****0105 00****LOWER SPARE TIRE - Continued**

11. Disconnect one end of chain (10) from spare tire retainer lift arm (11).
12. Pull chain (10) through hole in spare tire (9).
13. Hook chain (10) to spare tire retainer lift arm (11).

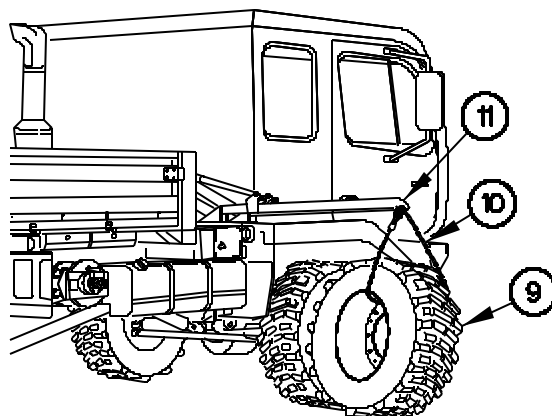


K100807-

**NOTE**

Perform steps 14 through 16 for M1089A1.


14. Turn SPARE TIRE knob (6) to the RAISE position.
15. Press and hold PUMP knob (8) to raise spare tire retainer lift arm (11) to the vertical position.
16. Lower cab (WP 0021 00).

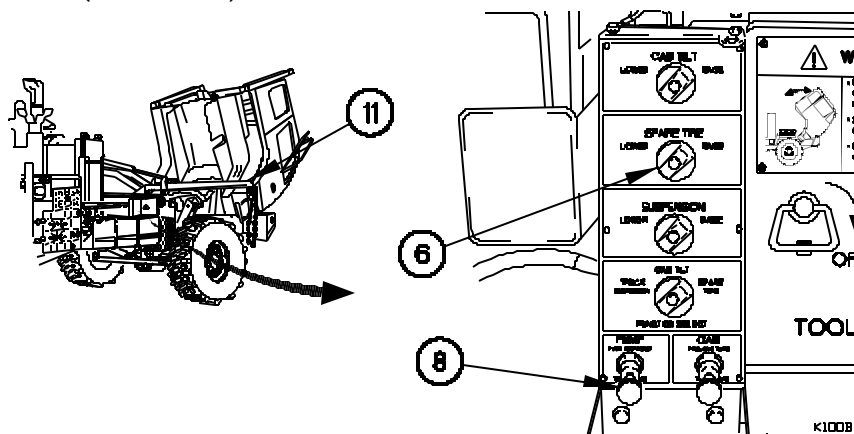

K100808-

**CHANGING TIRE-Continued****0105 00****LOWER SPARE TIRE - Continued**


17. Remove nut (12), two washers (13), and bolt (14) from CTIS hose (15).

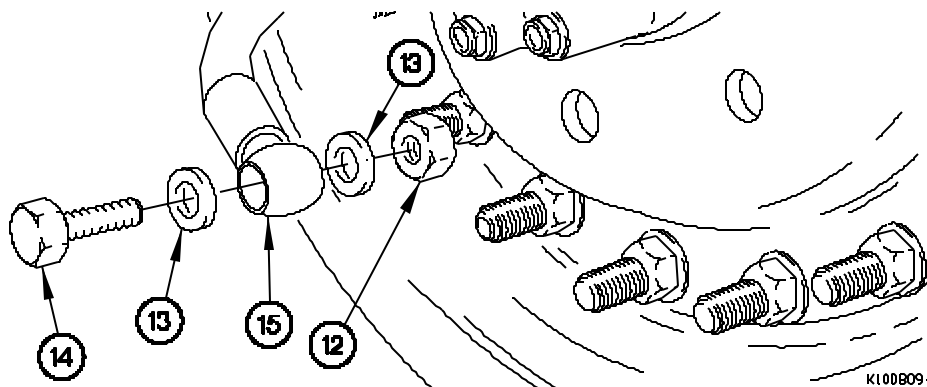**TIRE REMOVAL****WARNING**

Place hydraulic jack on flat surface. Do not allow personnel under vehicle when jacking. Failure to comply may result in serious injury or death to personnel.

DO NOT attempt to use hydraulic jack on rear axles without jack adapter installed. Failure to comply may result in serious injury or death to personnel.


1. Remove hydraulic jack (16), handle (17), and jack adapter (18) from tool box.

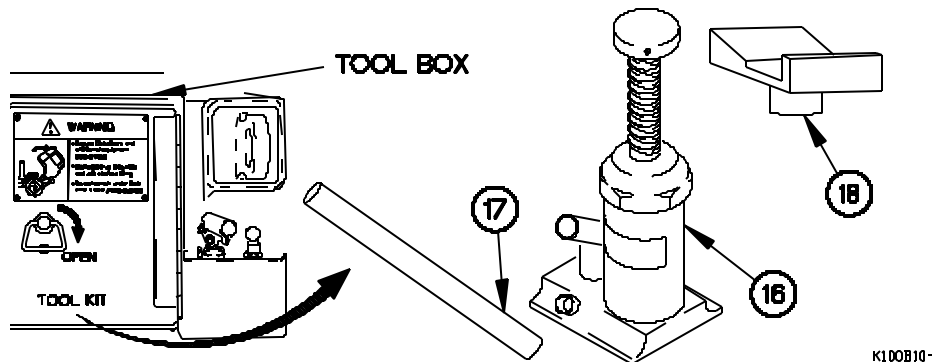

**TIRE REMOVAL - Continued****NOTE**

Perform steps 2 and 3 when removing front tire.

2. Position hydraulic jack (16) under saddle (19) of leaf spring (20).
3. Unscrew jack ram (21) until it touches saddle (19).

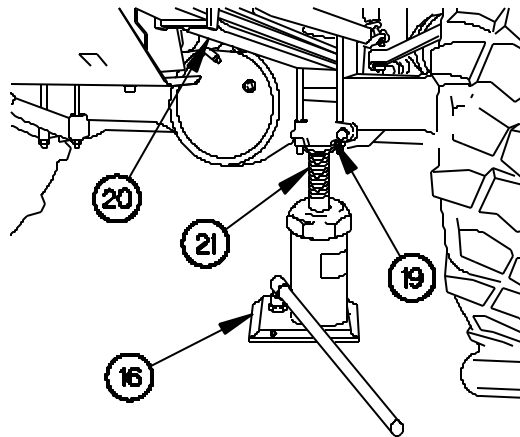


K100B11 -

**NOTE**

Perform steps 4 and 5 when removing rear tire.

4. Position hydraulic jack (16) and jack adapter (18) under axle (22).
5. Unscrew jack ram (21) until jack adapter (18) touches axle (22).

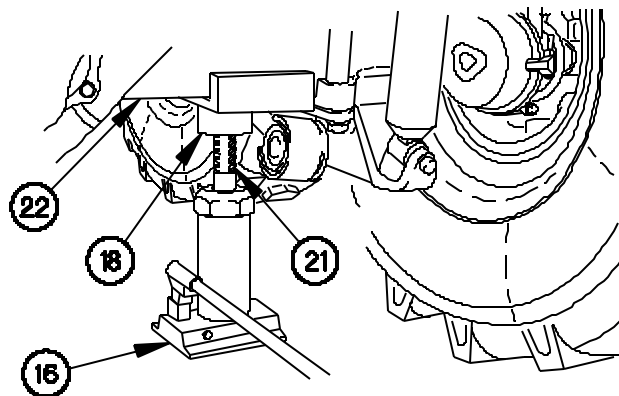


K100B12 -

**TIRE REMOVAL - Continued****NOTE**

Perform the following step on vehicles equipped with rim covers.

6. Remove four bolts (23), washers (24), and rim cover (25) from wheel (26).

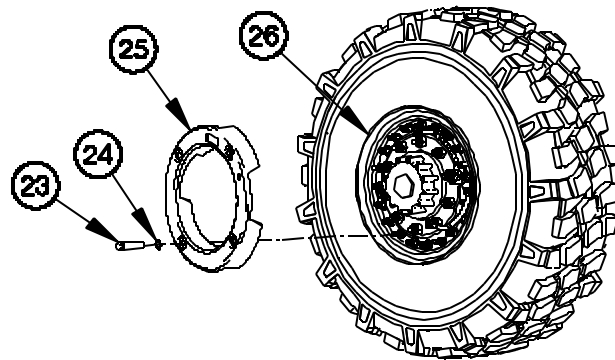


K100831-

**NOTE**

Both front and rear tires are removed the same way. Rear tire is shown.

Air will not escape when CTIS hose is removed from hollow wheel stud.

7. Remove banjo bolt (27), two washers (28), and CTIS hose (29) from hollow wheel stud (30).

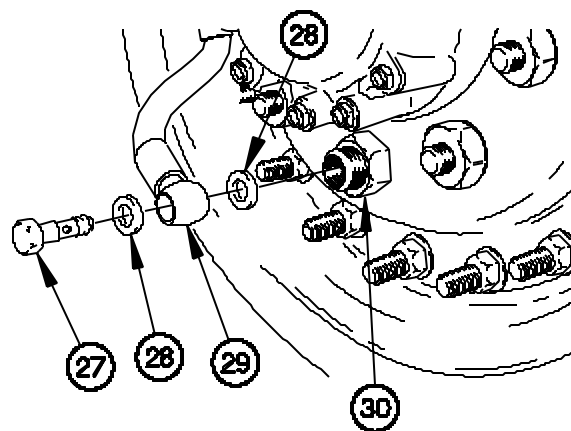

K100813-




**TIRE REMOVAL - Continued****NOTE**

Studs and lugnuts on left side of vehicle have left-hand threads. Turn lugnuts to right to loosen, and to left to tighten.

Studs and lugnuts on right side of vehicle have right-hand threads. Turn lugnuts to left to loosen, and to right to tighten.

8. Loosen 10 lugnuts (31).

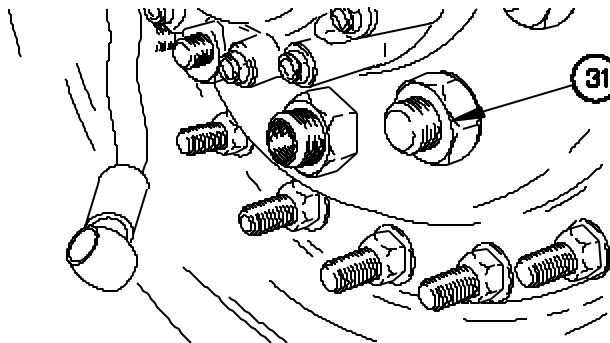


K100814-

**TIRE REMOVAL - Continued****NOTE**

Both intermediate and rear axles are jacked up the same way. Rear axle is shown.

9. Raise hydraulic jack (16) until tire (32) is off ground.

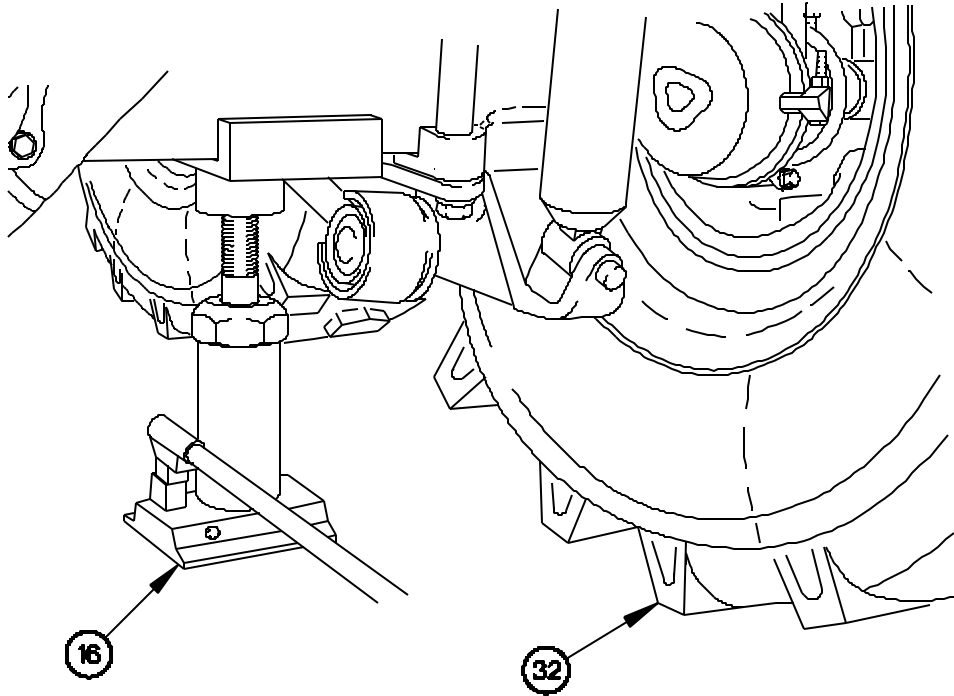

K100B15-

**TIRE REMOVAL - Continued****WARNING**

Tire weighs approximately 350 lbs (159 kgs). Use extreme care when handling tire. Failure to comply may result in injury to personnel.

10. Remove 10 lugnuts (31) from studs (33).


**CAUTION**

Do not drag tire across studs during removal. Failure to comply may result in damage to equipment.

**NOTE**

Step 11 requires the aid of an assistant.

11. Remove tire (32) from studs (33).

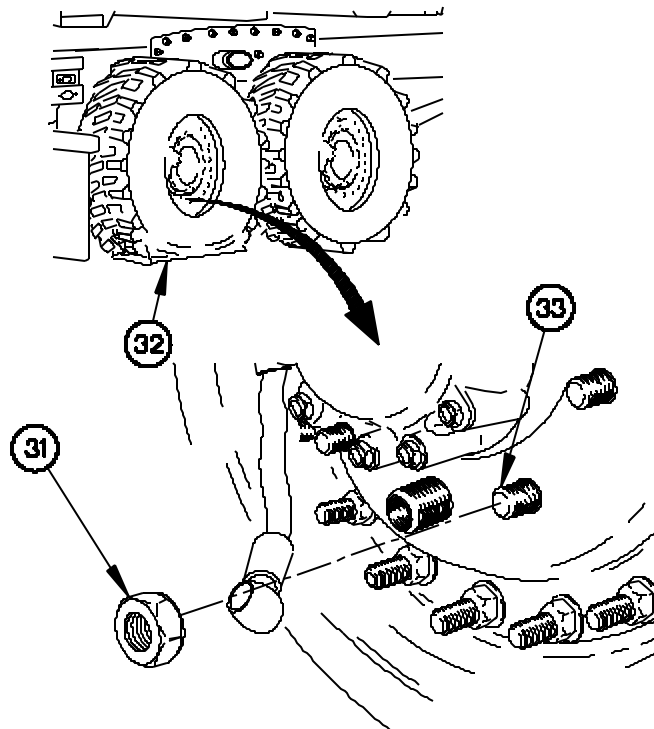

K100816-

**TIRE INSTALLATION****WARNING**

Tire weighs approximately 350 lbs (159 kgs). Use extreme care when handling tire. Failure to comply may result in injury to personnel.

**NOTE**

Steps 1 through 5 require the aid of an assistant.


Front and rear tires are installed the same way. Rear tire installation shown.

1. Roll spare tire (9) up to hub (34).
2. Align CTIS hose (15) with hollow wheel stud (30).
3. Align 10 holes (35) in wheel (36) with studs (33).

**CAUTION**

Do not drag tire across studs or crossthread lugnuts. Failure to comply may result in damage to equipment.

4. Install wheel (36) on studs (29).

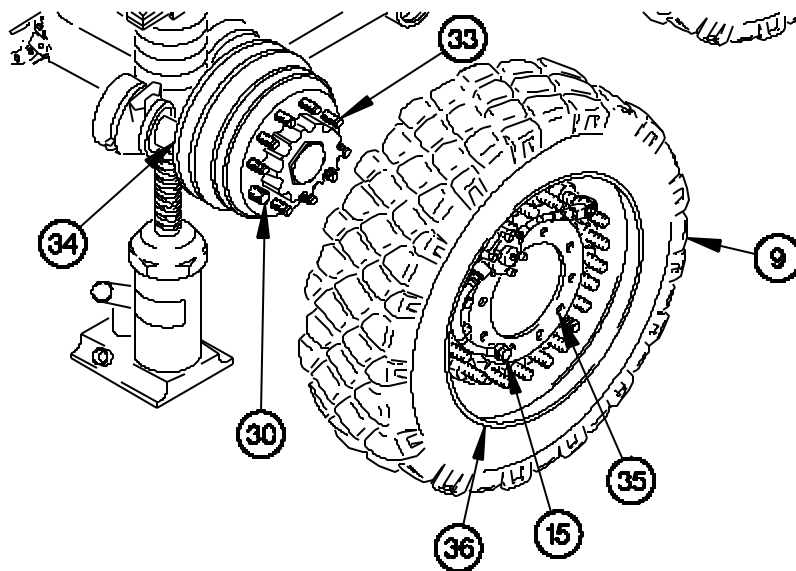

K100817-

**WARNING**


Notify Field Maintenance that lugnuts must be tightened to 415-475 lb-ft (563-644 N·m) as soon as possible. Wheel may come loose if lugnuts are not tightened to proper torque. Failure to comply may result in serious injury or death to personnel.

**NOTE**

Studs and lugnuts on left side of vehicle have left-hand threads. Turn lugnuts to right to loosen, and to left to tighten.

Studs and lugnuts on right side of vehicle have right-hand threads. Turn lugnuts to left to loosen, and to right to tighten.


5. Install 10 lugnuts (31) on studs (33) in sequence shown.

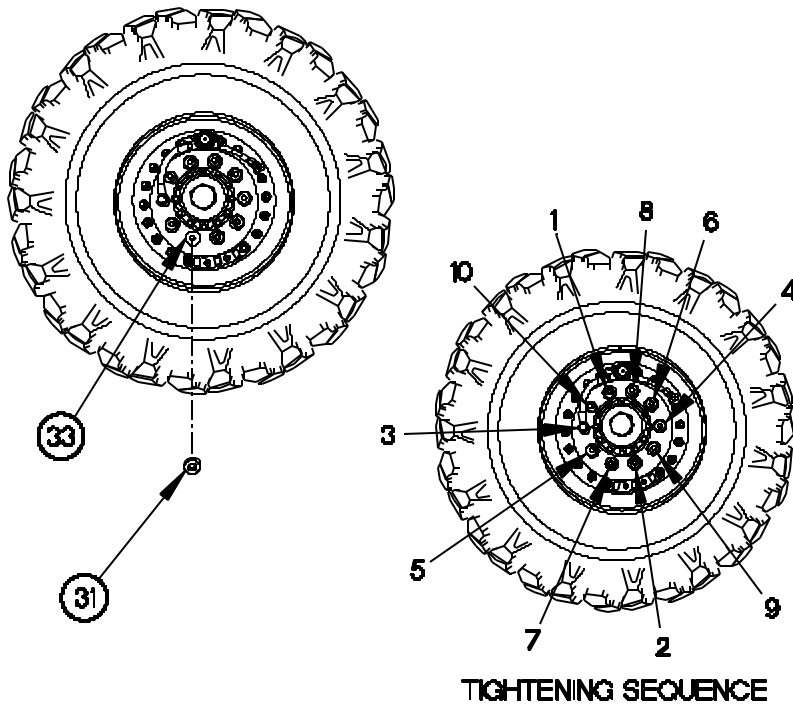

K100818-


**CHANGING TIRE-Continued****0105 00****TIRE INSTALLATION - Continued**

6. Lower vehicle to ground with hydraulic jack (16).
7. Remove hydraulic jack (16), handle (17), and jack adapter (18) from vehicle.

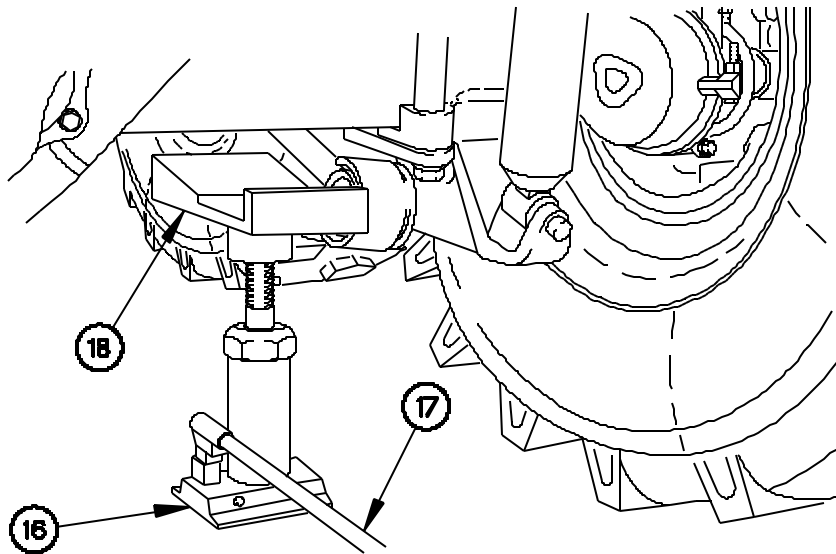

K100819-

8. Stow hydraulic jack (16), handle (17), and jack adapter (18) in tool box.

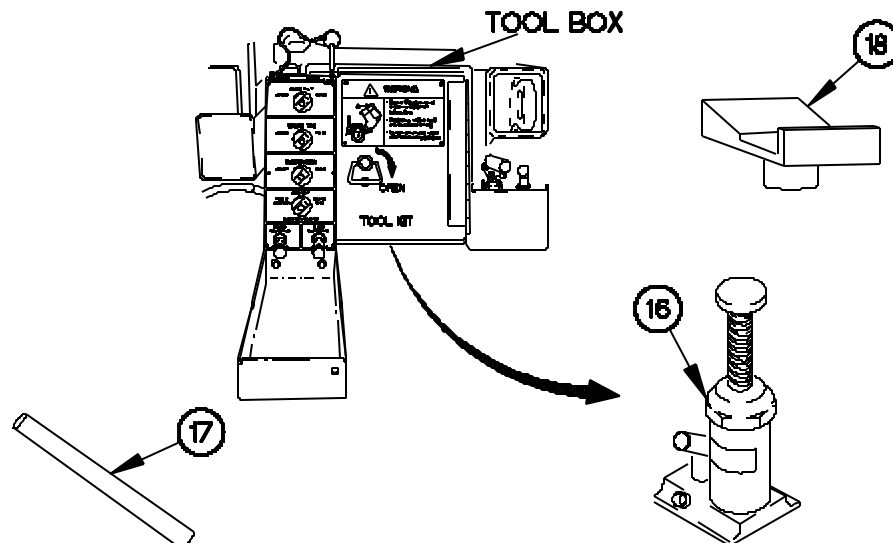


K100820-

**TIRE INSTALLATION - Continued****CAUTION**

Do not overtighten banjo bolt when installing CTIS hose on hollow wheel stud. Failure to comply may result in damage to equipment.

9. Install CTIS hose (29) on hollow wheel stud (30) with two washers (28) and banjo bolt (27).

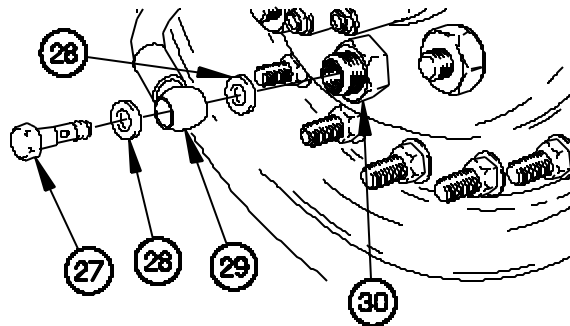


K100821-

**NOTE**

Slotted hole in rim cover is aligned with pressure valve extension.

- 9.1 Position rim cover (37) on wheel (38) with four washers (39) and bolts (40).
- 9.2 Notify Field Maintenance to torque four rim cover bolts to 71-95 lb-ft (96-128 N•m).

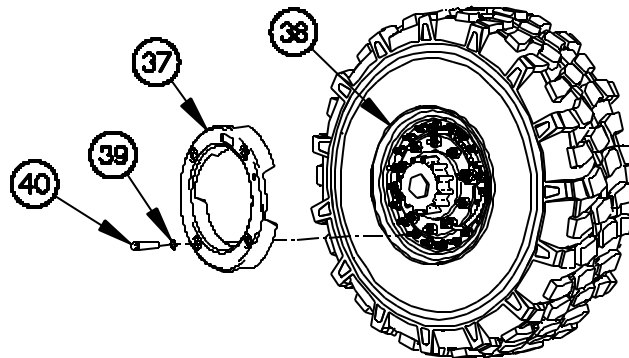


K100832-

**TIRE STOWAGE****WARNING**

Handle tire with care. Tire may have exposed broken metal cords or sharp debris in it. Failure to comply may result in injury to personnel.

Tire weighs approximately 350 lbs (159 kgs). Use care when handling tire. Failure to comply may result in injury to personnel.

1. Install bolt (14), two washers (13) and nut (12) in CTIS hose (15).

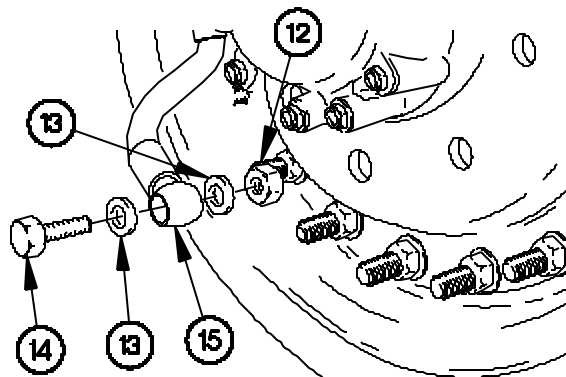


K100822-



**TIRE STOWAGE - Continued****NOTE**

Perform steps 2 through 5 for M1089A1.

2. Raise cab (WP 0019 00).
3. Position SPARE TIRE knob (6) to LOWER.
4. Position FUNCTION SELECT knob (7) to SPARE TIRE.
5. Press and hold PUMP knob (8) to lower spare tire retainer lift arm (11).

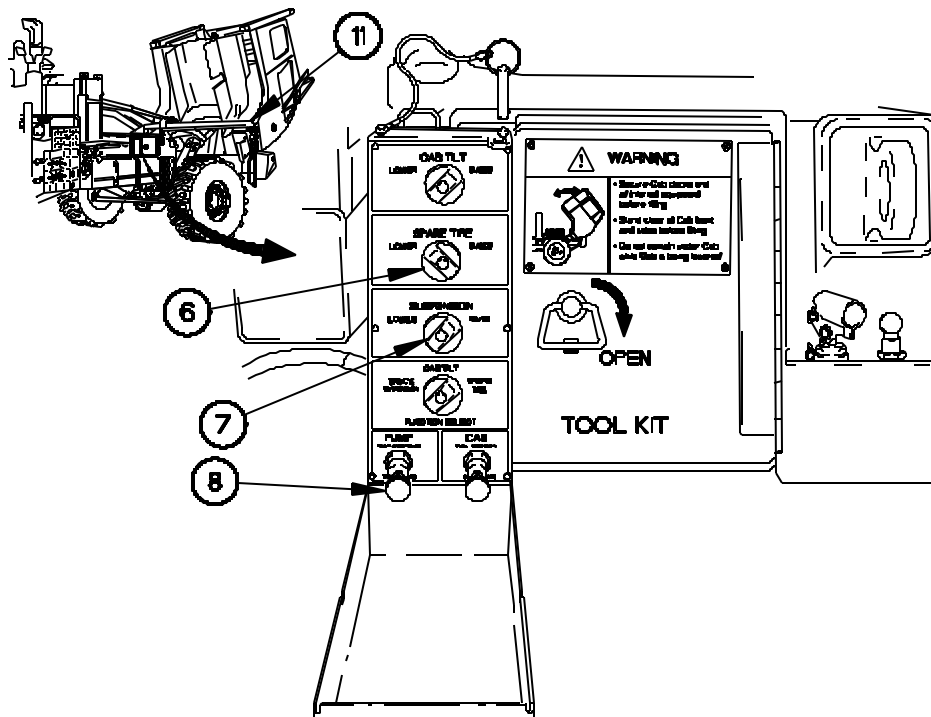

K100B23-

**TIRE STOWAGE - Continued**


6. Roll tire (32) under center of spare tire retainer lift arm (11).
7. Disconnect one end of chain (10) from spare tire retainer lift arm (11).

**NOTE**

CTIS valve on tire must be positioned to the front of vehicle and at the six o'clock position.

Tire should be straight up and down when installing chain through lug hole.

8. Route chain (10) through uppermost lug hole (35) in wheel (36).
9. Connect chain (10) to spare tire retainer lift arm (11).

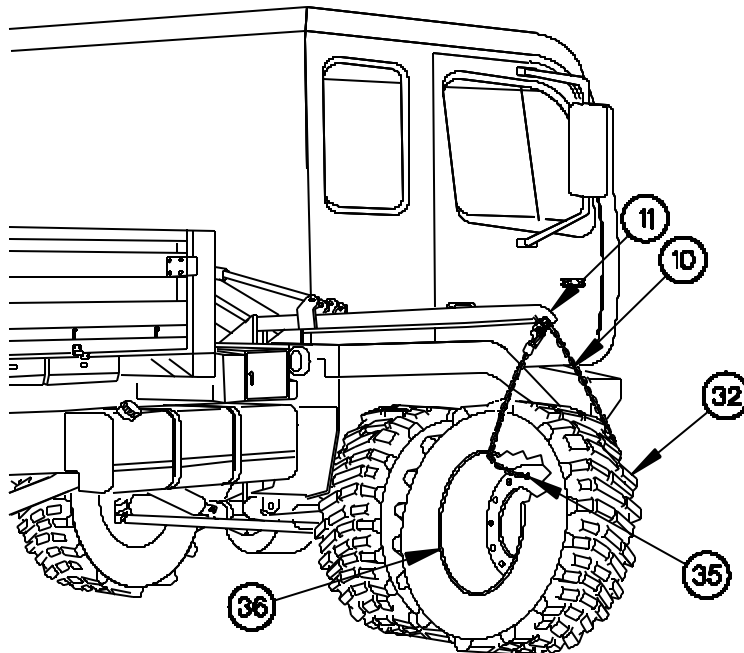

K100B24 -


**TIRE STOWAGE - Continued****CAUTION**

Use caution when raising tire to prevent damage to CTIS valve. Failure to comply may result in damage to equipment.

**NOTE**

Perform step 10 on all models except M1089A1.

10. Raise cab (WP 0019 00).
11. Position SPARE TIRE knob (6) to RAISE.
12. Position FUNCTION SELECT knob (7) to SPARE TIRE.

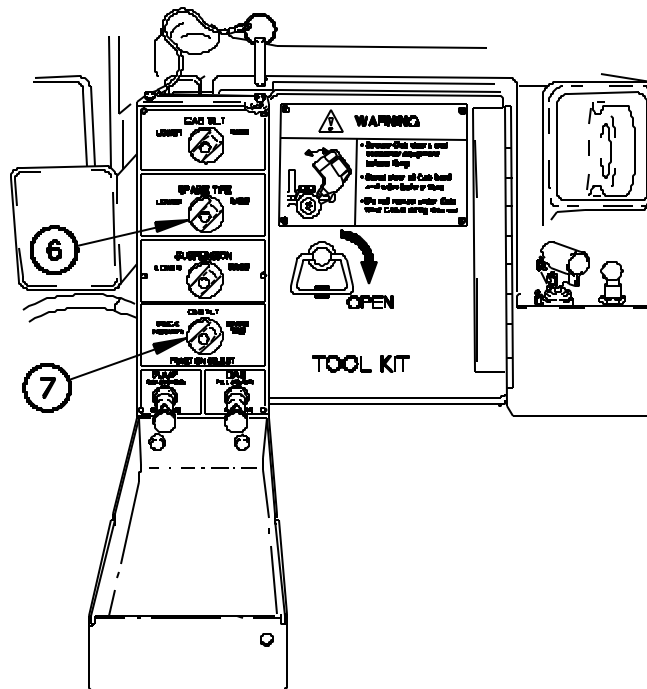

K100825-


**TIRE STOWAGE - Continued****CAUTION**

Tire must be stowed against back frame of spare tire retainer. Failure to comply may result in damage to equipment.

**NOTE**

Use back-up hydraulic pump (WP 0042 00) if temperature is below -25° F (-32° C) or if pressing PUMP knob does not accomplish step 13.

13. Press and hold PUMP knob (8) to raise spare tire retainer lift arm (11) to the stowed position.

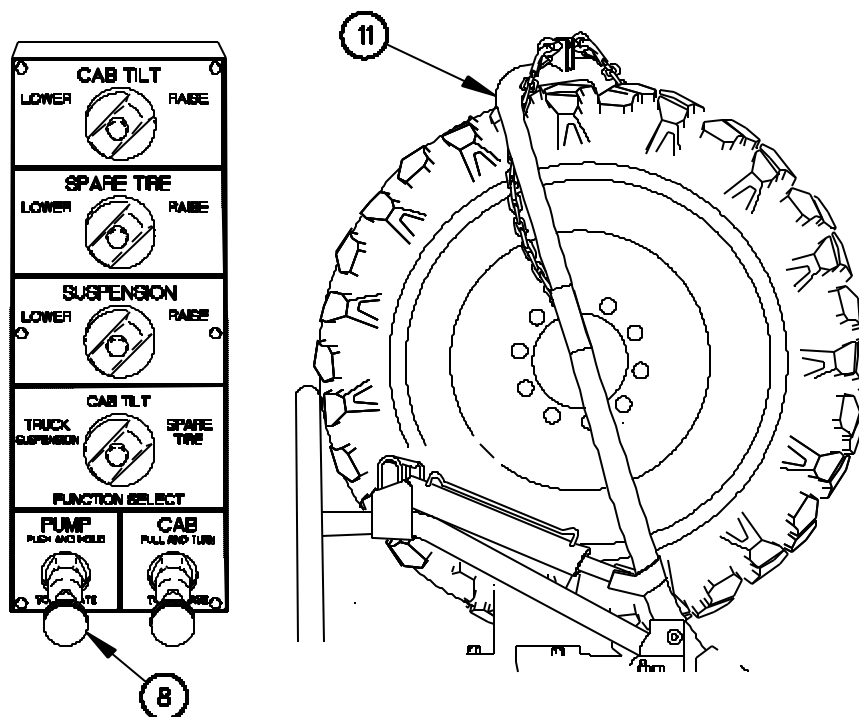


K100826-

**TIRE STOWAGE - Continued****CAUTION**

Tread engagers must be in slots of tire treads. A loose strap will allow tire to move causing chafing of strap and possible loss of tire. Failure to comply may result in damage to equipment.

Tread engagers must not be snug at installation for proper fit, but strap must have a tight fit. Failure to comply may result in damage to equipment.

14. Position tread engager (37) in third tread (38), tread engager (39) in sixth tread (40), and tread engager (41) in ninth tread (42).
15. Connect strap (3) to spare tire retainer (5).

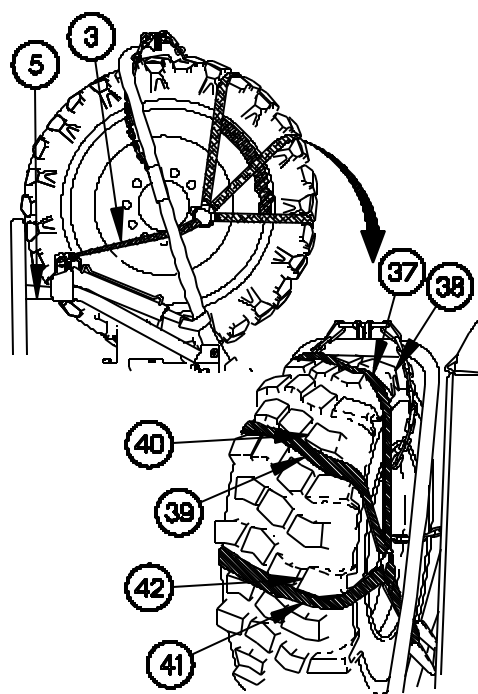

K100827-

**TIRE STOWAGE - Continued**


16. Feed other end of strap (3) through ratchet (2).

**CAUTION**

Ensure that strap is wrapped around ratchet at least three complete wraps after tightening. Failure to comply may result in damage to equipment.

17. Tighten strap (3) around tire (32) with ratchet (2).

18. Place ratchet handle (43) in down position.

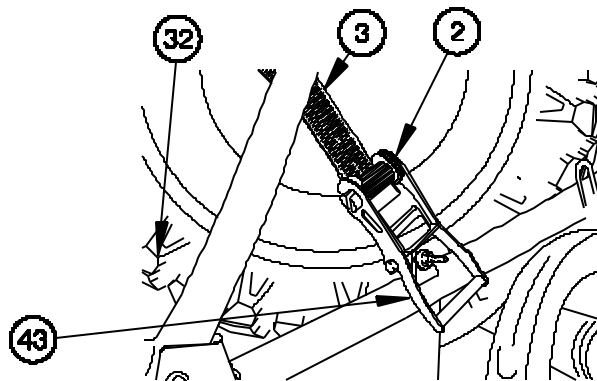


K100828-

**CAUTION**

Ensure that safety chain is loose. If safety chain is tight then strap is not tight enough. Failure to comply may result in damage to equipment.


19. Connect safety chain (4) to spare tire retainer (5).

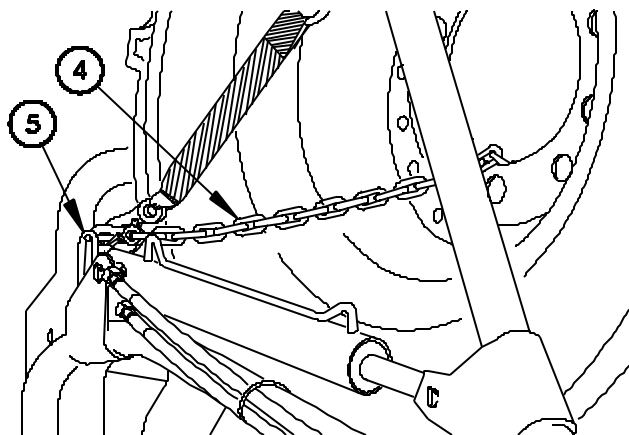

K100829-

**TIRE STOWAGE - Continued**

20. Route other end of safety chain (4) through tire (32) and connect to spare tire retainer (5).
21. Lower cab (WP 0019 00).

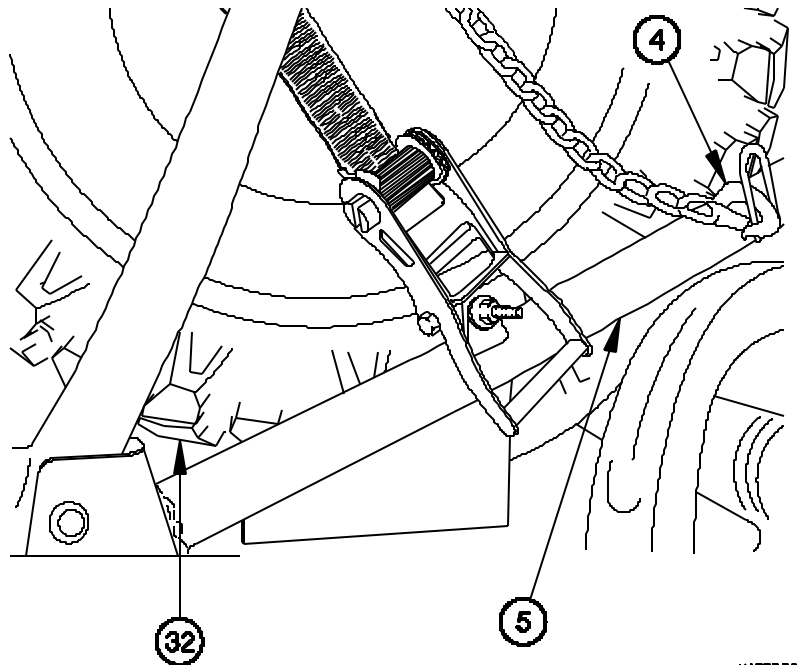

K100830-

**OPERATIONAL CHECK**

1. Remove wheel chocks (WP 0018 00).
2. Notify Field Maintenance that lugnuts need to be tightened to 415-475 lb-ft (563-644 N·m).
3. Notify Field Maintenance that flat tire needs to be repaired/replaced.
4. If vehicle is S/N 11,438 to 99,999 notify Field Maintenance if flat tire was replaced on front of vehicle that kneeling valve must be installed.
5. Notify Field Maintenance that banjo bolts need to be tightened to 22-28 lb-ft (30-52 N·m).

**END OF WORK PACKAGE.**





**SERVICING TIRES****0106 00****THIS WORK PACKAGE COVERS:**

Checking Tire Pressures, Manually Inflating Tires

**INITIAL SETUP:****Maintenance Level**

Operator

**Tools and Special Tools**Inflator-Gage, Tire w/Hose (Item 31,  
Table 2, WP 0117 00)**Equipment Conditions**

Engine shut down (WP 0018 00).

**Personnel Required**

Two

**GENERAL**

This work package contains information and instructions to service the tires for the M1083A1 series vehicle.

**WARNING**

Ensure tires have correct tire pressure (within  $\pm 3$  psi (21 kPa)) for terrain conditions and driving speed (refer to Table 1 or Table 2). Failure to comply may result in serious injury or death to personnel.

**CHECKING TIRE PRESSURES**

Check tire pressures with tire inflator-gage.

**Table 1. Cold Tire Inflation Pressures and Restrictions for M1083A1, M1084A1, M1085A1, M1086A1, M1090A1, M1092A1, M1093A1, M1094A1, and M1096A1 Models.**

Operating Mode	Maximum Vehicle Speed	Operating Time Restriction	Tire Pressure
Highway	55 mph (88 km/h)	NONE	60 psi (414 kPa)
Cross-Country	40 mph (64 km/h)	NONE	37 psi (255 kPa)
Sand	12 mph (19 km/h)	NONE	22 psi (152 kPa)
Emergency	5 mph (8 km/h)	10 MINUTES	16 psi (110 kPa)

**SERVICING TIRES - Continued****0106 00**

**Table 2. Cold Tire Inflation Pressures and Restrictions for M1088A1 and M1089A1 Models.**

Operating Mode	Maximum Vehicle Speed	Operating Time Restriction	Tire Pressure
Highway	55 mph (88 km/h) (M1088A1) 40 mph (64 km/h) (M1089A1)	NONE	81 psi (558 kPa)
Cross-Country	40 mph (64 km/h)	NONE	54 psi (372 kPa)
Sand	12 mph (19 km/h)	NONE	32 psi (221 kPa)
Emergency	5 mph (8 km/h)	10 MINUTES	24 psi (165 kPa)

**MANUALLY INFLATING TIRES****WARNING**


Use caution when inflating tire. Over inflation may cause tire to blow apart. Failure to comply may result in serious injury or death to personnel or damage to equipment.

**NOTE**

If CTIS is not operating, tires may be inflated manually. Tires should be inflated when they are cool. Inflate to proper pressure for terrain conditions and driving speed. Refer to Table 1 or 2.


SERVICE or EMERGENCY gladhands at rear of vehicle are used to manually inflate tires.

1. Remove tire inflator-gage with hose (1) from tool box.

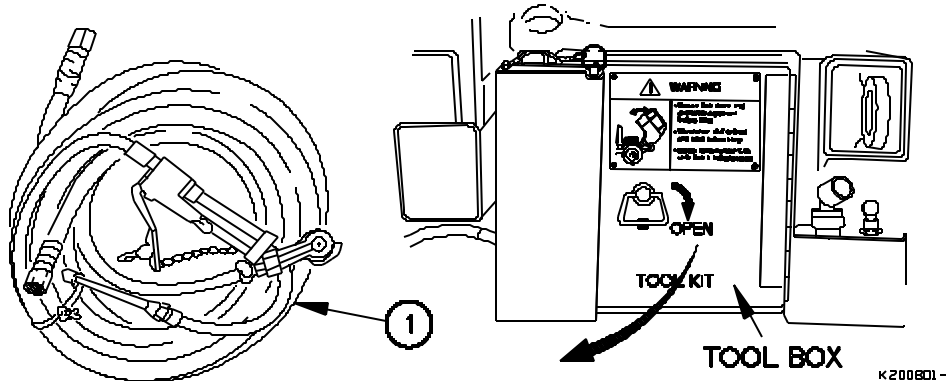


**SERVICING TIRES - Continued****0106 00****MANUALLY INFLATING TIRES - Continued**

2. Remove dummy coupling (3) from SERVICE or EMERGENCY gladhand (4) at rear of vehicle.
3. Connect tire inflator-gage and hose (1) to SERVICE or EMERGENCY gladhand (4).
4. Start engine (WP 0018 00).

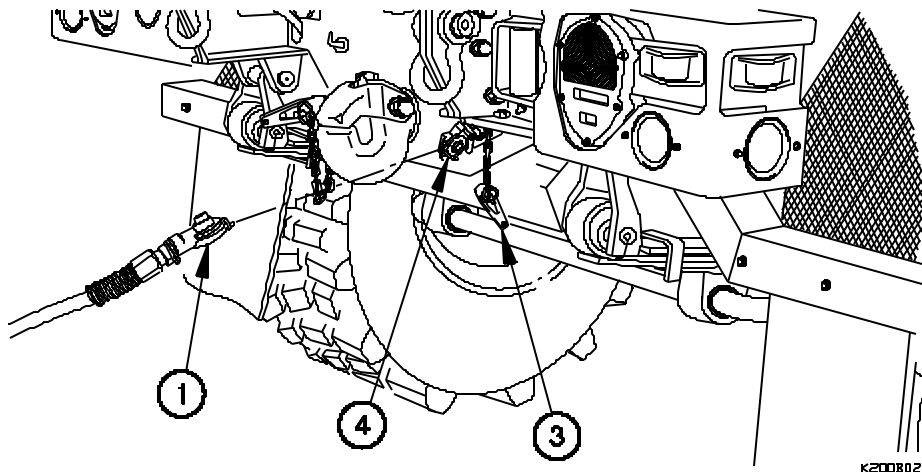**WARNING**

**Wheels must be chocked and service brakes applied before parking brake is released. Vehicle may roll if wheels are not chocked. Failure to comply may result in serious injury or death to personnel.**

5. Install two wheel chocks (5) against tire across from tire (6) that is to be inflated.

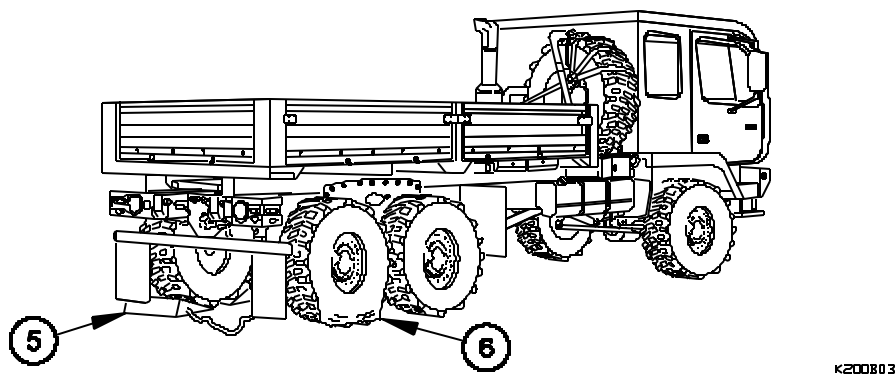


**SERVICING TIRES - Continued****0106 00****MANUALLY INFLATING TIRES - Continued****NOTE**

Air is available at service gladhand as long as brake pedal is applied. Air is available at emergency gladhand once SYSTEM PARK and TRAILER AIR SUPPLY valves are depressed.

Steps 6 through 14 require the aid of an assistant.


6. Depress brake pedal (7).
7. Push in SYSTEM PARK control (8).
8. Push in TRAILER AIR SUPPLY control (9).

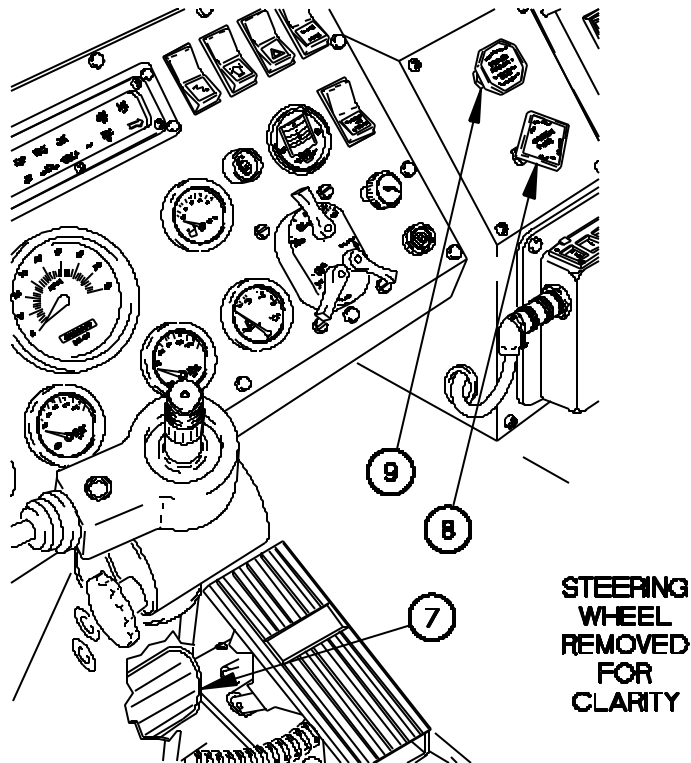

K200804-

**SERVICING TIRES - Continued****0106 00****MANUALLY INFLATING TIRES - Continued**


9. Remove cap (10) from valve stem (11).
10. Press chuck of tire inflator-gage (12) over valve stem (11) and squeeze handle (13).
11. Add air to tire (6) as required by Table 1, Cold Tire Inflation Pressures and Restrictions for M1083A1, M1084A1, M1085A1, M1086A1, M1090A1, M1092A1, M1093A1, M1094A1, and M1096A1 Models, or Table 2, Cold Tire Inflation Pressures and Restrictions for M1088A1 and M1089A1 Models.
12. Remove chuck of tire inflator-gage (12) from valve stem (11).
13. Install cap (10) on valve stem (11).

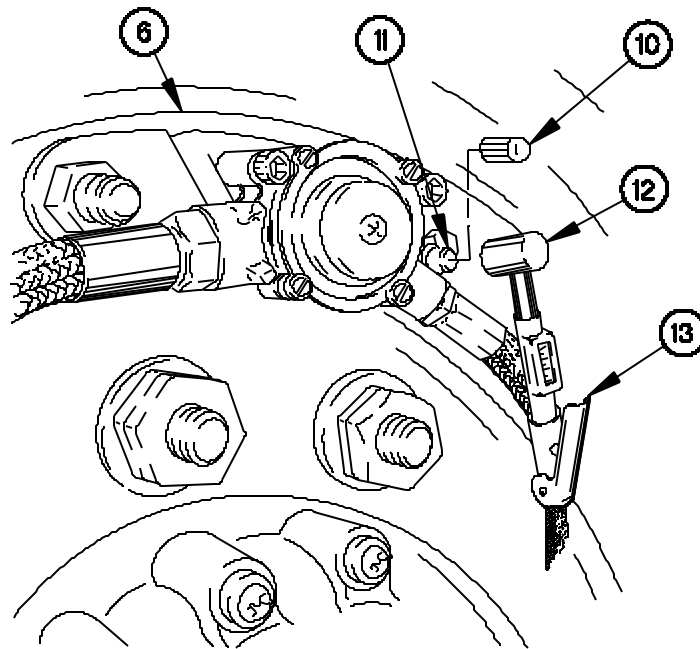

K200805-

**SERVICING TIRES - Continued****0106 00****MANUALLY INFLATING TIRES - Continued**


14. Pull out SYSTEM PARK control (8).
15. Pull out TRAILER AIR SUPPLY control (9).
16. Release brake pedal (7).
17. Shut down engine (WP 0018 00).

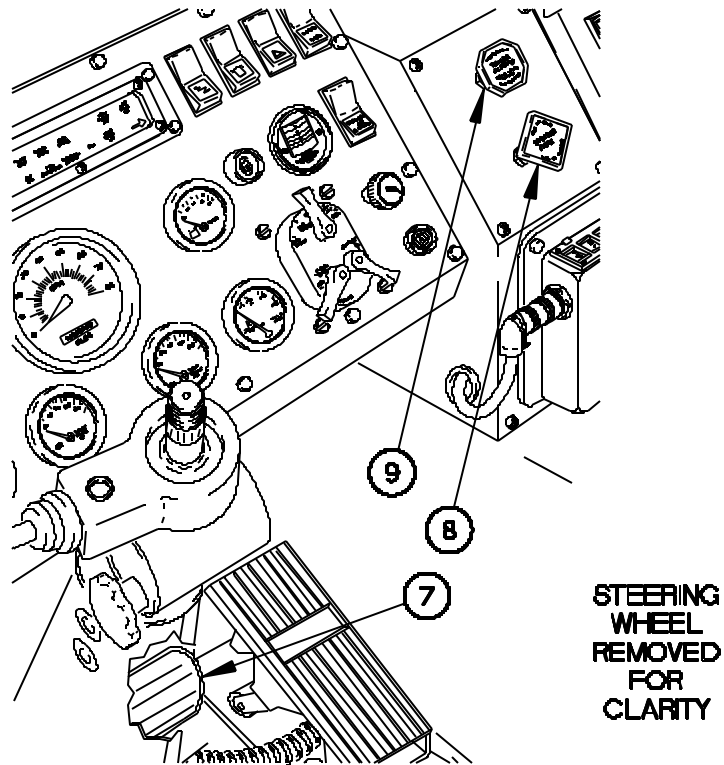


K200806 -

**SERVICING TIRES - Continued****0106 00****MANUALLY INFLATING TIRES - Continued**

18. Remove tire inflator-gage with hose (1) from SERVICE or EMERGENCY gladhand (4).
19. Install dummy coupling (3) on SERVICE or EMERGENCY gladhand (4).
20. Remove two wheel chocks (5).

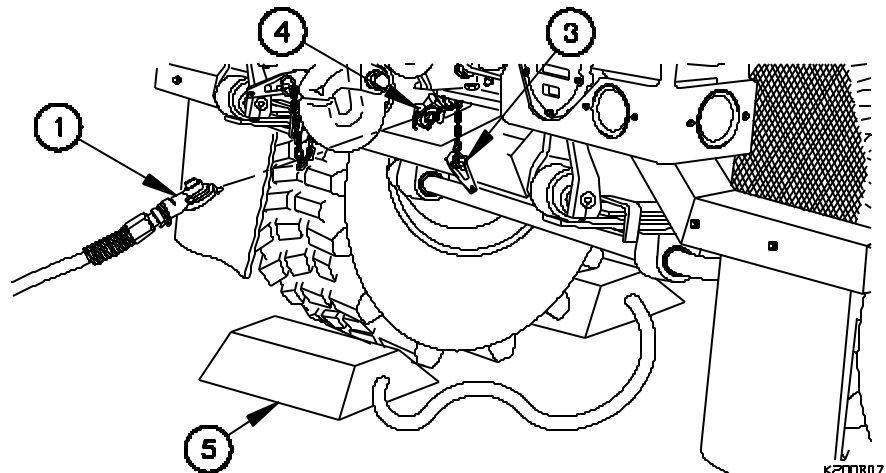

21. Stow tire inflator-gage with hose (1) in tool box.

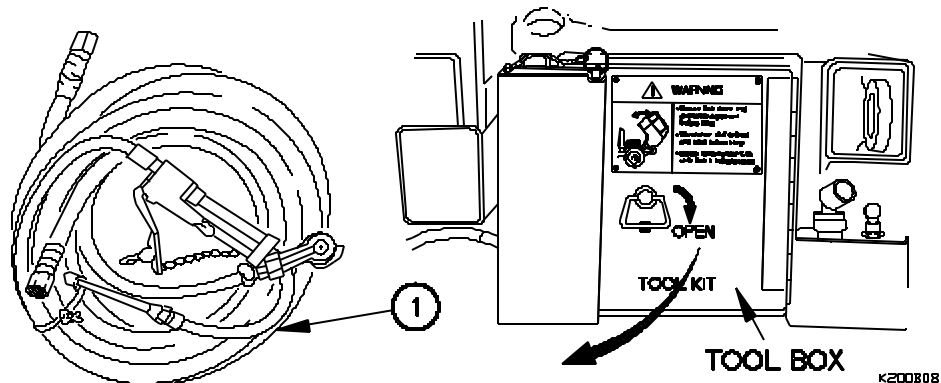**END OF WORK PACKAGE.**





---

**CLEANING VEHICLE**

---

**0107 00**

---

**THIS WORK PACKAGE COVERS:**Cleaning Exterior, Cleaning Interior

---

**INITIAL SETUP:****Maintenance Level**

Operator

**Materials/Parts**

Oil, Lubricating (Item 18, WP 0119 00)

**Equipment Condition**

Wheels chocked (WP 0018 00).

Rags, Wiping (Item 25, WP 0119 00)

Soap, Laundry (Item 26, WP 0119 00)

Solvent, Dry Cleaning (Item 27, WP 0119 00)

**Materials/Parts**

Gloves, Rubber (Item 9, WP 0119 00)

Goggles, Industrial (Item 10, WP 0119 00)

**References**TM 9-247

---

**GENERAL**

This work package contains information and instructions to clean the M1083A1 Series vehicle.

---

**WARNING**

---

All cleaning procedures must be accomplished in well-ventilated areas. Failure to comply may result in injury to personnel or damage to equipment.

Protective gloves, clothing, and/or respiratory equipment must be worn whenever caustic, toxic, or flammable cleaning solutions are used. Failure to comply may result in injury to personnel.

Diesel fuel or gasoline must never be used for cleaning. Failure to comply may result in injury to personnel or damage to equipment.

A fire extinguisher must be available and ready during all cleaning operations involving Solvents. Failure to comply may result in injury to personnel or damage to equipment.

---

**CLEANING VEHICLE - Continued**

---

**0107 00**

---

**WARNING**

---

Dry Cleaning Solvent (P-D-680) is TOXIC and flammable. Wear protective goggles and gloves; use only in well-ventilated area; avoid contact with skin, eyes, and clothes, and do not breath vapors. Keep away from heat or flame. Never smoke when using Dry Cleaning Solvent; the flashpoint for Type I Dry Cleaning Solvent is 100°F (38°C) and for Type II is 138°F (50°C). Failure to comply may result in serious injury or death to personnel.

If personnel become dizzy while using Dry Cleaning Solvent, immediately get fresh air and medical help. If Dry Cleaning Solvent contacts skin or clothes, flush with cold water. If Dry Cleaning Solvent contacts eyes, immediately flush eyes with water and get medical attention. Failure to comply may result in serious injury or death to personnel.

---

**CAUTION**

---

Do not wipe dirt off vehicle when it is dry. Dirt, stones, or debris may scratch and damage vehicle. Failure to comply may result in damage to equipment.

Use caution when washing around the engine compartment to prevent damage to sensors and inadvertent removal of grease in bearing surfaces. Failure to comply may result in damage to equipment.

Periodically wash the engine side of the fan clutch in the engine compartment. Fine particles of road debris may accumulate in the fan clutch housing causing the fan clutch to drag and not fully release. Failure to comply may result in damage to equipment.

Do not allow water to enter air cleaner inlet while washing vehicle. Air cleaner becomes restricted when wet and may cause a loss in engine power. Failure to comply may result in damage to equipment.

Do not use high pressure water or steam on starting motor. When cleaning engine/transmission, starting motor must be protected from any high pressure water or steam. Failure to comply may result in damage to equipment.

Do not use high pressure water or steam on remote IGN, ST, or BATT switches. When cleaning engine, remote IGN, ST, and BATT switches must be protected from any high pressure water or steam. Failure to comply may result in damage to equipment.

---

**CLEANING VEHICLE - Continued**

---

**0107 00****CAUTION**

Do not direct high-pressure water stream at glass surfaces, seals, air intake, exhaust outlet, or any other component of vehicle that could be easily damaged by high-pressure water stream. Failure to comply may result in damage to equipment.

Do not use high pressure water or steam to clean interior of vehicle. Failure to comply may result in damage to equipment.

Do not use strong detergent or abrasive. Failure to comply result in damage to equipment.

Do not allow cleaning compounds to come into contact with rubber, vinyl, or canvas materials. Failure to comply may result in damage to equipment.

Do not allow corrosion-removing cleaning compounds to contact painted surfaces. Failure to comply may result in damage to equipment.

Do not use compressed air in cleaning cab interior. Failure to comply may result in damage to equipment.

Do not steam clean any part of vehicle that has been rustproofed. Failure to comply may result in damage to equipment.

Mildew must be removed with a bristle brush before canvas can be properly cleaned and aired. Failure to comply may result in damage to equipment.

The radiator is always cleaned first from behind with low pressure water or air in order to blow debris, insects, or other obstructions out and away from the radiator core. Failure to comply may result in damage to equipment.

**NOTE**

Detailed description of specific cleaning compounds, cleaning solvents, dry cleaning solutions, and corrosion-removing compounds are found in TM 9-247.

Table 1, General Cleaning Instructions, provides a general guideline to cleaning materials used in removing contaminants from various vehicle surfaces.

**CLEANING VEHICLE - Continued****0107 00****Table 1. General Cleaning Instructions.**

<b>Cleaning Materials Used to Remove</b>			
<b>Surface</b>	<b>Oil/Grease</b>	<b>Salt/Mud/ Dust/Debris</b>	<b>Surface Rust/Corrosion</b>
Body	Grease cleaning compound, running water, and damp or dry rags.	High pressure water, soapy warm water, soft brush, and damp or dry rags.	Corrosion-removing compound, bristle brush, dry rags, and lubricating oil.*
Cab Interior (Metals)	Grease cleaning compound and damp or dry rags.	Damp and dry rags.	Corrosion-removing compound, bristle brush, dry rags, and lubricating oil.*
Cab Interior (Material)	Saddle soap, warm water, soft brush, and dry rags.	Soft brush, soapy warm water, and damp or dry rags.	Not applicable.
Frame	Grease cleaning compound rinsed with running water and rags.	High pressure water, soapy warm water, wire brush, and damp or dry rags.	Corrosion-removing compound, bristle brush, dry rags, and lubricating oil.*
Starting Motor	Mixed solution, 1 part grease cleaning compound, 4 parts dry cleaning solvent, and rags.	Soapy warm water, soft wire brush, and damp or dry rags.	Bristle brush, warm soapy water, and dry rags.
Engine/Transmission	Mixed solution, 1 part grease cleaning compound, 4 parts dry cleaning solvent, and rags.	High pressure water, soapy warm water, soft wire brush, and damp or dry rags.	Bristle brush, warm soapy water, and dry rags.
Glass	Glass cleaning solution and clean dry rags.	Glass cleaning solution and clean, dry rags.	Not applicable.
Radiator	Not applicable.	Low pressure water, air, soapy warm water, and damp or dry rags.	Not applicable.

**CLEANING VEHICLE - Continued**

**0107 00**

**Table 1. General Cleaning Instructions - Continued.**

Cleaning Materials Used to Remove			
Surface	Oil/Grease	Salt/Mud/ Dust/Debris	Surface Rust/Corrosion
Rubber Insulation	Damp or dry rags.	Damp or dry rags.	Not applicable.
Tires	Soapy water and bristle brush.	High pressure water and bristle brush.	Not applicable.
Cable	Cleaning compound and wire brush.	Wire brush.	Wire brush and lubricating oil.*
*After cleaning, apply light grade of lubricating oil to all unprotected surfaces to prevent continued rust.			

**CLEANING EXTERIOR**


Wash vehicle as instructed in Table 1.

**CLEANING INTERIOR**

**CAUTION**

Do not allow water to contact electrical controls, gages, or indicators. Failure to comply may result in damage to equipment.


1. Remove loose dirt and dust from instrument panel assembly (1) with damp wiping rag.

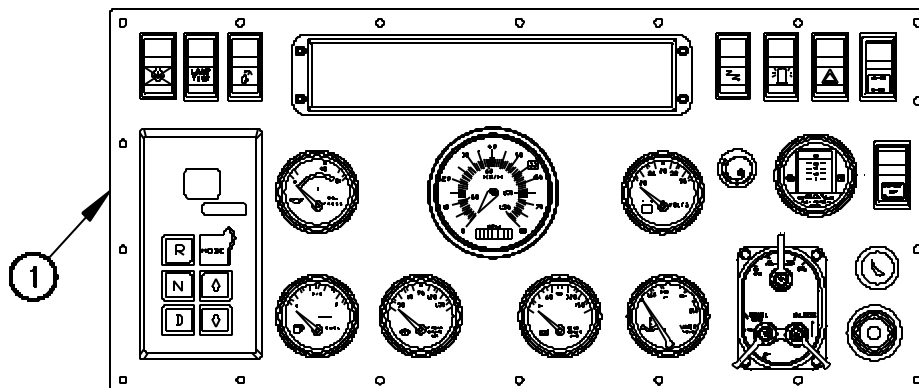

K 300801 -

**CLEANING VEHICLE - Continued****0107 00****CLEANING INTERIOR - Continued**

2. Clean seat cushions (2), seat belts (3), and shoulder harnesses (4) with warm soapy water.
3. Wipe seat cushions (2), seat belts (3), and shoulder harnesses (4) dry with wiping rags.

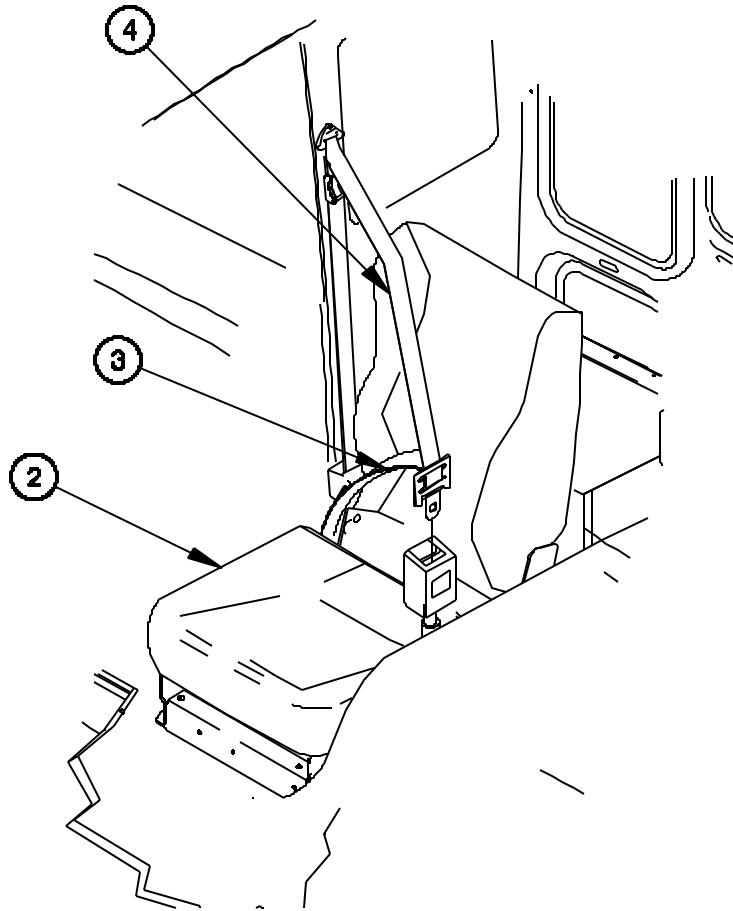

K 300802 -

**CLEANING VEHICLE - Continued****0107 00****CLEANING INTERIOR - Continued****NOTE**

Both left and right side drain plugs are removed/installed the same. Left side shown.


Vehicles with serial numbers of 18,548 and up are equipped with two free flowing drain plugs. Removal of drain plugs in these Vehicles is not required.

4. Remove four drain plugs (5) from floor (6).

**CAUTION**

Do not use water to clean instrument panel area, especially under instrument panel. Failure to comply may result in damage to equipment.

5. Using a low pressure hose, wash mud, sand, or dirt from floor (6).
6. Wipe excess water from floor (6) with wiping rags.
7. Install four drain plugs (5) in floor (6).

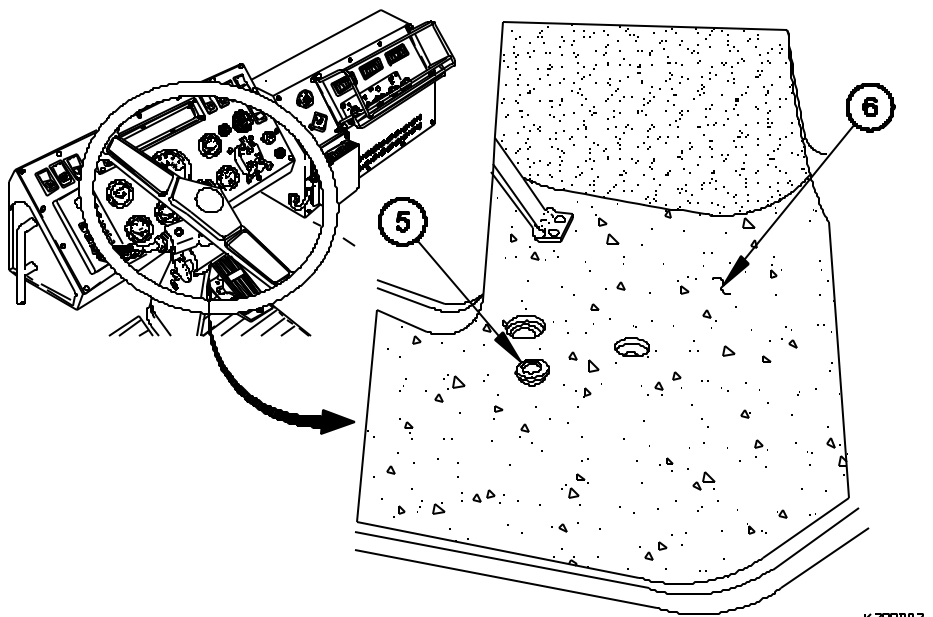

K300803-

**END OF WORK PACKAGE.**





## OPENING BATTERY BOX/TESTING BATTERIES

0108 00

### THIS WORK PACKAGE COVERS:

Opening Battery Box, Testing Batteries, Closing Battery Box

### INITIAL SETUP:

#### Maintenance Level

Operator

#### Materials/Parts

Rags, Wiping (Item 25, WP 0119 00)

#### Equipment Conditions

Engine shut down (WP 0018 00).

### GENERAL


This work package contains information and instructions to open the battery box and test the batteries on the M1083A1 series vehicle.

### OPENING BATTERY BOX

#### NOTE

Perform steps (1) and (2) only on cargo vehicles equipped with cargo arctic heaters.

1. Remove pin (1) from hose (2).
2. Disconnect hose (2) from battery box cover (3).

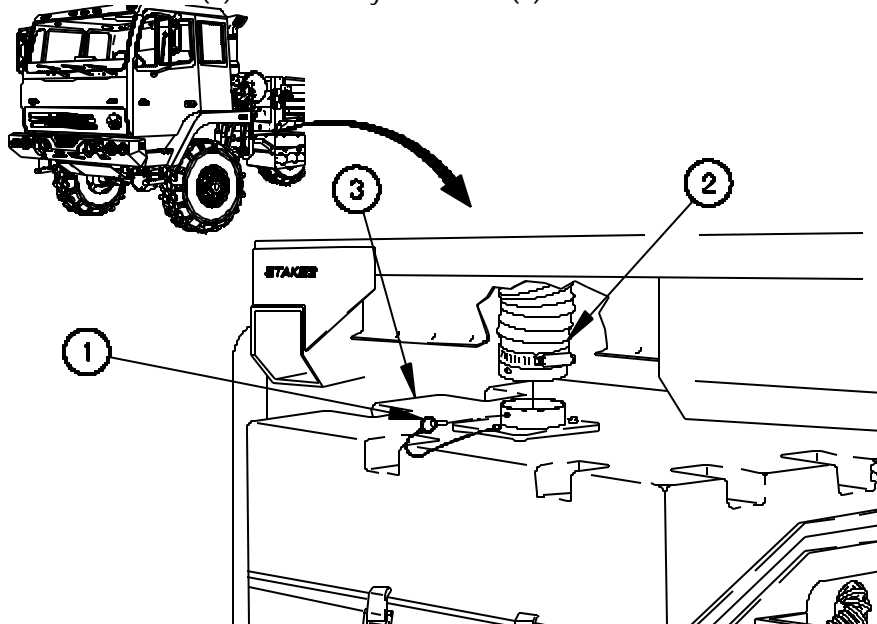


K400801 -

## OPENING BATTERY BOX/TESTING BATTERIES - Continued

0108 00

### OPENING BATTERY BOX - Continued

3. Lift two spring catches (4) and latch levers (5) from battery box (6).
4. Release latches (7) from battery box cover (3).
5. Remove battery box cover (3) from battery box (6).

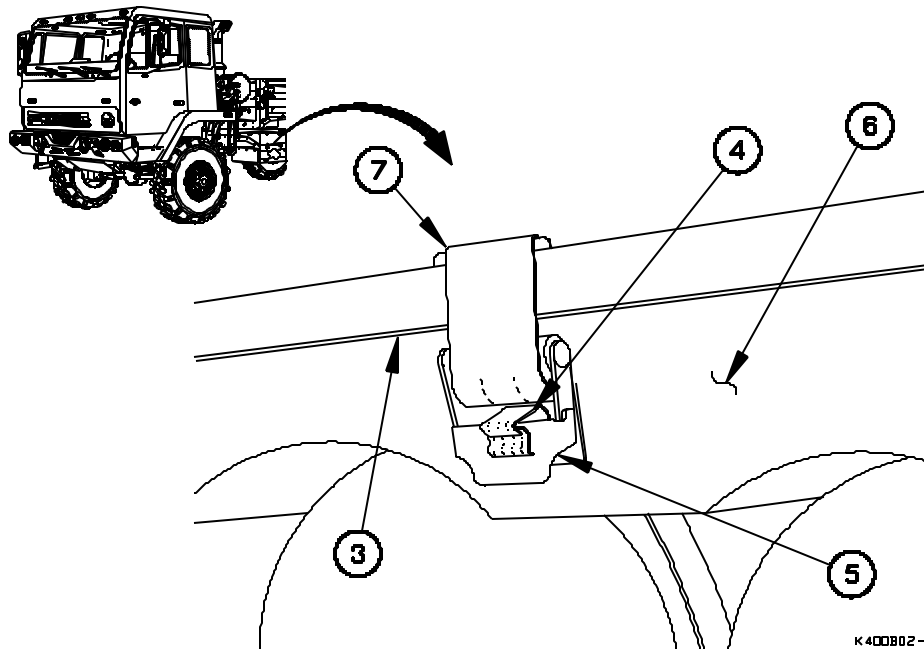

---

**OPENING BATTERY BOX/TESTING BATTERIES -  
Continued**

---

0108 00

**TESTING BATTERIES**

1. Start engine (WP 0018 00).
2. Shut down engine after idling for approximately four minutes (WP 0018 00).

---

**WARNING**

---

Lead-acid battery gases can explode. Do not smoke, have open flames, or make sparks around a battery, especially if caps are off. Battery may give off gas which can explode. Failure to comply may result in serious injury or death to personnel.


Remove rings, bracelets, wristwatches, neck chains, and other jewelry before working around vehicle. Jewelry may catch on equipment or may short across an electrical circuit or battery terminal. Failure to comply may result in serious injury or death to personnel.

3. Remove battery tester (8) from clamp (9) on battery tray (10).

**NOTE**

If battery tester red light illuminates then battery tester is operational. If red light does not illuminate notify Field Maintenance.

4. Check operation of battery tester (8) by touching tip of battery tester to positive battery post (11).

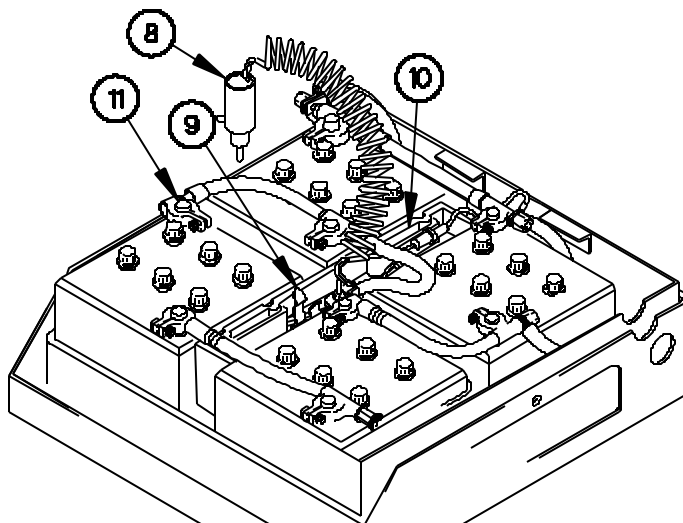

K400803-

---


**OPENING BATTERY BOX/TESTING BATTERIES -**  
**Continued**

---

**0108 00****TESTING BATTERIES - Continued****NOTE**

All four batteries can be checked the same way. Check inside cells of inside batteries first, outside cells of outside batteries last. Left front battery shown.

5. Remove battery fill caps (12) from battery (13).

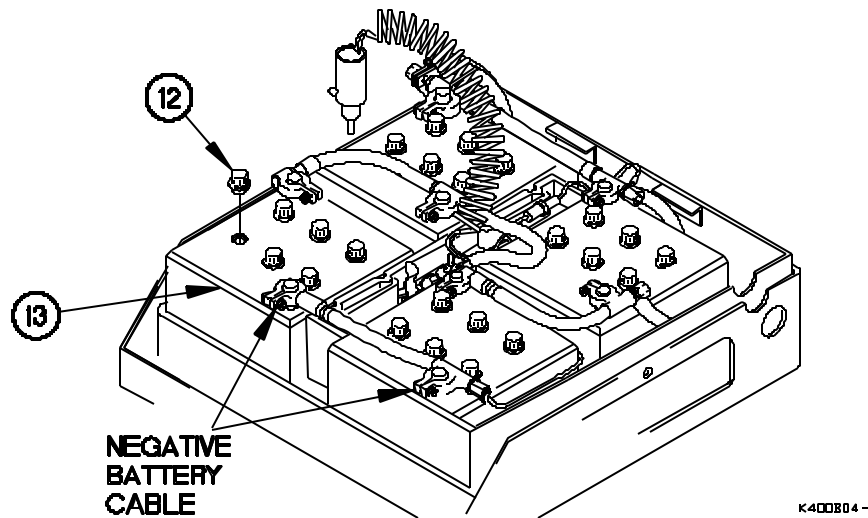

---

**OPENING BATTERY BOX/TESTING BATTERIES -  
Continued**

---

**0108 00****TESTING BATTERIES - Continued****NOTE**

If red light illuminates before inserting battery tester all the way in fill hole, battery may be overfilled.


Red light may flash intermittently as battery tester is inserted in fill hole.

With battery tester inserted fully into the fill hole adjacent to the negative battery posts of the outside batteries, the red light may illuminate briefly and then go out if the electrolyte is at proper level.

With battery tester inserted fully in fill hole, red light will illuminate if electrolyte is at its proper level.

If red light does not illuminate, or if cell is overfilled, notify Field Maintenance that battery requires servicing.

6. Place battery tester (8) in fill hole (14).
7. Check battery tester (8) for red light.
8. Remove battery tester (8) from fill hole (14).

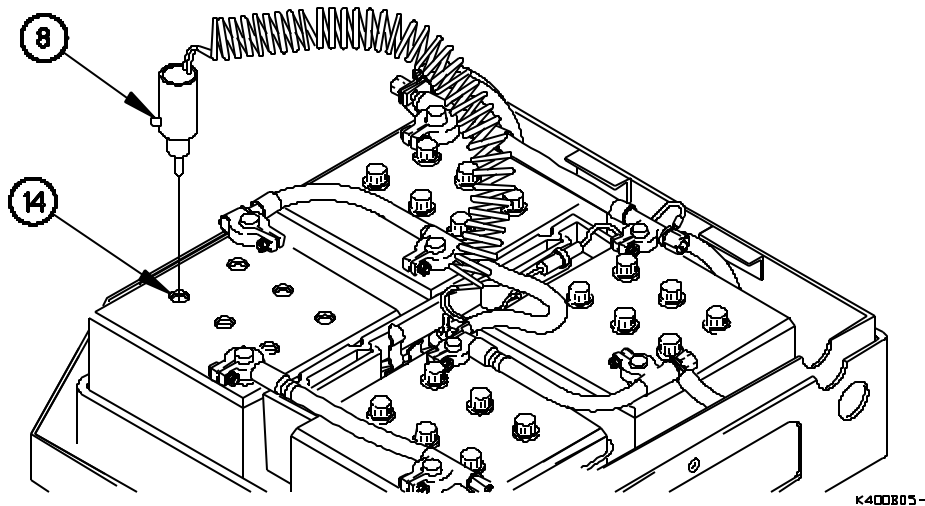


**OPENING BATTERY BOX/TESTING BATTERIES -  
Continued**


0108 00

**TESTING BATTERIES - Continued**

9. Install battery fill caps (12) on battery (13).
10. Wipe tip of battery tester (8) clean of any fluid with wiping rag.
11. Install battery tester (8) in clamp (9) on battery tray (10).

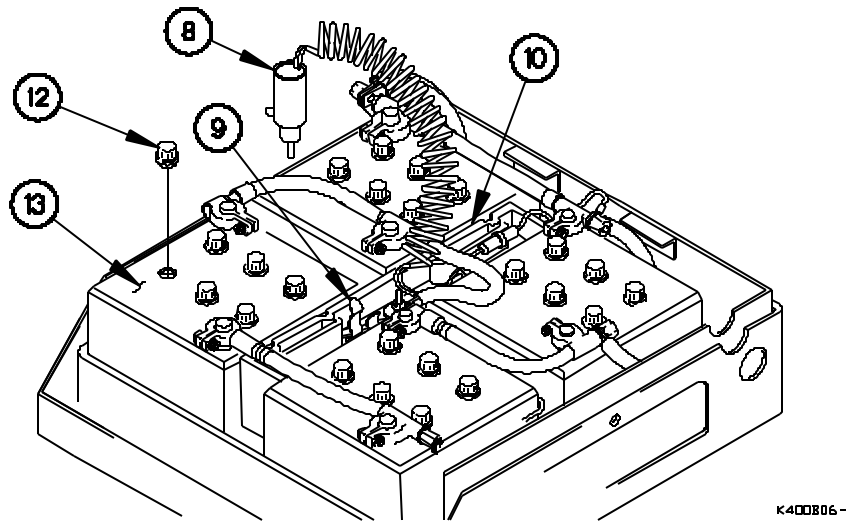**CLOSING BATTERY BOX**

1. Position battery box cover (3) on battery box (6).
2. Fasten two latches (7) on battery box cover (3).
3. Push down on two latch levers (5) until spring catches (4) are engaged.

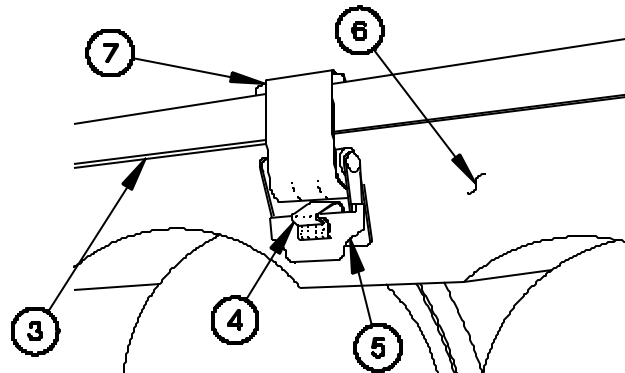

---


**OPENING BATTERY BOX/TESTING BATTERIES -**  
**Continued**

---

**0108 00****CLOSING BATTERY BOX-Continued****NOTE**

Perform steps (4) and (5) on cargo vehicles equipped with cargo arctic heaters.

4. Position hose (2) on battery box cover (3).
5. Install pin (1) in hose (2).

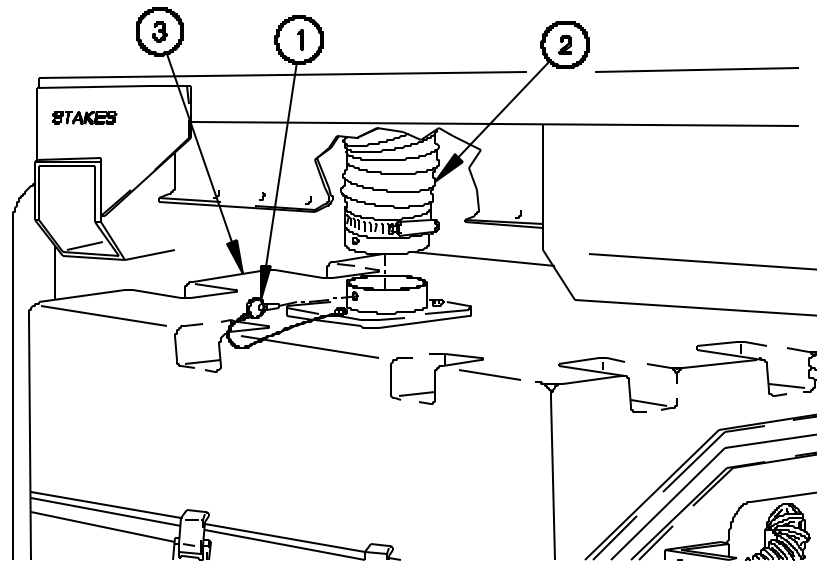

K400808-

**END OF WORK PACKAGE.**





---

**SERVICING AIR FILTER (EMERGENCY PROCEDURE) 0109 00**

---

**THIS WORK PACKAGE COVERS:**

Servicing, Operational Check

---

**INITIAL SETUP:**

**Maintenance Level**

Operator

**Materials/Parts**

Rags, Wiping (Item 25, WP 0119 00)

**Equipment Conditions**

Engine shut down (WP 0018 00).  
Wheels chocked (WP 0018 00).

**References**

FM 3-4  
FM 3-5  
TB 700-4

---

**GENERAL**

This work package contains information and instructions to service the air filter in an emergency.

**SERVICING**

---

**WARNING**

---

Nuclear, Biological, or Chemical (NBC) contaminated air filters must be handled and disposed of only by authorized and trained personnel. The unit commander or senior officer in charge of maintenance personnel must ensure that prescribed protective clothing (FM 3-4) is used, and prescribed safety measures and decontamination procedures (FM 3-5 and TB 700-4) are followed. The unit standard operating procedures are responsible for final disposal of contaminated air filters. Failure to comply may result in serious injury or death to personnel.

# **SERVICING AIR FILTER (EMERGENCY PROCEDURE) - 0109 00**

## **Continued**

### **SERVICING - Continued**


#### **CAUTION**

Do not operate engine without air filter installed. Failure to comply may result in damage to equipment.

#### **NOTE**

This is an emergency procedure and is only to be performed when AIR FILTER RESTRICTION GAUGE reads greater than 25 (in red area) while vehicle is on mission.

1. Unlatch three clasps (1) on cover (2).
2. Remove cover (2) from intake air cleaner housing (3).

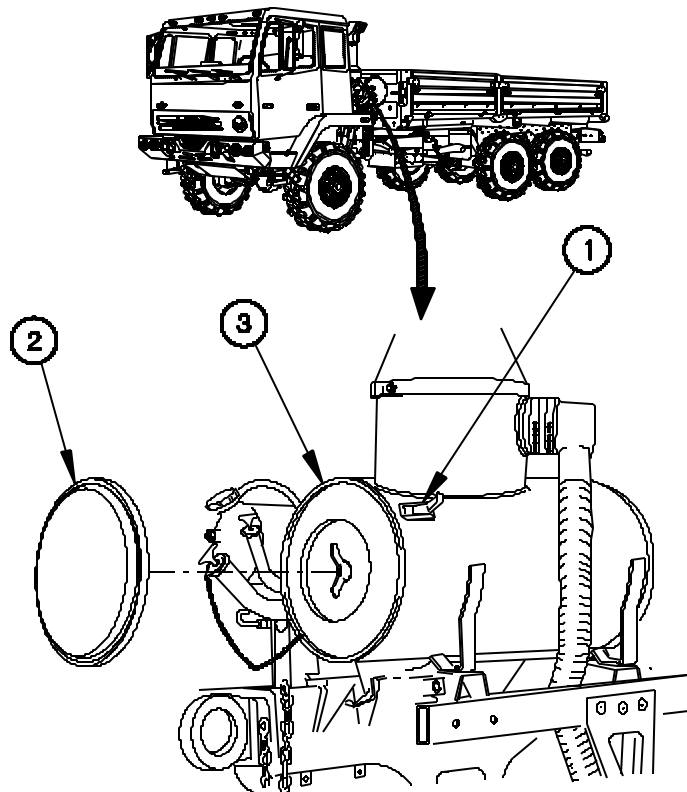

K500301-

---

## SERVICING AIR FILTER (EMERGENCY PROCEDURE) - 0109 00

---

### Continued

---

#### SERVICING - Continued

3. Loosen wingnut (4) and remove air filter (5) from intake air cleaner housing (3).


#### CAUTION

Use extreme care when cleaning air filter. Failure to comply may result in damage to equipment.

#### NOTE

If filter element is damaged or cannot be cleaned by tapping, notify Field Maintenance upon completion of the current mission.

4. Gently tap air filter (5) on a flat hard surface to loosen dirt.
5. Inspect filter element (5) for damage.

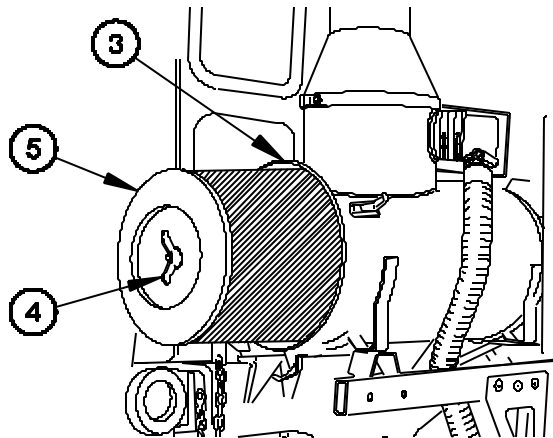

K500B02-


---

**SERVICING AIR FILTER (EMERGENCY PROCEDURE) - 0109 00**  
**Continued**

---

**SERVICING - Continued**

6. Clean air filter (5) with clean rag to free trapped dirt.
7. Clean air filter gasket (6) with clean rag.
8. Clean inside intake air cleaner housing (3) with clean rag.

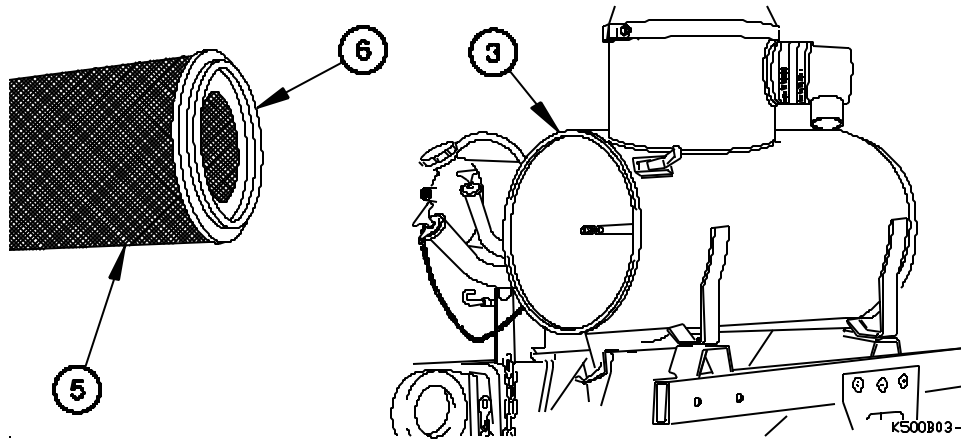

## SERVICING AIR FILTER (EMERGENCY PROCEDURE) - 0109 00


### Continued

#### SERVICING - Continued

#### NOTE

Filter element is installed in intake air cleaner housing with gasket end first.

9. Position filter element (5) in intake air cleaner housing (3).
10. Tighten wingnut (4) on filter element (5).
11. Position cover (2) on intake air cleaner housing (3).
12. Latch three clasps (1).

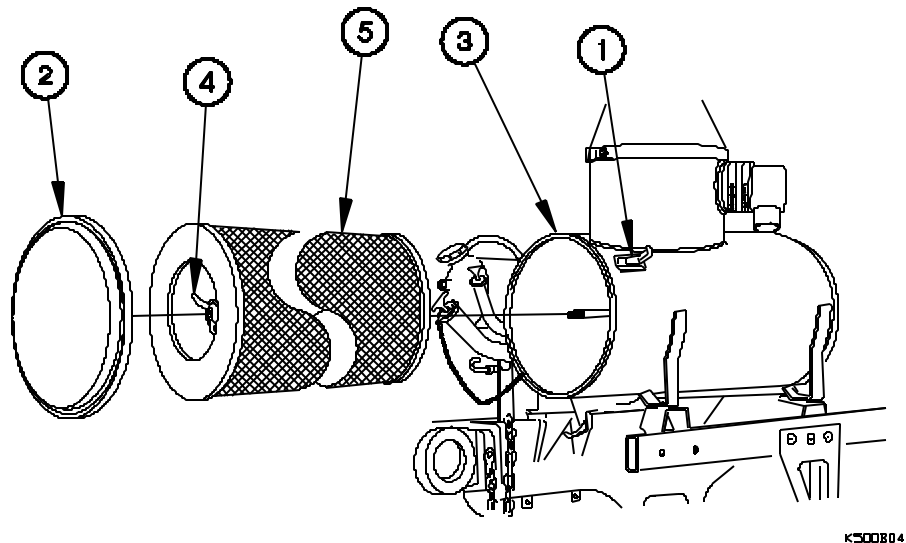

K500804-

#### OPERATIONAL CHECK

Start engine (WP 0018 00) and check AIR FILTER RESTRICTION GAUGE. Notify Field Maintenance if AIR FILTER RESTRICTION GAUGE still reads greater than 25 (in red area).

END OF WORK PACKAGE.



# M1083A1/M1084A1 TROOPSEAT KIT INSTALLATION/REMOVAL

0110 00

## THIS WORK PACKAGE COVERS:

Installation, Removal

## INITIAL SETUP:

### Maintenance Level

Operator

### Tools and Special Tools

Screwdriver, Flattip (Item 39, Table 2, WP 0117 00)

### Equipment Conditions

Engine shut down (WP 0018 00).

Wrench, Adjustable (Item 51, Table 2, WP 0117 00)

### Personnel Required

Two

## GENERAL


This work package contains information and instructions to install and remove the M1083A1/M1084A1 Troopseat Kit.

## INSTALLATION

### NOTE

Left and right side bolts are installed in cargo bed stakes the same way. Right side shown.

1. Position bolt (1) in center cargo bed stake (2).
2. Position bolt (3) in rear cargo bed stake (4).

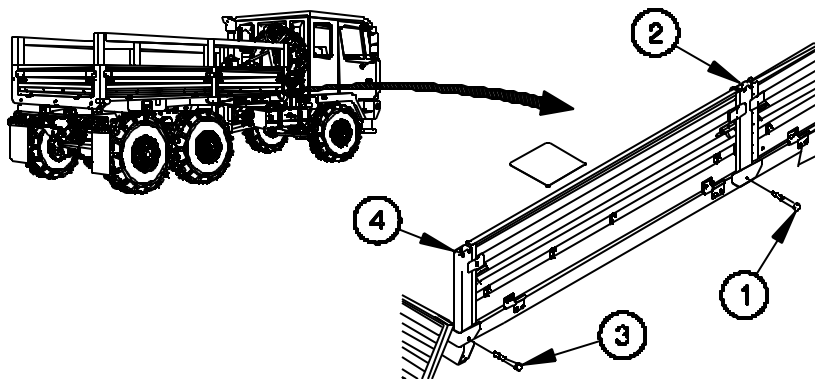

K600B01-

---

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

---

**0110 00****INSTALLATION - Continued****CAUTION**


Ensure seat post is flush with cargo bed floor prior to tightening bolts.  
Failure to comply may result in damage to equipment.

**NOTE**

Left and right troopseats are installed the same way. Right side shown.

Steps 3 through 21 require the aid of an assistant.

3. Attach front seat post (5) to front cargo bed stake (6) with two bolts (7).

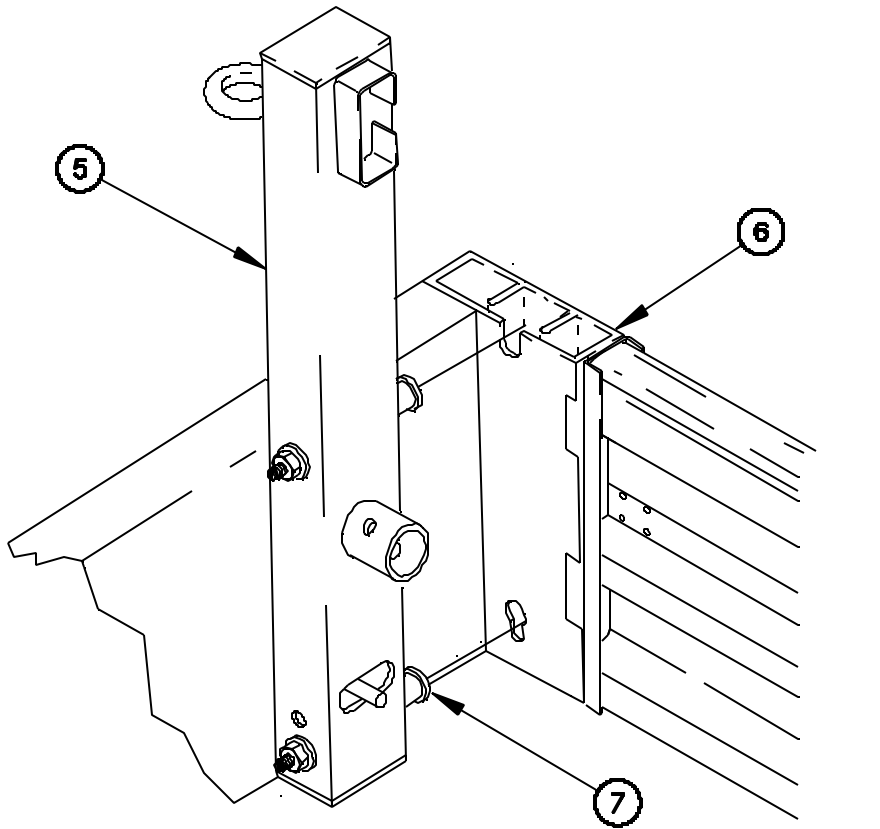

K600802-




**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**INSTALLATION - Continued**

4. Hold bolts (7).
5. Tighten two nuts (8) on bolts (7).
6. Install front seats (9) on front seat post (5).
7. Insert quick release pin (10) in front seats (9).
8. Install backrest (11) on front seat post (5).

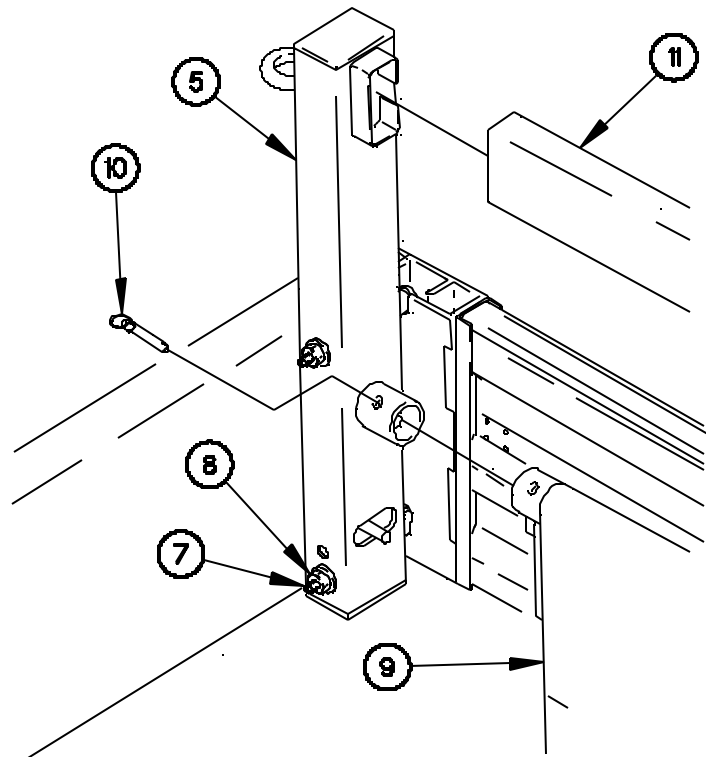

K600803-

---


**M1083A1/M1084A1 TROOPSEAT KIT**  
**INSTALLATION/REMOVAL - Continued**

---

0110 00

**INSTALLATION - Continued**

9. Install center seat post (12) on backrest (11) and front seats (9).
10. Insert quick release pin (13) in front seats (9).
11. Attach center seat post (12) to center cargo bed stake (2) with two bolts (14).

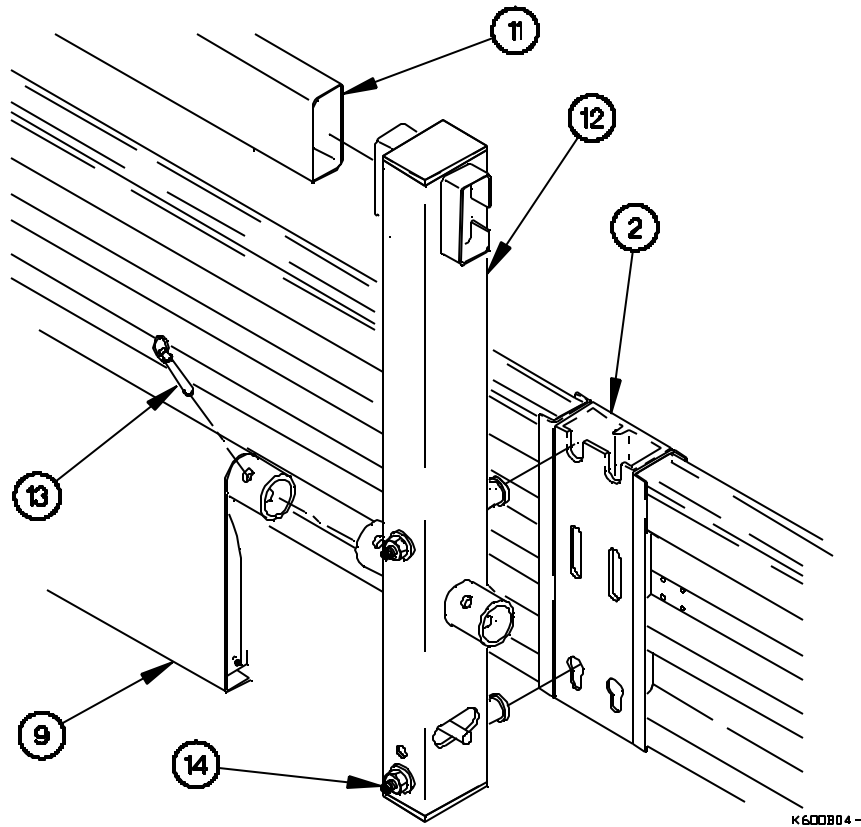


**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**INSTALLATION - Continued**

12. Hold bolts (14).
13. Tighten two nuts (15) on bolts (14).
14. Install rear seats (16) on center seat post (12).
15. Insert quick release pin (17) in rear seats (16).
16. Install backrest (18) on center seat post (12).

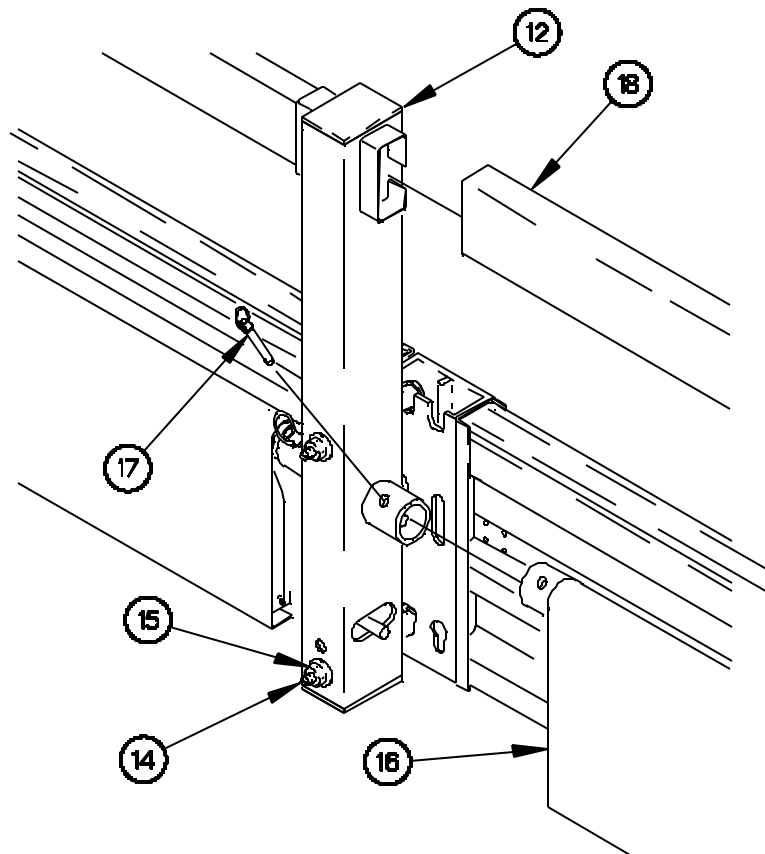

K600805-

---


**M1083A1/M1084A1 TROOPSEAT KIT**  
**INSTALLATION/REMOVAL - Continued**

---

**0110 00****INSTALLATION - Continued****NOTE**

Perform the following two steps when installing rear seat post with boarding handle for the first time.

17. Remove two nuts (19), washers (20), and bolts (21) from rear seat post (22). Discard nuts and washers.

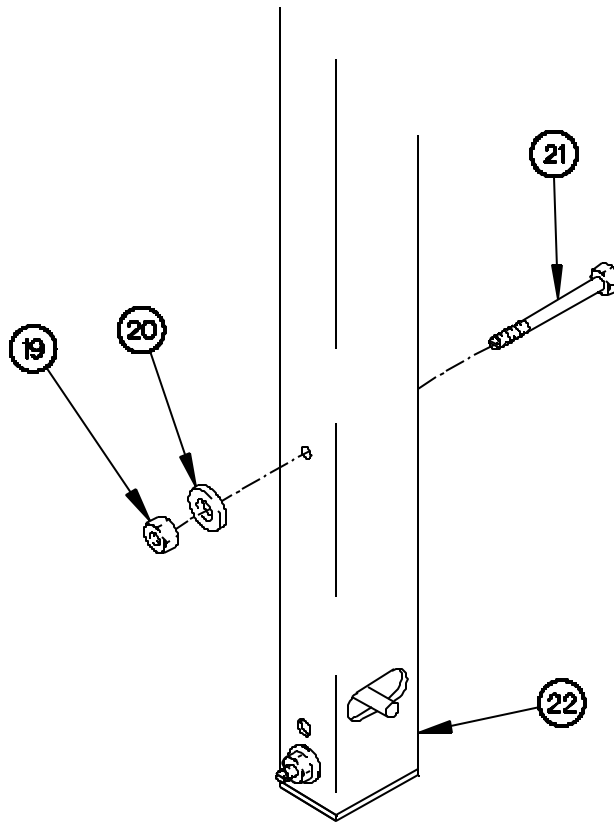


K600318-

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**INSTALLATION - Continued**

18. Position two bolts (21), gaskets (23), handle (24), and two knurled nuts (25) on rear seat post (22).

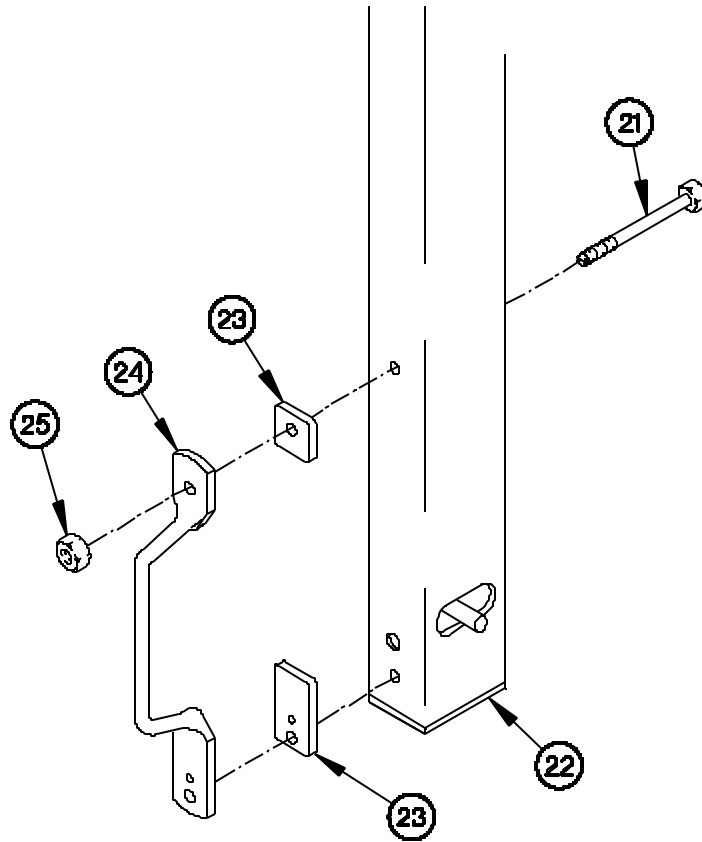

K600319-

---

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**


---

0110 00

**INSTALLATION - Continued****NOTE**

Perform the following steps on troop seat kit with boarding handle.

19. Install rear seat post (22) on backrest (18) and rear seats (16).
20. Insert quick release pin (26) in rear seats (16).
21. Attach rear seat post (22) to rear cargo bed stake (4) with two bolts (21).

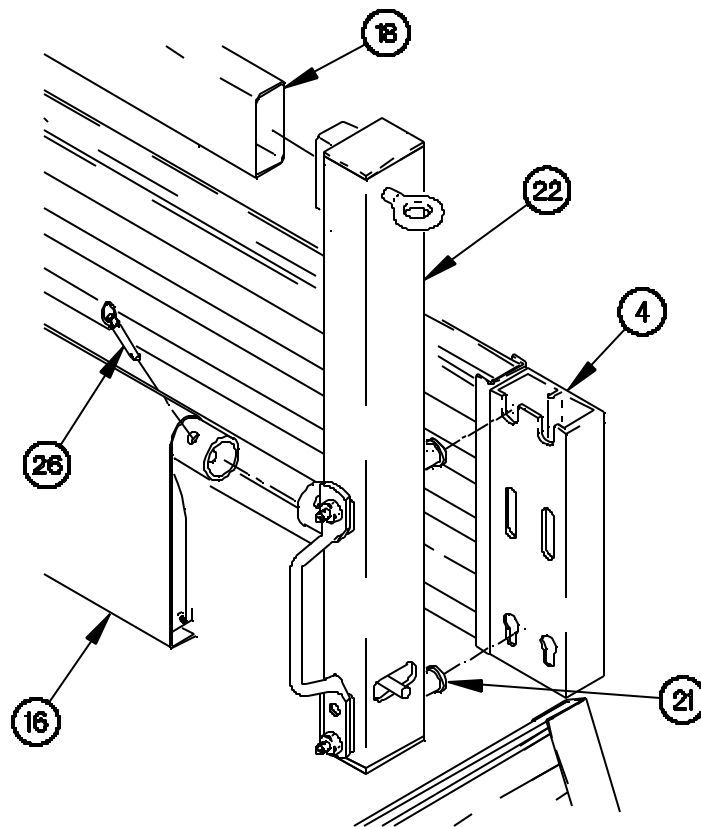

K 600820-

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00


**INSTALLATION - Continued**

22. Tighten two nuts (25) on bolts (21).

**NOTE**

All four safety strap hooks are installed the same way. Right rear safety strap hook shown.

23. Install safety strap hook (27) in eyebolt (28).

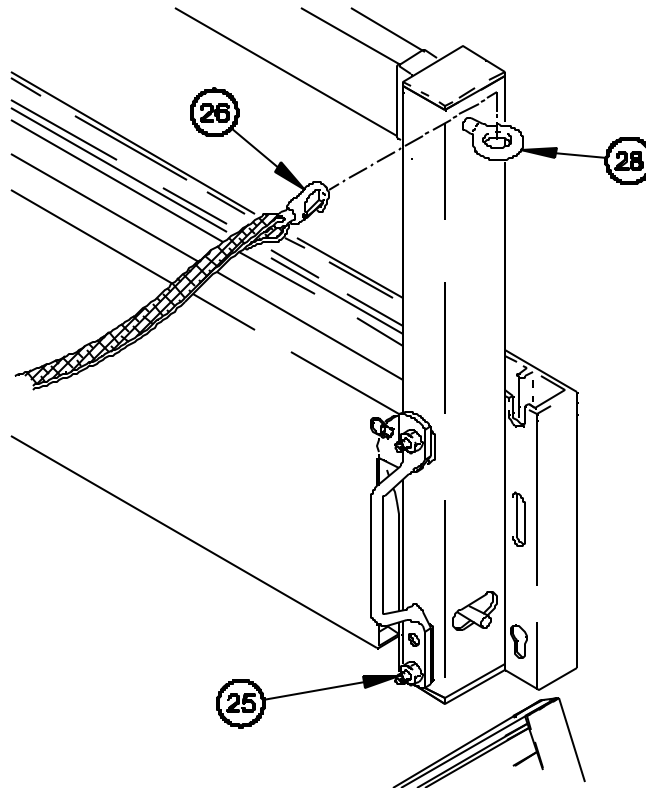

K600821-

---


**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

---

**0110 00****INSTALLATION - Continued****NOTE**

Perform the following five steps on troopseat kit without boarding handle.

24. Install rear seat post (22) on backrest (18) and rear seats (16).
25. Insert quick release pin (26) in rear seats (16).
26. Attach rear seat post (22) to rear cargo bed stake (4) with two bolts (21).

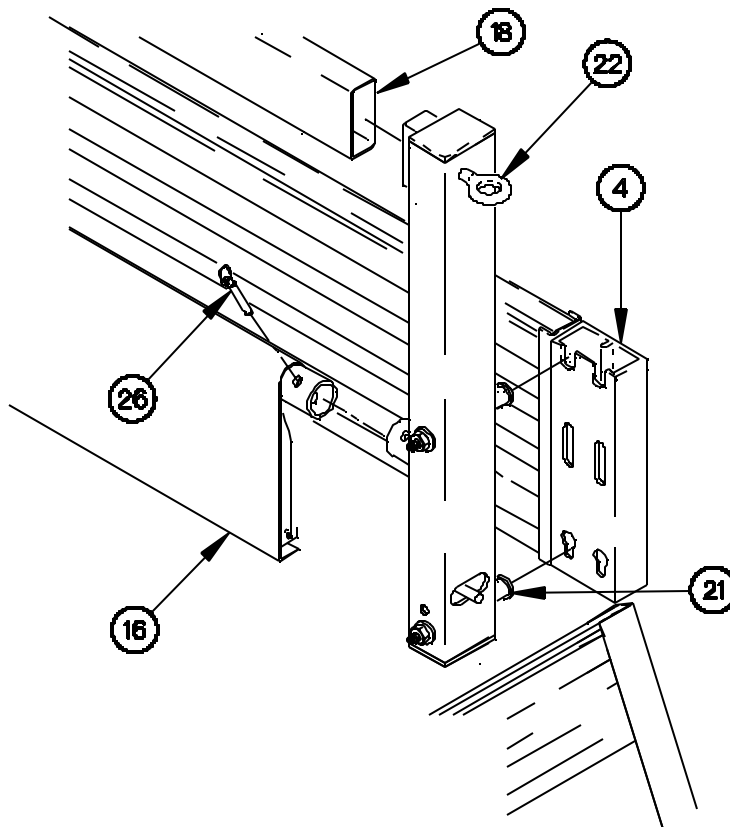

K600806-



**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00


**INSTALLATION - Continued**

27. Hold bolts (21).
28. Tighten two nuts (22) on bolts (21).

**NOTE**

All four safety strap hooks are installed the same way. Right rear safety strap hook shown.

29. Install safety strap hook (27) in eyebolt (28).

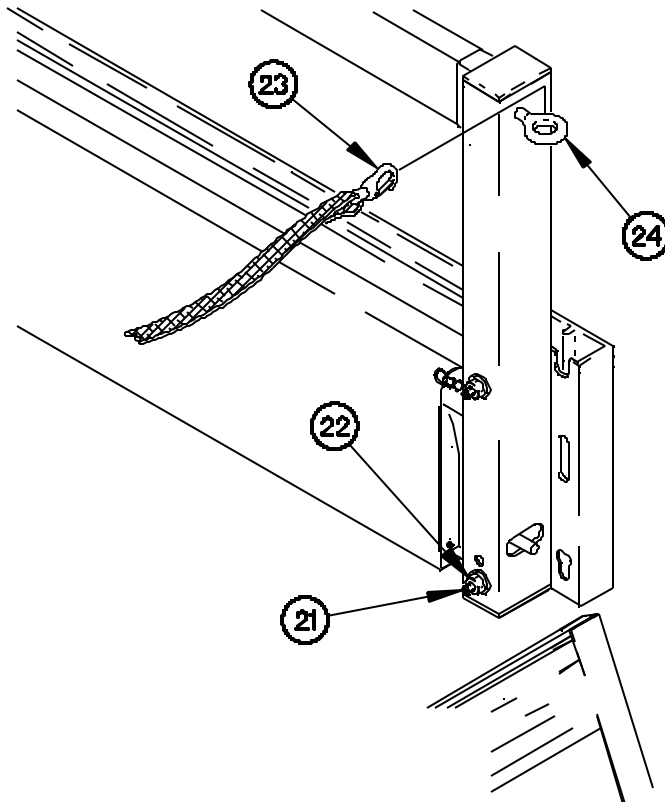


K600807-

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00


**INSTALLATION - Continued**

30. Install alarm bracket (29) on cargo bed (30) with two knobs (31).
31. Notify Field Maintenance to install troop transport alarm cable assembly.

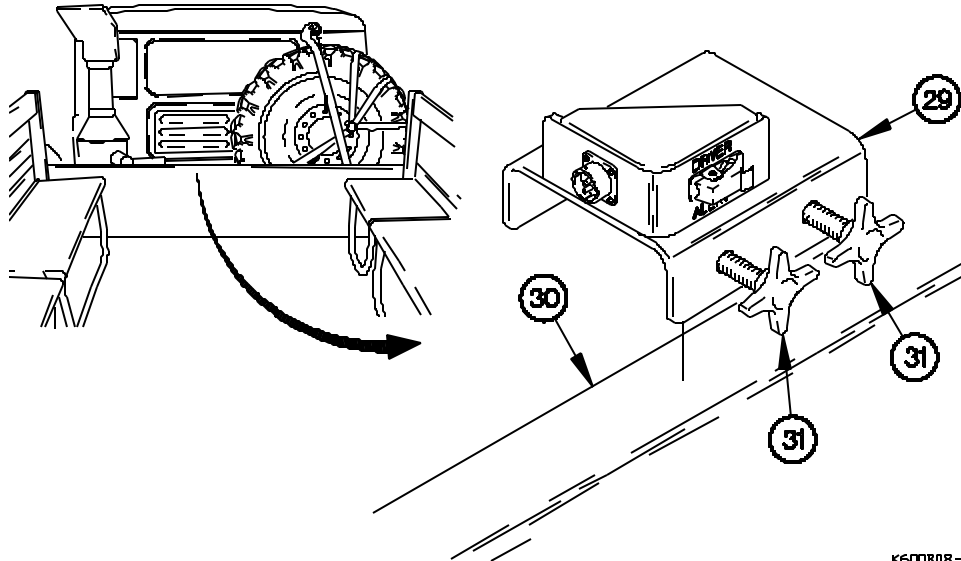

K600808-

32. Notify Field Maintenance to tighten bolt (1) and bolt (3) to 46-57 lb-ft (62-77 N•m).

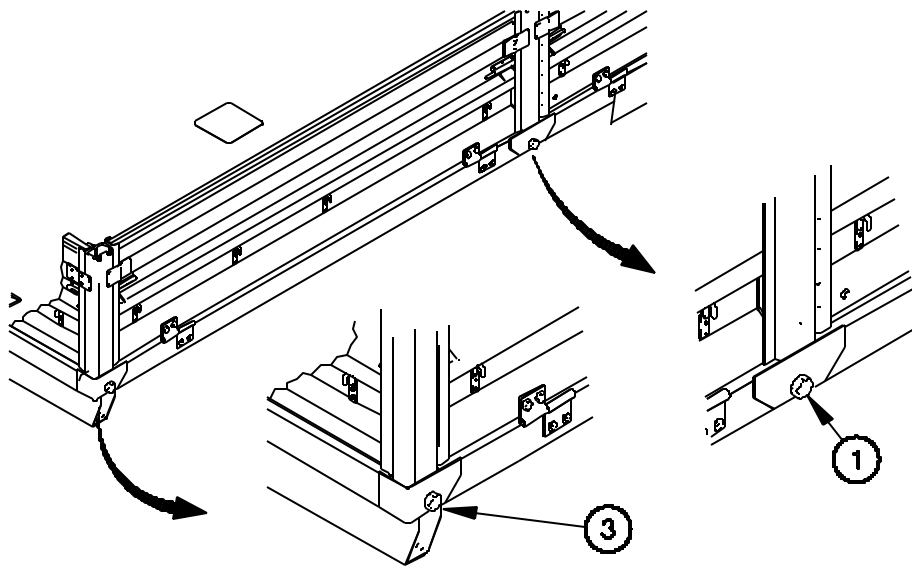


K600809-

# **M1083A1/M1084A1 TROOPSEAT KIT INSTALLATION/REMOVAL - Continued**

0110 00

## **REMOVAL**

1. Notify Field Maintenance to remove troop transport alarm cable assembly.
2. Loosen two knobs (31) on alarm bracket (29).
3. Remove alarm bracket (29) from cargo bed (30).

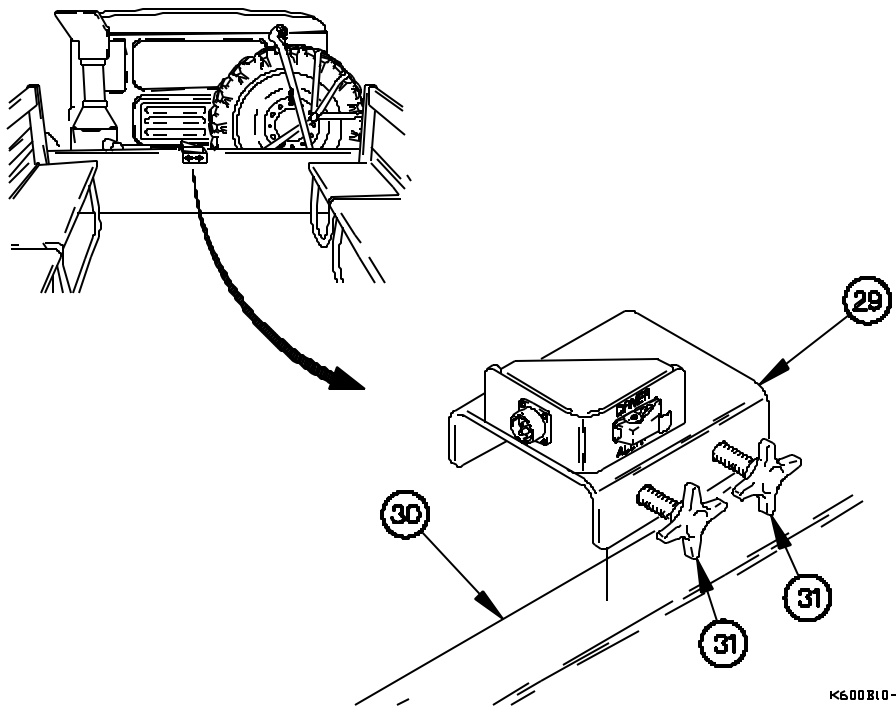

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00


**REMOVAL - Continued**

**NOTE**

All four safety strap hooks are removed the same way. Right rear safety strap hook shown.

Eyebolts are located on all corner seat posts. Right rear eyebolts shown.

4. Remove safety strap hook (27) from eyebolt (28).

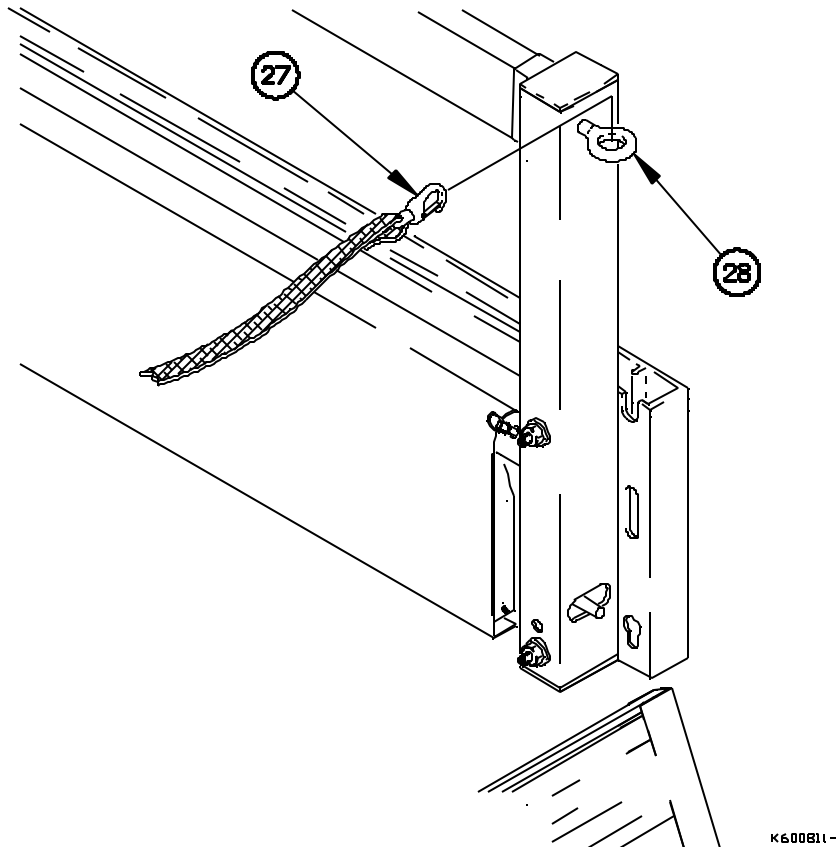

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**REMOVAL - Continued**

**NOTE**

Left and right troopseats are removed the same way. Right side shown.

Steps 5 through 22 require the aid of an assistant.

If seat post is equipped with spring locking pin, spring locking pin must be pulled back to release seat post from cargo bed stake.


All spring locking pins are released the same way. Right rear spring locking pin shown.

5. Remove quick release pin (26) from rear seats (16).

**NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

6. Hold two bolts (21) with screwdriver.
7. Loosen two nuts (22) on bolts (21).
8. Remove rear seat post (19) from rear cargo bed stake (4), backrest (18), and rear seats (16).

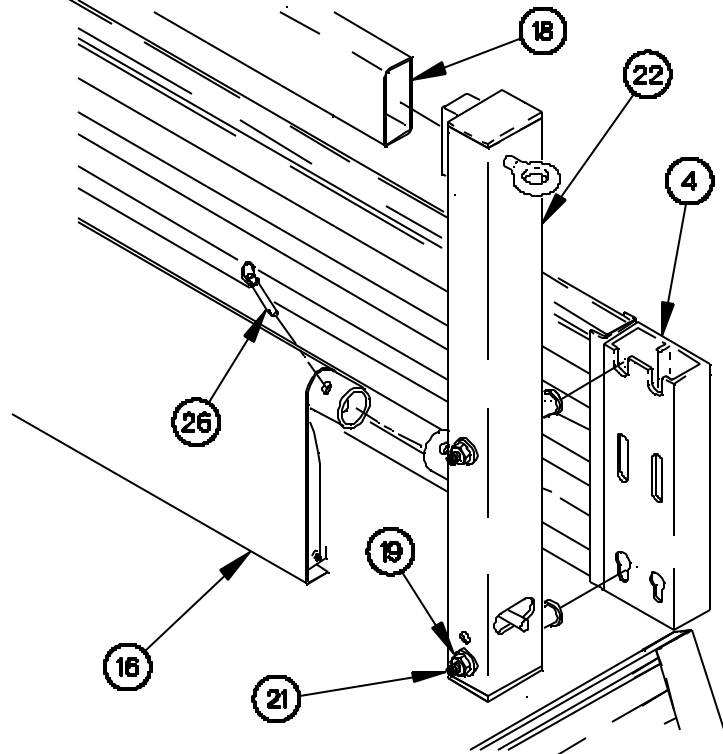

K600812-

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued****0110 00****REMOVAL - Continued****NOTE**

Perform the following steps if rear seat post is equipped with boarding handle.


Left and right troopseats are removed the same way. Right side shown.

9. Remove quick release pin (26) from rear seats (16).

**NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

10. Hold two bolts (21) and loosen two nuts (25).
11. Pull back on spring pin (32).
12. Remove rear seat post (22) from rear cargo bed stake (4), backrest (18), and rear seats (16).

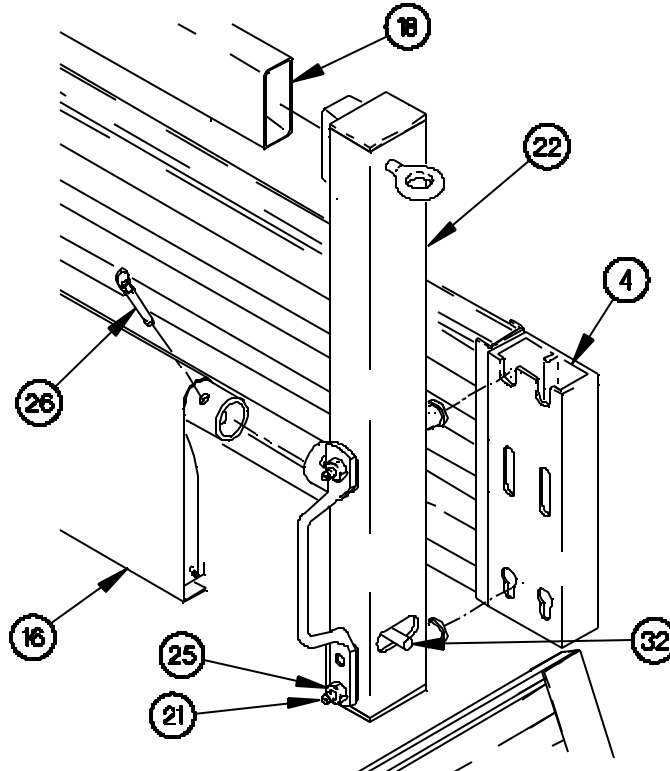


K600B22-

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**REMOVAL - Continued**

13. Remove backrest (18) from center seat post (12).
14. Remove quick release pin (17) from rear seats (16).
15. Remove rear seats (16) from center seat post (12).

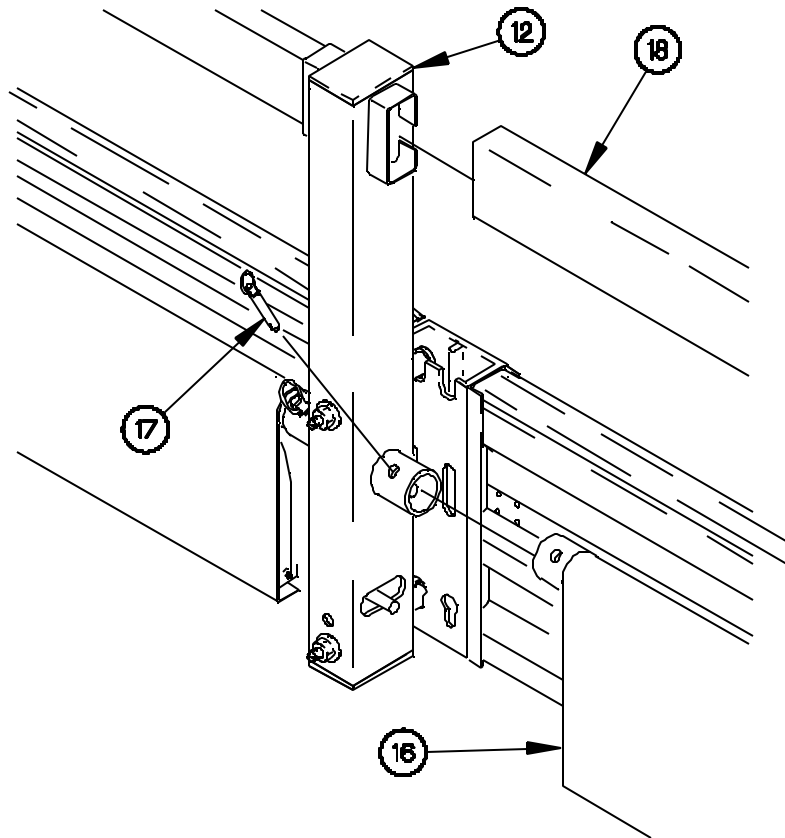

K600813-

---

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**


---

0110 00

**REMOVAL - Continued****NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

16. Hold two bolts (14).
17. Loosen two nuts (15) on bolts (14).
18. Remove center seat post (12) from center cargo bed stake (2).
19. Remove quick release pin (13) from front seats (9).
20. Remove center seat post (12) from backrest (11) and front seats (9).

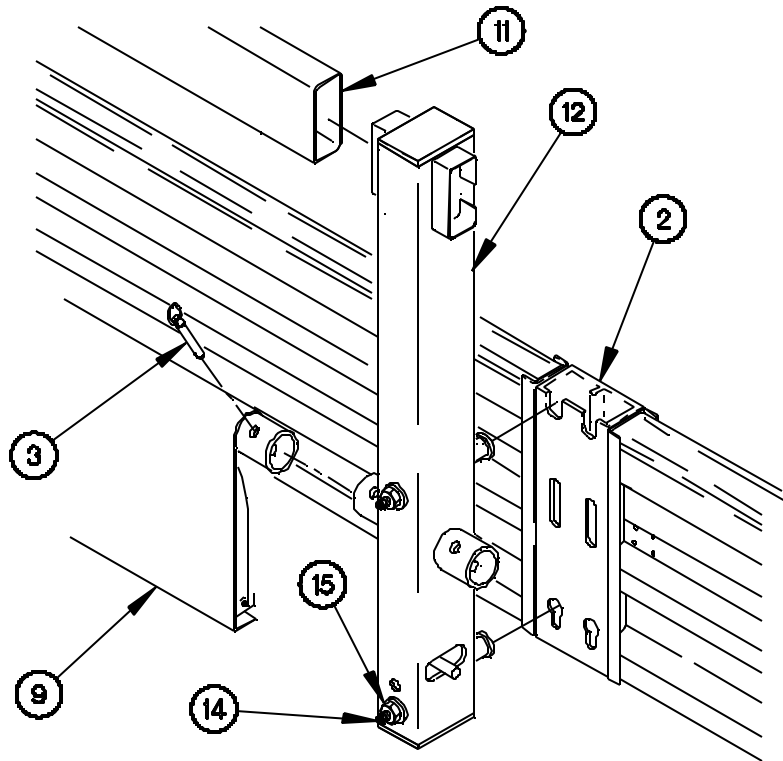

K600814-




**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**REMOVAL - Continued**

21. Remove backrest (11) from front seat post (5).
22. Remove quick release pin (10) from front seats (9).
23. Remove front seats (9) from front seat post (5).

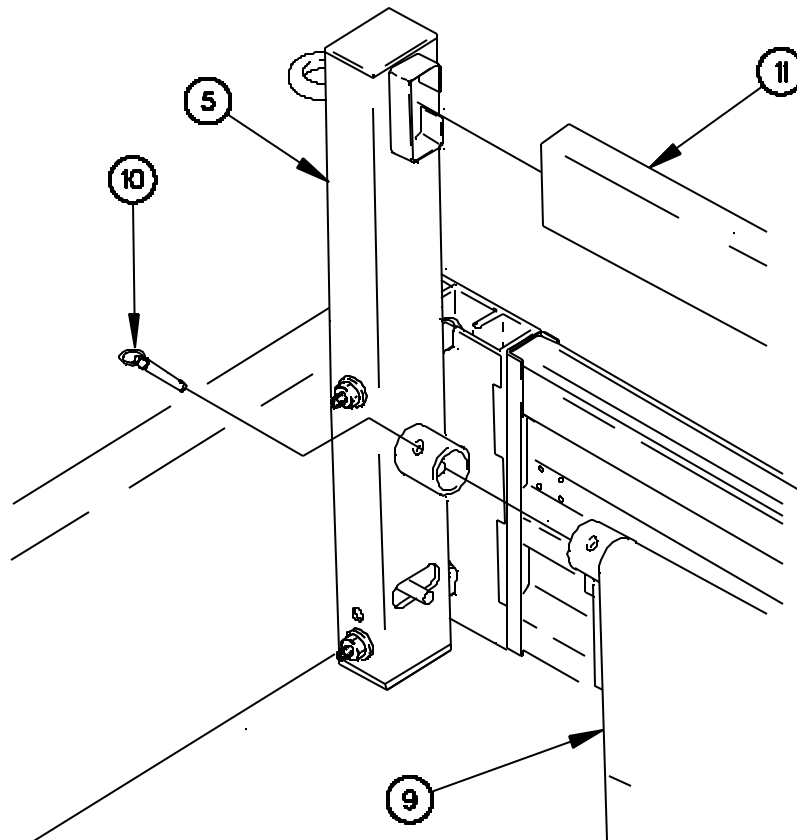


K600815-

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**

0110 00

**REMOVAL - Continued**

24. Hold two bolts (7).
25. Loosen two nuts (8) on bolts (7).
26. Remove front seat post (5) from front cargo bed stake (6).

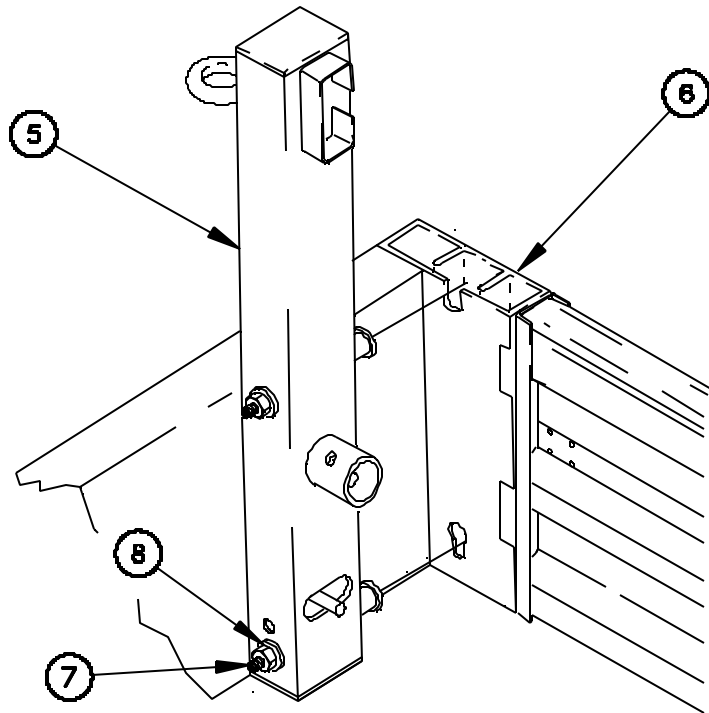

K600816-

---

**M1083A1/M1084A1 TROOPSEAT KIT  
INSTALLATION/REMOVAL - Continued**


---

0110 00

**REMOVAL - Continued****NOTE**

Left and right side bolts are removed from cargo bed stakes the same way.  
Right side shown.

27. Remove bolt (3) from rear cargo bed stake (4).
28. Remove bolt (1) from center cargo bed stake (2).

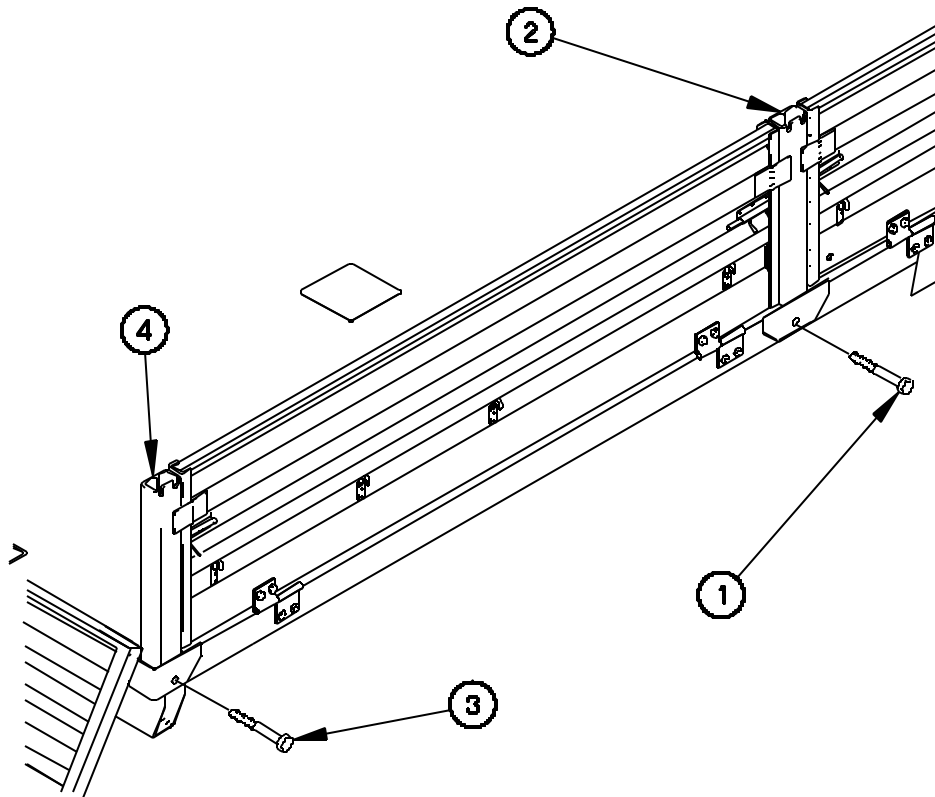

K600817-

**END OF WORK PACKAGE.**



---

**M1085A1 TROOPSEAT KIT INSTALLATION/REMOVAL 0111 00**

---

**THIS WORK PACKAGE COVERS:**

Installation, Removal

---

**INITIAL SETUP:**

**Maintenance Level**

Operator

**Tools and Special Tools**

Screwdriver, Flattip (Item 39, Table 2,  
WP 0117 00)

**Equipment Conditions**

Engine shut down (WP 0018 00).  
Wheels chocked (WP 0018 00).

Wrench, Adjustable (Item 51, Table 2,  
WP 0117 00)

**Personnel Required**

Two

---

**GENERAL**


This work package contains information and instructions to install and remove the M1085A1 Troopseat Kit.

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****INSTALLATION****NOTE**

Left and right side bolts are installed in cargo bed stakes the same way.  
Right side shown.

Steps 1 through 39 require the aid of an assistant.

1. Position bolt (1) in front center cargo bed stake (2).
2. Position bolt (3) in rear center cargo bed stake (4).
3. Position bolt (5) in rear cargo bed stake (6).

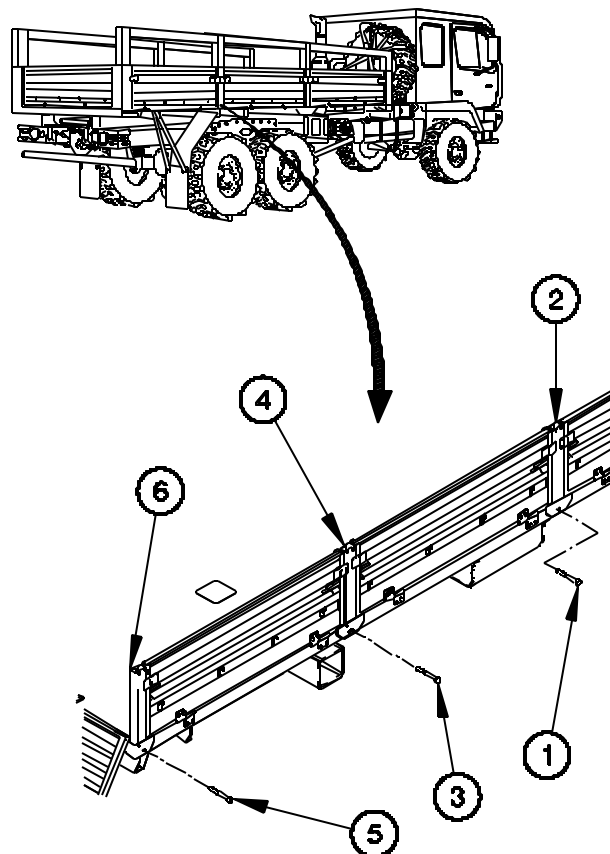

K700801-

---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****INSTALLATION - Continued****CAUTION**


Ensure seat post is flush with cargo bed floor prior to tightening bolts.  
Failure to comply may result in damage to equipment.

**NOTE**

There are six sets of seats. The two rear sets have two long seat panels.

Left and right troopseats are installed the same way. Right side shown.

4. Attach front seat post (7) to front cargo bed stake (8) with two bolts (9).

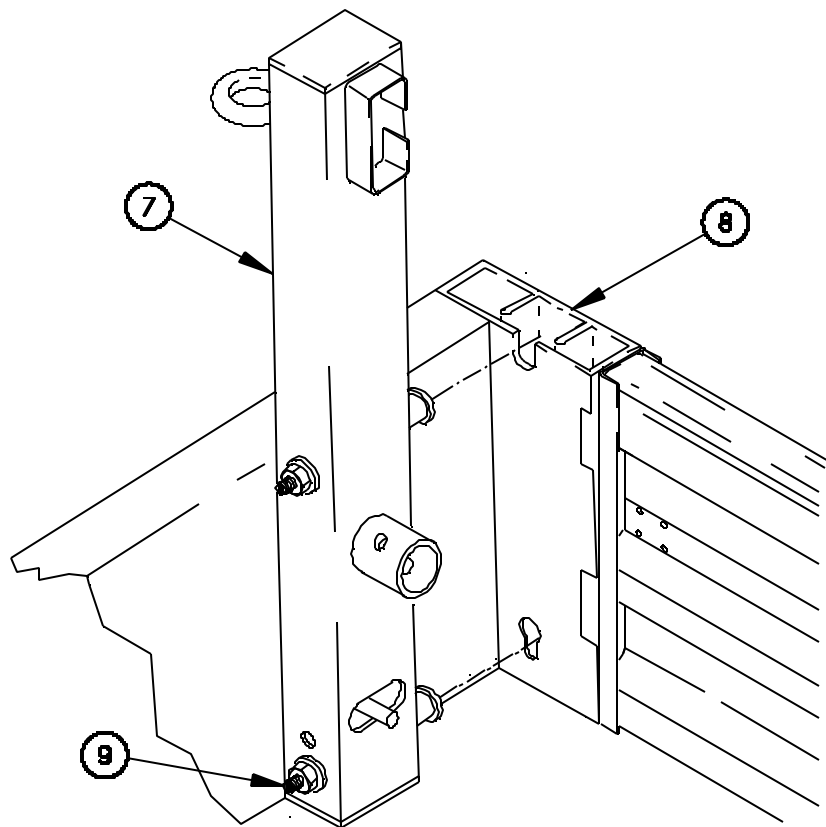


K700802-

# **M1085A1 TROOPSEAT KIT INSTALLATION/ REMOVAL - Continued**

0111 00

## **INSTALLATION - Continued**

5. Hold bolts (9).
6. Tighten two nuts (10) on bolts (9).
7. Install front seats (11) on front seat post (7).
8. Insert quick release pin (12) in front seats (11).
9. Install backrest (13) on front seat post (7).

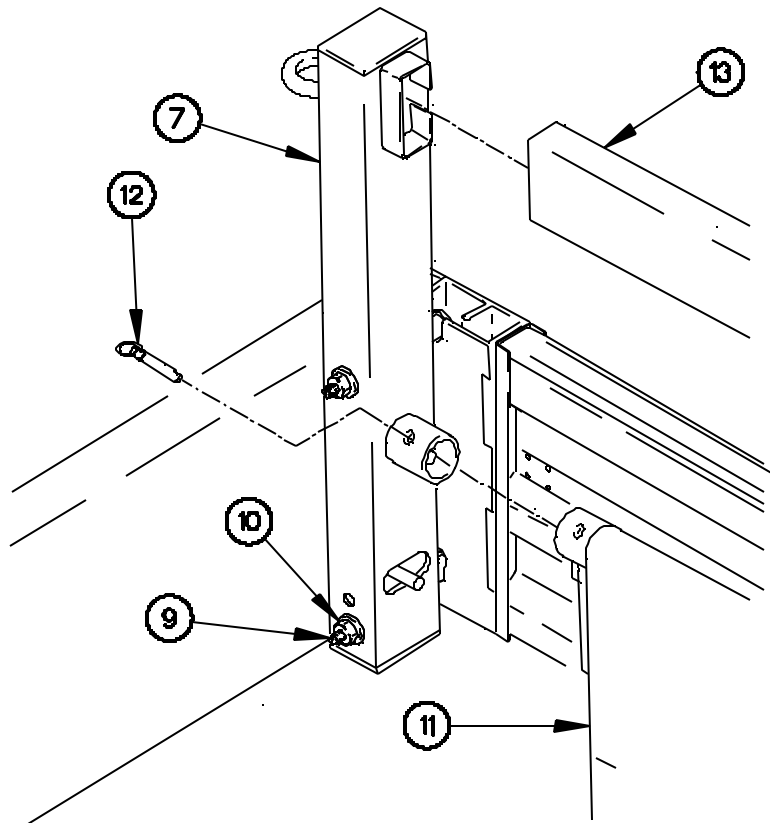


K700803-



**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****INSTALLATION - Continued**

10. Install front seats (11) on front center seat post (14).
11. Install backrest (13) on front center seat post (14).
12. Insert quick release pin (15) in front seats (11).
13. Attach front center seat post (14) to front center cargo bed stake (2) with two bolts (16).

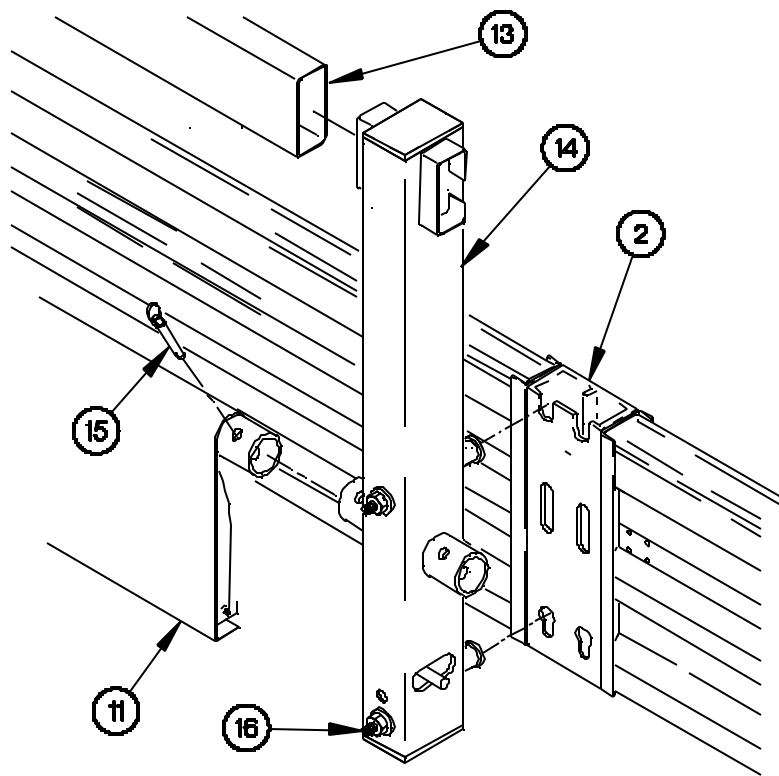


K700804-

# **M1085A1 TROOPSEAT KIT INSTALLATION/ REMOVAL - Continued**

0111 00

## **INSTALLATION - Continued**


14. Hold two bolts (16).
15. Install two nuts (17) on bolts (16).
16. Install center seats (18) on front center seat post (14).
17. Insert quick release pin (19) in center seats (18).
18. Install center backrest (20) on front center seat post (14).

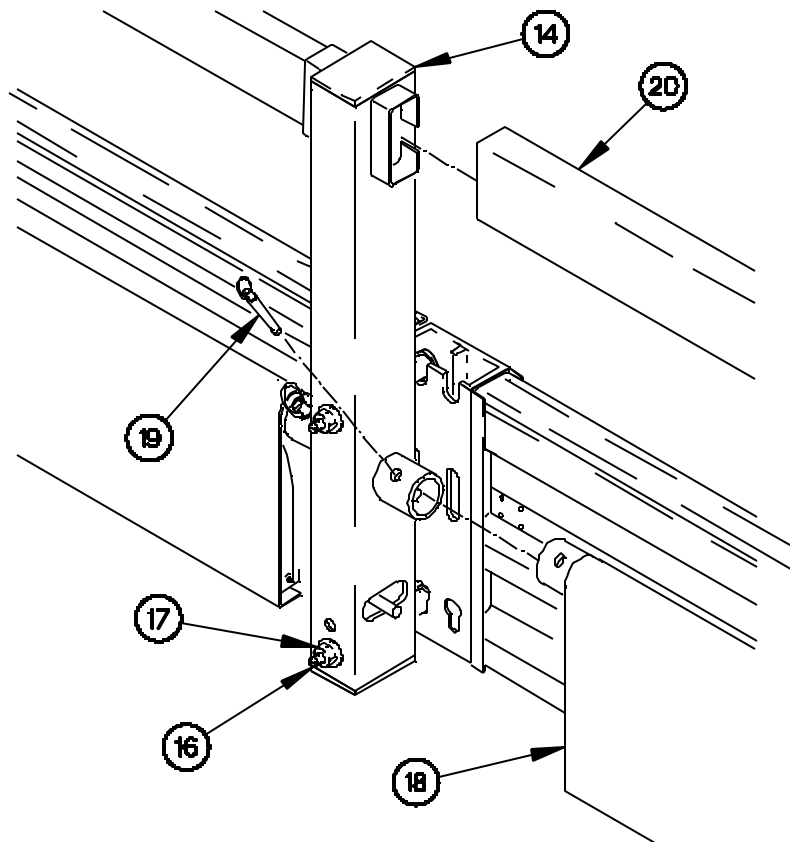

K700805-

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****INSTALLATION - Continued**

19. Install center seats (18) on rear center seat post (21).
20. Install center backrest (20) on rear center seat post (21).
21. Insert quick release pin (22) in center seats (18).
22. Install rear center seat post (21) on rear center cargo bed stake (4) with two bolts (23).
23. Hold two bolts (23).
24. Install two nuts (24) on bolts (23).

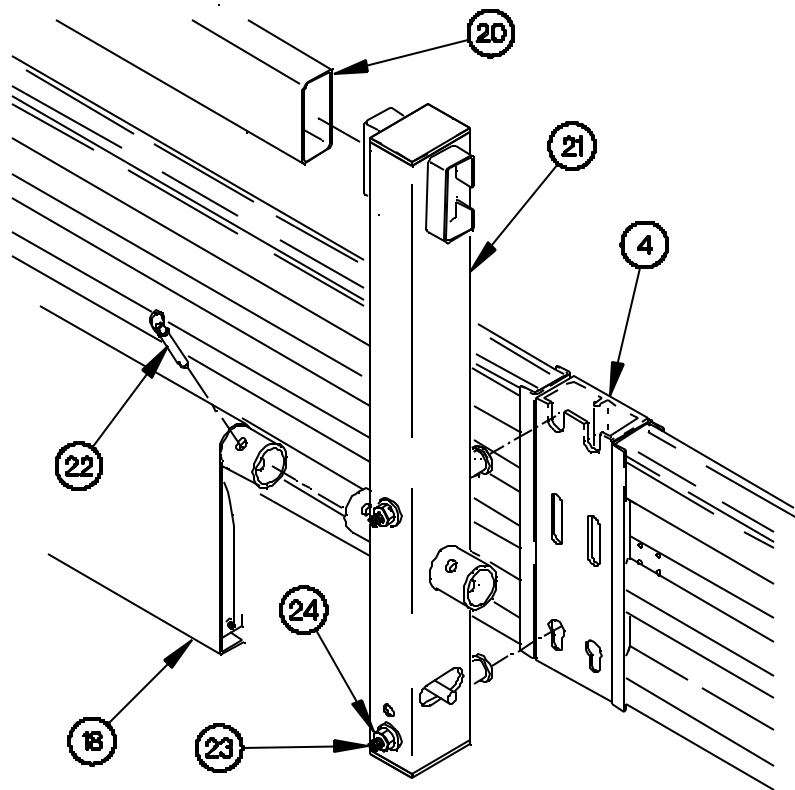

K700806-


---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****INSTALLATION - Continued**

25. Install rear seats (25) on rear center seat post (21).
26. Insert quick release pin (26) in rear seats (25).
27. Install rear backrest (27) on rear center seat post (21).

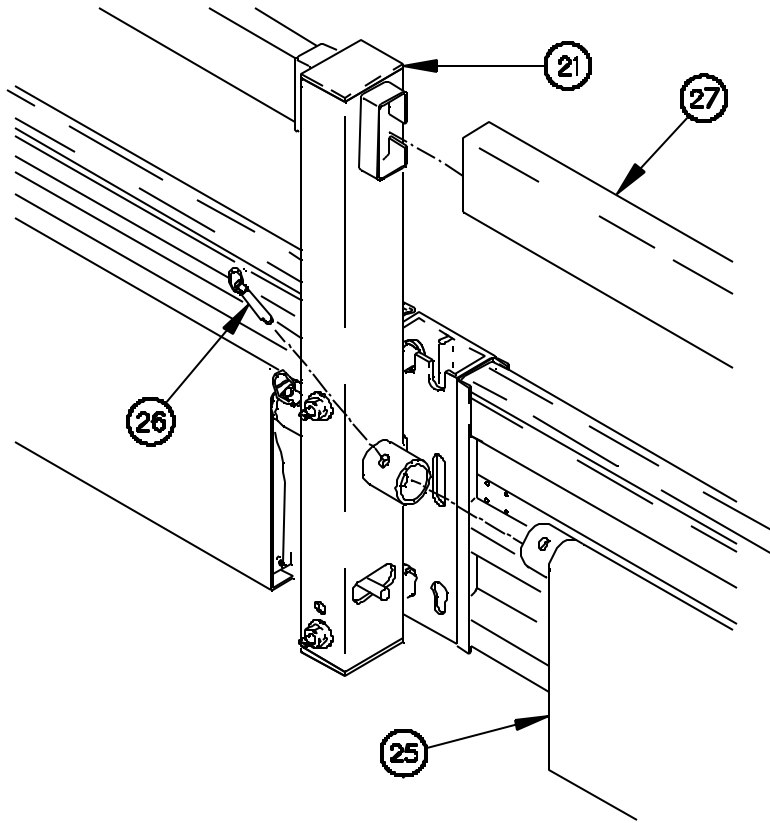

K700807-

---


**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****INSTALLATION - Continued****NOTE**

Perform the following two steps when installing rear seat post with boarding handle for the first time.


28. Remove two nuts (28), washers (29) and bolts (30) from rear seat post (31). Discard nuts and washers.

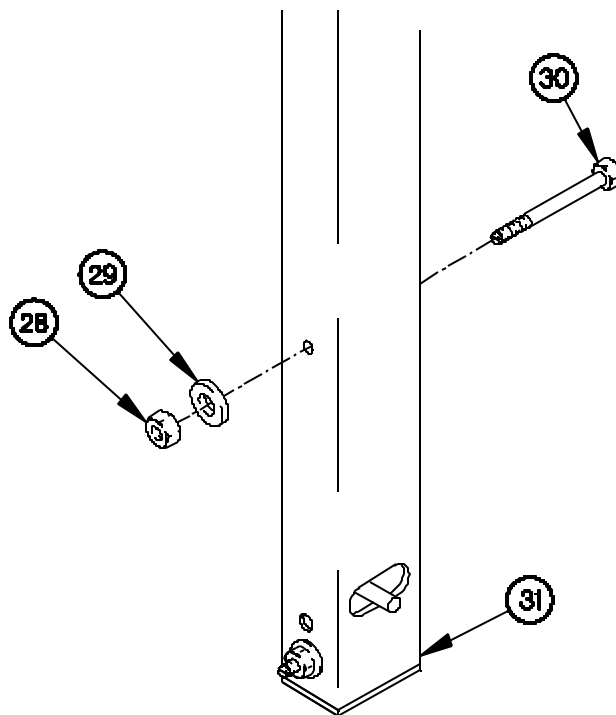

K 700822 -

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****INSTALLATION – Continued**

29. Position two bolts (30), gaskets (32), handle (33) and two nuts (34) on rear seat post (31).

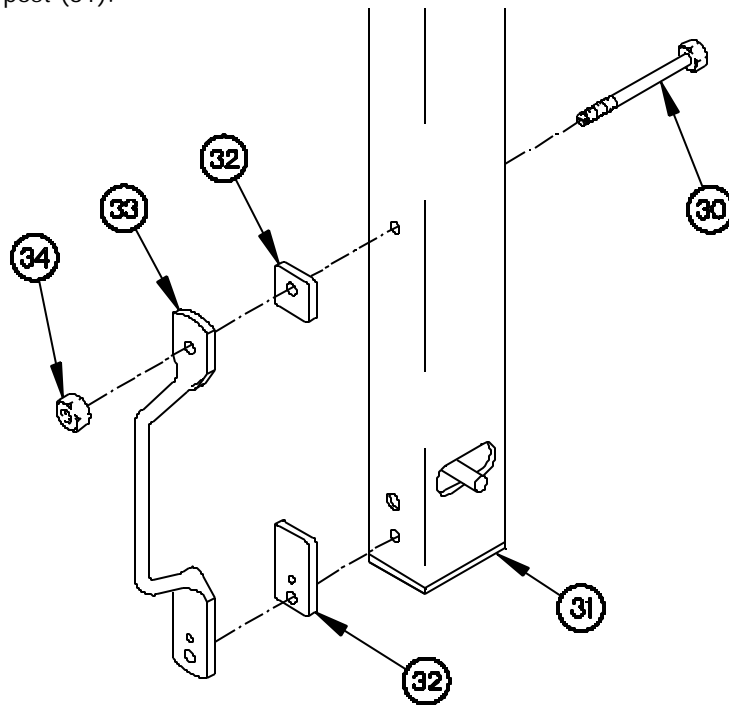

K 700823-

---


**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****INSTALLATION – Continued****NOTE**

Perform the following five steps on troop seat kits with boarding handles.

30. Install rear seat post (31) on backrest (27) and rear seats (25) >
31. Insert quick release pin (35) in rear seats (25).
32. Position rear seat post (31) to rear cargo bed stake (6) with two bolts (30).

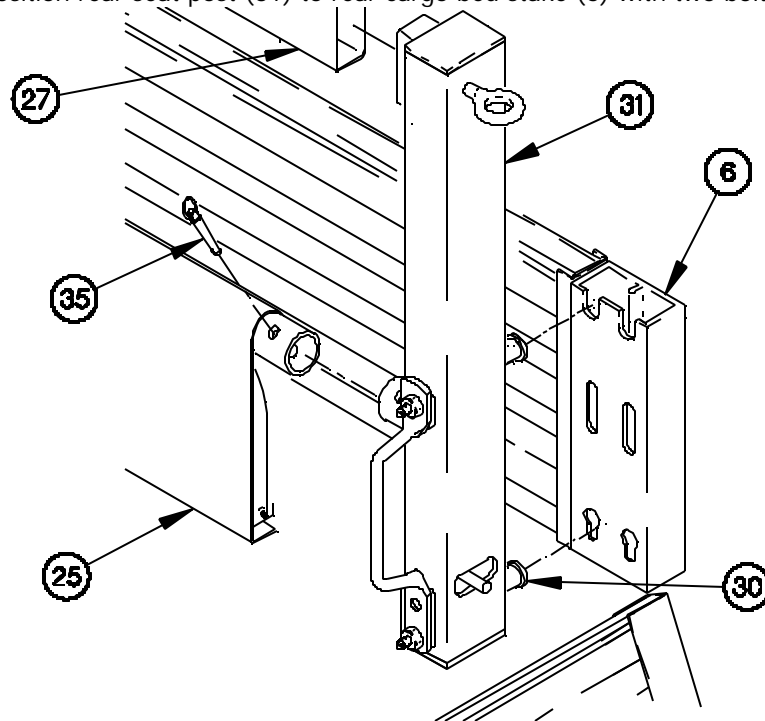

K 700824 -

# **M1085A1 TROOPSEAT KIT INSTALLATION/ REMOVAL - Continued**

0111 00


## **INSTALLATION – Continued**

### **NOTE**

Tighten two nuts (34) on bolts (30).

All four safety strap hooks are installed the same way. Right rear safety strap hook shown.

33. Install safety strap hook (36) in eyebolt (37).

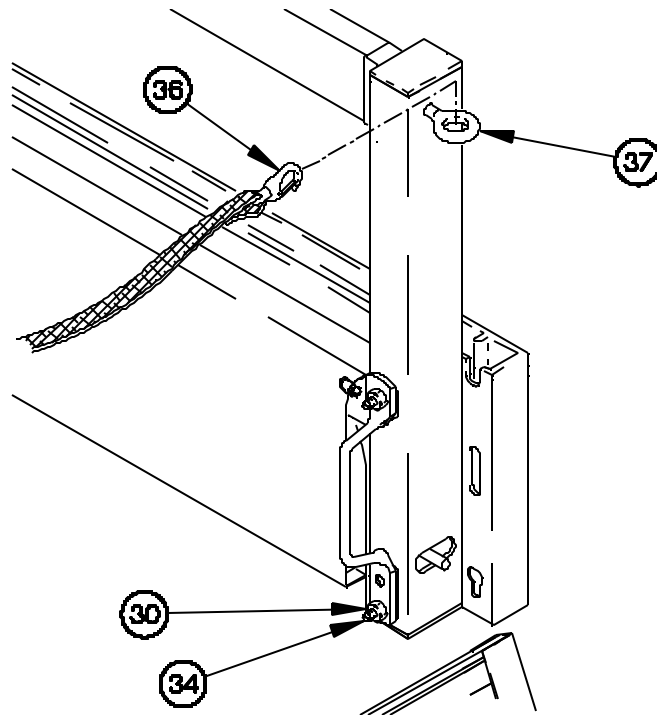


K 700825-



**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****INSTALLATION - Continued****NOTE**

Perform the following five steps on troop seat kit without boarding handles.

34. Install rear seats (25) on rear seat post (31).
35. Install rear backrest (27) on rear seat post (31).
36. Insert quick release pin (35) in rear seats (25).
37. Install rear seat post (31) to rear cargo bed stake (6) with two bolts (30).
38. Hold two bolts (30).
39. Install two nuts (28) on bolts (30).

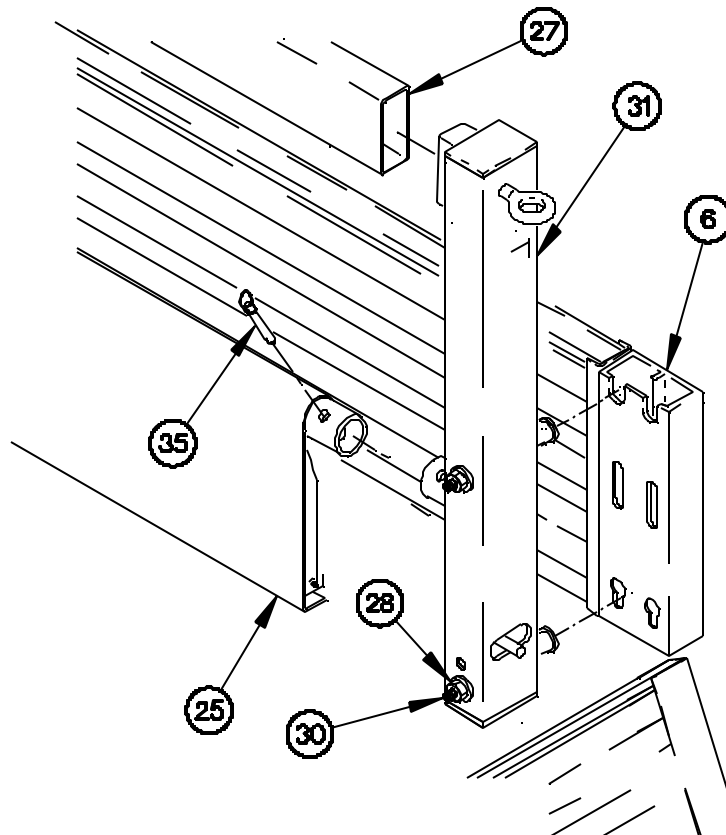

K700808-

# **M1085A1 TROOPSEAT KIT INSTALLATION/ REMOVAL - Continued**


0111 00

## **INSTALLATION - Continued**

### **NOTE**

Eyebolts are located on all corner seat posts. Right rear eyebolt shown.

40. Connect safety strap hook (36) in eyebolt (37).

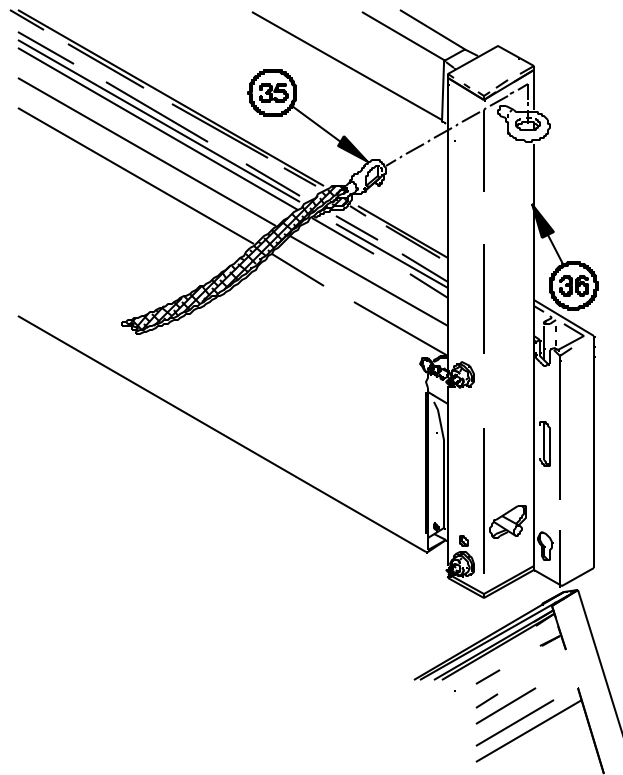

K700810-


---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****INSTALLATION - Continued**


41. Install alarm bracket (38) on cargo bed (39) with two knobs (40).
42. Notify Field Maintenance to install troop transport alarm cable assembly.

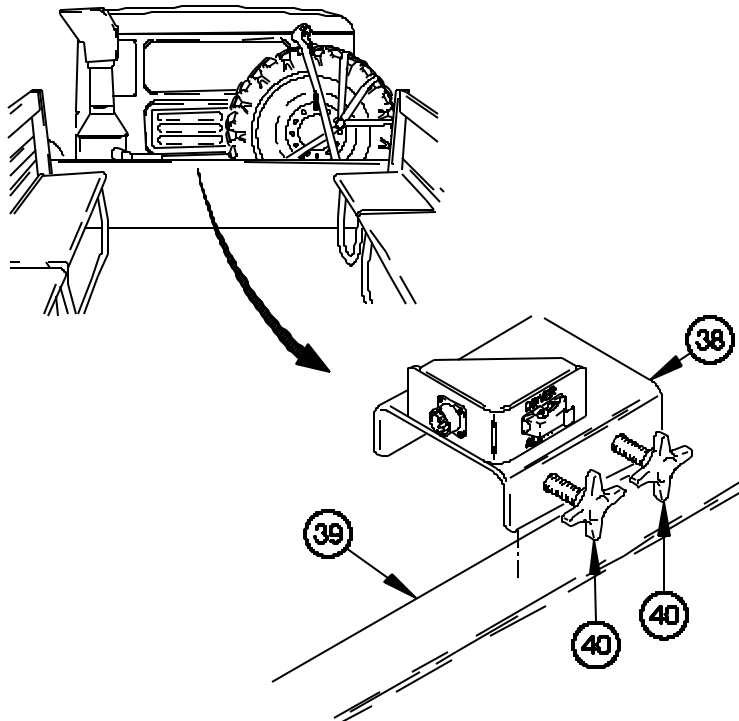

K700809-

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****INSTALLATION - Continued**

43. Notify Field Maintenance to tighten bolt (1), bolt (3), and bolt (5) to 46-57 lb-ft (62-77 N•m).

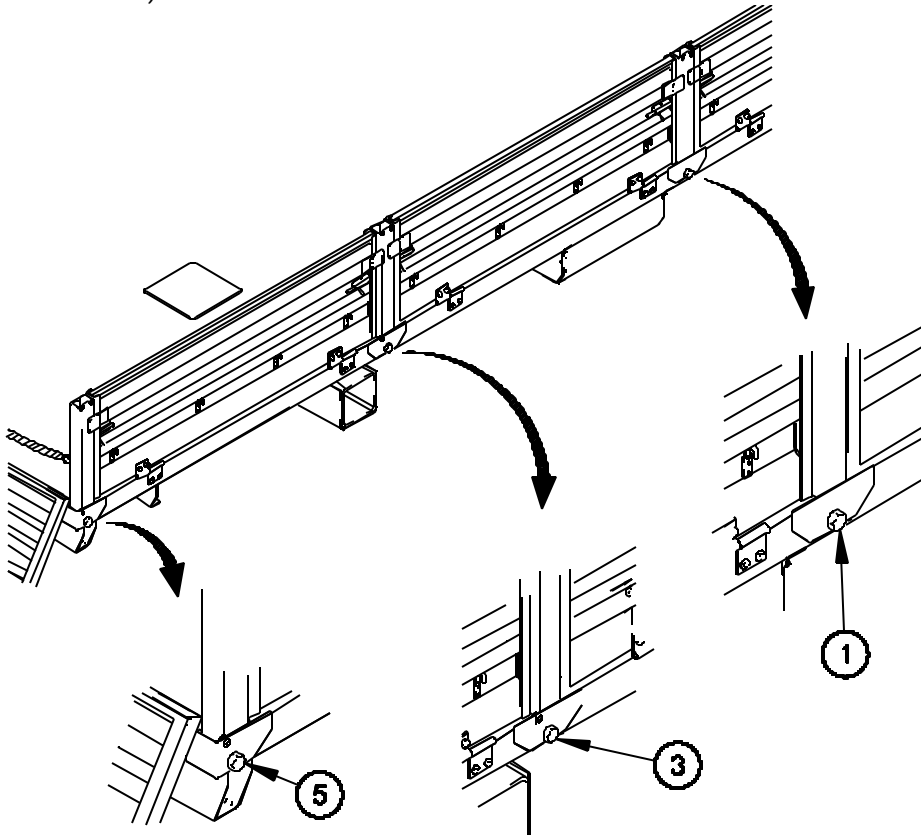

K700811-


---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL**

1. Notify Field Maintenance to remove troop transport alarm cable assembly.
2. Loosen two knobs (40) on alarm bracket (38).
3. Remove alarm bracket (38) from cargo bed (39).

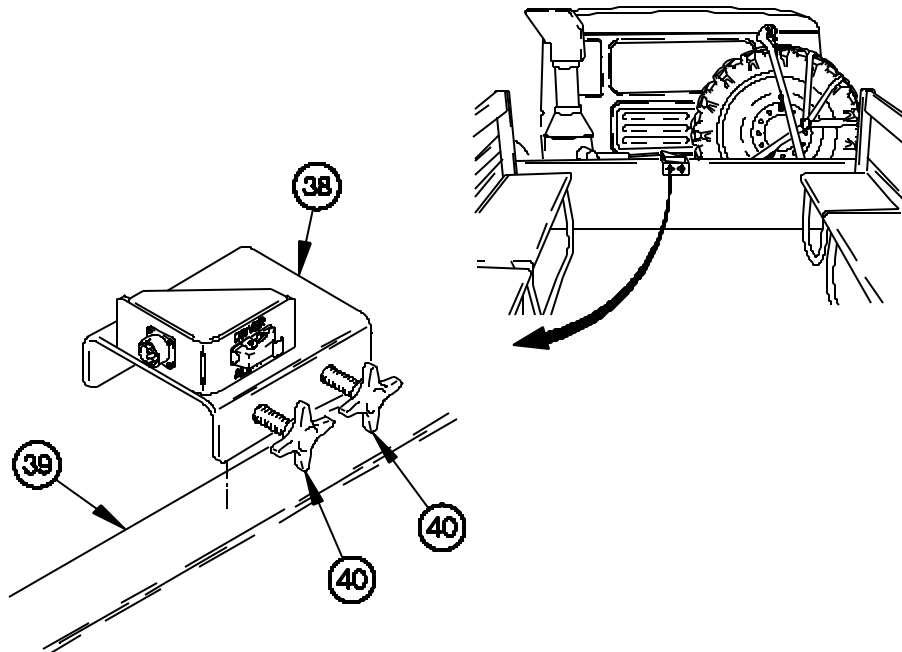

K700812-

---


**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL - Continued****NOTE**

Eyebolts are located on all corner seat posts. Right rear eyebolts shown.

4. Remove safety strap hook (36) from eyebolt (37).

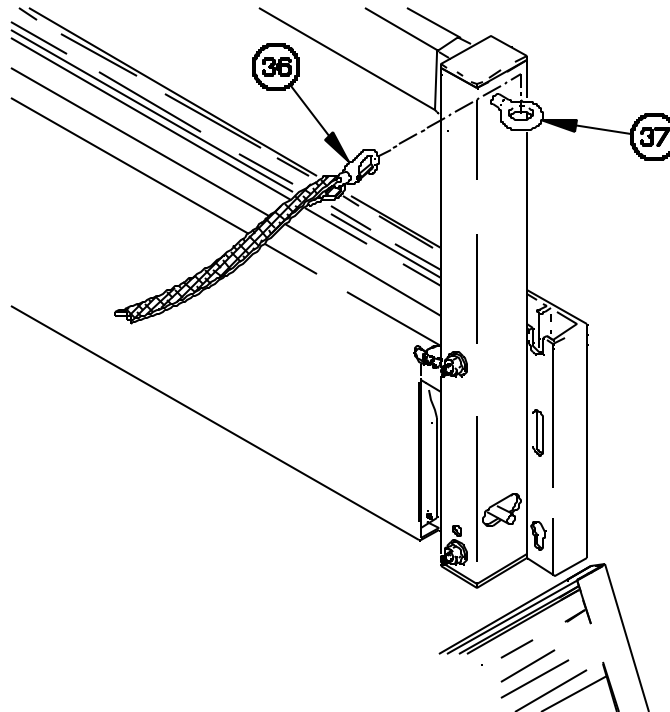

K700813-

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****REMOVAL - Continued****NOTE**

Right and left side troopseats are removed the same way. Right side shown.

Steps 5 through 34 require the aid of an assistant.

If seatpost is equipped with spring locking pin, spring locking pin must be pulled back to release seat from cargo bed stake.


All spring locking are released the same way. Right rear spring locking pin shown.

5. Remove quick release pin (35) from rear seats (25).

**NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

6. Hold two bolts (30) and loosen two nuts (28) on bolts (30).
7. Pull back on spring locking pin (41).
8. Remove rear seat post (31) from rear cargo bed stake (6), backrest (27), and rear seats (25).

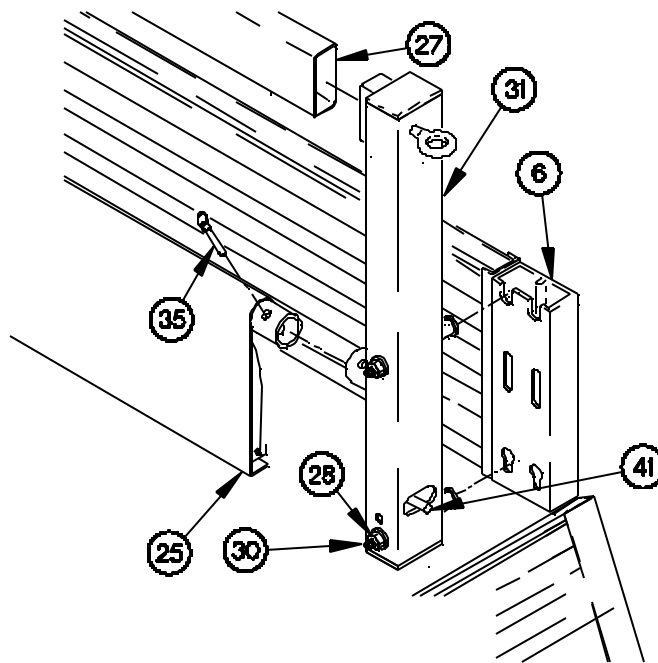

K700B14-

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued****0111 00****REMOVAL - Continued****NOTE**

Perform the following four steps if rear seat post is equipped with boarding handle.


Left and right troopseats are removed the same way. Right side shown.

9. Remove quick release pin (35) from rear seats (25).

**NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

10. Hold two bolts (30) and loosen two nuts (34).
11. Pull back on spring locking pin (41).
12. Remove rear seat post (31) from rear cargo bed stake (6), backrest (27), and rear seats (25).

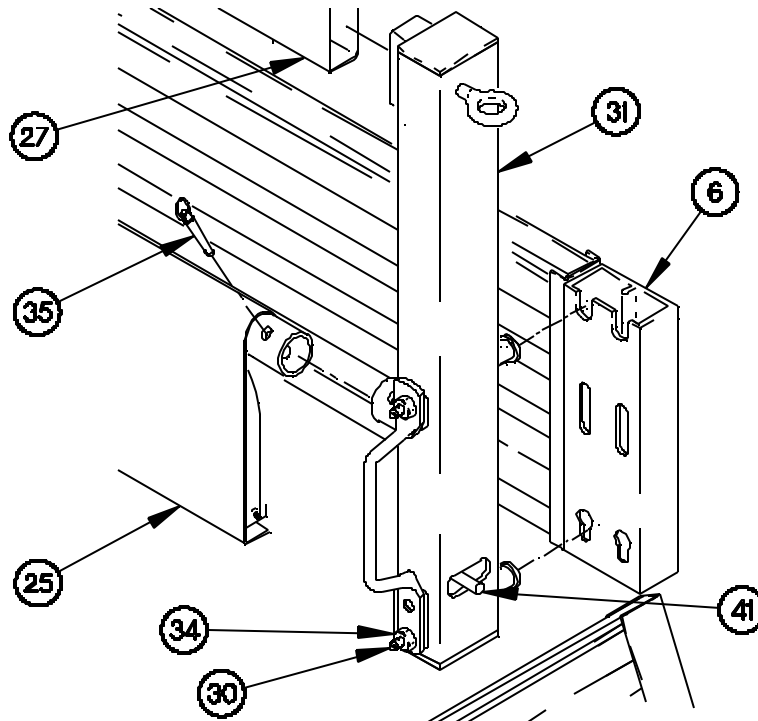

K 700826 -



---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**


---

**0111 00****REMOVAL - Continued****NOTE**

If seat post is equipped with spring locking pin, spring locking pin must be pulled back to release seat post from cargo bed stake.

All spring locking pins are released the same way. Right rear spring locking pin shown.

13. Remove rear backrest (27) from rear center seat post (21).
14. Remove quick release pin (26) from rear seats (25).
15. Remove rear seats (25) from rear center seat post (21).

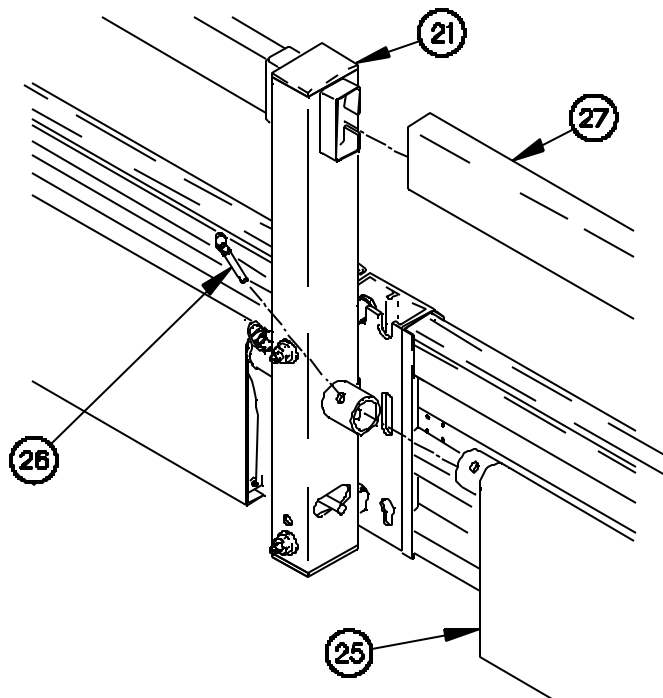

K700815-

---


**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL - Continued****NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

16. Hold two bolts (23).
17. Loosen two nuts (24) on bolts (23).
18. Remove rear center seat post (21) from rear center cargo bed stake (4).
19. Remove quick release pin (22) from center seats (18).
20. Remove rear center seat post (21) from center backrest (20) and center seats (18).

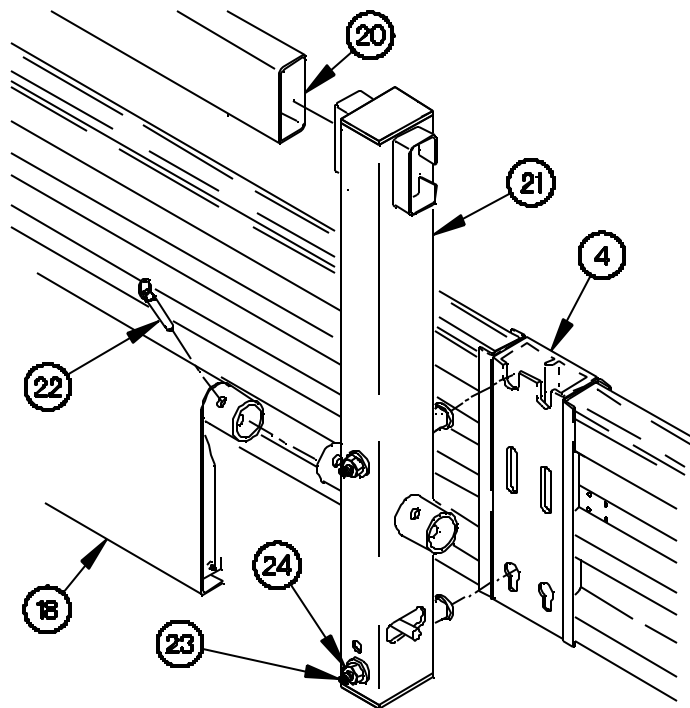

K700816-


---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL - Continued**

21. Remove center backrest (20) from front center seat post (14).
22. Remove quick release pin (19) from center seats (18).
23. Remove center seats (18) from front center seat post (14).
24. Hold two bolts (16).
25. Loosen two nuts (17) on bolts (16).

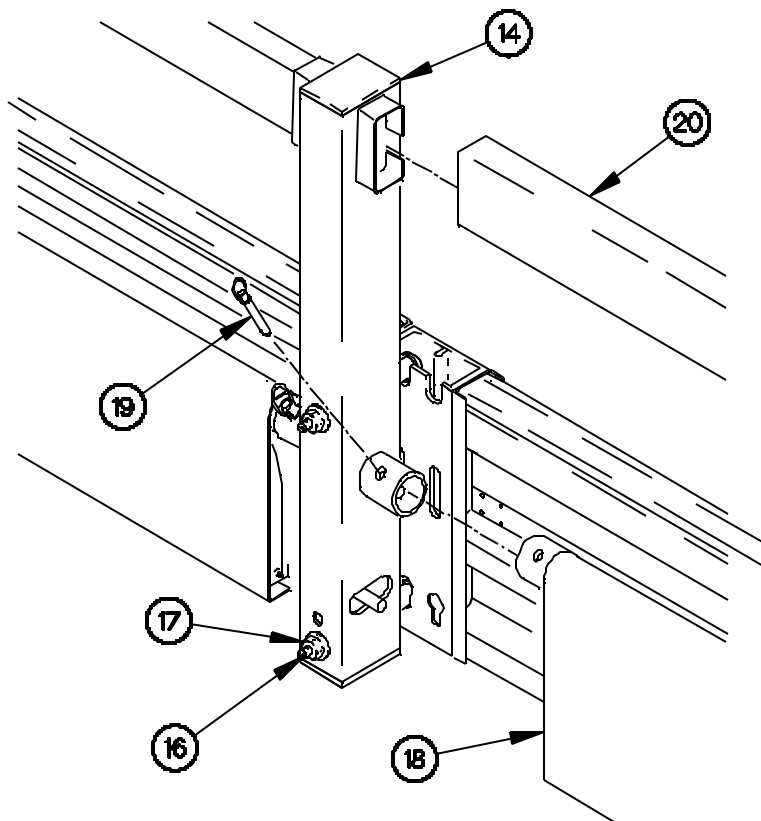

K700B17-


---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL - Continued**

26. Remove front center seat post (14) from front center cargo bed stake (2).
27. Remove quick release pin (15) from front seats (11).
28. Remove front center seat post (14) from backrest (13) and front seats (11).

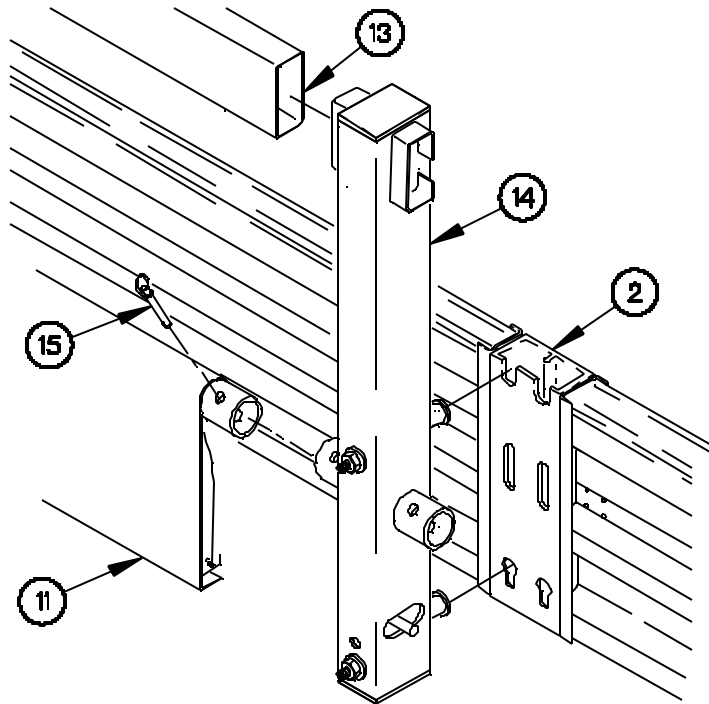


K700818-

# **M1085A1 TROOPSEAT KIT INSTALLATION/ REMOVAL - Continued**

0111 00

## **REMOVAL - Continued**

29. Remove backrest (13) from front seat post (7).
30. Remove quick release pin (12) from front seats (11).
31. Remove front seats (11) from front seat post (7).

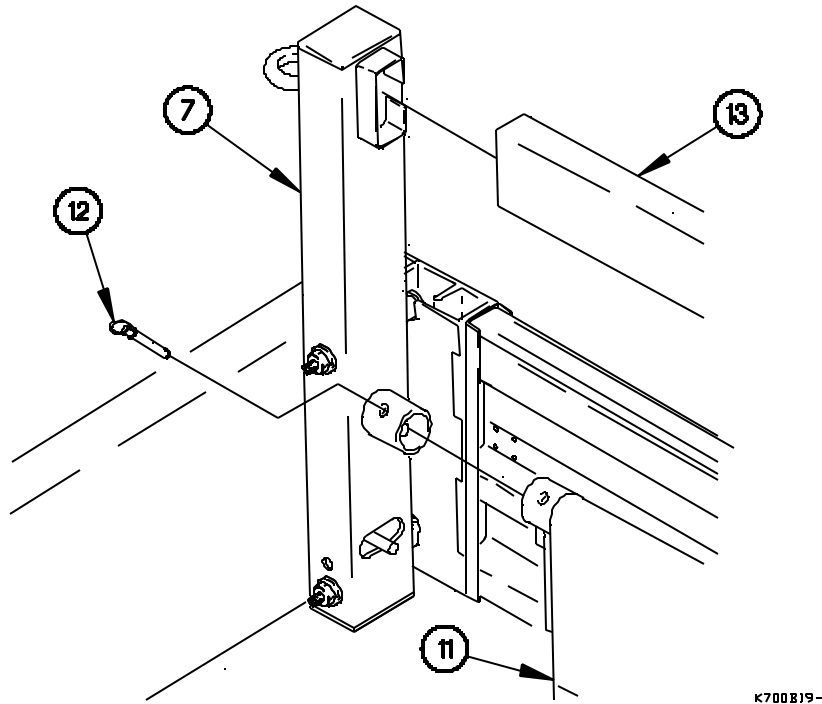

K700819-


---

**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL - Continued**

32. Hold two bolts (9).
33. Loosen two nuts (10) on bolts (9).
34. Remove front seat post (7) from front cargo bed stake (8).

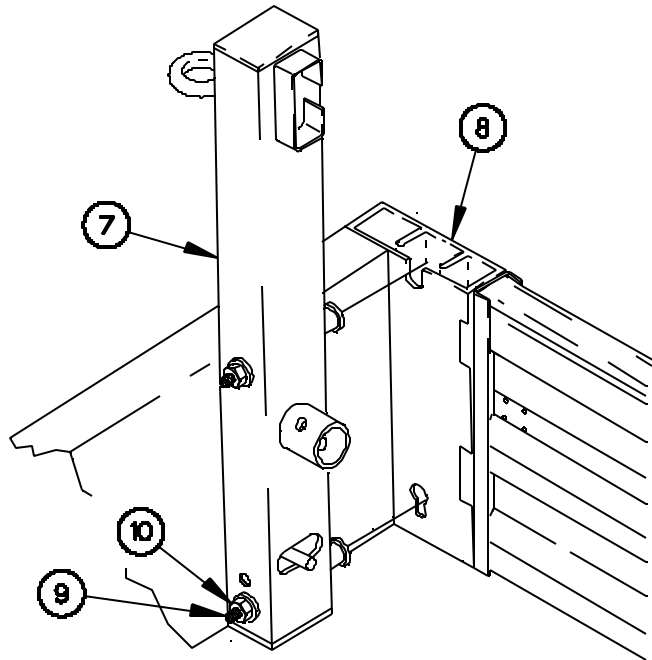

K700820-

---


**M1085A1 TROOPSEAT KIT INSTALLATION/  
REMOVAL - Continued**

---

**0111 00****REMOVAL - Continued****NOTE**

Left and right side bolts are removed from cargo bed stakes the same way.  
Right side shown.

35. Remove bolt (5) from rear cargo bed stake (6).
36. Remove bolt (3) from rear center cargo bed stake (4).
37. Remove bolt (1) from front center cargo bed stake (2).

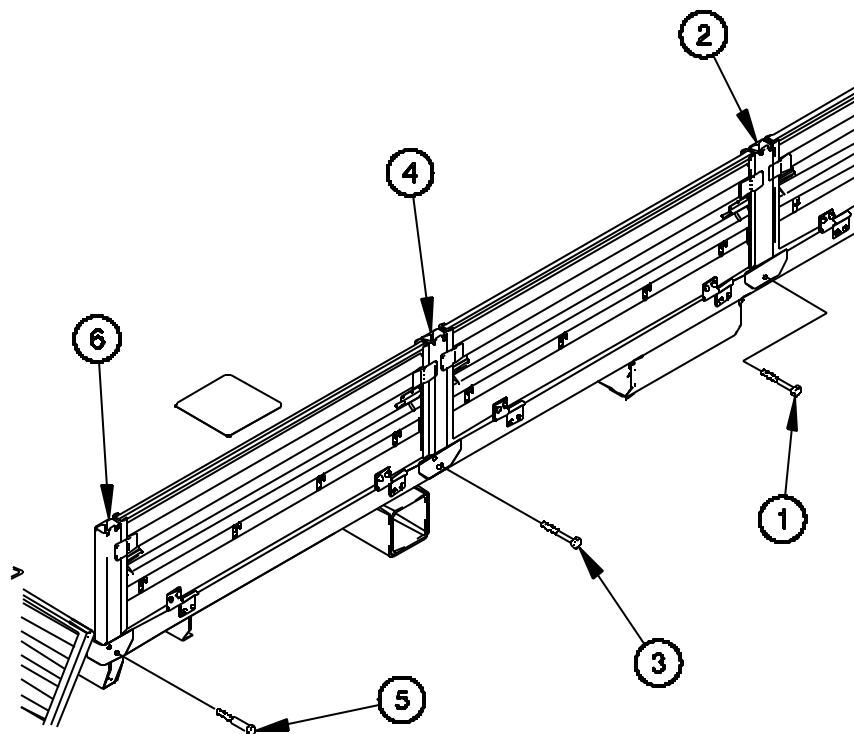

K700821-

**END OF WORK PACKAGE.**





---

**M1090A1 TROOPSEAT KIT INSTALLATION/REMOVAL 0112 00**

---

**THIS WORK PACKAGE COVERS:**

Installation, Removal

---

**INITIAL SETUP:**

**Maintenance Level**

Operator

**Tools and Special Tools**

Screwdriver, Flattip (Item 39, Table 2  
WP 0117 00)

**Equipment Conditions**

Engine shut down (WP 0018 00).  
Wheels chocked (WP 0018 00).

Wrench, Adjustable (Item 51,  
Table 2, WP 0117 00)

**Personnel Required**

Two

---

**GENERAL**

This work package contains information and instructions to install and remove the M1090A1 Troopseat Kit.

**INSTALLATION**

**CAUTION**


Ensure seat post is flush with dump body floor prior to tightening bolts.  
Failure to comply may result in damage to equipment.

**NOTE**

Left and right troopseats are installed the same way. Right side shown.

Steps 1 through 17 require the aid of an assistant.

1. Install three dump body stakes (1) in dump body (2).

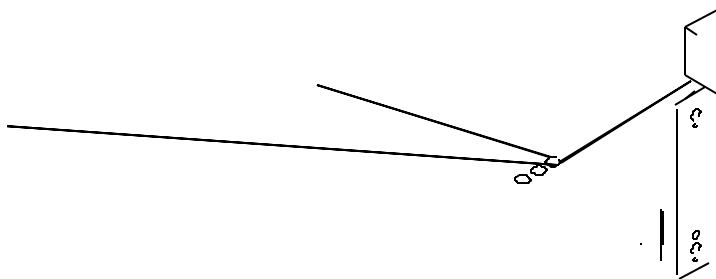


# **M1090A1 TROOPSEAT KIT INSTALLATION/ - REMOVAL Continued**

0112 00


## **INSTALLATION - Continued**

2. Install three bolts (3) from outside of dump body (2) into three dump body stakes (1).

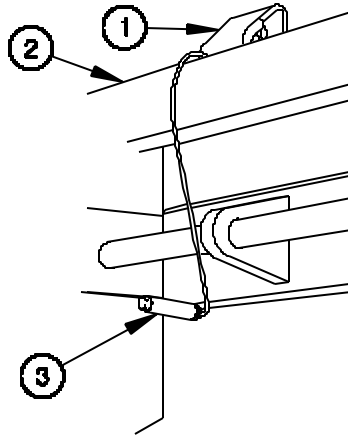

K800B17-

3. Install front seat post (4) to front dump body stake (1) with two bolts (5).
4. Hold two bolts (5).
5. Install two nuts (6) on bolts (5).
6. Install front seats (7) on front seat post (4).
7. Insert quick release pin (8) in front seats (7).
8. Install backrest (9) on front seat post (4).

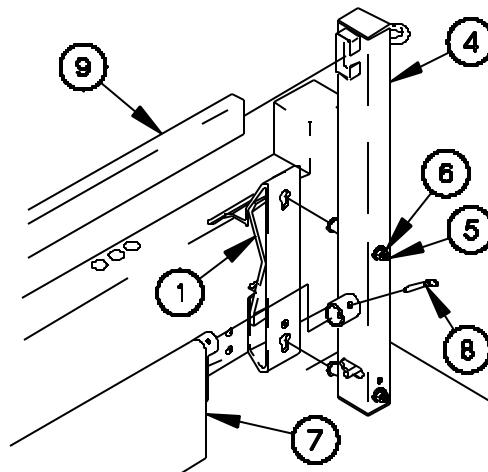


K800B02-

# **M1090A1 TROOPSEAT KIT INSTALLATION/ - REMOVAL Continued**

0112 00


## **INSTALLATION - Continued**

9. Install center seat post (10) on backrest (9) and front seats (7).
10. Insert quick release pin (11) in front seats (7).

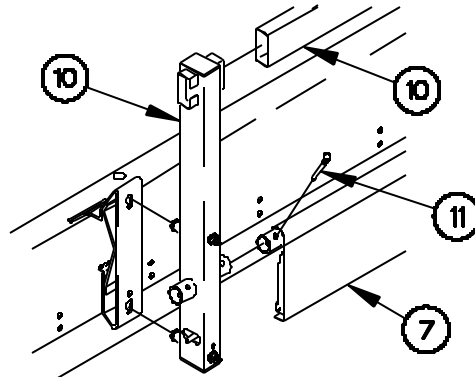

K800803-


11. Install center seat post (10) to center dump body stake (1) with two bolts (12).
12. Hold two bolts (12).
13. Install two nuts (13) on bolts (12).

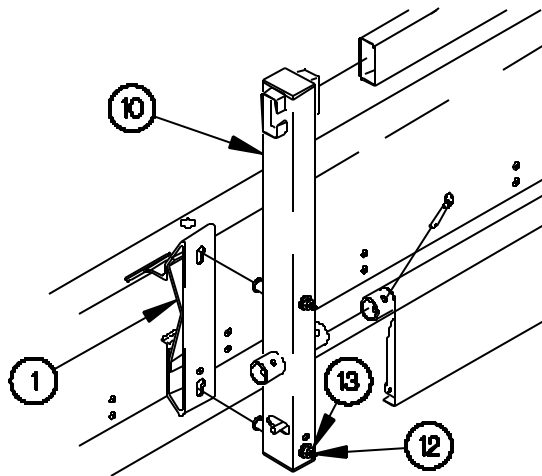

K800804-

**M1090A1 TROOPSEAT KIT INSTALLATION/ -  
REMOVAL Continued****0112 00****INSTALLATION - Continued**


14. Install rear seats (14) on center seat post (10).
15. Insert quick release pin (15) in rear seats (14).
16. Install backrest (16) on center seat post (10).

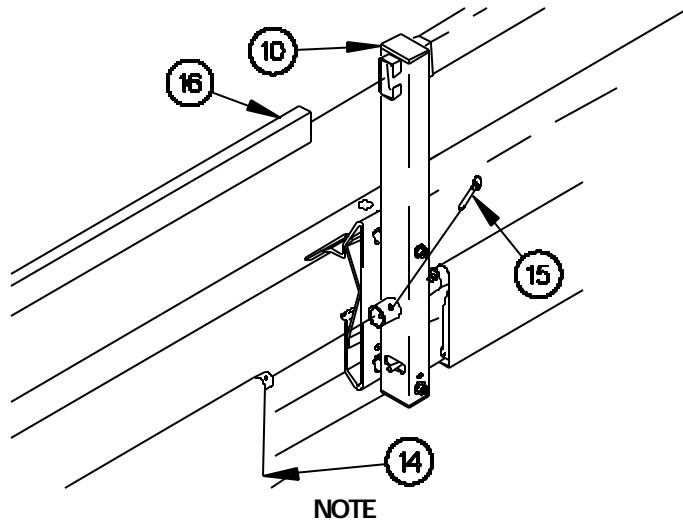

K800805-

Perform the following two steps when installing rear seat post with boarding handle for the first time.

17. Remove two nuts (17), washers (18) and bolts (19) from rear seat post (20). Discard nuts and washers.

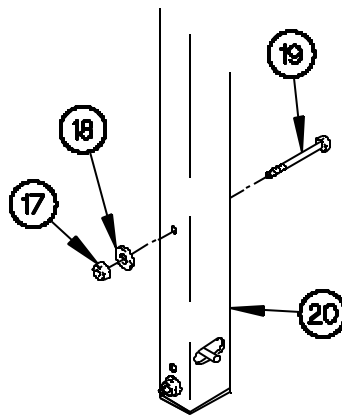


K800818-

# **M1090A1 TROOPSEAT KIT INSTALLATION/ - REMOVAL Continued**

0112 00

## **INSTALLATION - Continued**

18. Position two bolts (20), gaskets (21), handle (22), and two nuts (23) on rear seat post (20).

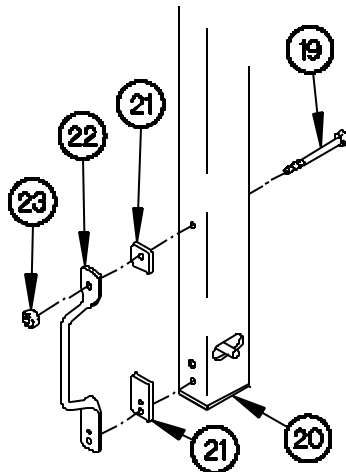


K800819-

### **NOTE**

Perform the following five steps on troop seat kits with boarding handles.

19. Install rear seat post (20) on backrest (16) and rear seats (14).
20. Insert quick release pin (24) in rear seats (14).
21. Position rear seat post (20) to rear cargo bed stake (1) with two bolts (19).

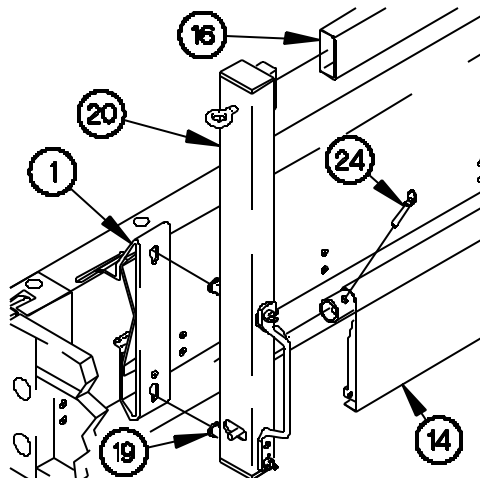

K800820-

# **M1090A1 TROOPSEAT KIT INSTALLATION/ - REMOVAL Continued**

0112 00


## **INSTALLATION - Continued**

22. Tighten two nuts (23) on bolts (19).

### **NOTE**

All four safety strap hooks are installed the same way. Right rear safety strap hook shown.

23. Install safety strap hook (25) in eyebolt (26).

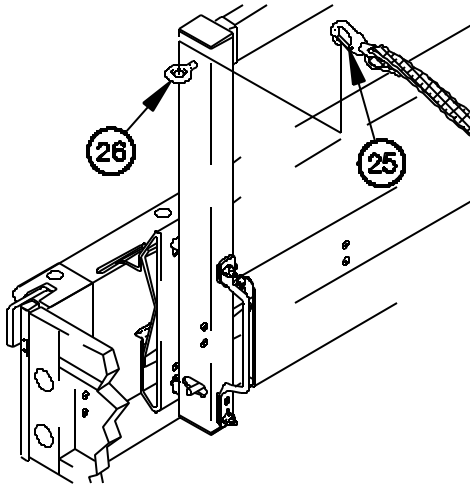

K800821 -

---


**M1090A1 TROOPSEAT KIT INSTALLATION/ -  
REMOVAL Continued**

---

**0112 00****INSTALLATION - Continued****NOTE**

Perform the following five steps on troopseat kit without boarding handles.

24. Install rear seat post (20) on backrest (16) and rear seats (14).
25. Insert quick release pin (24) in rear seats (14).
26. Install rear seat post (20) to rear dump body stake (1) with two bolts (19).
27. Hold two bolts (19) with screwdriver.
28. Install two nuts (17) on bolts (19).

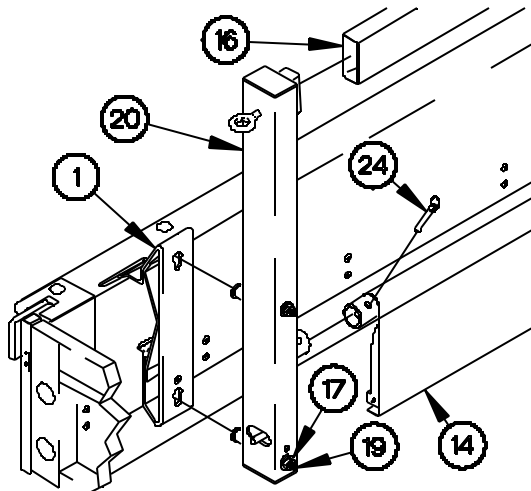


K800806-

**M1090A1 TROOPSEAT KIT INSTALLATION/ -  
REMOVAL Continued****0112 00****INSTALLATION - Continued****NOTE**


Eyebolts are located on all corner seat posts. Left rear eyebolt shown.

29. Connect safety strap hook (25) in eyebolt (26).

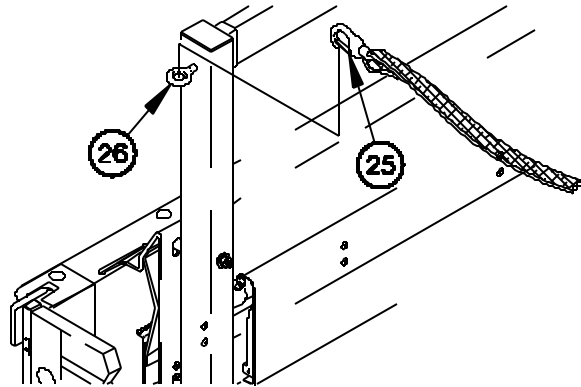

K800B07-

30. Install alarm bracket (27) on cab protector (28) with two knobs (29).
31. Notify Field Maintenance to install troop transport alarm cable assembly.

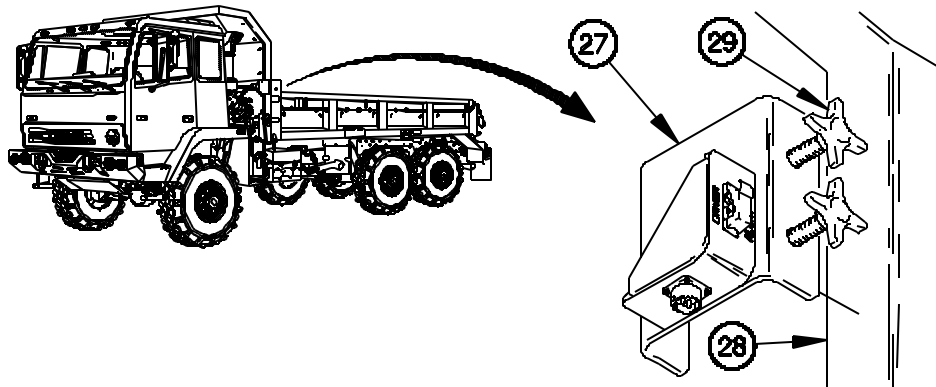


K800B08-



**M1090A1 TROOPSEAT KIT INSTALLATION/ -  
REMOVAL Continued****0112 00****REMOVAL**


1. Notify Field Maintenance to remove troop transport alarm cable assembly.
2. Loosen two knobs (29) on alarm bracket (27).
3. Remove alarm bracket (27) from cab protector (28).

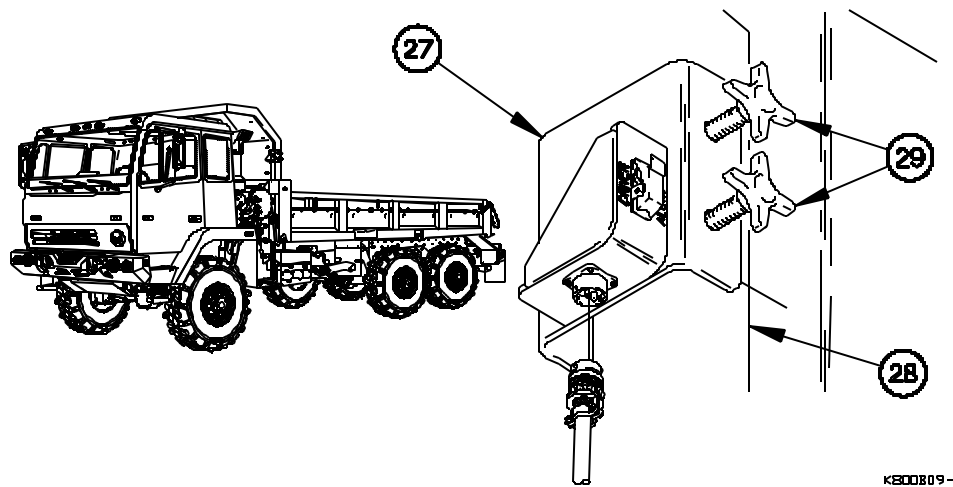**NOTE**

Left and right troopseats are removed the same way. Left side shown.

Eyebolts are located on all corner seat posts. Left rear eyebolt shown.

4. Remove safety strap hook (25) from eyebolt (26).

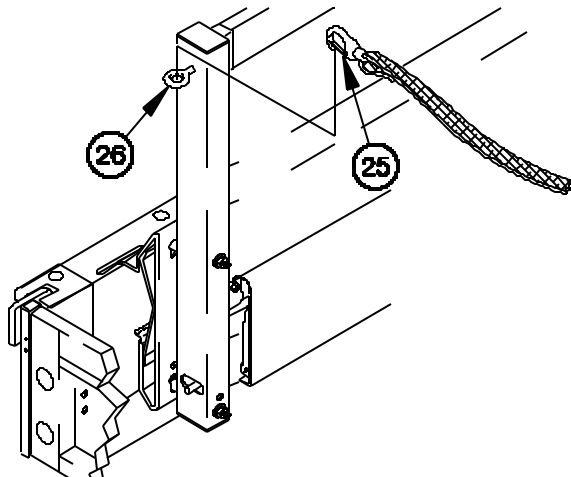

---

**M1090A1 TROOPSEAT KIT INSTALLATION/ -**  
**REMOVAL Continued**

---


**0112 00****REMOVAL – Continued****NOTE**

Steps 5 through 17 require the aid of an assistant.

If seat post is equipped with spring locking pin, spring locking pin must be pulled back to release seat post from cargo bed stake.

All spring locking pins are released the same way. Left rear spring locking pin shown.

5. Remove quick release pin (24) from rear seats (14).

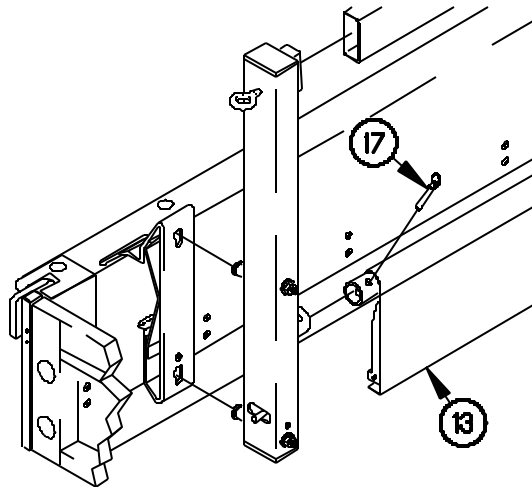

K800B11 -

---


**M1090A1 TROOPSEAT KIT INSTALLATION/ -**  
**REMOVAL Continued**

---

**0112 00****REMOVAL - Continued****NOTE**

Loosen nuts enough to remove seat post from stake pocket.

6. Hold two bolts (19) and loosen two nuts (17) on bolts (19)..
7. Pull back on spring locking pin (30).
8. Remove rear seat post (20) from rear dump body stake (1), backrest (16), and rear seats (14).

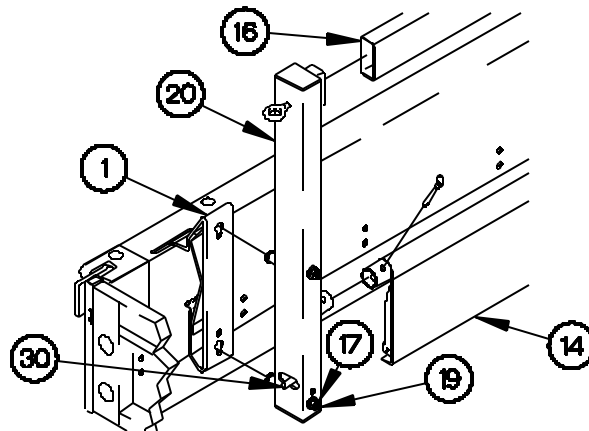

K800812-

---

**M1090A1 TROOPSEAT KIT INSTALLATION/ -**  
**REMOVAL Continued**

---

**0112 00****REMOVAL - Continued****NOTE**

Perform the following four steps if rear seat post is equipped with boarding handle.


Left and right troopseats are removed the same way. Left side shown.

9. Remove quick release pin (24) from rear seats (14).

**NOTE**

Loosen nuts enough to remove seat post from cargo bed stake.

10. Hold two bolts (19) and loosen two nuts (23).
11. Pull back on spring locking pin (30).
12. Remove rear seat post (20) from rear cargo bed stake (1), backrest (16), and rear seats (14).

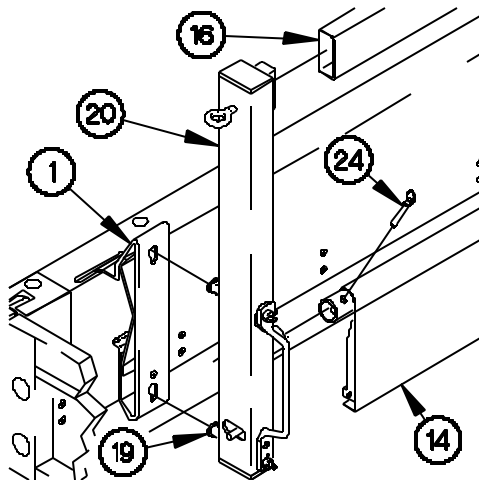

K500820-


---

**M1090A1 TROOPSEAT KIT INSTALLATION/ -  
REMOVAL Continued**

---

**0112 00****REMOVAL - Continued**

13. Remove backrest (16) from center seat post (10).
14. Remove quick release pin (15) from rear seats (14).
15. Remove rear seats (14) from center seat post (10).

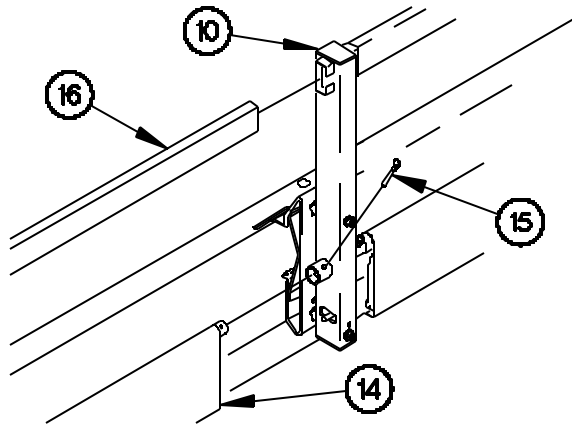


K800813-

**M1090A1 TROOPSEAT KIT INSTALLATION/ -  
REMOVAL Continued****0112 00****REMOVAL - Continued****NOTE**

Loosen nuts enough to remove seat post from dump body stake.

16. Hold two bolts (12).
17. Loosen two nuts (13) on bolts (12).
18. Remove center seat post (10) from center dump body stake (1).
19. Remove quick release pin (11) from front seats (7).
20. Remove center seat post (10) from backrest (8) and front seats (7).

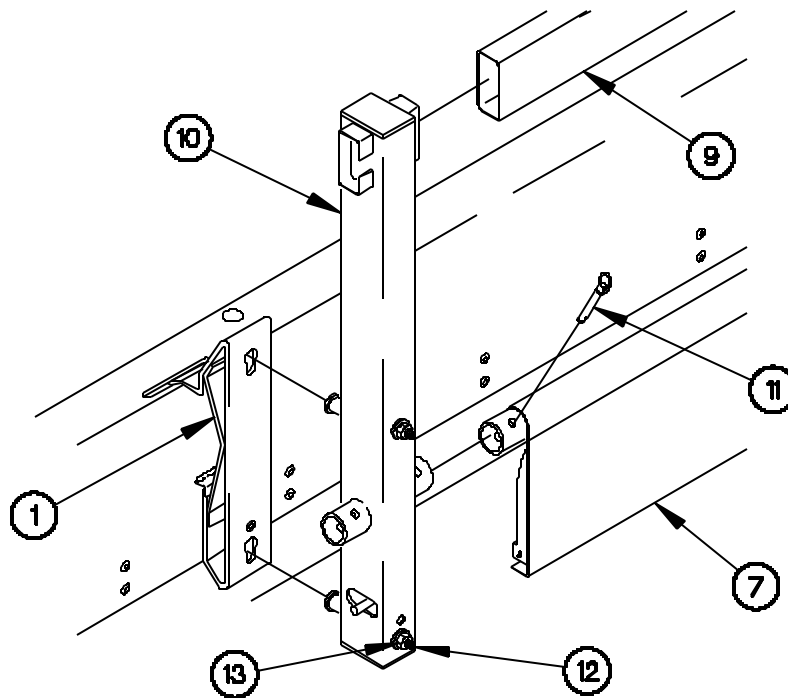


K800814-

# **M1090A1 TROOPSEAT KIT INSTALLATION/ - REMOVAL Continued**

0112 00


## **REMOVAL - Continued**

21. Remove backrest (9) from front seat post (4).
22. Remove quick release pin (8) from front seats (7).
23. Remove front seats (7) from front seat post (4).

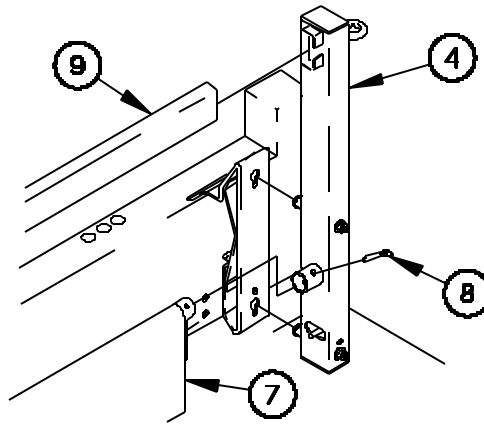

K800815-

24. Hold two bolts (4).
25. Loosen two nuts (6) on bolts (5).
26. Remove front seat post (4) from front dump body stake (1).

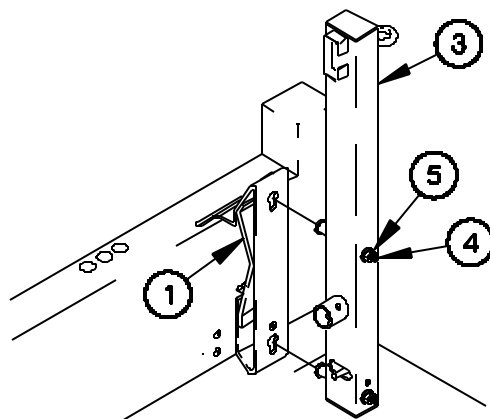

K800816-

# **M1090A1 TROOPSEAT KIT INSTALLATION/ - REMOVAL Continued**


0112 00

## **REMOVAL - Continued**

### **NOTE**


Left and right dump bed stakes are removed the same way. Left side shown.

27. Remove three bolts (3) from three dump bed stakes (1) on outside of dump bed (2).

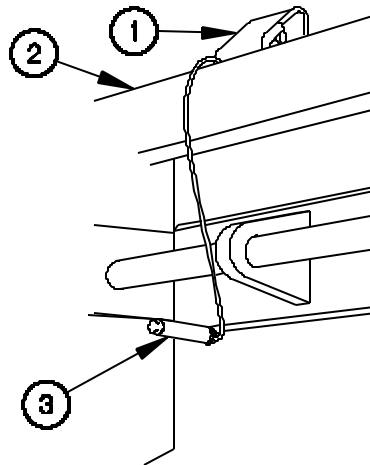

K800817-

28. Remove three dump bed stakes (1) from dump bed (2).

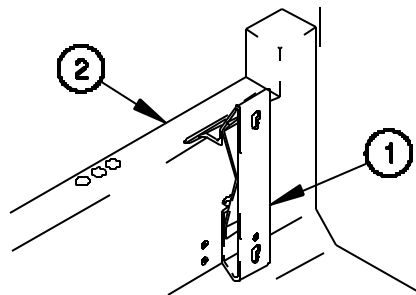

K800822-

**END OF WORK PACKAGE.**



## POWER DISTRIBUTION PANEL (PDP) COVER REMOVAL/INSTALLATION

0113 00

### THIS WORK PACKAGE COVERS:

Removal, Installation

### INITIAL SETUP:

#### Maintenance Level

Operator

#### Equipment Conditions


Engine shut down (WP 0018 00).

### GENERAL

This work package contains information and instructions to remove the PDP cover for the M1083A1 series vehicle.

### REMOVAL

1. Pull two spring catches (1) and lift two latch levers (2).
2. Release two latch hooks (3) from two strike plates (4).
3. Remove PDP cover (5) from dashboard (6).

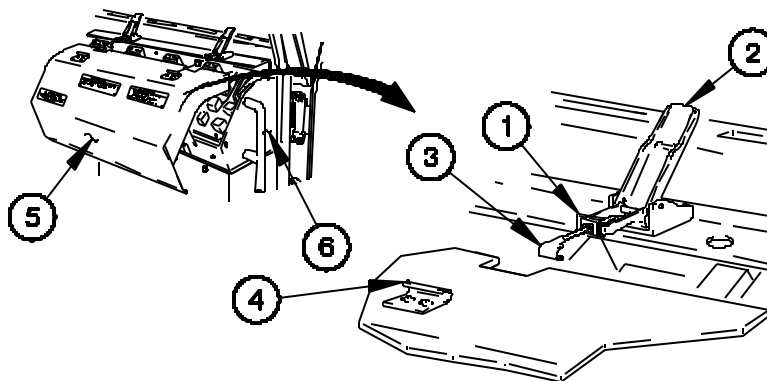

K900801 -

### INSTALLATION

1. Position PDP cover (5) on dashboard (6).
2. Fasten two latch hooks (3) on two strike plates (4).
3. Push down on two latch levers (2) until spring catches (1) are engaged.

END OF WORK PACKAGE.



## BUMPERETTE KIT INSTALLATION/REMOVAL

0114 00

### THIS WORK PACKAGE COVERS:

Installation, Removal

### INITIAL SETUP:

#### Maintenance Level

Operator

#### Equipment Conditions

Engine shut down (WP 0018 00).


### INSTALLATION

#### NOTE

Bumperette kit is intended for use on all Models except M1088A1 and M1089A1.

LH and RH side are installed the same way. RH side shown.


1. Remove shackle pin (1) and shackle (2) from frame rail (3).

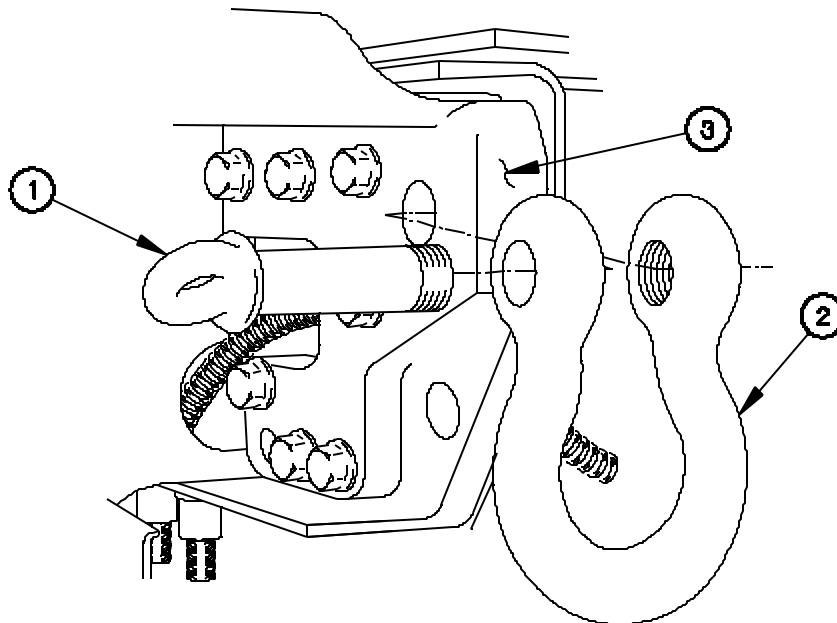

k109101

**BUMPERETTE KIT INSTALLATION/REMOVAL –  
Continued****0114 00****INSTALLATION - Continued**

2. Install bumperette kit (4) on frame rail (3) with pin (5).
3. Install linchpin (6) in pin (5).
4. Install pin (7) in bumperette kit (4).
5. Install linchpin (8) in pin (7).

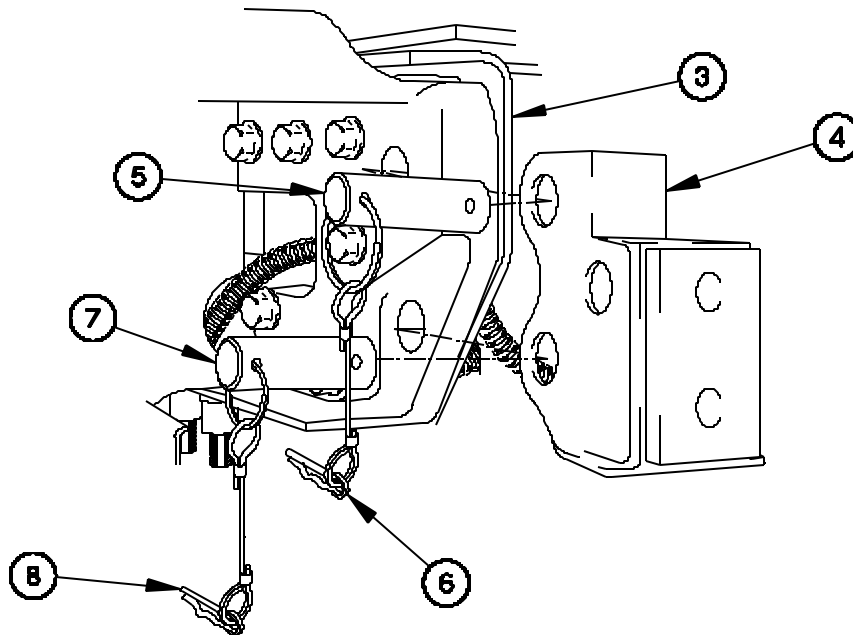

K109002


---

**BUMPERETTE KIT INSTALLATION/REMOVAL –**  
**Continued**

---

**0114 00****INSTALLATION - Continued**

6. Install shackle (2) on bumperette (4) with shackle pin (1).
7. Perform steps (1) through (6) on RH side.

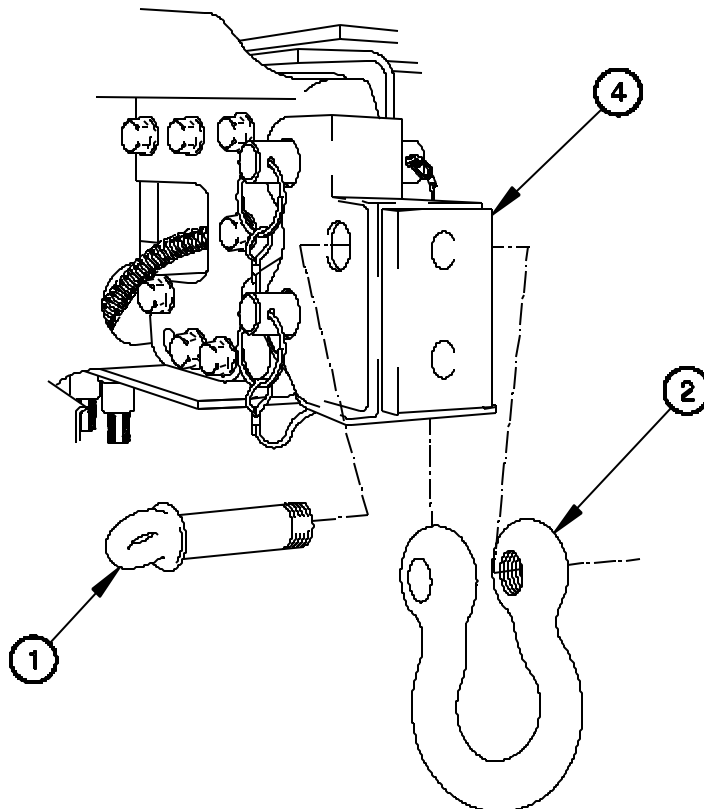


K10903

**BUMPERETTE KIT INSTALLATION/REMOVAL –  
Continued****0114 00****REMOVAL****NOTE**

LH and RH side are removed the same way. RH side shown.

1. Remove shackle pin (1) and shackle (2) from bumperette (4).

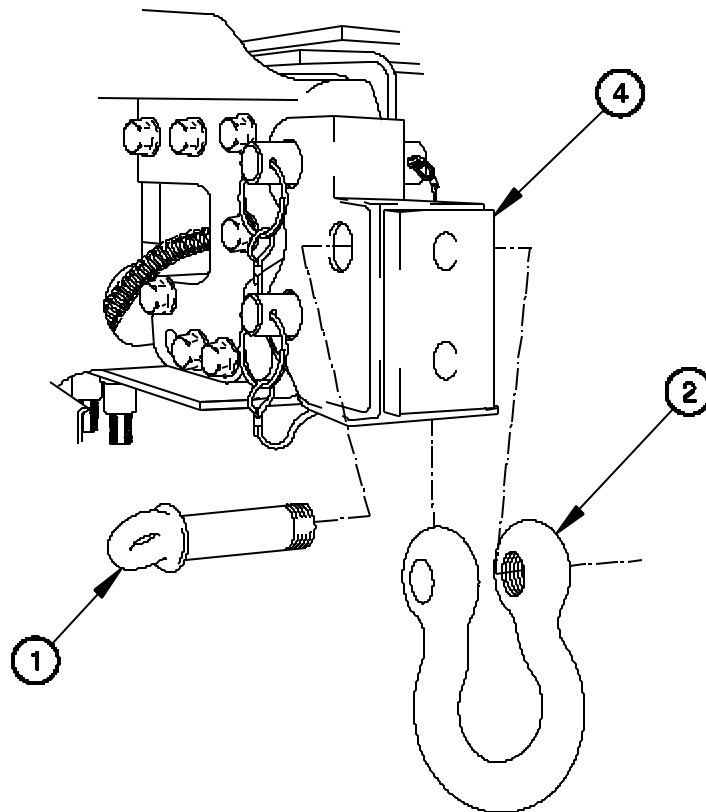

K10903


---

**BUMPERETTE KIT INSTALLATION/REMOVAL –**  
**Continued**

---

**0114 00****REMOVAL - Continued**


2. Remove linchpin (8) from pin (7).
3. Remove pin (7) from bumperette (4).
4. Remove linchpin (6) from pin (5).
5. Remove pin (5) and bumperette (4) from frame rail (3).

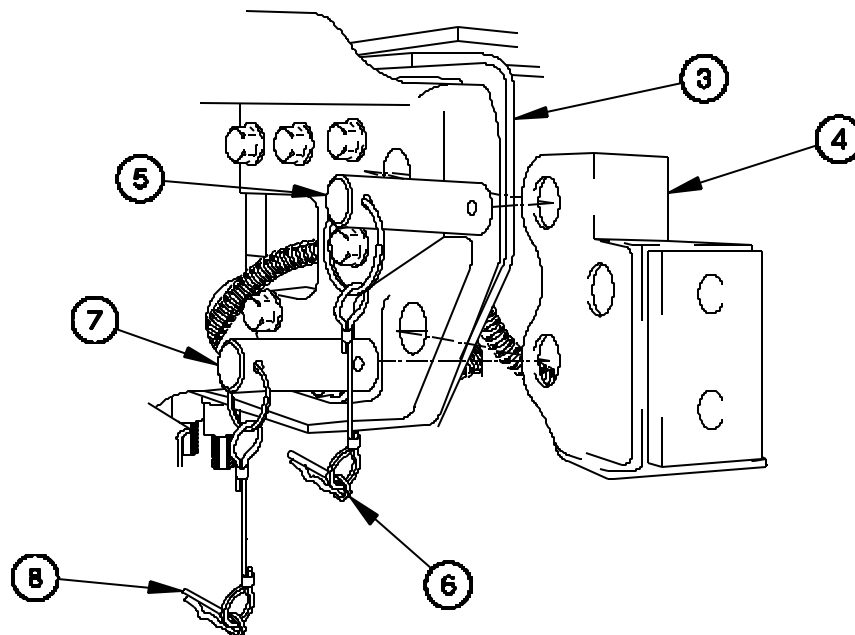

K109002

**BUMPERETTE KIT INSTALLATION/REMOVAL –  
Continued****0114 00****REMOVAL - Continued**

6. Install shackle (2) on frame rail (3) with shackle pin (1).
7. Perform steps (1) through (6) on RH side.

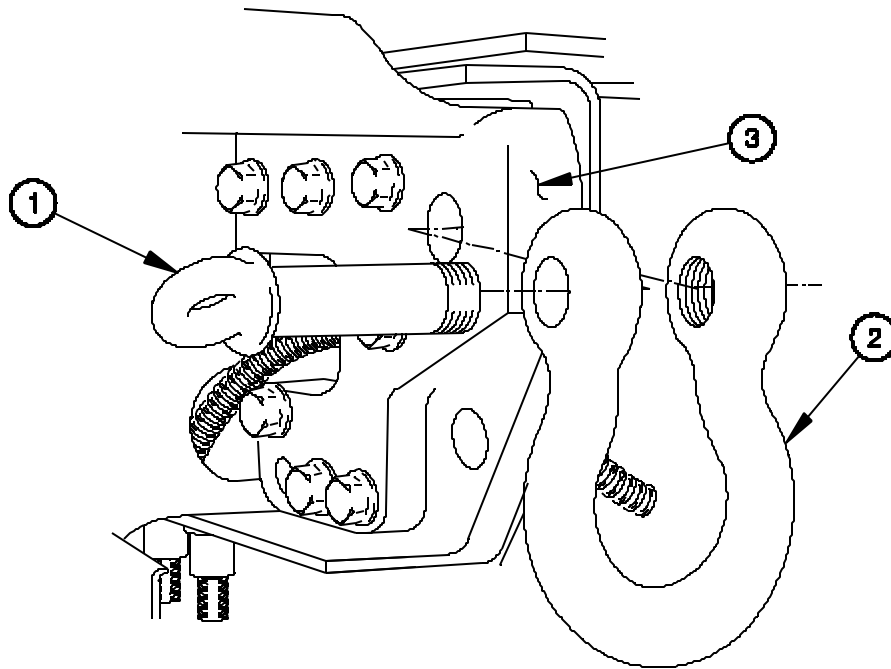

K109101

**END OF WORK PACKAGE.**



## REAR SPRING BRAKE CAGING

0115 00

### THIS WORK PACKAGE COVERS:

Rear brake caging and uncaging.

### INITIAL SETUP:

#### Maintenance Level

Operator

#### Tools and Special Tools

Bolt, Caging (4) (Item 5, Table 1,  
WP 0117 00)

#### Equipment Conditions

Engine shut down (WP 0018 00).

### WARNING

Wear appropriate eye protection when working under vehicle due to the possibility of falling debris. Failure to comply may result in injury to personnel.


### CAGING

#### NOTE

To cage brakes, apply caging procedure to both top and bottom spring brake chambers.

Perform steps (1) and (2) on vehicle S/N 16,876 or lower.

1. Remove nut (1) and washer (2) from caging bolt (3).
2. Remove caging bolt (3) from caging bolt holder (4).

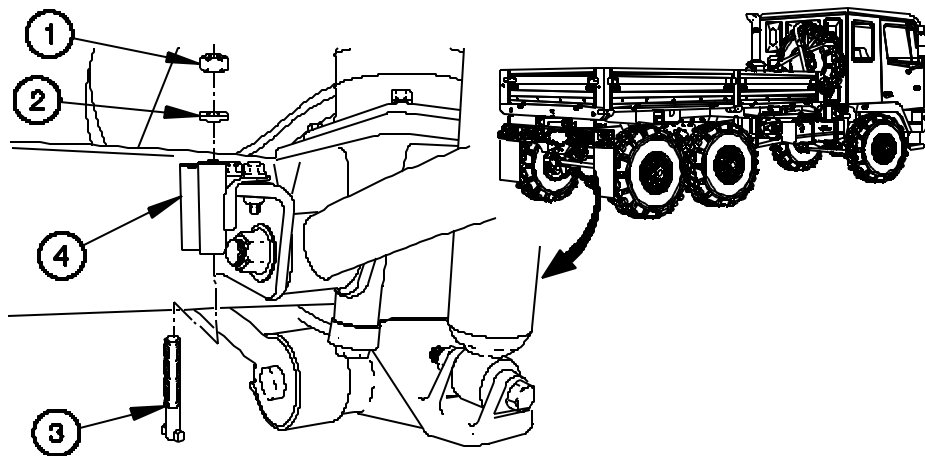


K000801 -

**REAR SPRING BRAKE CAGING - Continued****0115 00****CAGING – Continued****NOTE**


Perform steps (3) and (4) on vehicle S/N 16,877 or higher.

3. Remove nut (1) and washer (2) from caging bolt (3).
4. Remove caging bolt (3) from rear axle assembly (5).

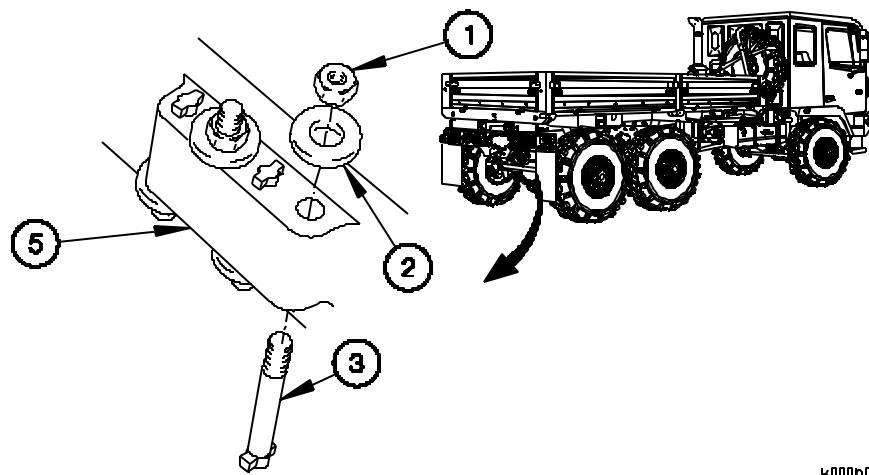**NOTE**


Save rubber cap for use after uncaging operation to seal spring brake chamber.

5. Remove rubber cap (6) from spring brake chamber (7).

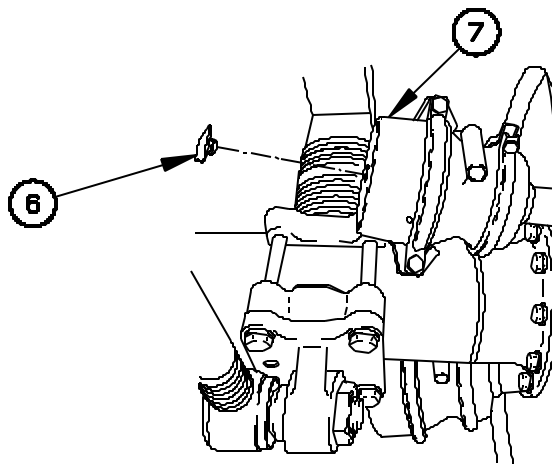

**REAR SPRING BRAKE CAGING - Continued****0115 00****CAGING – Continued**


6. Insert T-end of caging bolt (3) in back of spring brake chamber (7).
7. Lock caging bolt (3) in place by turning caging bolt to the right 1/4 turn.
8. Install washer (2) and nut (1) on caging bolt (3).

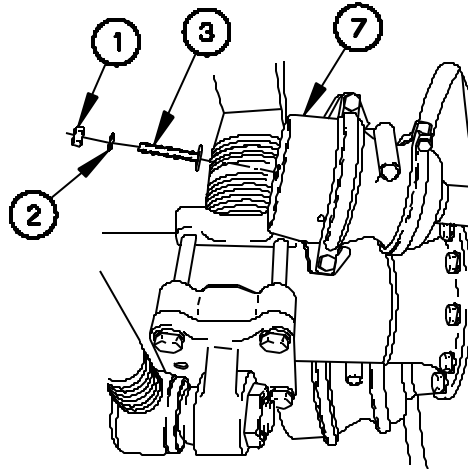

K000003-

**UNCAGING**


1. Remove nut (1) and washer (2) from caging bolt (3).
2. Remove caging bolt (3) by turning to the left 1/4 turn.
3. Remove caging bolt (3) from spring brake chamber (7).

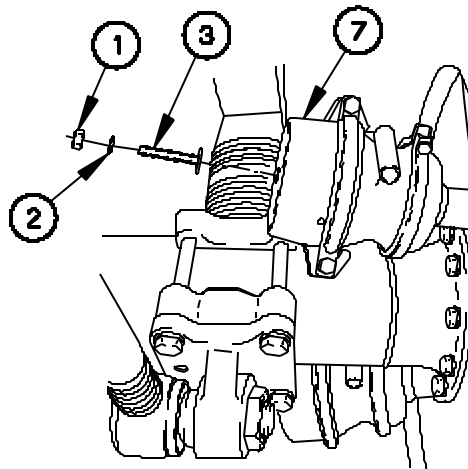

K000003-

**REAR SPRING BRAKE CAGING - Continued****0115 00****UNCAGING – Continued**

4. Install rubber cap (6) on spring brake (7).

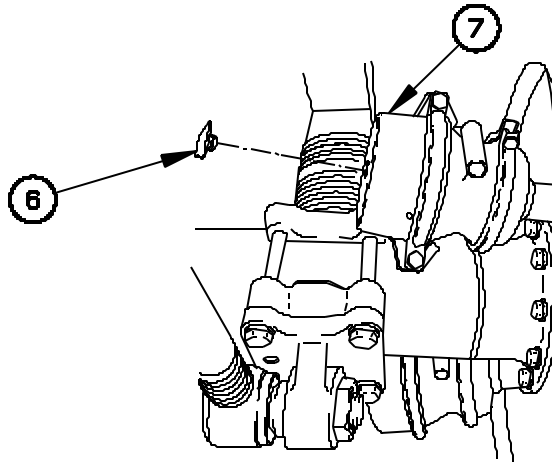


K000002-

**NOTE**

Perform steps (5) and (6) on vehicle S/N 16,877 or higher.

5. Position caging bolt (3) in rear axle assembly (5).  
6. Install washer (2) and nut (1) on caging bolt (3).

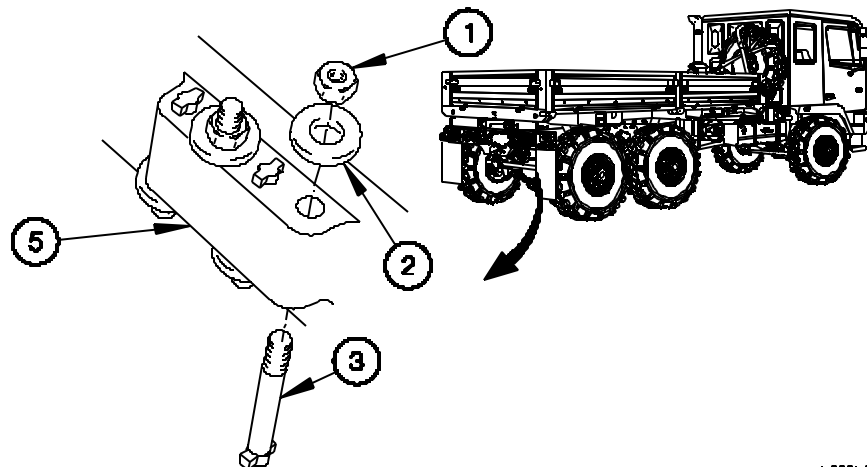


K000005

**REAR SPRING BRAKE CAGING - Continued**

**0115 00**

7. Position caging bolt (3) in caging bolt holder (4).
8. Install washer (2) and nut (1) on caging bolt (3).

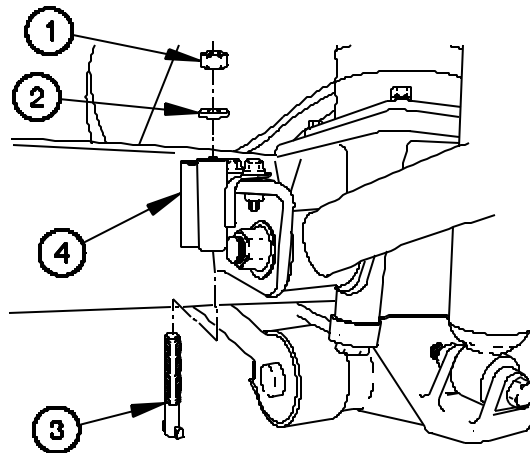

K000804 -

**END OF WORK PACKAGE.**



**CHAPTER 5**

**SUPPORTING INFORMATION  
FOR THE  
M1083A1 SERIES VEHICLES**





**REFERENCES****0116 00****SCOPE**

This work package lists all forms, field manuals, technical manuals, and miscellaneous publications referenced in this manual. Those publications that should be consulted for additional information about vehicle operations are also listed.

**FIELD MANUALS**

Multiservice Helicopter External Air Transport: Basic Army Motor Transport Units and Operations	FM 55-30
Basic Cold Weather Manual	FM 31-70
Desert Operations (How to Fight)	FM 90-3 (HTF)
Field Hygiene and Sanitation	FM 31-70
First Aid for Soldiers	FM 21-11
Jungle Operations (How to Fight)	FM 90-5 (HTF)
Manual for the Wheeled Vehicle Driver	FM 21-305
Mountain Operations	FM 90-6
NBC Protection	FM 3-4
NBC Decontamination	FM 3-5
Northern Operations	FM 31-71
Operation and Maintenance of Ordnance Materiel in Cold Weather (0 to -65 °F)	FM 9-207
Route Reconnaissance and Classification	FM 5-36
Operations and Equipment Multiservice Helicopter External Air Transport: Dual-Point	FM 55-450-3
Multiservice Helicopter External Air Load Rigging Procedures	FM 55-450-5
Multiservice Helicopter External Air Transport: Single-Point Load Rigging Procedures	FM 55-450-4
Standard Characteristics (Dimensions, Weight, and Cube) for Transportability of Military Vehicles and Other Vehicle Recovery Operations	FM 20-22

**FORMS**

Recommended Changes to DA Publications and Blank Forms	DA FORM 2028-2
Product Quality Deficiency Report	SF 368

**REFERENCES - Continued****0116 00****TECHNICAL BULLETINS**

Decontamination Operations Facilities & Equipment	TB 700-4
Installation Instructions for Installation Kit, Electronic Equipment, MK-2700/VRC (NSN 5895-01-421-0814) (EIC: N/A) to Permit Installation of Radio Set AN/VRC-87/88/90 Series into M1078A1, M1080A1, M1083A1, M1086A1, M1088A1-M1092A1 and M1096A1 Family of Medium Tactical Vehicles	TB 11-5820-890-20-101
Installation Instructions for Installation Kit, Electronic Equipment, MK-2715/VRC (NSN 5895-01-421-0812) (EIC: N/A) to Permit Installation of Radio Set AN/VRC-89/91/92 Series into M1078A1, M1080A1, M1083A1-M1086A1, M1088A1-M1092A1 and M1096A1 Family of Medium Tactical Vehicles	TB 11-5820-890-20-92
Standard Characteristics (Dimensions, Weight, and Cube) for Transportability of Military Vehicles and Other Outsize/Overweight Equipment (in TOE Line Item Number Sequence)	TB 55-46-1
Security of Tactical Wheeled Vehicles	TB 9-2300-422-20
Warranty Program for M1083A1 Series, 5 Ton, 6x6, Medium Tactical Vehicle (MTV)	TB 9-2300-427-15

**TECHNICAL MANUALS**

Cooling Systems: Tactical Vehicles	TM 750-254
Hand Receipt Covering Contents of Components of End Item (COEI), Basic Issue Items (BII), and Additional Authorization List (AAL), for M1083A1 Series, 5 Ton, 6x6, Medium Tactical Vehicles (MTV)	TM 9-2320-392-10-HR
Materials Used for Cleaning, Preserving, Abrading, and Cementing Ordnance Materiel and Related Materials Including Chemicals	TM 9-247
Operator's Manual for M809 Series Vehicles	TM 9-2320-260-10
Operator's Manual for M939/M939A1 Series Vehicles	TM 9-2320-272-10
Operator's Manual for M998 Series Vehicles	TM 9-2320-280-10
Operator's Manual for M1008 Series Vehicles	TM 9-2320-289-10
Operator's Manual for M35 Series Vehicles	TM 9-2320-361-10

**REFERENCES - Continued****0116 00****TECHNICAL MANUALS - Continued**

Operator's, Unit, Direct Support, and Intermediate General Support Maintenance Manual for Lead-Acid Storage Batteries	TM 9-6140-200-14
Operator's and Organizational Maintenance Manual for Radio Sets	TM 11-5820-498-12
Operator's Manual, Radio Set, AN/VRC-46	TM 11-5820-401-10-1
Operator's Manual, Radio Set, AN/VRC-90A	TM 11-5820-890-10-1
Operator and Organizational Maintenance Manual for Chemical Alarm	TM 3-6665-225-12
Operator's and Unit Maintenance Manual Including Repair Parts and Special Tools List for Decontaminating Apparatus: M13	TM 3-4230-214-12&P
Operator, Organizational, Direct Support, and General Support Maintenance Manual Including Repair Parts and Special Tools List for Various Machine Gun Mounts	TM 9-1005-245-14
Principles of Automotive Vehicles	TM 9-8000
Procedures for Destruction of Tank-Automotive Equipment to Prevent Enemy Use (US Army Tank-Automotive Command)	TM 750-244-6
Rigging	TM 5-575
Use and Care of Hand Tools and Measuring Tools	TM 9-243

**MISCELLANEOUS PUBLICATIONS**

The Army Maintenance Management System (TAMMS)	DA PAM 738-750
Consolidated Index of Army Publications and Blank Forms	DA PAM 25-30
Index Of Blank Forms	DA PAM 25-30
Marine Terminal Lifting Guidance	MTMCTEA PAM 56-1
Safety Prevention of Motor Vehicle Accidents	AR 385-55
Tiedown Handbook for Rail Movements	MTMCTEA PAM 55-19
Tiedown Handbook for Truck Movements	MTMCTEA REF 92-55-20



---

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS**


---

**0117 00****SCOPE**

This work package lists COEI and BII for the MTV to help you inventory the items for safe and efficient operation of the equipment.

**GENERAL**

The COEI and BII information is divided into the following lists:

**Components of End Item (COEI).** This list is for information purposes only and is not authority to requisition replacements. These items are part of the MTV. As part of the end item, these items must be with the end item whenever it is issued or transferred between property accounts. Items of COEI are removed and separately packaged for transportation or shipment only when necessary. Illustrations are furnished to help you find and identify the items.

**Basic Issue Items (BII).** These essential items are required to place the MTV in operation, operate it, and to do emergency repairs. Although shipped separately packaged, BII must be with the MTV during operation and when it is transferred between property accounts. Listing these items is your authority to request/requisition them for replacement based on authorization of the end item by the TOE/MTOE. Illustrations are furnished to help you find and identify the items.

**Explanation of Columns in the COEI List and BII List**

Column (1), Illus Number, gives you the number of the item illustrated.

Column (2), National Stock Number, identifies the stock number of the item to be used for requisitioning purposes.

Column (3), Description, CAGEC, and Part Number, identifies the Federal item name (in all capital letters) followed by a minimum description when needed. The stowage location of COEI and BII is also included in this column. The last line below the description is the CAGEC (Commercial and Government Entity Code (in parentheses) and the part number.

Column (4), Use on Code, gives you a code if the item you need is not the same for different models of the equipment. These codes are identified below:

<u>CODE</u>	<u>USED ON</u>
MCD	M1083A1
MXB	M1083A1 w/ 15K Self-Recovery Winch
MCN	M1084A1
MCL	M1085A1
MXL	M1085A1 w/ 15K Self-Recovery Winch
MCM	M1086A1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00


**GENERAL - Continued**

<u>CODE</u>	<u>USED ON</u>
MCF	M1088A1
MXF	M1088A1 w/ 15K Self-Recovery Winch
MCG	M1089A1
MCH	M1090A1
MXH	M1090A1 w/ 15K Self-Recovery Winch
MCE	M1092A1
MCK	M1096A1

Column (5), U/M (unit of measure), indicates how the item is issued for the National Stock Number shown in column two.

Column (6), Qty Req'd, indicates the quantity required.

**COMPONENTS OF END ITEM (COEI) LIST**

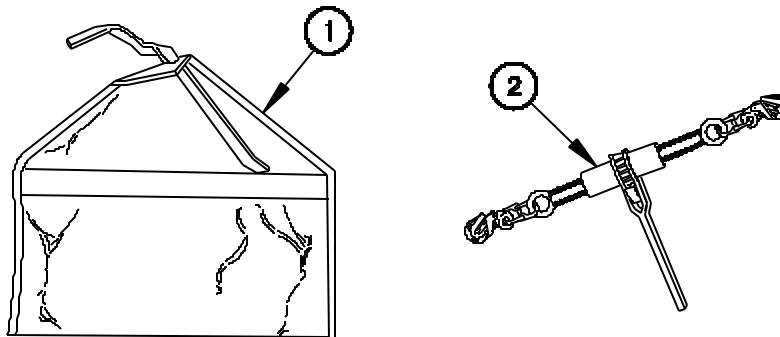

L200801-


**Table 1. Components of End Item List.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
1	8105-01-387-2009	BAG, TOOL, TORCH (19207) 12412587	MCG	EA	1
2	3990-01-479-0538	BINDER, LOAD (19207) 12421708	MCG	EA	2

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**

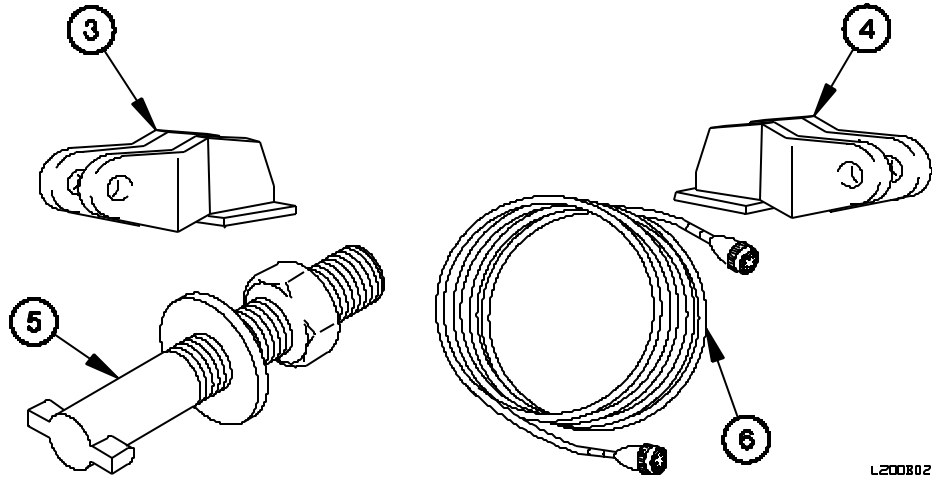


**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
3	5340-01-475-2300	BRACKET, LOWER, LH (19207) 12421704-002	MCG	EA	1
4	5340-01-475-2286	BRACKET, LOWER, RH (19207) 12421704-001	MCG	EA	1
5	5306-01-479-1492	BOLT, CAGING 12422439		EA	4
6	6150-01-387-6357	CABLE ASSEMBLY, ELECTRICAL (12361) 2-195-6-00641	MCN, MCM	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**

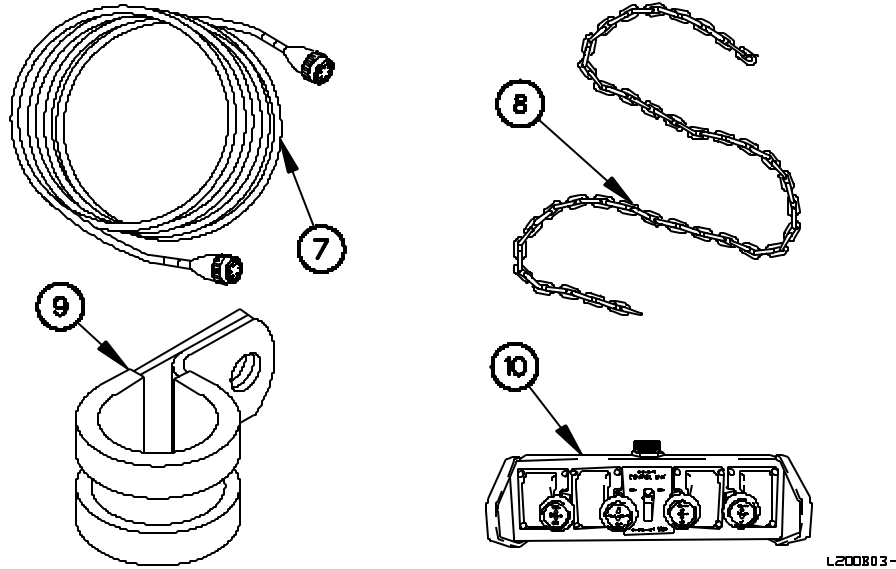

**Table 1. Components of End Item List - Continued.**


(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
7	6150-01-371-3924	CABLE ASSEMBLY, ELECTRICAL (12361) 2-195-6- 00652	MCG	EA	1
8	4010-01-388-9420	CHAIN, WELDED (19207) 12415955	MCH, MXH	EA	2
9	5340-01-377-1547	CLAMP, LOOP (19207) 12419079- 007	MCF, MXF	EA	1
10	6110-01-371-3907	CONTROL, REMOTE SWITCHING (12361) 2-195-6-00668	MCN	EA	1



**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**

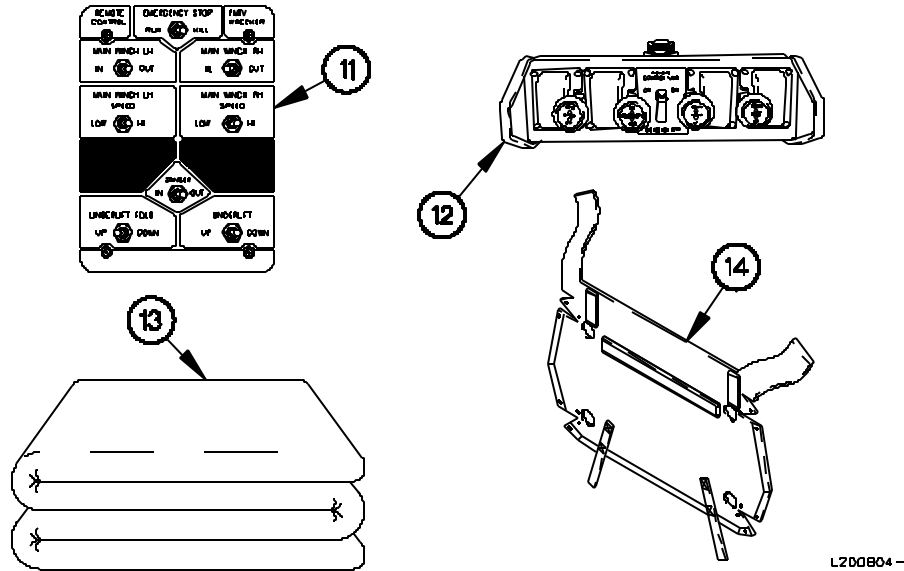


**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
11	6110-01-373-2800	CONTROL, REMOTE SWITCHING (19207) 12412306	MCG	EA	1
12	6110-01-428-6142	CONTROL, REMOTE SWITCHING (12361) 2-195-6- 00667	MCG	EA	1
13	2590-01-391-9944	COVER, VEHICULAR (19207) 12415785	MCH, MXH	EA	1
14	2540-01-453-6945	COVER, RADIATOR, COLD WEATHER (19207) 12421395		EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

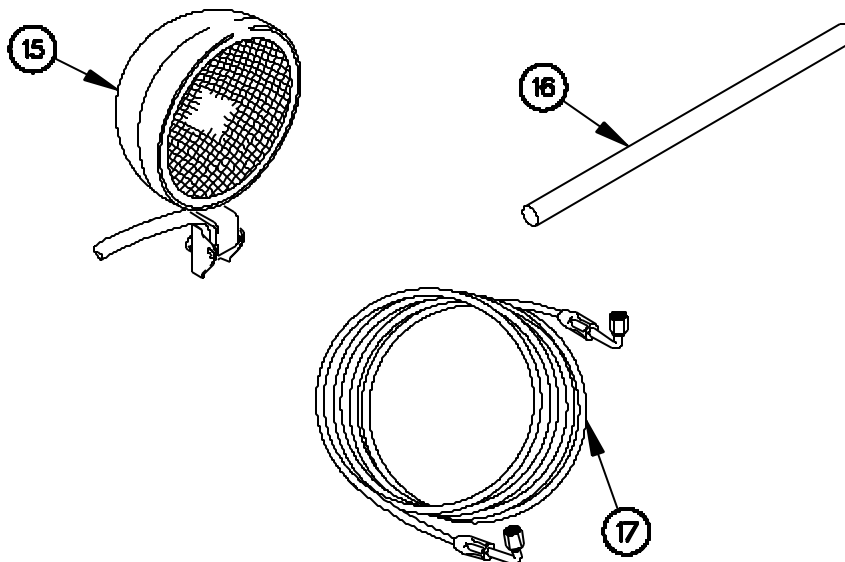**COMPONENTS OF END ITEM (COEI) LIST - Continued**


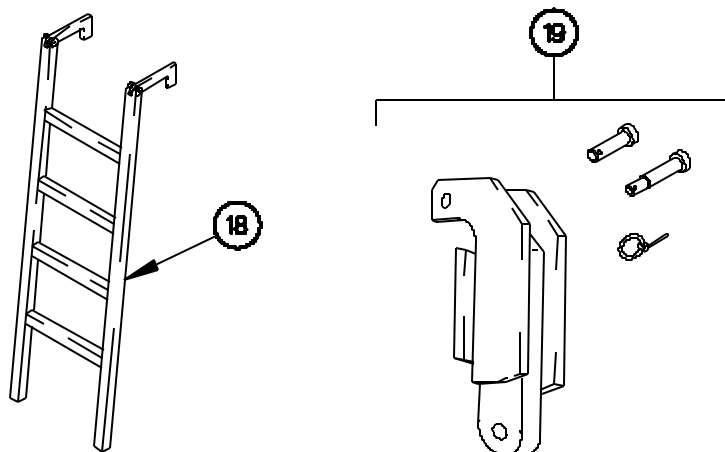
L200805-

**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
15	6220-01-390-7341	FLOODLIGHT, ELECTRICAL (19207) 12378828	MCN, MCF, MCG, MCM, MXF	EA	2
16	4320-01-351-8600	HANDLE, MANUAL CONTROL (95745) (CP13-23)	MCN, MCG, MCM	EA	1
17	4720-01-435-1664	HOSE ASSEMBLY (19207) 12413118	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**


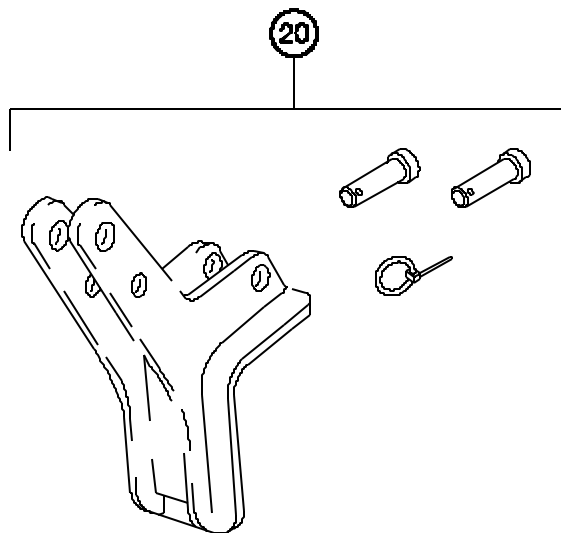
L200806-

**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
18	2540-01-394-9681	LADDER, BOARDING (19207) 12418950	MCD, MCN, MCL, MCM, MXB, MXL	EA	1
19	5340-01-475-2194	LIFTING EXTENSION (19207) 12421701	MCG	EA	2
	5315-01-475-9965	LINCHPIN (19207) 12421753	MCG	EA	4
	5315-01-476-0116	PIN, LIFT, UPPER (19207) 12421703	MCG	EA	2
	5315-01-475-9921	PIN, LIFT, LOWER (19207) 12421702	MCG	EA	2

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**


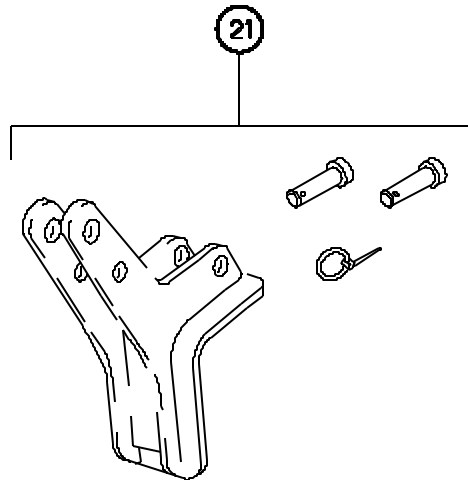
L200807-

**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
20	5340-01-372-0948	LIFT TOOL, RH (65459) 9-807- 010052	MCG	EA	1
	5315-01-434-7266	LINCHPIN (65459) 9-557- 010457-01	MCG	EA	2
	5315-01-371-9471	PIN, LIFT (65459) 9-557- 01443	MCG	EA	1
	5315-01-371-9470	PIN, LIFT (65459) 9-557- 010442	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**


L200808-


**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
21	4910-01-434-6818	LIFT TOOL, LH (65459) 9-807- 010050	MCG	EA	1
	5315-01-434-7266	LINCHPIN (65459) 9-557- 010457-01	MCG	EA	2
	5315-01-371-9417	PIN, LIFT (65459) 9-557- 010443	MCG	EA	1
	5315-01-371-9470	PIN, LIFT (65459) 9-557- 010442	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**

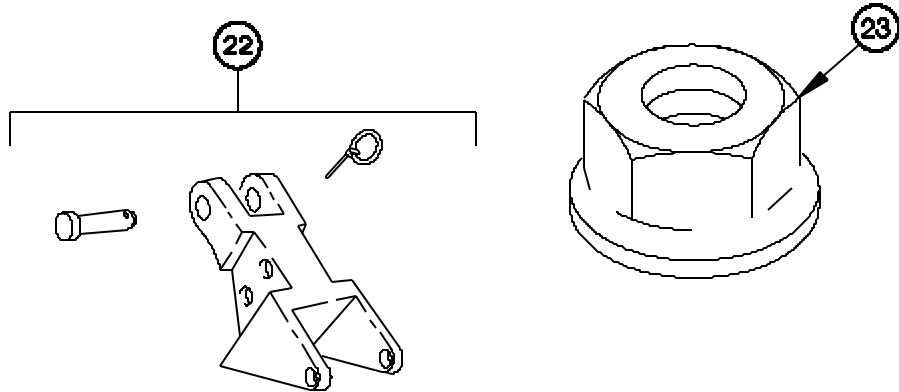


L200809-

**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
22	4910-01-434-6814	LIFT TOOL, TOP BUMPER (65459) 9-807-010048	MCG	EA	2
	5315-01371-9471	PIN, LIFT (65459) 9-557- 010443	MCG	EA	2
	5315-01-434-7266	LINCHPIN (65459) 9-557- 010457-01	MCG	EA	1
23	5310-01-407-7178	NUT, SELF- LOCKING (FOR MOUNTING VISE) (19207) 12412476- 11	MCG	EA	4

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

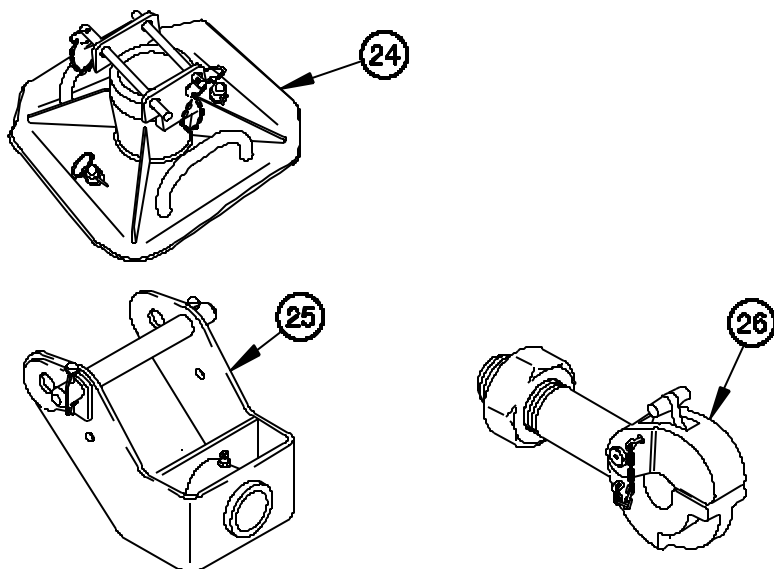**COMPONENTS OF END ITEM (COEI) LIST - Continued**


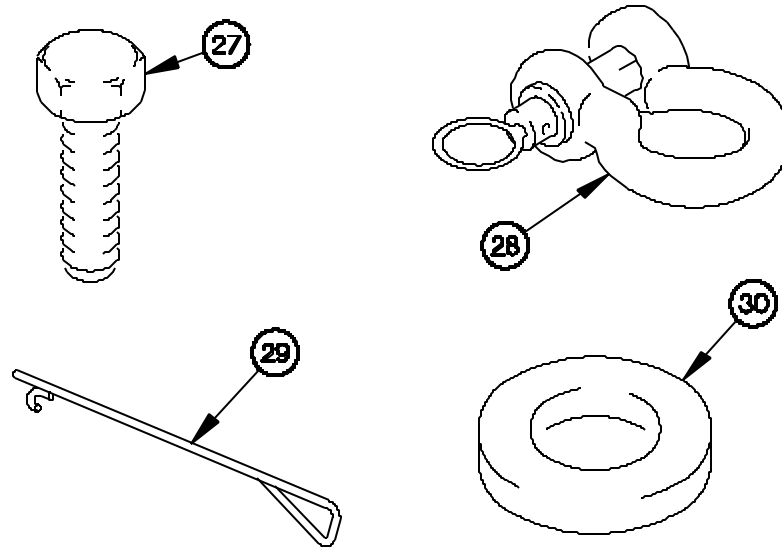
L200810-

**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
24	2590-01-428-6158	PAD, OUTRIGGER (65459) 2-195-1- 00632	MCN, MCG, MCM	EA	2
25	2540-01-372-5098	PINTLE ASSEMBLY, TOWING (65459) 9-040-010057	MCG	EA	1
26	2540-00-047-3926	PINTLE ASSEMBLY, TOWING (96906) MS51117-1	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**COMPONENTS OF END ITEM (COEI) LIST - Continued**


L200B11-

**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
27	5305-00-071-2071	SCREW, CAP (FOR MOUNTING VISE) (80204) B1821BH050C200N	MCG	EA	4
28	4030-01-391-9599	SHACKLE, ANCHOR, TIEDOWN (19207) 12378642-004	MCG	EA	4
29	5340-01-328-4444	RELEASE TOOL (19207) 12421480- 002	MCF,MXF	EA	1
30	5310-00-282-8830	WASHER, FLAT (W/PINTLE HOOK) (19207) 8694381	MCG	EA	1




---

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**


---

0117 00

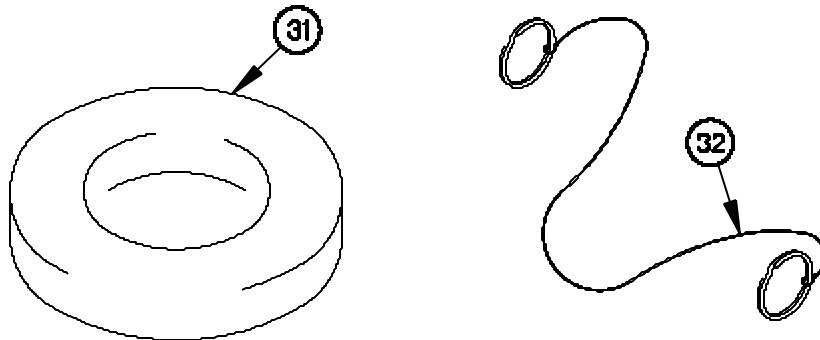**COMPONENTS OF END ITEM (COEI) LIST - Continued**

L200812-


**Table 1. Components of End Item List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
31	5310-01-266-4641	WASHER, FLAT (FOR MOUNTING VISE) (96906) MS51412-9	MCG	EA	8
32	4010-01-388-3680	WIRE ROPE ASSEMBLY (19207) 12420196-001	MCH,MXH	EA	1

# COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS (BII) LISTS - Continued

0117 00

## BASIC ISSUE ITEMS LIST

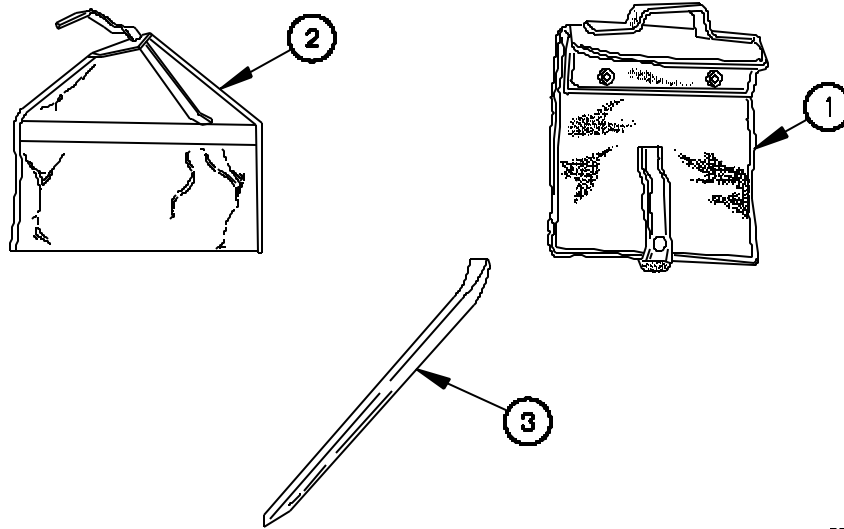

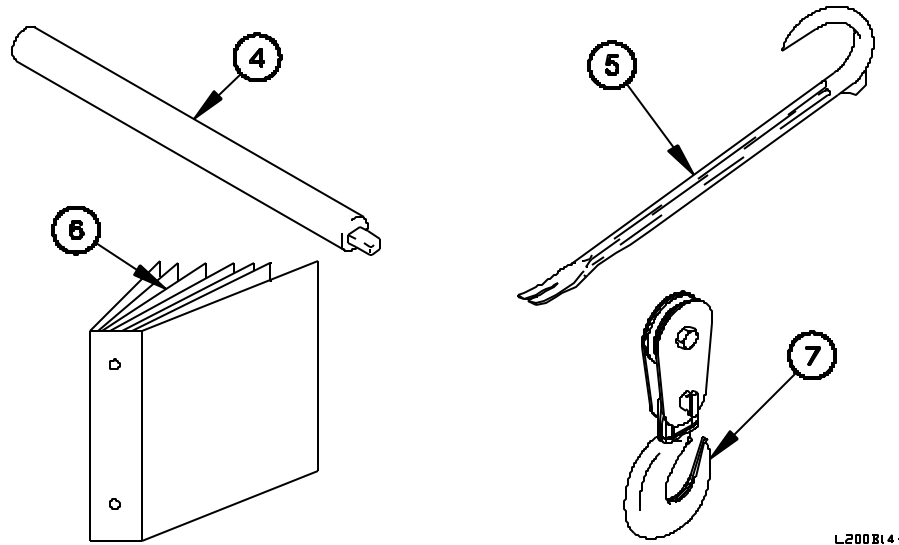
L200813-

Table 2. Basic Issue Items List.

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
1	2540-00-670-2459	BAG ASSEMBLY, PAMPHLET (19207) 7961712		EA	1
2	5140-00-772-4142	BAG, TOOL (19207) 7724142		EA	1
3	5120-00-244-1372	BAR, PINCH (86244) GGGB101TY3SZ3	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00


**BASIC ISSUE ITEMS LIST - Continued**

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
4	5120-00-243-2419	BAR, SOCKET WRENCH HANDLE (19207) 6196147		EA	1
5	5120-00-293-0665	BAR, WRECKING (81348) GGG-B- 101	MCG	EA	1
6	7510-00-889-3494	BINDER, LOOSE- LEAF (19207) 12378672- 002	MCG	EA	2
7	3940-01-391-1848	BLOCK, SNATCH 30-T (19207) M8011971	MCG, MXB, MXF, MXH, MXL	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

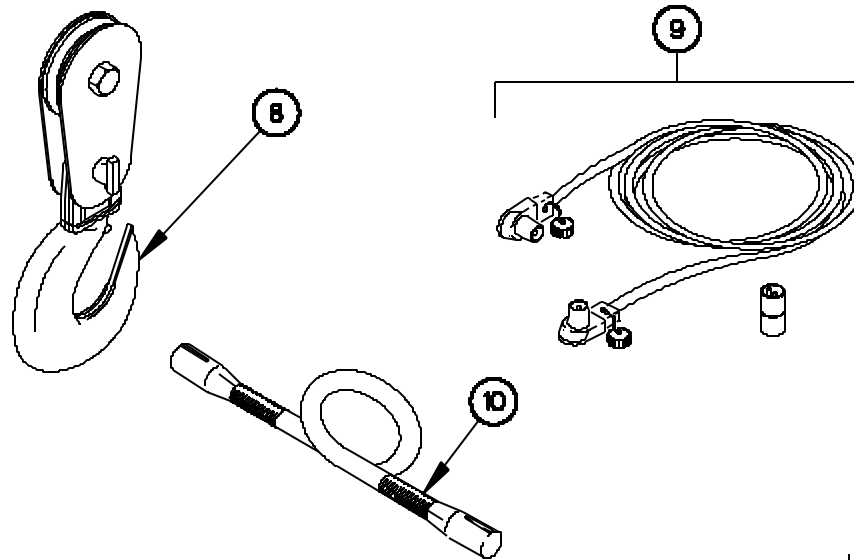**BASIC ISSUE ITEMS LIST - Continued**




L200815-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
8	3940-01-447-4095	BLOCK, SNATCH 15-5 T (19207) 12378672-001	MCG, MXB,MXF, MXH, MXL	EA	1
9	2590-00-148-7961	CABLE KITS, SPECIAL POWER (19207) 11682379-1	MCG	EA	1
	6150-01-222-6004	CABLE ASSEMBLY	MCG	EA	1
	5935-00-322-8959	ADAPTER (19207) 11677570	MCG	EA	2
10	6150-01-390-7346	CABLE ASSEMBLY (19207) 12420385	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS – Continued**

0117 00

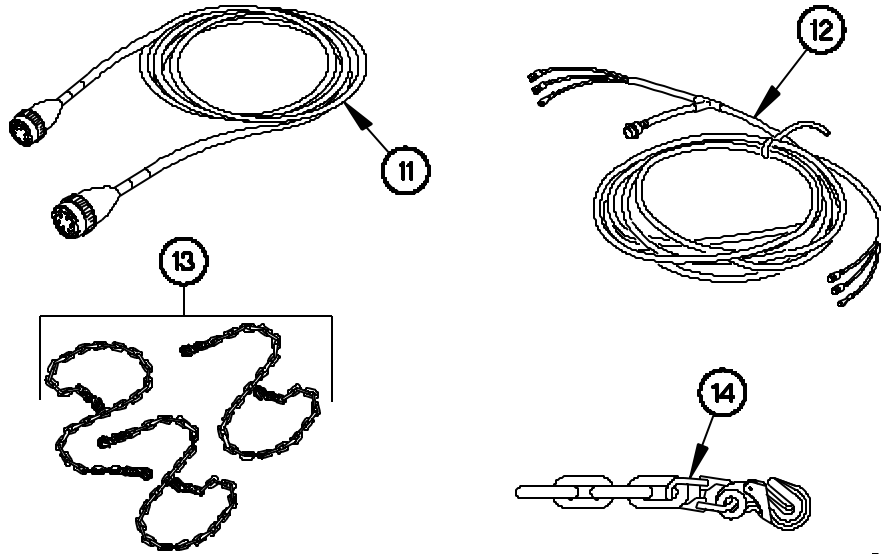**BASIC ISSUE ITEMS LIST - Continued**


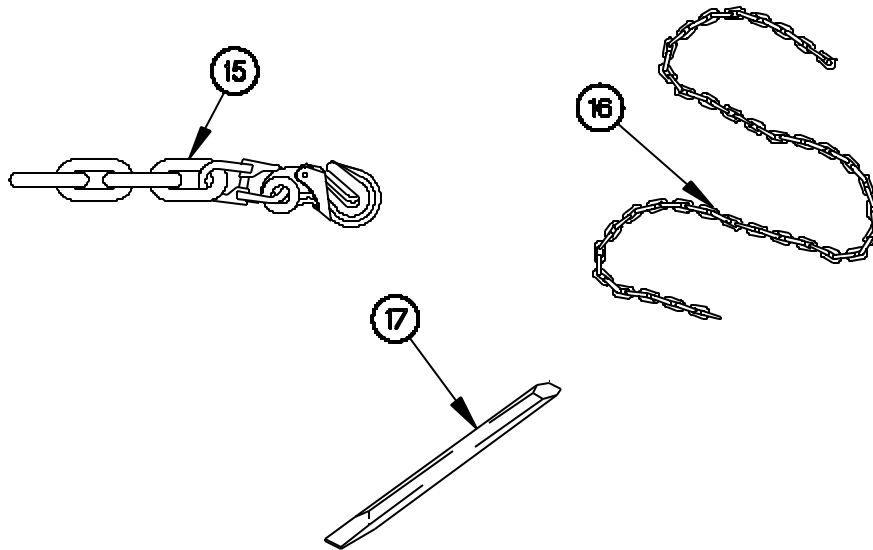
L200816-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
11	6150-00-772-8814	CABLE ASSEMBLY (19207) 7728814	MCF,MXF	EA	1
12	6150-01-390-7345	CABLE KIT (19207) 12420757	MCG	EA	1
13	4010-00-443-4845	CHAIN ASSEMBLY, SINGLE LEG (19207) 10944642- 2	MCG	EA	3
14	4010-01-434-7397	CHAIN, 8 FT. W/HOOK (19207) 12421362	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**BASIC ISSUE ITEMS LIST - Continued**


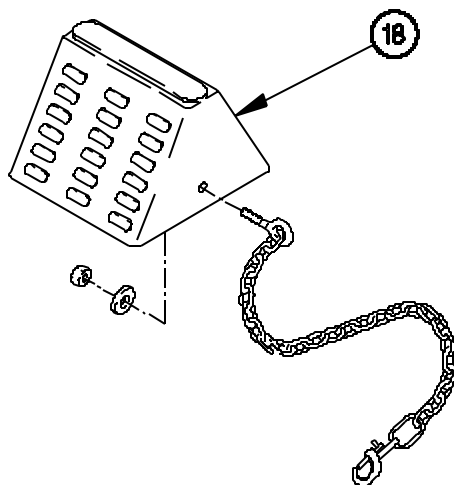
L200817-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
15	4010-01-455-5630	CHAIN, HEAVY RECOVERY (19207) 12421485	MCG	EA	2
16	4010-01-389-1657	CHAIN, WELDED (19207) 12418052		EA	1
17	5110-00-221-1075	CHISEL, BLACKSMITH (96906) MS16882- 2	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**BASIC ISSUE ITEMS LIST - Continued**


L200818-


**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
18	2540-01-500-6119	CHOCK, WHEEL, RUBBER (58536) A52475-2		EA	2
	5306-00-108-0943	BOLT (96906) MS35751-65		EA	2
	5310-00-087-7493	WASHER (96906) MS27183-13		EA	2
	5310-00-880-7744	NUT (96906) MS51967-5		EA	2
	5430-01-243-9656	SNAP HOOK (81349) M43770/6-MIZE		EA	2

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**BASIC ISSUE ITEMS LIST - Continued**

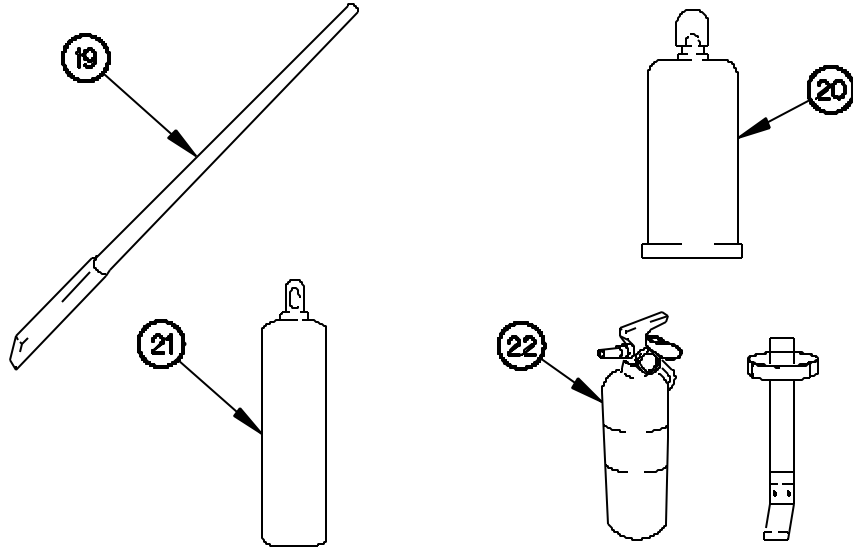

L200819-


**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
19	5120-00-224-1390	CROWBAR (19207) 11677049-1	MCG	EA	1
20	8120-00-268-3360	CYLINDER, COMPRESSED (81349) MIL-C- 3701	MCG	EA	1
21	8120-00-357-7992	CYLINDER, COMPRESSED (81348) RR-C- 901/1-15	MCG	EA	1
22	4210-01-149-1356	EXTINGUISHER, FIRE (19207) 12255633-1		EA	1



**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

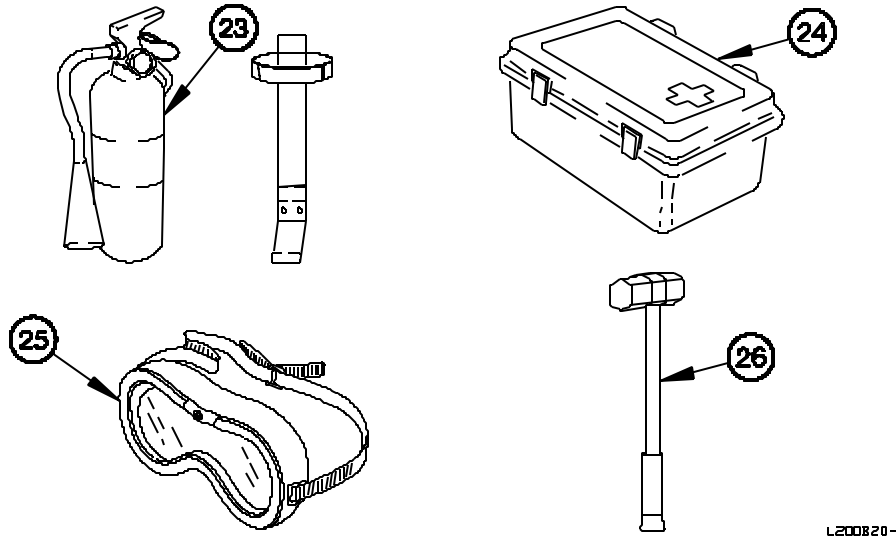**BASIC ISSUE ITEMS LIST - Continued**


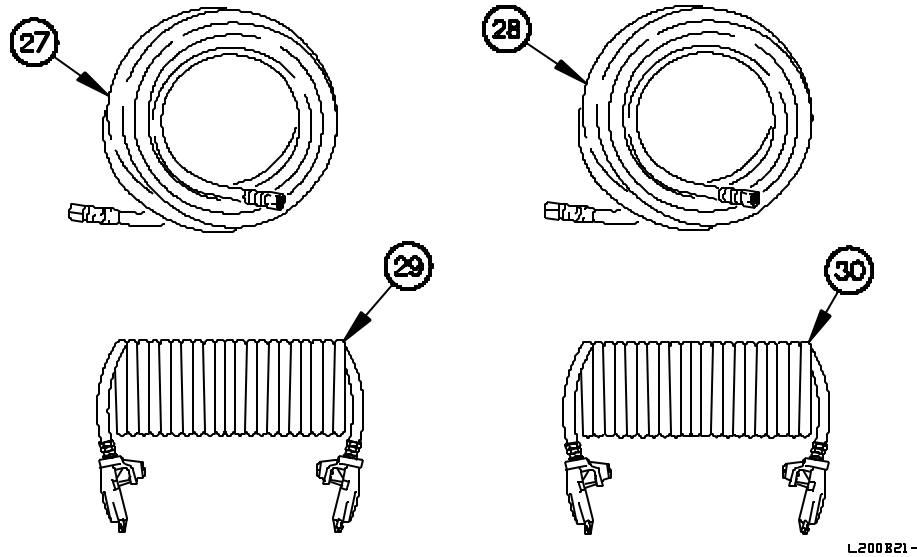
L200820-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
23	4210-00-775-0127	EXTINGUISHER, FIRE (19207) 7015266	MCG	EA	2
24	6545-00-922-1200	FIRST AID KIT (19207) 11677011	MCG	EA	1
25	4240-00-052-3776	GOGGLES, INDUSTRIAL (58536) A-A-1110	MCN, MCG, MCM	EA	1
26	5120-00-900-6098	HAMMER, HAND (80244) GGG-H-86 TY10CL1	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**


0117 00

**BASIC ISSUE ITEMS LIST - Continued**

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
27	4720-00-356-8571	HOSE ASSEMBLY, NONMETALLIC (13668) 21-1108	MCG	EA	1
28	4720-00-356-8572	HOSE ASSEMBLY, NONMETALLIC (81348) ZZ-H-461	MCG	EA	1
29	4720-01-391-8290	HOSE ASSEMBLY, NONMETALLIC (19207) 12419936- 001	MCG	EA	1
30	4720-01-391-8291	HOSE ASSEMBLY, NONMETALLIC (19207) 12419936- 002	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

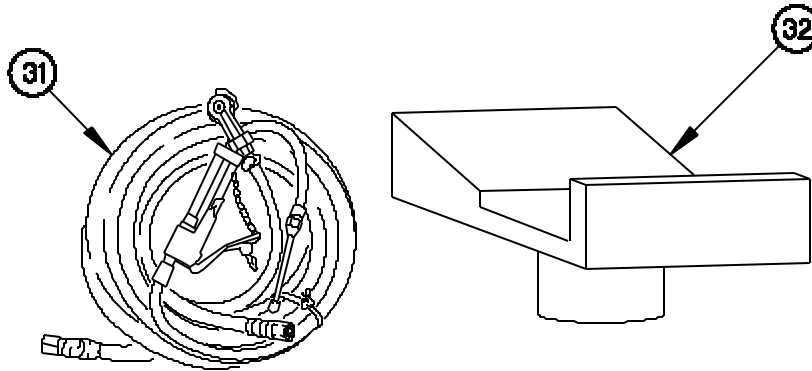0117 00

**BASIC ISSUE ITEMS LIST - Continued**


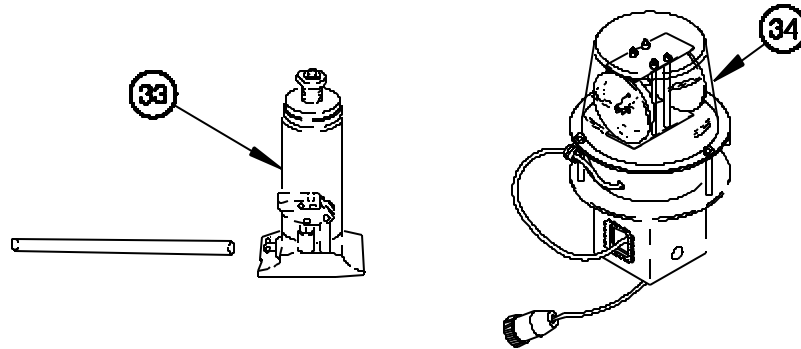
LA00022-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
31	4910-01-038-2820	INFLATOR-GAGE, TIRE W/HOSE (19207) 11677140- 5		EA	1
32		JACK ADAPTER LA 000721		EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**BASIC ISSUE ITEMS LIST - Continued**


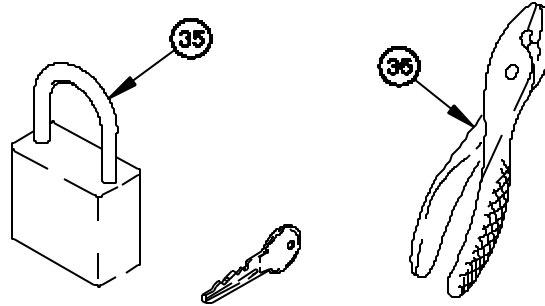
L200823-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
33	5120-01-374-0532	JACK, HYDRAULIC, HAND OPERATED (OE3L5) D-51013		EA	1
34	6220-01-433-5828	LIGHT, AMBER WARNING, WRECKER (19207) 12421444	MCG	EA	2

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**BASIC ISSUE ITEMS LIST - Continued**


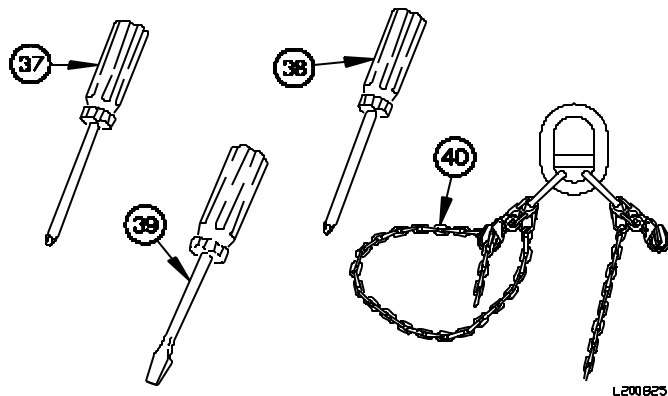
L200824-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
35	5340-01-468-5390	PADLOCKS PADLOCKS (19207) 12422368	MCE, MCK, MCF, MXF, MCH, MXH, MCD, MCL, MXB, MXL	SET	1
	5340-00-408-8425	PADLOCK SET (22107) 5200GLKA10	MCG	SET	1
	5340-00-437-0625	PADLOCK SET (22107) 5200GLKA6	MCN, MCM	SET	1
36	5120-00-223-7397	PLIERS, SLIP JOINT (19207) 11655775-3		EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**


0117 00

**BASIC ISSUE ITEMS LIST - Continued**

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
37	5120-00-234-8912	SCREWDRIVER, CROSSTIP (19207) 11655777-9		EA	1
38	5120-00-234-8913	SCREWDRIVER, CROSSTIP (19207) 11655777-12		EA	1
39	5120-00-237-6985	SCREWDRIVER, FLATTIP (19207) 11655777-10		EA	1
40	3940-01-209-6008	SLING AND WIRE ROPE ASSEMBLY (28620) AC 2000 00331	MCG	EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

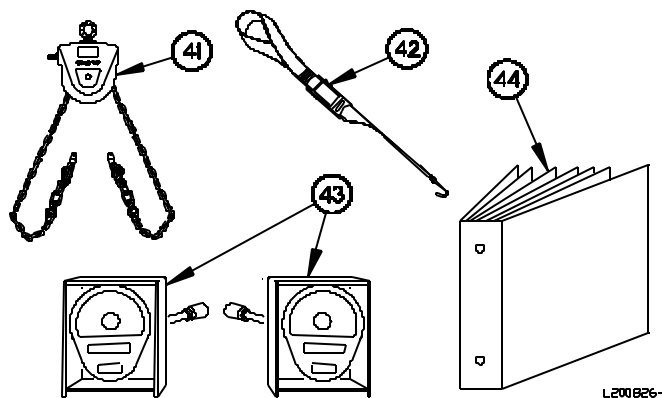
0117 00

**BASIC ISSUE ITEMS LIST - Continued**

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
41	4910-01-243-5556	SLING, ENGINE AND TRANSMISSION (59678) DFP-188	MCG	EA	1
42	5340-01-484-1472	STRAP, RETAINING, STEERING WHEEL (19207) 12419905	MCG	EA	1
43	6220-01-420-5986	TAILLIGHT ASSEMBLY (19207) 12420353	MCG	EA	2
44		TECHNICAL MANUAL, OPERATOR'S INSTRUCTIONS, M1083A1 SERIES, 5 TON		EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

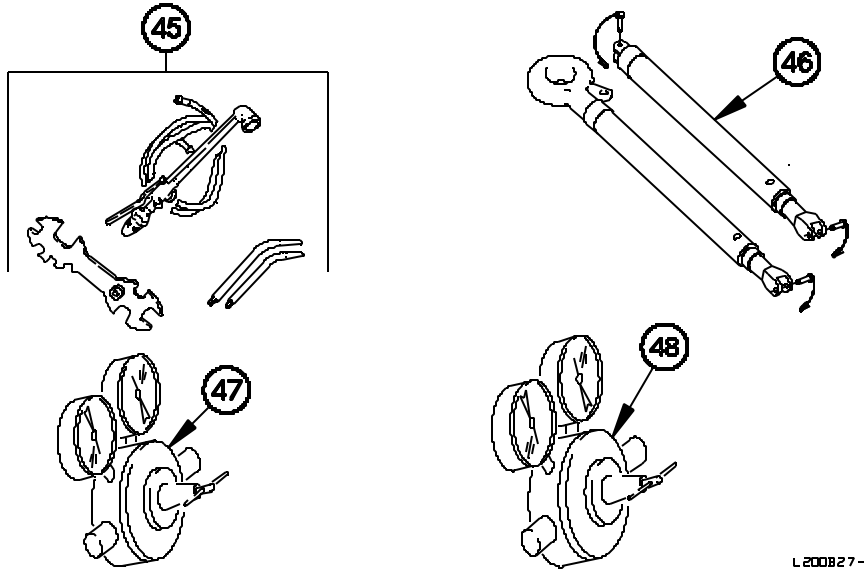0117 00

**BASIC ISSUE ITEMS LIST - Continued**

L200827-


**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
45	3433-00-294-6743	TORCH SET, CUTTING AND WELDING (81349) MIL-T-13880	MCG	EA	1
46	4910-01-365-9304	TOWBAR, MOTOR VEHICLE (19204) 7551383	MCG	EA	1
47	4820-00-285-6067	VALVE, REGULATING, FLUID PRESSURE (81349) MIL-V- 13877	MCG	EA	1
48	4820-00-641-3519	VALVE, REGULATING (81349) MIL-R- 13877	MCG	EA	1



**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

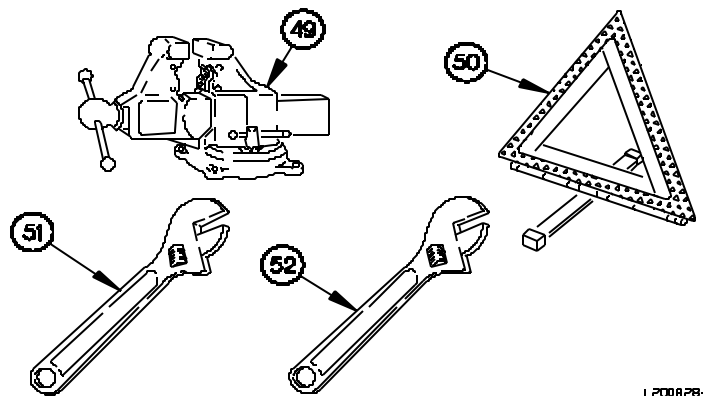**BASIC ISSUE ITEMS LIST - Continued**


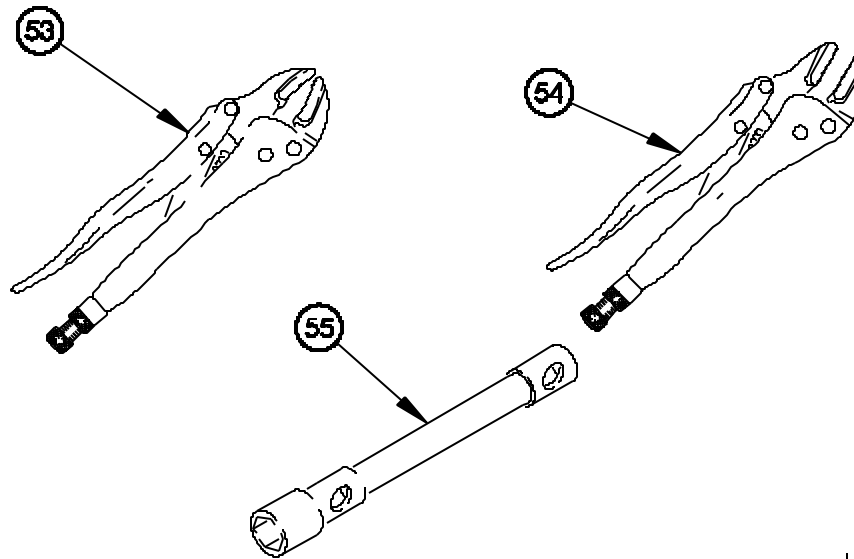
L200828-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
49	5120-00-243-9072	WISE, BENCH AND PIPE (80244) GGG- V-410TYPE4-6IN JAW	MCG	EA	1
50	9905-00-148-9546	WARNING DEVICE KIT (58536) 11669000		EA	1
51	5120-00-264-3796	WRENCH, ADJUSTABLE, 12 In. (19207) 11655778-5		EA	1
52	5120-00-240-5328	WRENCH, ADJUSTABLE, 8 In. (19207) 11655778- 3		EA	1

**COMPONENTS OF END ITEM (COEI) AND  
BASIC ISSUE ITEMS (BII) LISTS - Continued**

0117 00

**BASIC ISSUE ITEMS LIST - Continued**


L200829-

**Table 2. Basic Issue Items List - Continued.**

(1) ILLUS NUMBER	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION, CAGEC, AND PART NUMBER	(4) USABLE ON CODE	(5) U/M	(6) QTY REQD
53	5120-00-277-4244	WRENCH, PLIER (80244) GGG-W- 00649 TY1CL1STA	MCG	EA	1
54	5120-00-494-1911	WRENCH, PLIER (80244) GGG-W- 00649 TY1CL2STB	MCG	EA	1
55	5120-00-316-9217	WRENCH, SOCKET (19207) 11677000- 3		EA	1

**ADDITIONAL AUTHORIZATION LIST (AAL)****0118 00****SCOPE**

This work package lists additional items you are authorized for support of the vehicle.

**GENERAL**

This list identifies items that do not have to accompany the MTV and that do not have to be turned in with it. These items are all authorized to you by Common Tables of Allowance (CTA), Modification Table of Organization and Equipment (MTOE), Tables of Distribution and Allowances (TDA), or Joint Table of Allowance (JTA).

**EXPLANATIONS OF COLUMNS IN THE AAL**

Column (1), National Stock Number, identifies the stock number of the item to be used for requisitioning purposes.

Column (2), Description, CAGEC, and Part Number, identifies Federal item name (in all capital letters) followed by a minimum description when needed. The last line below the description is the CAGEC (Commercial and Government Entity Code) (in parentheses) and the part number.

Column (3), Usable On Code, when applicable, gives you a code if the item you need is not the same for different models of equipment.

Codes used are:

<u>USABLE ON CODE</u>	<u>MODEL</u>
MCD	M1083A1
MXB	M1083A1 w/15K Self-Recovery Winch
MCN	M1084A1
MCL	M1085A1
MXL	M1085A1 w/15K Self-Recovery Winch
MCM	M1086A1
MCF	M1088A1
MXF	M1088A1 w/15K Self-Recovery Winch
MCG	M1089A1
MCH	M1090A1
MXH	M1090A1 w/15K Self-Recovery Winch
MCE	M1092A1
MCK	M1096A1

Column (4), U/M (unit of measure), indicates how the item is issued for the National Stock Number shown in column (1).

Column (5), QTY AUTH, indicates the quantity authorized.

**ADDITIONAL AUTHORIZATION LIST (AAL) -  
Continued**
**0118 00****ADDITIONAL AUTHORIZED LIST ITEMS****Table 1. Additional Authorization List.**

(1) NATIONAL STOCK NUMBER	(2) DESCRIPTION, CAGEC, AND PART NUMBER	(3) USABLE ON CODE	(4) U/M	(5) QTY AUTH
6665-00-859-2215	ALARM UNIT, CHEMICAL AGENT, AUTOMATIC ALARM (M42) (81361) D5-15-4826		EA	1
5110-00-293-2336	AX, SINGLE BIT (19207) 6150925		EA	1
3940-01-449-2385	NET, DRAFT COVER (098P0) B9154-090-168-2R-14C)	MCD, MXB, MCN, MXL, MXL, MCM, MCH, MXH	EA	1
4030-01-477-0524	CLAMP, LINE, SLIDING (098P0) NEI PR054-001-B	MCD, MXB, MCN, MXL, MXL, MCM, MCH, MXH	EA	1
4030-01-477-0508	SNAP LINK, CARGO (098P0) NEI 40WGB	MCD, MXB, MCN, MXL, MXL, MCM, MCH, MXH	EA	1
5340-01-477-3850	SNAP HOOK (098P0) NEI 66C1705HUMJ	MCD, MXB, MCN, MXL, MXL, MCM, MCH, MXH	EA	1
4010-00-473-6166	CHAIN, 16 FT (19207) 7077063		EA	1
2540-01-483-2930	CHAIN, PNEUMATIC TIRE, TRUCK, SINGLE TIRE TYPE (4N506) A08SV (OPTIONAL P/N 2540-01-492-2989 (4N506) CL07S)		EA	4
6665-00-859-2201	DETECTOR UNIT, CHEMICAL AGENT, AUTOMATIC ALARM (M43) (81361) D5-15-4400		EA	1
6545-00-922-1200	KIT, FIRST AID (19207) 1167701		EA	1

**ADDITIONAL AUTHORIZATION LIST (AAL) -  
Continued**
**0118 00****ADDITIONAL AUTHORIZED LIST ITEMS****Table 1. Additional Authorization List - Continued**

(1) NATIONAL STOCK NUMBER	(2) DESCRIPTION, CAGEC, AND PART NUMBER	(3) USABLE ON CODE	(4) U/M	(5) QTY AUTH
8415-00-634-4658	GLOVES, LEATHER (90142) 37G2940		EA	1
5120-00-288-6574	HANDLE, MATTOCK PICK (19207) 11677021		EA	1
4910-01-396-5044	JACK, DOLLY TYPE, HYDRAULIC (1X747)		EA	1
5120-00-243-2395	MATTOCK PICK (19207) 11677022		EA	1
5120-00-293-3336	SHOVEL (19207) 11655784		EA	1
	<b>SPECIAL PURPOSE KITS</b>			
	12V OUTLET KIT (19207) 57K2034		KT	1
	<b>ARCTIC KITS</b>			
2540-01-381-1626	SWINGFIRE HEATER ADAPTER (19207) 57K1973		KT	1
2990-01-479-7713	ARCTIC ENGINE PREHEAT KIT (19207) 57K4366		KT	1
2540-01-383-5411	CAB HEATER (19207) 57K1971		EA	1
2540-01-479-8835	CARGO AREA ARCTIC KIT (19207) 57K4364	MCD,MCL, MXB, MXL	KT	1
2540-01-368-2952	CARGO COVER KIT (19207) 57K1899	MCD, MXB	KT	1
2540-01-387-5734	CARGO COVER KIT (19207) 57K1900	MCL, MXL	KT	1
2540-01-420-5985	CARGO COVER KIT (19207) 57K1901	MCH, MXH	KT	1
	KIT, ADJUSTABLE PASSENGER SEAT (19207) 57K2030		KT	1
2540-01-509-0717	KIT, SEE-THRU DEFROSTER PLENUM UPGRADE (19207) 57K2028		KT	1

**ADDITIONAL AUTHORIZATION LIST (AAL) -  
Continued**
**0118 00****ADDITIONAL AUTHORIZED LIST ITEMS****Table 1. Additional Authorization List - Continued**

(1) NATIONAL STOCK NUMBER	(2) DESCRIPTION, CAGEC, AND PART NUMBER	(3) USABLE ON CODE	(4) U/M	(5) QTY AUTH
2540-01-494-3528	KIT, LH SIDE KICK PANEL (19207) 57K2032	MAF, MWF	KT	1
	KIT, SINGLE DOOR HANDLE UPGRADE (19207) 57K2059		KT	1
	KIT, CAB HEADLINER UPGRADE (19207) 57K2033		KT	1
	KIT, INCLINOMETER (19207) 57K2036		KT	1
	KIT, MODIFIED PLATFORM		KT	1
	KIT, ROADSIDE SPLASH SHIELD UPGRADE (19207) 57K2027		KT	1
	KIT, CONVEX MIRROR (19207) 57K1995		KT	1
	KIT, SUN VISOR UPGRADE (19207) 57K2029-001		KT	1
	KIT, EXHAUST BRAKE ASSEMBLY REPLACEMENT/REPAIR (C10374)		KT	1
	KIT, SHELTER TAILGATE (19207) 57K4450		KT	1
2540-01-493-9101	KIT, RH CONVEX MIRROR (19207) 57K2008	MCD,MCL, MXB,MXL	KT	1
3810-01-384-9668	LIGHT MATERIAL HANDLING CRANE KIT 57K1215		KT	1
1005-01-381-5431	MACHINE GUN RING MOUNT KIT (19207) 57K1224		KT	1
2540-01-498-5929	KIT, BUMPERETTE (19207) 57K3398	MCD,MXD, MCL,MXL, MCH,MXH	KT	1
2540-01-470-3842	KIT, RESILIENT MOUNT 57K2003		KT	1
	KIT, PINTLE HOOK EXTENSION		KT	1

**ADDITIONAL AUTHORIZATION LIST (AAL) -  
Continued**
**0118 00****ADDITIONAL AUTHORIZED LIST ITEMS****Table 1. Additional Authorization List - Continued**

(1) NATIONAL STOCK NUMBER	(2) DESCRIPTION, CAGEC, AND PART NUMBER	(3) USABLE ON CODE	(4) U/M	(5) QTY AUTH
6220-01-423-2337	(19207) 57K1985 ROTATING WARNING LIGHT KIT (19207) 57K1220		EA	1
2540-01-380-4913	TROOPSEAT KIT (19207) 57K1894-001	MCD,MXB	KT	1
2540-01-381-5906	(19207) 57K1896-001	MCL,MXL	KT	1
2540-01-497-3374	(19207) 57K2015	MCH,MXH	KT	1
6115-01-432-2684	200 AMP ALTERNATOR KIT (19207) 57K1912		KT	1
3990-01-444-1013	S280 SHELTER KIT, TIEDOWN, S280 SHELTER (19207) 57K1949	MCD, MXB	KT	1
3990-01-494-6072	KIT, MODIFICATION, S280 SHELTER TIEDOWN KIT – MTV CARGO (19207) 57K4377	MCD, MXB	KT	1
3990-01-488-4320	KIT, TIEDOWN, S280 SHELTER (MODIFIED) (19207) 57K4378	MCD, MXB	KT	1
3990-01-463-9191	KIT, TIEDOWN, S280 SHELTER (19207) 57K1970	MCL, MXL	KT	1
3990-01-494-2285	S280 SHELTER (CONT) KIT, MODIFICATION, S280 SHELTER TIEDOWN KIT – LMTV CARGO OR LWB CARGO (19207) 57K4448	MCL, MXL	KT	1
3990-01-494-6074	KIT, TIEDOWN, S280 SHELTER (MODIFIED) (19207) 57K4447	MCL, MXL	KT	1
3990-01-444-0356	KIT, TIEDOWN, TANK AND PUMP UNIT (19207) 57K1954	MCD,MXB	KT	1
3990-01-444-0355	KIT, TIEDOWN, TANK AND	MCL, MXL	KT	1

---

**ADDITIONAL AUTHORIZATION LIST (AAL) -  
Continued**


---

**0118 00****ADDITIONAL AUTHORIZED LIST ITEMS****Table 1. Additional Authorization List - Continued**

(1) NATIONAL STOCK NUMBER	(2) DESCRIPTION, CAGEC, AND PART NUMBER	(3) USABLE ON CODE	(4) U/M	(5) QTY AUTH
3990-01-443-8916	PUMP UNIT (19207) 57K1955 KIT, TIEDOWN, 500 GALLON DRUM (19207) 57K1956	MCD, MXB	KT	1
3990-01-444-0357	KIT, TIEDOWN, 500 GALLON DRUM (19207) 57K1957	MCL, MXL	KT	1
TBD	KIT, PTO SWITCH WRECKER RETURN VALVE (19207) 57K2035	MCG	KT	1



**EXPENDABLE AND DURABLE ITEMS LIST****0119 00****INTRODUCTION****Scope**

This work package lists all expendable and durable items that you will need to operate and maintain the MTV. This list is for information only and is not authority to requisition the listed items. These items are authorized to you by CTA 50-970 Expendable/Durable Items (except Medical, Class V Repair Parts, and Heraldic Items), or CTA 8-100, Army Medical Department Expendable/Durable Items.

**Explanations of Columns in the Expendable/Durable Items List**

Column (1) - Item Number. This number is assigned to the entry in the list and is referenced in the narrative instructions to identify the item, e.g., "Use hydraulic fluid (Item 5, WP 0119 00)".

Column (2) - Level. This column includes the lowest level of maintenance that requires the listed item (C = Operator/Crew).

Column (3) - National Stock Number. This is the NSN assigned to the item which you can use to requisition it.

Column (4) - Description, Part Number (P/N) and Commercial and Government Entity Code (CAGEC). This column provides the other information you need to identify the item.

Column (5) - Unit of Issue (U/I). This code shows the smallest quantity of an item that can be requisitioned and issued.

**EXPENDABLE AND DURABLE ITEMS LIST****Table 1. Expendable and Durable Items List.**

(1) Item Number	(2) Level	(3) National Stock Number	(4) Description, Part Number, CAGEC	(5) U/I
1	C	6850-01-441-3248	Antifreeze, MIL-A-11755 (81349) 55 gal	DR
2	C	6850-01-441-3221	Antifreeze, Multi-Engine A-A-52624 (81349) 5 gal	CO
		6850-01-441-3223	55 gal	DR

**EXPENDABLE AND DURABLE ITEMS LIST - Continued 0119 00****EXPENDABLE AND DURABLE ITEMS LIST - Continued****Table 1. Expendable and Durable Items List - Continued.**

(1) Item Number	(2) Level	(3) National Stock Number	(4) Description, Part Number, CAGEC	(5) U/I
3	C	850-00-926-2275	Cleaning Compound, Windshield, O-C-1901 (81348)  12 ea, 16 oz. pkg.	BX
4	C	9150-00-664-0047	Damping Fluid, VV-D-1078 (81348)	LB
5	C	9140-00-286-5294 9140-00-286-5295 9140-00-286-5297	Diesel Fuel grade DF-2, ASTM D 975 (81346)  5 gal 55 gal	GL CN DR
6	C	9140-00-286-5286 9140-00-286-5288 9140-00-286-5287	Diesel Fuel grade DF-1, ASTM D 975 (81346)  55 gal 5 gal	GL DR CN
7	C	9140-00-286-5283 9140-00-286-5282 9140-00-286-5284	Diesel Fuel grade DF-A, DF-A (81346)  5 gal 55 gal	GL CN DR
8	C	9140-00-273-2377 9140-00-255-7764 9140-00-255-2378	Diesel fuel, MIL-F-16884 (81346)  5 gal 55 gal	GL CN DR
9	C	8415-00-641-4601	Gloves, Rubber, (ZZ-G-381) (81348)	PR
10	C	4240-00-052-3776	Goggles, Industrial (ANSIZ87.1) (80204)	PR

**EXPENDABLE AND DURABLE ITEMS LIST - Continued 0119 00****EXPENDABLE AND DURABLE ITEMS LIST - Continued****Table 1. Expendable and Durable Items List - Continued.**

(1) Item Number	(2) Level	(3) National Stock Number	(4) Description, Part Number, CAGEC	(5) U/I
11	C	9150-01-197-7688 9150-01-197-7693 9150-01-197-7692	Grease, Automotive and Artillery (GAA), MIL-G-10924 (81349) 2.25 oz 14 oz 35 lb	TU CA CN
12	C	9150-00-252-6383 9150-00-223-4134 9150-00-082-7524 9150-00-265-9408	Hydraulic Fluid, Petroleum Base, RYCO 756 (07950)  1 gal 10 gal 55 gal	QT GL DR DR
13	C		Kerosene, ASTM D3699 (NATO F45)	
14	C	9140-00-286-5286 9140-00-286-5288 9140-00-286-5289	Oil, Fuel, Diesel, DF-1, Winter, VV-F-800 (91348)  55 gal 55 gal	GL DR DR
15	C	9150-01-035-5390 9150-01-035-5391	Oil, Lubricating, Gear, GO 75W, M2105-1-75W (81349) 1 qt 5 gal	QT GL
16	C	9150-01-035-5392 9150-01-035-5393 9150-01-035-5394	Oil, Lubricating, Gear, GO 80W-90, MIL-PRF-2105 (81349) 1 qt 5 gal 55 gal	QT CN DR

**EXPENDABLE AND DURABLE ITEMS LIST - Continued 0119 00**

**EXPENDABLE AND DURABLE ITEMS LIST - Continued**

**Table 1. Expendable and Durable Items List - Continued.**

(1) Item Number	(2) Level	(3) National Stock Number	(4) Description, Part Number, CAGEC	(5) U/I
17	C	9150-00-183-7807 9150-00-186-6668 9150-00-191-2772	Oil, Lubricating, OE/HDO 10, MILL2104 (81349)  5 gal 55 gal	GL CN DR
18	C	9150-00-189-6727	Oil, Lubricating, OE/HDO 10W, MILL2104 (81349)	QT
19	C	9150-01-152-4117 9150-01-152-4118 9150-01-152-4119	Oil, Lubricating, OE/HDO 15W-40, MIL-M-2104 (81349)  5 gal 55 gal	QT CN DR
20	C	9150-00-183-7808 9150-00-186-6681 9150-00-188-9858 9150-00-189-6729	Oil, Lubricating, OE/HDO 30 (SAE 30), MIL-L-2104 (81349)  5 gal 55 gal	GL QT CN DR
21	C	9150-00-405-2987 9150-00-189-6730 9150-00-188-9862	Oil, Lubricating, OE/HDO 40, MIL-L-2104 (81349)  5 gal	GL QT CN

**EXPENDABLE AND DURABLE ITEMS LIST - Continued 0119 00****EXPENDABLE AND DURABLE ITEMS LIST - Continued****Table 1. Expendable and Durable Items List - Continued.**

(1) Item Number	(2) Level	(3) National Stock Number	(4) Description, Part Number, CAGEC	(5) U/I
22	C	9150-00-402-4478 9150-00-402-2372 9150-00-491-7197	Oil, Lubricating, OEA, MIL-L-46167 (81349) 5 gal 55 gal	QT CN DR
23	C	9140-00-247-4364	Oil, Commercial burner fuel grade FO-1, ASTM D396 (81346)	DR
24	C	9140-00-247-4362	Oil, Commercial burner fuel grade FO-2, ASTM D396 (81346)	DR
25	C	7920-00-205-1711	Rag, Wiping, 7920-00-205- 1711 (80244)	BE
26	C	7930-00-634-3935	Soap, Laundry, ASTM D 496 (81346) 200 lb	DR
27	C	6850-00-281-1985 6850-00-664-5685	Solvent, Dry Cleaning, P-D-680 (81349)	GL QT
28	C	9140-00-286-5283 9140-00-286-5284 9140-00-286-5285	Turbine fuel, aviation, kerosene type grade JP-8, MIL-T-83133 (81349) 55 gal 55 gal	GL DR DR

**EXPENDABLE AND DURABLE ITEMS LIST - Continued 0119 00****EXPENDABLE AND DURABLE ITEMS LIST - Continued****Table 1. Expendable and Durable Items List - Continued.**

(1) Item Number	(2) Level	(3) National Stock Number	(4) Description, Part Number, CAGEC	(5) U/I
29	C	9140-00-286-5294 9140-00-286-5296 9140-00-286-5297	Turbine fuel, aviation, kerosene type grade JP-8 MIL- T-83133 (81349) 55 gal 55 gal	GL DR DR
30	C	9130-01-429-4563	Turbine fuel, aviation, kerosene type grade JP-8, MIL-T-83133 (81349)	GL
31	C	9130-00-273-2380	Turbine fuel, grade JP-4, MIL- T-83133 (81349) 54 gal	DR
32	C	9130-01-305-5596 9130-01-250-6353	Turbine fuel, grade JP-5, MIL- T-5624 (81349) 55 gal	DR DR

**STOWAGE LOCATION/DECAL/STENCIL GUIDE****0120 00****SCOPE**


This work package shows the location for stowage of equipment and material required to be carried on M1083A1 series vehicles, locations of decals, and stencils that are required to be in place on the vehicle.

**GENERAL**

The equipment stowage locator is designed to help inventory items required for safe and efficient operation. The equipment locator is representative of BII and applicable AAL stowage on all M1083A1 series vehicles.

**STOWAGE LOCATIONS, ALL VEHICLES****NOTE**

On Vehicle S/N 18,549 or lower.

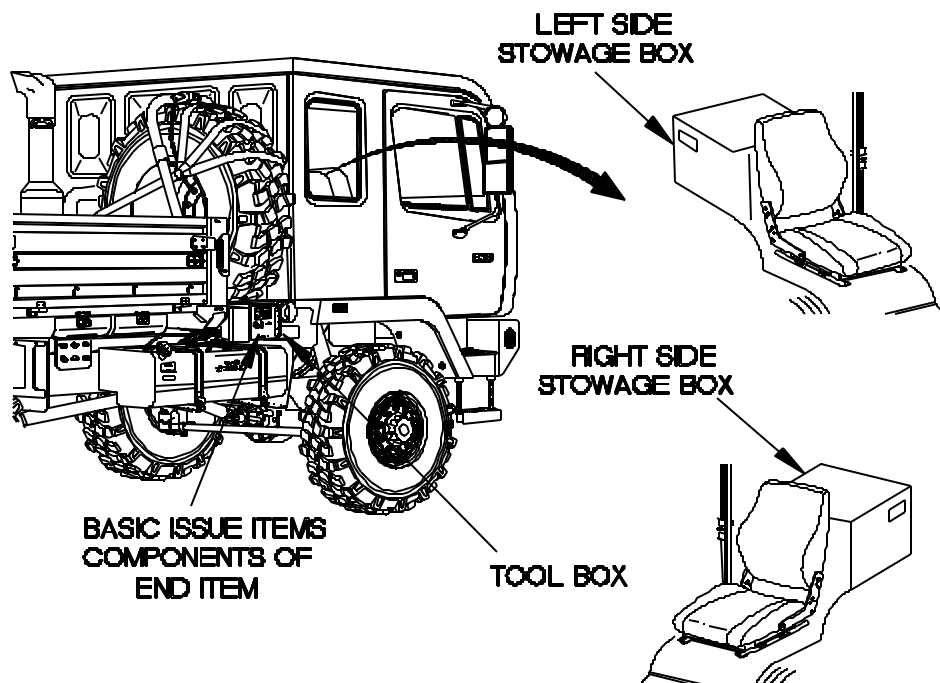

L500801 -


# STOWAGE LOCATION/DECAL/STENCIL GUIDE - Continued

0120 00

STOWAGE LOCATIONS, M1089A1

## NOTE

On Vehicle S/N 18,550 or higher.

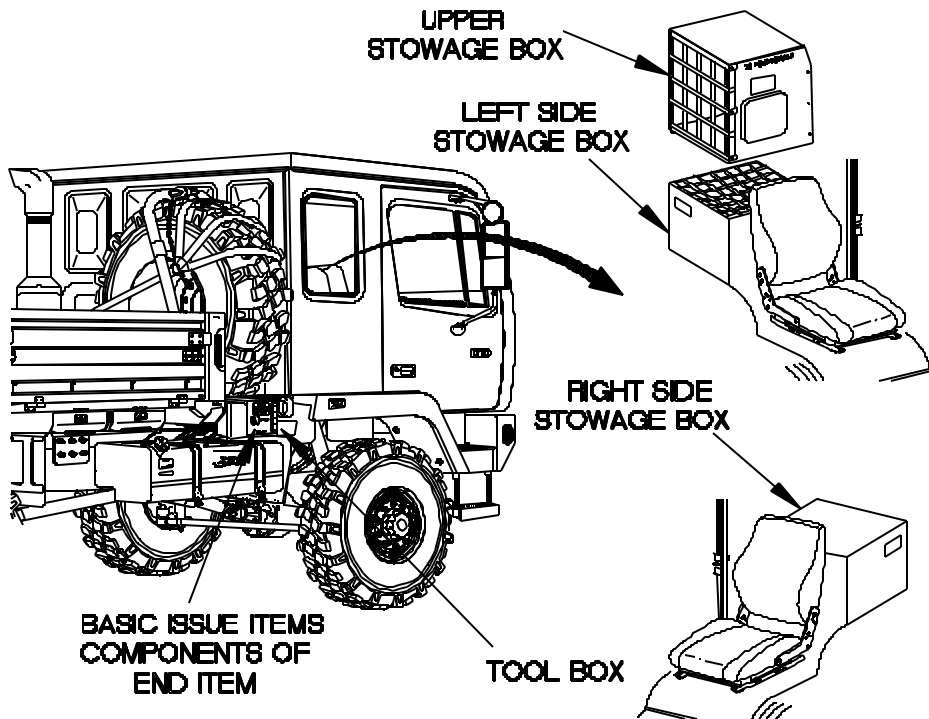

L500817-





## A detailed technical line drawing of a truck-mounted generator unit. The unit is mounted on a truck chassis with large, treaded tires. It features a large, rectangular generator housing with various access panels and a complex system of pipes and mechanical components. A large, curved arrow points from the generator unit towards the right side of the page, indicating a transition or a specific operational mode.

Diagram illustrating the layout of the rear cargo area, showing the division into four sections (Left Rear Box, Right Rear Box, Left Rear Bottom, Right Rear Bottom) and the location of various components (Shelf Middle, Shelf Front, Shelf Rear, Shelf Bottom, Shelf Top, Shelf Bottom, Shelf Top, Shelf Bottom, Shelf Top).

ROTATED 90° FOR CLARITY

LEFT REAR BOX  
SHIELD MIDDLE  
FOLDING CONTROL MIRROR  
SHIELD FRONT  
HIGH/LOW ADJUSTABLE  
REGULATOR CRANK  
TOWBAR BRACKETED  
WARRANT

RIGHT REAR BOX  
SHIELD FRONT  
SHIELD REAR  
REAR CONTROL CRANK

LEFT REAR BOTTOM  
SHIELD BOTTOM  
SHIELD TOP  
SHIELD BOTTOM  
SHIELD TOP  
SHIELD BOTTOM  
SHIELD TOP  
SHIELD BOTTOM  
SHIELD TOP


RIGHT REAR BOTTOM  
SHIELD BOTTOM  
SHIELD TOP  
SHIELD BOTTOM  
SHIELD TOP  
SHIELD BOTTOM  
SHIELD TOP  
SHIELD BOTTOM  
SHIELD TOP

0120 00-4

**STOWAGE LOCATION/DECAL/STENCIL GUIDE -  
Continued**

0120 00

**STOWAGE LOCATIONS, M1089A1 - Continued**

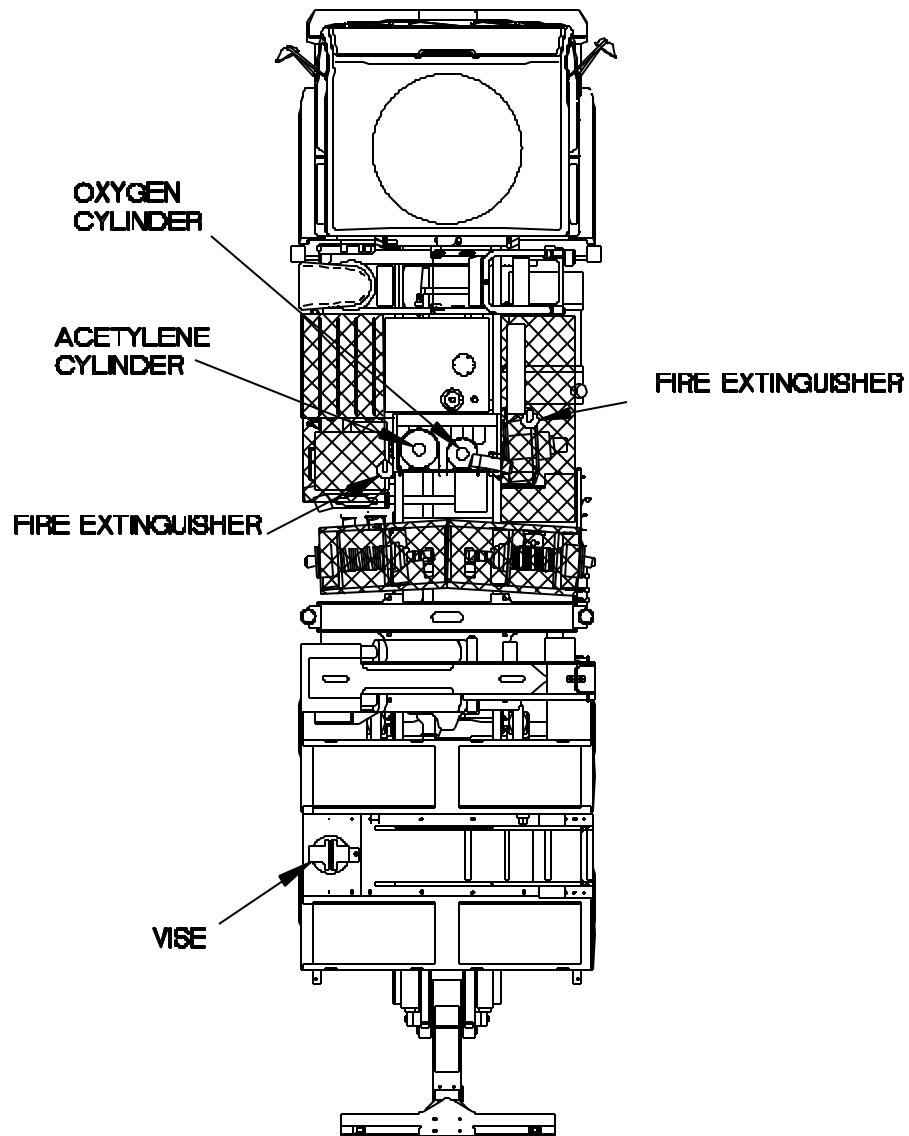


L 500804 -


**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
Continued

0120 00

**DECALS/STENCILS, ALL VEHICLES**

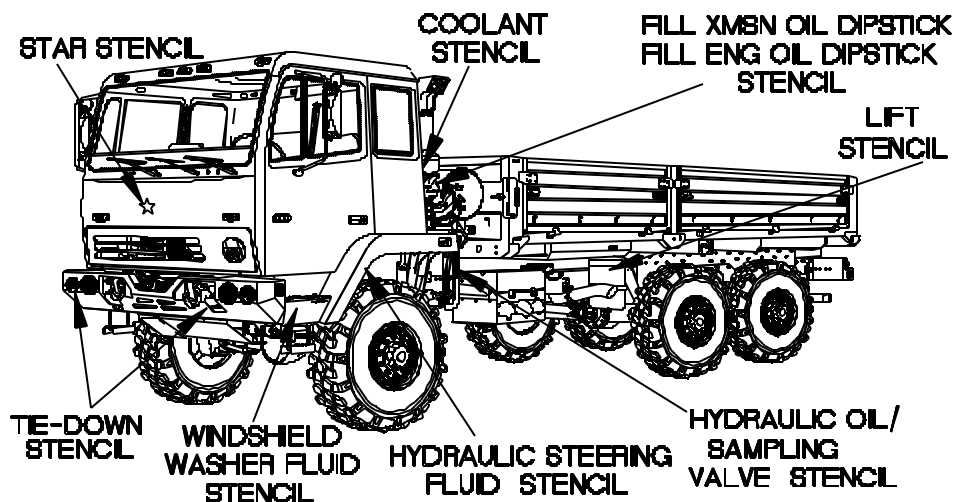

L 500805 -

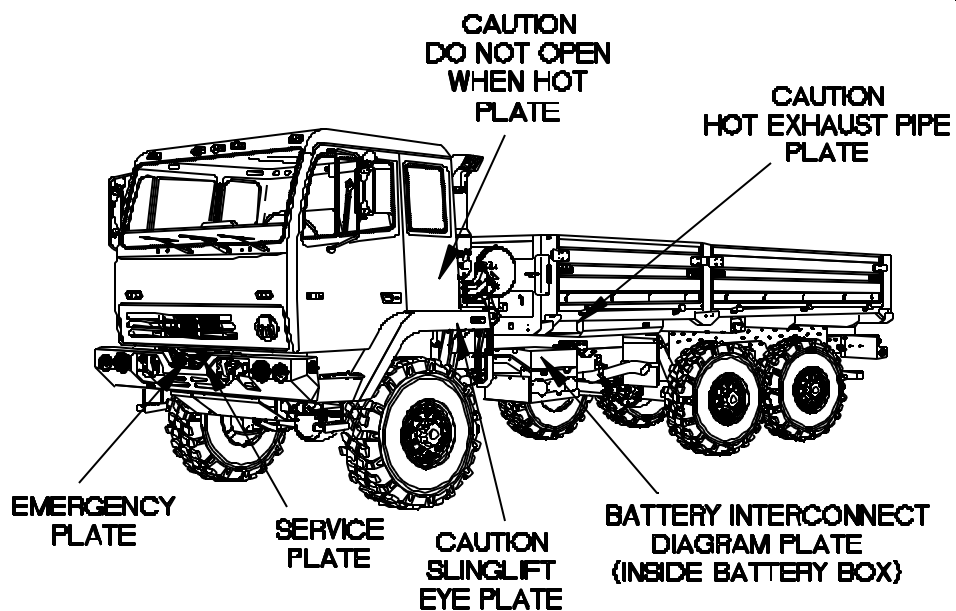


L 500806 -


**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
Continued

0120 00

DECALS/STENCILS, ALL VEHICLES - Continued

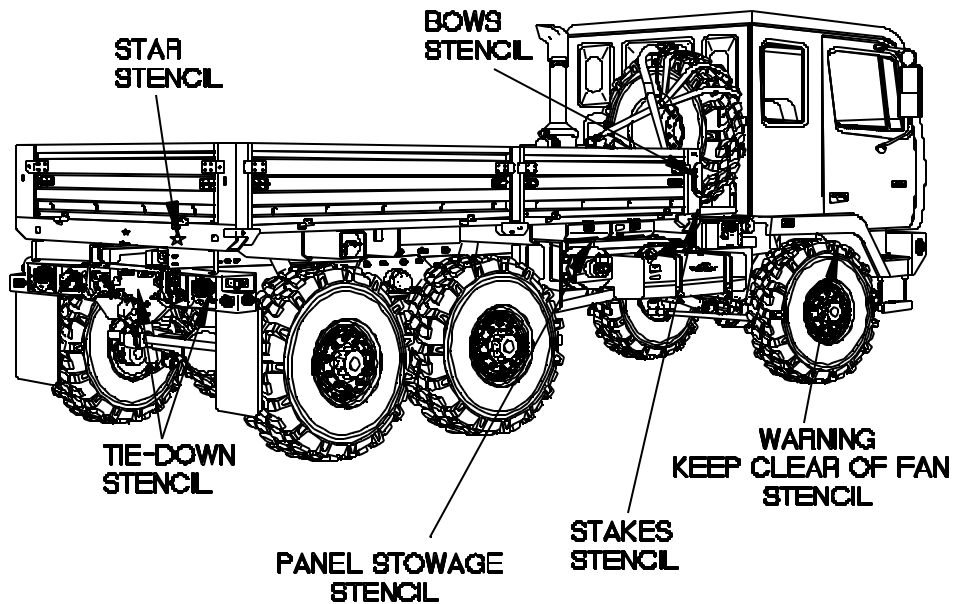

L 500B07 -

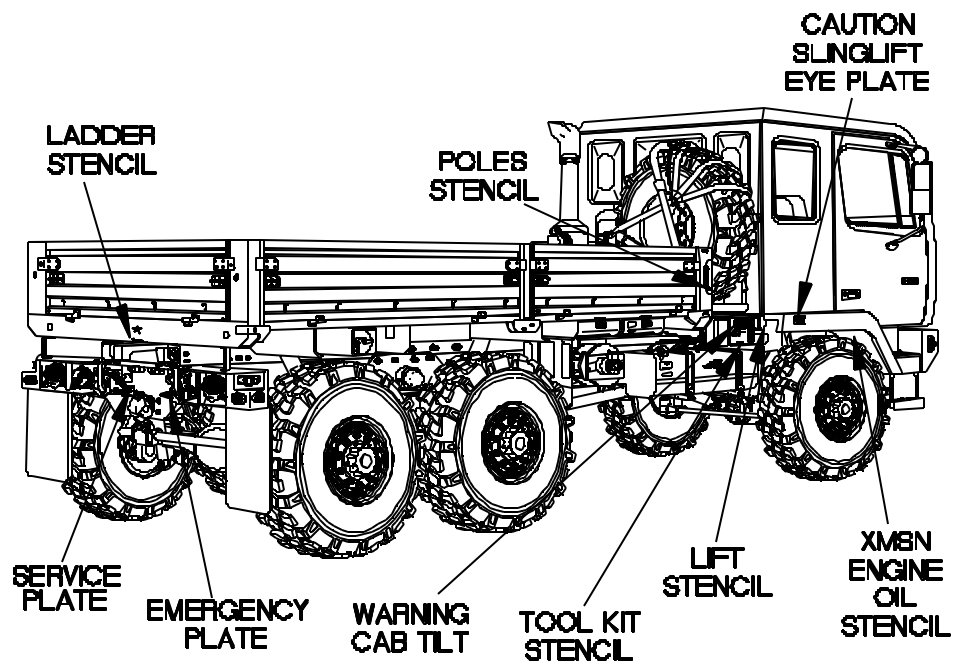


L 500B08 -

**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
Continued

0120 00

DECALS/STENCILS, ALL VEHICLES - Continued


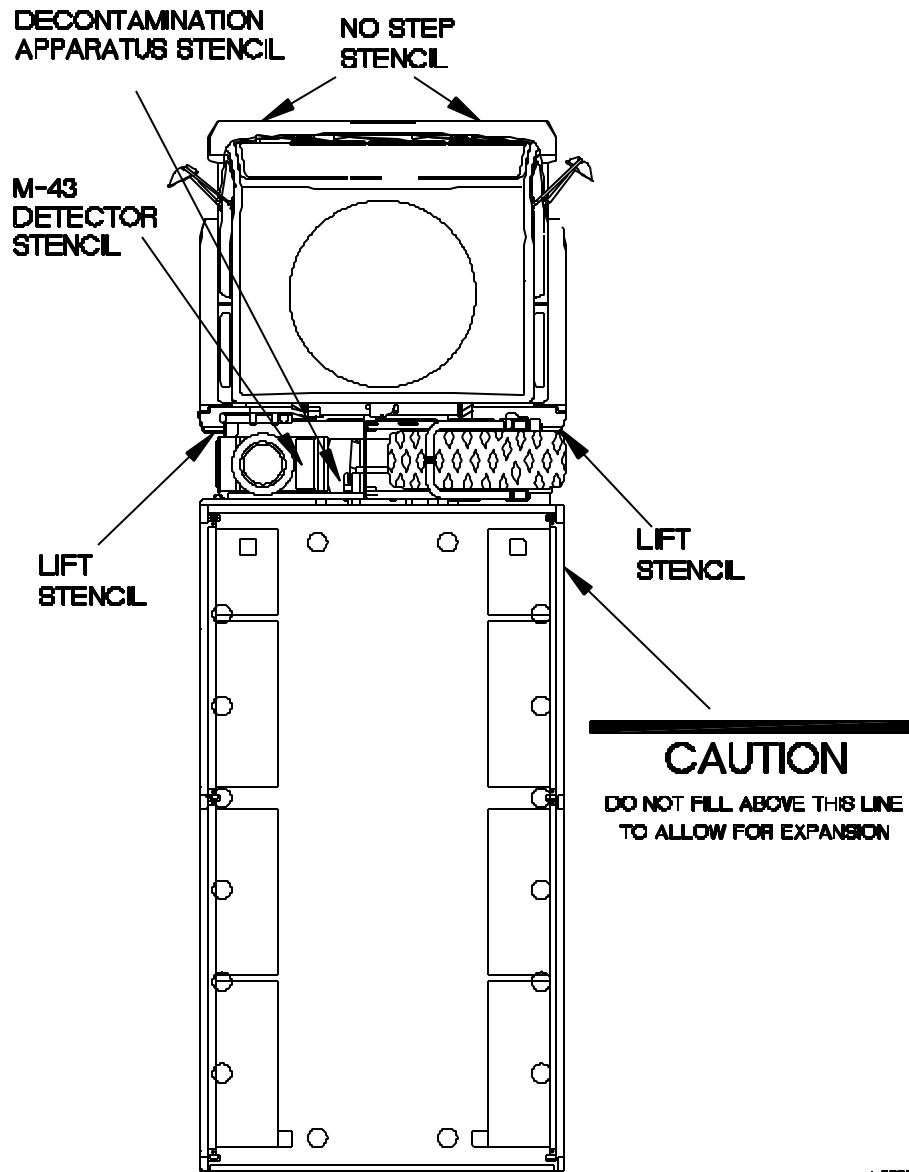


L500809-

**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
Continued

0120 00

**DECALS/STENCILS, ALL VEHICLES - Continued**

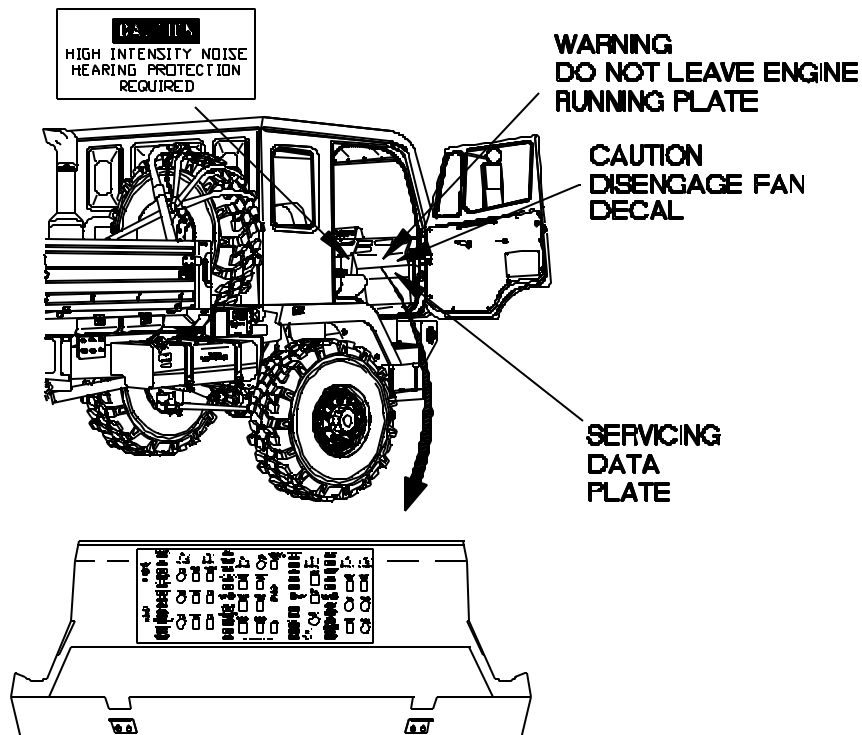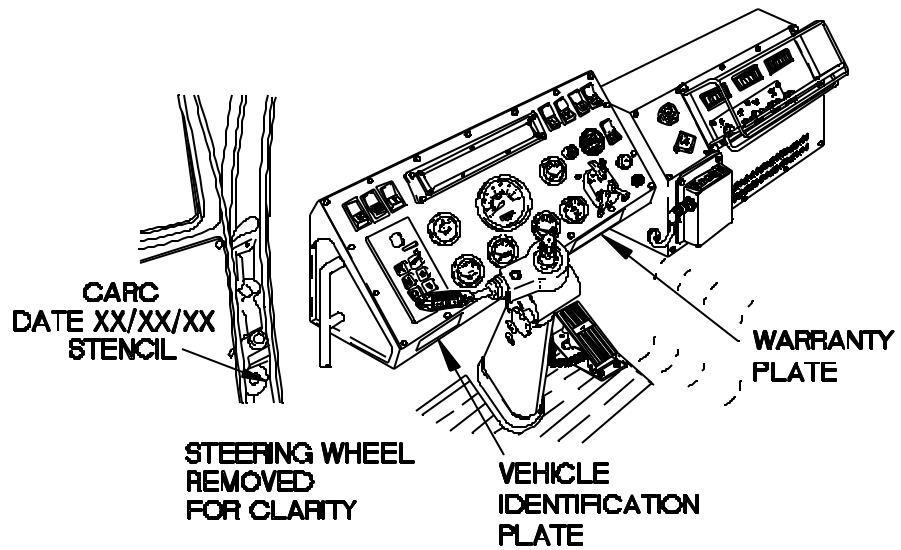

L500810-


# STOWAGE LOCATION/DECAL/STENCIL GUIDE - Continued

0120 00

## DECALS/STENCILS, ALL VEHICLES - Continued

### NOTE

On Vehicle S/N 18,549 or lower.

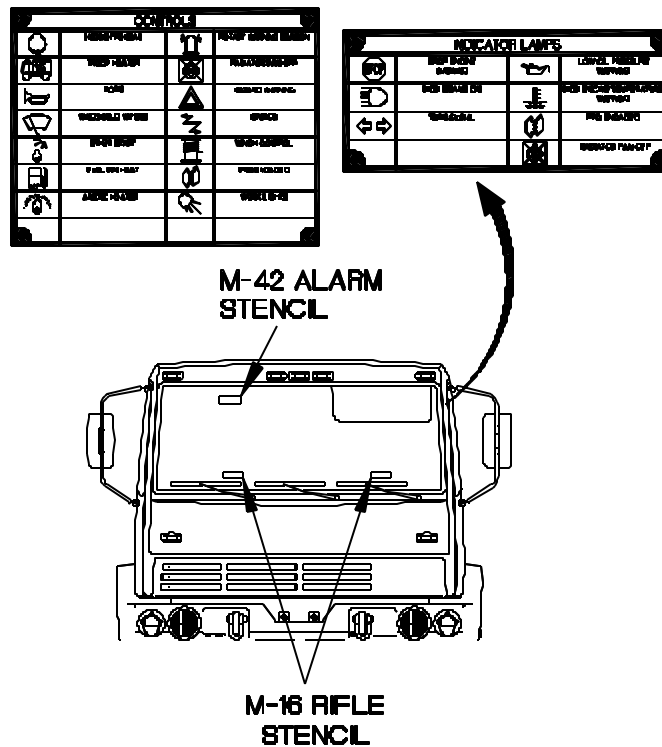

L 500811 -




# STOWAGE LOCATION/DECAL/STENCIL GUIDE - Continued

0120 00

STENCILS, M1084A1/M1086A1

## NOTE

On vehicles 18,550 or higher.

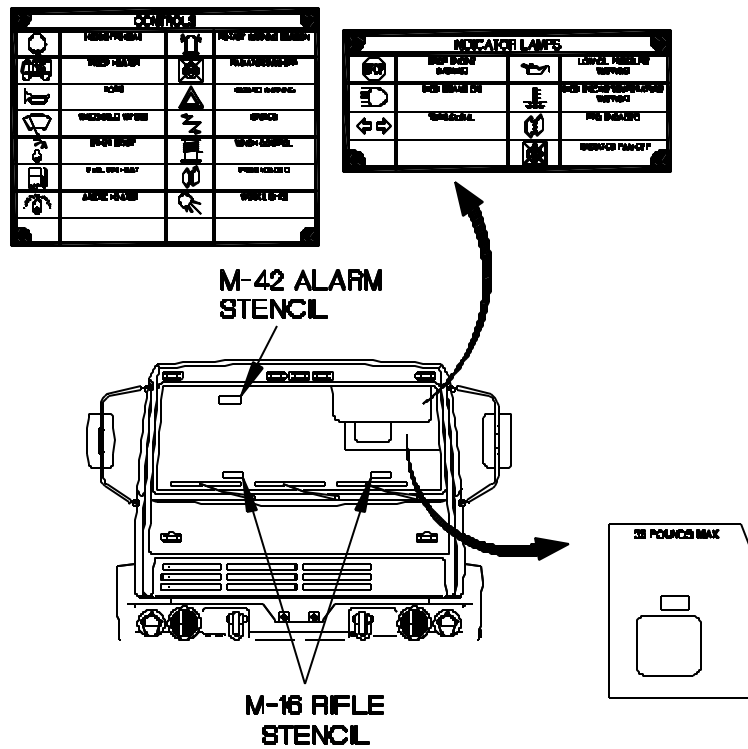


L3008318-

**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
Continued


0120 00

STENCILS, M1084A1/M1086A1

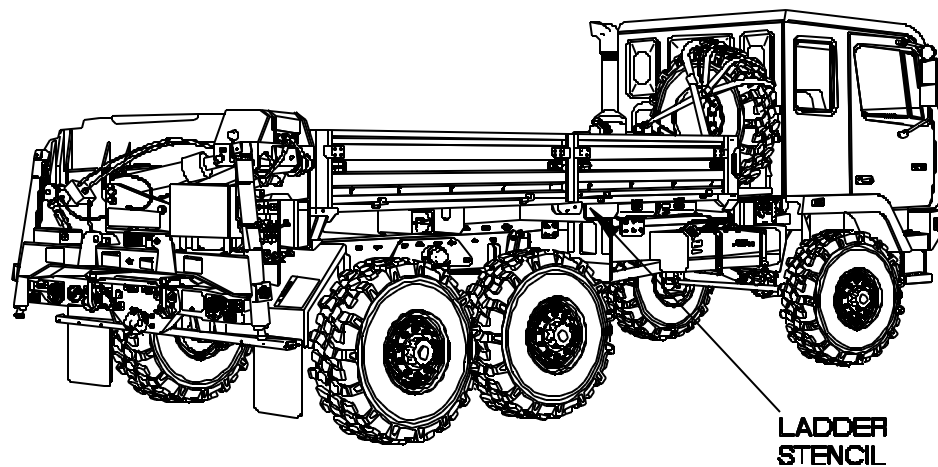

L500812-

**DECAL/DATA GUIDE, VEHICLES WITH LIGHT MATERIAL HANDLING CRANE (LMHC)**

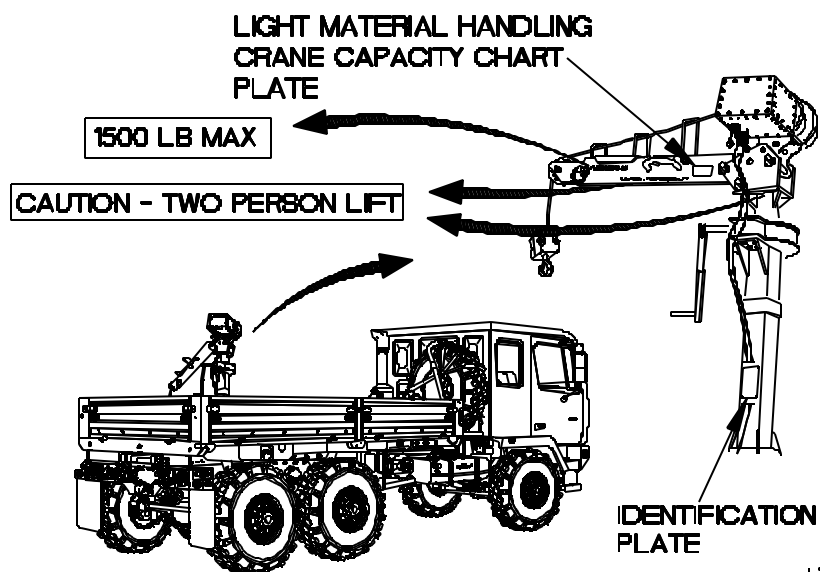


L500813-

STOWAGE LOCATION/DECAL/STENCIL GUIDE -  
Continued

0120 00

STENCILS, M1089A1

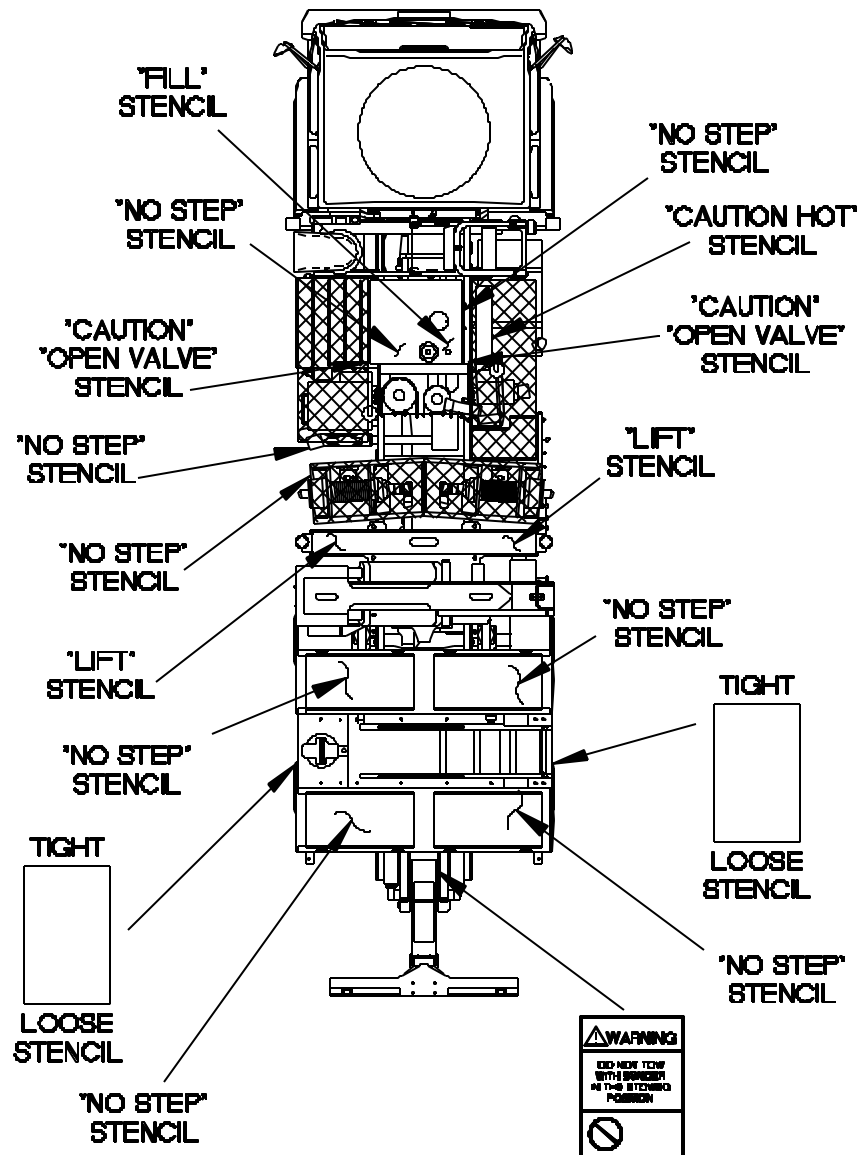

L500614 -


---

**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
**Continued**

---

**0120 00**

**DECAL/DATA PLATE GUIDE, VEHICLES WITH 15K SELF-RECOVERY WINCHES (SRW)**

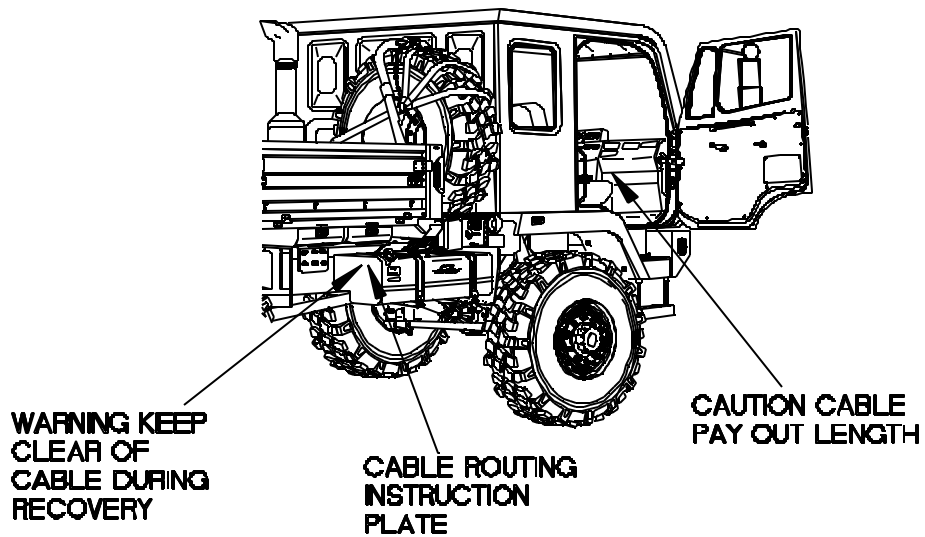

L500B15-

---


**STOWAGE LOCATION/DECAL/STENCIL GUIDE -**  
**Continued**

---

0120 00

STENCILS, M1090A1

**CAUTION KEEP SAFETY CHAINS ENGAGED  
IN ADJUSTMENT FITTINGS AT ALL TIMES**

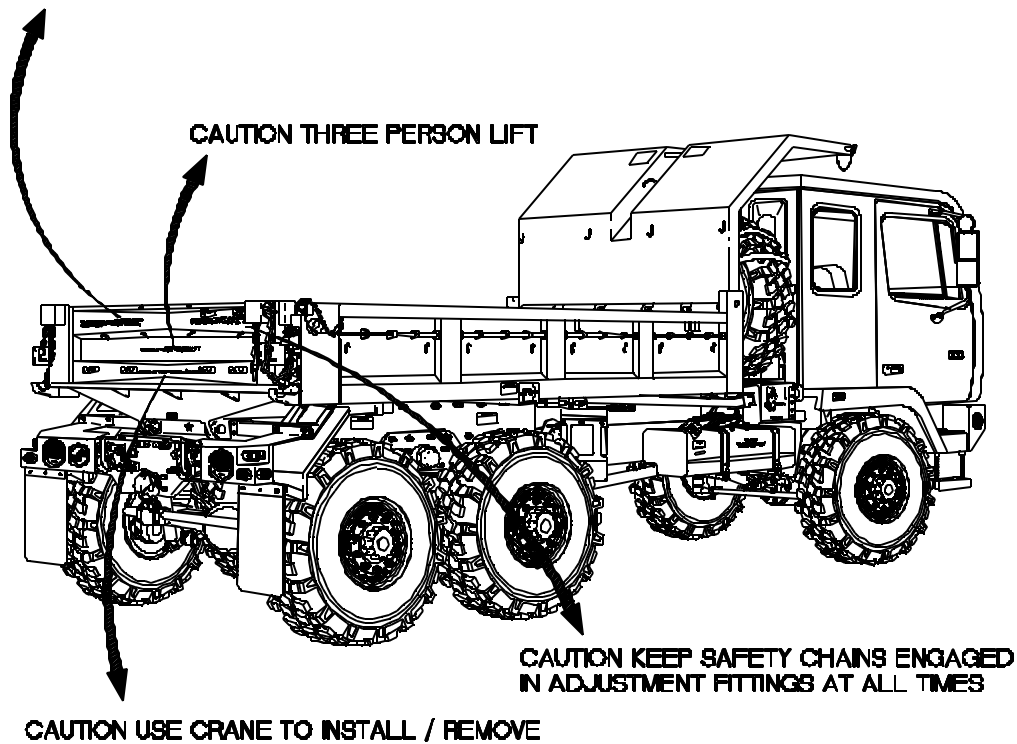

L500B16-



**TM 9-2320-392-10-2**

**INDEX**

<u>Subject</u>	<u>WP Sequence No.</u>
30K	
M1089A1 Left Winch Does Not Operate .....	0097 00
M1089A1 Right 30K Winch Does Not Operate.....	0097 00
M1089A1 Stifflegs/Left 30K Winch/15K	
Self-Recovery Winch Do Not Operate .....	0097 00
M1089A1 Stinger/Telescopic Lift Cylinders/ Fold Cylinder/Right 30K Winch Do Not Operate .....	0097 00
Winch Left or Right Freespool Function Does Not Operate From Wrecker Control Panel .....	0080 00
Winch Left or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL.....	0080 00
Wrecker Left or Right 30K Winch Cable Drum Tensioner Does Not Operate.....	0101 00
Wrecker Left or Right 30K Winch Freespool Does Not Operate.....	0097-00

**A**

Accelerator Pedal Sticks .....	0077 00
Additional Authorization List (AAL) .....	0118 00
Air	
Cab Leveling Air Springs Do Not Operate Properly.....	0095 00
Dryer Purges Continually .....	0085 00
FRONT BRAKE AIR Pressure Gage Does Not Operate or is Inaccurate .....	0080 00
Large Quantity of Moisture Expelled From Air Reservoirs .....	0085 00
LOW FRONT AIR Indicator Does Not Illuminate (Vehicle S/N 18,549 Or Lower) .....	0080 00
LOW REAR AIR Indicator Does Not Illuminate (Vehicle S/N 18,549 Or Lower) .....	0080 00
No Air Pressure or Low Air Pressure Present at Rear Gladhands .....	0085 00
Noisy Air Compressor Operation.....	0085 00
REAR BRAKE AIR Pressure Gage Does Not Operate or is Inaccurate.....	0080 00
Servicing Air Filter (Emergency Procedure) .....	0109 00
System.....	0085 00
System Loses Pressure During Operation/ Slow Air Pressure Buildup.....	0085 00
System Pressure Builds Up More Than 120 psi (827 kPa) (Compressor Fails To Unload).....	0085 00

# INDEX - Continued

Subject

WP Sequence No.

## A – Continued

### Air (Continued)

System Troubleshooting.....	0085 00
Transport System.....	0095 00
Transport System Troubleshooting.....	0095 00

### Alarm

Audible Alarm Does Not Operate .....	0080 00
Audible Alarm Does Not Operate When Troop Transport Alarm Switch Is Turned On .....	0080 00
Audible Alarm, Radio, Starter Pushbutton, and Electrical Gages Do Not Operate.....	0080 00
Chemical Alarm Does Not Operate.....	0080 00

### Alignment

Tires Continue To Wear After Front End Alignment and/or Vehicle Drives Sideways Down Road.....	0102 00
--	---------

### All

Windshield Wiper Speeds Do Not Operate .....	0080 00
Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL .....	0080 00
Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL.....	0080 00
Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL.....	0080 00

### Alternator

12 VDC Circuits Do Not Operate (100 AMP Alternator) .....	0080 00
12 VDC Circuits Do Not Operate (200 AMP Alternator) .....	0080 00

### Amber

Warning Light Does Not Illuminate .....	0080 00
---	---------

### Arctic

After Cab Arctic Heater Switches On and Off Repeatedly.....	0098 00
Arctic Engine Preheat Indicator Does Not Illuminate .....	0098 00
Arctic Engine Preheat Indicator Flashes Special Failure code for 60 seconds.....	0098 00

### Arctic Engine Preheat Indicator Flashes Slowly

Indicating "Ready" When Ignition Is Switched On Although Water Temperature Is Below 77° F (25° C) .....	0098 00
---	---------

### Arctic Engine Preheat Indicator Illuminates

Continuously Although Water Temperature Is Above 77° F (25° C) .....	0098 00
---	---------



# INDEX - Continued

Subject

WP Sequence No.

## A – Continued

### Arctic (Continued)

Arctic Engine Preheat Indicator Flashes Slowly Indicating "Ready" Engine Will Not Start Or Is Hard To Start.....	0098 00
Heavy White Smoke After Cold Start.....	0098 00
Cab Arctic Heater Cannot Be Switched Off.....	0098 00
Cab Arctic Heater Combustion Starts Immediately When Switched On.....	0098 00
Cab Arctic Heater Does Not Start.....	0098 00
Cab Arctic Heater Emits Black Smoke.....	0098 00
Cab Arctic Heater Emits White Smoke More Than 20 Seconds After Start-Up .....	0098 00
Cab Arctic Heater Hard to Start.....	0098 00
Cab Arctic Heater Turns Itself Off .....	0098 00
Cargo Area Arctic Heater Does Not Operate .....	0098 00
Cargo Area Arctic Heater Indicator Lamp Blinks Twice While Heater Is Running .....	0098 00
Cargo Area Arctic Heater Shuts Down Automatically .....	0098 00
Cargo Area Arctic Override Switch Does Not Operate .....	0098 00

### Area

Cargo Area Arctic Heater Does Not Operate .....	0098 00
Cargo Area Arctic Heater Indicator Lamp Blinks Twice While Heater Is Running .....	0098 00
Cargo Area Arctic Heater Shuts Down Automatically .....	0098 00
Cargo Area Arctic Override Switch Does Not Operate .....	0098 00

### Audible

Alarm Does Not Operate.....	0080 00
Alarm Does Not Operate When Troop Transport Alarm Switch Is Turned On.....	0080 00
Alarm, Radio, Starter Pushbutton, and Electrical Gages Do Not Operate .....	0080 00

### Auxiliary

Panel Does Not Illuminate .....	0080 00
Panel Switch Does Not Illuminate .....	0080 00
Panel, Personnel Heater, and Instrument Panel Assembly Do Not Illuminate.....	0080 00
Transmission Auxiliary Oil Cooler Fan Does Not Operate .....	0080 00
Transmission Auxiliary Oil Cooler Fan(s) Run Constantly .....	0080 00

# **INDEX - Continued**

Subject

WP Sequence No.

## **A – Continued**

### **Axle**

Differential(s) Noisy .....	0089 00
Troubleshooting .....	0089 00

## **B**

### **Backup**

Light Does Not Illuminate .....	0080 00
---------------------------------	---------

Basic Issue Items List.....	0117 00
-----------------------------	---------

### **Batteries**

Opening Battery Box/Testing Batteries .....	0108 00
---	---------

Battery Tester Does Not Operate .....	0080 00
---------------------------------------	---------

### **Beam**

High Beam Indicator Does Not Illuminate .....	0080 00
---	---------

One Or Both Headlight High Beams Do

Not Illuminate.....	0080 00
---------------------	---------

One Or Both Headlight Low Beams Do

Not Illuminate.....	0080 00
---------------------	---------

One Or Both Headlights (High and Low

Beams) Do Not Illuminate .....	0080 00
--------------------------------	---------

### **Bed**

Dump Bed and Tailgate Release Do Not

Operate .....	0080 00
---------------	---------

Dump Bed Down Does Not Operate .....	0080 00
--------------------------------------	---------

Dump Bed Up Does Not Operate .....	0080 00
------------------------------------	---------

### **Blackout**

Drive Light Does Not Illuminate.....	0080 00
--------------------------------------	---------

M1088A1/M1089A1 Worklights Do Not

Illuminate in Blackout Mode With

Blackout Override Switch On.....	0080 00
----------------------------------	---------

Marker Lights Do Not Illuminate and/or

WTEC III Transmission Pushbutton Shift

Selector (WTEC III TPSS) Does Not Dim .....	0080 00
---	---------

One Or Both Blackout Stoplights Do Not

Illuminate .....	0080 00
------------------	---------

One Or Both Front Blackout Marker Lights

Do Not Illuminate .....	0080 00
-------------------------	---------

One Or Both Rear Blackout Marker Lights

Do Not Illuminate .....	0080 00
-------------------------	---------

Stoplights and Blackout Stoplights Do Not

Illuminate .....	0080 00
------------------	---------

Trailer Blackout Marker Lights Do Not Illuminate .....	0080 00
--	---------

Trailer Blackout Stoplights Do Not

Illuminate .....	0080 00
------------------	---------

# INDEX - Continued

Subject

WP Sequence No.

## B – Continued

### Boom

M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Does Not Lift Up or	
Down or Hold Under Load .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Does Not Telescope	
In or Out .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing, Telescope, Boom,	
and Hoist Do Not Operate .....	0099 00
M1089A1 Material Handling Crane (MHC)	
Boom Does Not Lift Up or Down.....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Lockout Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Swing Drive Assembly Does Not	
Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Lockout Does Not Activate .....	0080 00

### Brake

EXHAUST BRAKE Indicator Does Not	
Illuminate .....	0080 00
FRONT BRAKE AIR Pressure Gage Does	
Not Operate or is Inaccurate .....	0080 00
LOW FRONT AIR Indicator Does Not	
Illuminate (Vehicle S/N 18,549 or Lower) .....	0080 00
LOW REAR AIR Indicator Does Not	
Operate (Vehicle S/N 18,549 or Lower) .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## B – Continued

### Brake (Continued)

PARK BRAKE Indicator Does Not Illuminate .....	0080 00
Parking Brake(s) Will Not Release.....	0084 00
REAR BRAKE AIR Pressure Gage Does Not Operate or is Inaccurate.....	0080 00
REAR SPRING BRAKE CAGING.....	0115 00
System.....	0084 00
System Troubleshooting.....	0084 00

### Brakes

Front Brakes Do Not Apply .....	0084 00
Front Brakes Overheat .....	0084 00
Parking Brakes Do Not Apply .....	0084 00
Rear Brakes Overheat .....	0084 00
Stoplights Do Not Operate When M1088A1 Trailer Brakes Are Applied.....	0080 00
Vehicle Brakes Unevenly, Brakes Pull To One Side or Grab.....	0084 00

### Braking

Excessive Braking Distance .....	0084 00
Bumperette Kit Installation/Removal .....	0114 00

## C

### Cab

Arctic Heater Cannot Be Switched Off .....	0098 00
Arctic Heater Combustion Starts Immediately When Switched On.....	0098 00
Arctic Heater Does Not Start.....	0098 00
Arctic Heater Emits Black Smoke .....	0098 00
Arctic Heater Emits White Smoke More Than 20 Seconds After Start-Up.....	0098 00
Arctic Heater Hard to Start .....	0098 00
Arctic Heater Switches On and Off Repeatedly.....	0098 00
Arctic Heater Turns Itself Off .....	0098 00
Does Not Raise or Lower Properly .....	0100 00
Exhaust Fumes in Cab.....	0078 00
Leveling Air Springs Do Not Operate Properly.....	0095 00
One or More Cab Top Marker Lights Do Not Illuminate.....	0080 00
Tilt and Spare Tire Retainer Troubleshooting .....	0100 00
Tilt, Spare Tire Retainer, and Suspension Compression Do Not Operate .....	0095 00

# INDEX - Continued

Subject

WP Sequence No.

## C – Continued

### Cable

Wrecker Left or Right 30k Winch Cable  
 Drum Tensioner Does Not Operate ..... 0101 00

### Caging

Rear Spring Brake Caging..... 0115 00

### Cargo

Area Arctic Heater Does Not Operate ..... 0098 00  
 Area Arctic Heater Indicator Lamp Blinks  
 Twice While Heater Is Running ..... 0098 00  
 Area Arctic Heater Shuts Down  
 Automatically ..... 0098 00  
 Area Arctic Override Switch Does Not  
 Operate ..... 0098 00

### Central Tire Inflation System (CTIS)

Does Not Deflate Tires ..... 0080 00  
 Does Not Inflate Tires ..... 0080 00  
 Does Not Operate ..... 0080 00

ECU Lights Operate But Central Tire  
 Inflation System (CTIS) Fails To  
 Inflate or Deflate ..... 0088 00

Five Central Tire Inflation System (CTIS)  
 ECU Indicator Lights Flashing ..... 0088 00

Four Central Tire Inflation System (CTIS)  
 ECU Indicator Lights Flashing ..... 0088 00

CTIS OVERSPEED Indicator Does  
 Not Illuminate..... 0080 00

### CTIS OVERSPEED Indicator Remains

Illuminated..... 0088 00  
 Repeatedly Resumes Cycling 30 Seconds  
 After Indicator Lights Stop Flashing ..... 0088 00  
 Two Steady Mode Lights Illuminate On  
 Central Tire Inflation System (CTIS) ECU ..... 0088 00

### Changing

Tire..... 0105 00

### Chemical

Alarm Does Not Operate ..... 0080 00  
 Detector Does Not Operate ..... 0080 00  
 Detect Indicator Does Not Illuminate ..... 0080 00

### Circuits

12 VDC Circuits Do Not Operate (100  
 AMP Alternator)..... 0080 00  
 12 VDC Circuits Do Not Operate (200  
 AMP Alternator)..... 0080 00  
 24 VDC Circuits Do Not Operate ..... 0080 00  
 Engine Does Not Crank..... 0076 00

# INDEX - Continued

Subject

WP Sequence No.

## C – Continued

Circuits (Continued)	
Engine Does Not Crank/24 VDC Circuits Do Not Operate .....	0080 00
Cleaning	
and Lubrication.....	0103 00
Vehicle .....	0107 00
Clearance	
Intervehicular Clearance Lights Do Not Illuminate .....	0080 00
Components of End Item (COEI) List.....	0117 00
Composite	
One or Both Composite Taillights Do Not Illuminate.....	0080 00
Compressor	
Air System Pressure Builds Up More Than 120 psi (827 kPa) (Compressor Fails To Unload) .....	0085 00
Noisy Air Compressor Operation.....	0085 00
Control	
30K Winch Left or Right Freespool Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
30K Winch Left or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL.....	0080 00
All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL .....	0080 00
All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
One Wrecker Function Does Not Operate From WRECKER REMOTE CONTROL .....	0080 00
Personnel Heater Control Illumination Does Not Operate .....	0080 00
Coolant	
In Engine Lubrication Oil.....	0076 00
Loss of Coolant.....	0079 00
Cooler	
Transmission Auxiliary Oil Cooler Fan Does Not Operate .....	0080 00

# INDEX - Continued

<u>Subject</u>	<u>WP Sequence No.</u>
<b>C – Continued</b>	
Cooler (Continued)	
Transmission Auxiliary Oil Cooler Fan(s)	
Run Constantly .....	0080 00
Cooling	
Oil In Cooling System .....	0079 00
System Troubleshooting .....	0079 00
Coupling	
Fifth Wheel Does Not Lock When Coupling	
Trailer to Tractor .....	0091 00
Cover	
Power Distribution Panel (PDP) Cover	
Removal/Installation .....	0113 00
Crane	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Does Not Lift Up or	
Down or Hold Under Load .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Does Not Telescope	
In or Out .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Does Not Operate	
From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Does Not Operate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
1084A1/M1086A1 Material Handling	
Crane (MHC) Hand Pump Does Not	
Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## C – Continued

### Crane (Continued)

M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Up Does Not Operate	
From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hydraulic Functions	
Operate Slowly.....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Left Outrigger (Jack) Drifts	
or Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Mast Does Not Erect .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown	
System Does Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown System	
Stays Activated.....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Right Outrigger (Jack)	
Drifts or Does Not Operate.....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing CCW Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing CW Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing Drive Does	
Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing, Telescope, Boom,	
and Hoist Do Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope In Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Activate .....	0080 00



**INDEX - Continued**

Subject

WP Sequence No.

**C - Continued**

Crane (Continued)

M1089A1 Material Handling Crane (MHC)	
Boom Does Not Lift Up or Down.....	0097 00
M1089A1 Material Handling Crane	
(MHC) Boom Does Not Telescope	
In or Out.....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Lockout Does Not Activate.....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Swing Drive Assembly Does	
Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Lockout Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate (Electrical	
Troubleshooting) .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate (Wrecker Hydraulic	
System Troubleshooting).....	0097 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate From REMOTE	
CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hand Pump Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Hoist Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Hoist Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Does Not Operate From REMOTE	
CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Lockout Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Left or Right Outrigger (Jack) Drifts or	
Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Mast Does Not Erect or Stow .....	0097 00

# INDEX - Continued

Subject

WP Sequence No.

## C – Continued

### Crane (Continued)

M1089A1 Material Handling Crane (MHC)	
Outrigger Extension Cylinder Does	
Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Does Not	
Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Stays	
Activated .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CCW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope In Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope Out Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope Out Lockout Does Not	
Activate .....	0080 00

### CTIS

Central Tire Inflation System (CTIS)	
Troubleshooting .....	0088 00
Does Not Deflate Tires .....	0080 00
Does Not Inflate Tires .....	0080 00
Does Not Operate .....	0080 00
ECU Does Not Dim In Blackout Mode .....	0080 00
ECU Lights Operate But Central Tire	
Inflation System (CTIS) Fails To Inflate	
or Deflate .....	0088 00
Five Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Four Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Off Indicator Does Not Illuminate .....	0080 00
Overspeed Indicator Does Not Illuminate .....	0080 00
Repeatedly Resumes Cycling 30 Seconds	
After Indicator Lights Stop Flashing .....	0088 00
Two Steady Mode Lights Illuminate On	
Central Tire Inflation System (CTIS)	
ECU.....	0088 00

# **INDEX - Continued**

Subject

WP Sequence No.

## **C - Continued**

### Cylinder

M1089A1 Fold Cylinder Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Outrigger Extension Cylinder Does Not Operate .....	0097 00
M1089A1 Underlift Telescopic Lift Cylinder(s)	
Does Not Operate .....	0097 00
M1089A1 Stinger/Telescopic Lift	
Cylinders/Fold Cylinder/Right 30K	
Winch Do Not Operate.....	0097 00

## **D**

### Detector

Chemical Detector Does Not Operate .....	0080 00
--	---------

### Detect

Chemical Detect Indicator Does Not Illuminate .....	0080 00
---	---------

### Differential

Axle Differential(s) Noisy .....	0089 00
Lock Solenoid Does Not Operate .....	0080 00

### Digitization

No Power To Digitization Rack.....	0098 00
No Power to Mobile Tracking System (MTS) Sense .....	0098 00
No Power To Enhanced Position Locating Reporting System (EPLRS) .....	0098 00
No Power To Precision Lightweight Global Positioning System (PLGR) .....	0098 00
No Power To Driver Visual Enhancement (DVE) .....	0098 00
No Power To SINGGAR/Force XXI Battle Command Or Below (FBCB) .....	0098 00
No Power To Mobile Tracking System (MTS).....	0098 00

### Disconnecting

Fifth Wheel Does Not Unlock When Disconnecting Trailer From Tractor .....	0091 00
---	---------

### Door

LH Door and/or LH Front Marker Lights Do Not Illuminate.....	0080 00
RH Door and/or RH Front Marker Lights Do Not Illuminate.....	0080 00

### Drive

Blackout Drive Light Does Not Illuminate .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing Drive Does Not Operate .....	0099 00

# INDEX - Continued

Subject WP Sequence No.

## D - Continued

Drive (Continued)	
M1089A1 Material Handling Crane (MHC)	
Boom Swing Drive Assembly Does Not Operate .....	0097 00
Drum	
Wrecker Left or Right 30K Winch Cable	
Drum Tensioner Does Not Operate .....	0101 00
Dryer	
Air Dryer Heater Does Not Operate .....	0080 00
Dump	
Bed and Tailgate Release Do Not Operate .....	0080 00
Bed Down Does Not Operate .....	0080 00
Bed Up Does Not Operate .....	0080 00
Body Hydraulic System .....	0096 00
Body Hydraulic System Troubleshooting .....	0096 00
Body Up Indicator Does Not Operate .....	0080 00

## E

ECU	
Central Tire Inflation System (CTIS) ECU	
Lights Operate But CTIS Fails To Inflate or Deflate .....	0088 00
Five Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Four Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Two Steady Mode Lights Illuminate On Central Tire Inflation System (CTIS) ECU.....	0088 00
Electrical	
All Electrical Gages Do Not Operate .....	0080 00
System Does Not Maintain a Charge .....	0080 00
Emergency	
Park Brake Indicator Does Not Illuminate .....	0080 00
Servicing Air Filter (Emergency Procedure) .....	0109 00
Engine	
Blue Exhaust Smoke from Engine .....	0076 00
Check Engine Indicator Does Not Illuminate .....	0080 00
Check Engine Indicator Remains Illuminated.....	0076 00
Coolant in Engine Lubrication Oil .....	0076 00
Crank But Does Not Start .....	0076 00
Crank But Does Not Start .....	0080 00
Crank But Does Not Start or Engine Stalls	
After Starting .....	0077 00
Does Not Start.....	0076 00
Does Not Start.....	0080 00

# INDEX - Continued

<u>Subject</u>	<u>WP Sequence No.</u>
<b>E - Continued</b>	
Engine (Continued)	
Excessive Engine Oil Consumption .....	0076 00
Exhaust System Unusually Noisy or Vibrates Excessively During Engine Operation .....	0078 00
Fan Does Not Turn Off Using Engine Fan Off Switch.....	0080 00
Fan Runs Constantly .....	0080 00
Low Engine Oil Pressure.....	0076 00
Oil Pressure Indicator Does Not Illuminate .....	0080 00
Overheats .....	0076 00
Overheats .....	0079 00
Overspeeds On Start.....	0076 00
Speed is Not Stable .....	0076 00
Stalls at Low RPM .....	0076 00
Starts But Misfires, Runs Rough, or Lacks Power .....	0076 00
System.....	0076 00
System Troubleshooting.....	0076 00
Too Much Vibration In Engine .....	0076 00
Ether	
Start Does Not Operate .....	0080 00
Engine - Continued	
Starting Aid Does Not Operate .....	0077 00
Excessive	
Black or Gray Exhaust Smoke .....	0076 00
Braking Distance .....	0084 00
Engine Oil Consumption.....	0076 00
Movement of Trailer King Pin in Fifth Wheel .....	0091 00
Play When Turning Steering Wheel .....	0090 00
Exhaust	
Blue Exhaust Smoke from Engine .....	0076 00
Brake Does Not Operate .....	0080 00
BRAKE Indicator Does Not Illuminate .....	0080 00
Excessive Black or Gray Exhaust Smoke .....	0076 00
Fumes in Cab .....	0078 00
System.....	0078 00
System Troubleshooting.....	0078 00
System Unusually Noisy or Vibrates Excessively During Engine Operation.....	0078 00
White Exhaust Smoke .....	0076 00
Expendable and Durable Items.....	0119 00

# INDEX - Continued

Subject

WP Sequence No.

## E - Continued

### External

No Service or External Hydraulic Power  
From M1089A1..... 0097 00

## F

### Fan

Engine Fan Does Not Turn Off Using  
Engine Fan Off Switch..... 0080 00  
Engine Fan Off Indicator Does Not  
Illuminate ..... 0080 00  
Engine Fan Runs Constantly ..... 0080 00  
Transmission Auxiliary Oil Cooler Fan  
Does Not Operate ..... 0080 00  
Personnel Heater Fan Does Not Operate ..... 0080 00

### Fifth

Excessive Movement of Trailer King Pin  
in Fifth Wheel..... 0091 00  
Wheel Does Not Lock When Coupling  
Trailer to Tractor..... 0091 00  
Wheel Does Not Unlock When Discon-  
necting Trailer From Tractor..... 0091 00  
Wheel Sliding Mechanism Does Not Operate..... 0091 00  
Wheel Troubleshooting ..... 0091 00

### Filter

Servicing Air Filter (Emergency Procedure) ..... 0109 00

### Five Central Tire Inflation System (CTIS) ECU

Indicator Lights Flashing..... 0088 00

### Fold

M1089A1 Fold Cylinder Does Not Operate ..... 0097 00  
M1089A1 Stinger/Telescopic Lift  
Cylinders/Fold Cylinder/Right 30K  
Winch Do Not Operate..... 0097 00

### Four Central Tire Inflation System (CTIS) ECU

Indicator Lights Flashing..... 0088 00

Frame Troubleshooting ..... 0102 00

### Freespool

30K Winch Left or Right Freespool  
Function Does Not Operate From  
WRECKER CONTROL PANEL ..... 0080 00  
Wrecker Left or Right 30K Winch  
Freespool Does Not Operate ..... 0101 00

### Front

And Rear Hazard Lights Do Not Illuminate ..... 0080 00  
And Rear Turn Signals Do Not Illuminate..... 0080 00  
BRAKE AIR Pressure Gage Does Not  
Operate or is Inaccurate..... 0080 00

# INDEX - Continued

Subject

WP Sequence No.

## F – Continued

Front (Continued)	
Brakes Do Not Apply.....	0084 00
Brakes Overheat.....	0084 00
Left or Right Front Turn Signal Does Not Illuminate .....	0080 00
LH Door and/or LH Front Marker Lights Do Not Illuminate .....	0080 00
Low Front Air Indicator Does Not Illuminate (Vehicle S/N 18,449 or Lower) .....	0080 00
One or Both Front Blackout Marker Lights Do Not Illuminate .....	0080 00
RH Door and/or RH Front Marker Lights Do Not Illuminate .....	0080 00
Tires Continue To Wear After Front End Alignment and/or Vehicle Drives Side- ways Down Road.....	0102 00
Fuel	
Consumption too High .....	0077 00
GAGE Does Not Operate or Is Inaccurate .....	0080 00
System Troubleshooting.....	0077 00
Fumes	
Exhaust Fumes in Cab.....	0078 00
Function	
30K Winch Left or Right Freespool Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
30K Winch Left or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
One Wrecker Function Does Not Operate From WRECKER REMOTE CONTROL .....	0080 00
Functions	
All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL.....	0080 00
All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL.....	0080 00
All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL.....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Hydraulic Functions Operate Slowly.....	0099 00

# INDEX - Continued

<u>Subject</u>	<u>WP Sequence No.</u>
<b>G</b>	
Gage	
FRONT BRAKE AIR Pressure Gage Does Not Operate or Is Inaccurate .....	0080 00
FUEL GAGE Does Not Operate or Is Inaccurate .....	0080 00
Instrument Panel Gage Does Not Illuminate .....	0080 00
OIL PRESS Gage Does Not Operate or Is Inaccurate .....	0080 00
REAR BRAKE AIR Pressure Gage Does Not Operate or Is Inaccurate .....	0080 00
VOLTS GAGE Does Not Operate or Is Inaccurate .....	0080 00
WATER TEMP Gage Does Not Operate or Is Inaccurate .....	0080 00
Gladhand	
No Air Pressure or Low Air Pressure Present at Rear Gladhands .....	0085 00
<b>H</b>	
Hand	
M1084A1/M1086A1 Material Handling Crane (MHC) Hand Pump Does Not Operate .....	0099 00
M1089A1 Material Handling Crane (MHC) Hand Pump Does Not Operate .....	0097 00
Hard to Steer .....	0090 00
Hazard	
Front and Rear Hazard Lights Do Not Illuminate .....	0080 00
Rear Hazard Lights Do Not Illuminate .....	0080 00
Headlight	
One Or Both Headlight High Beams Do Not Illuminate.....	0080 00
One Or Both Headlight Low Beams Do Not Illuminate.....	0080 00
Headlights	
One Or Both Headlights (High and Low Beam) Do Not Illuminate.....	0080 00
Heater	
Auxiliary Panel, Personnel Heater, and Instrument Panel Do Not Illuminate.....	0080 00
Cab Arctic Heater Cannot Be Switched Off.....	0098 00
Cab Arctic Heater Combustion Starts Immediately When Switched On.....	0098 00
Cab Arctic Heater Does Not Start.....	0098 00



# INDEX - Continued

Subject

WP Sequence No.

## H – Continued

### Heater (Continued)

Cab Arctic Heater Emits Black Smoke.....	0098 00
Cab Arctic Heater Emits White Smoke	
More Than 20 Seconds After Start-Up .....	0098 00
Cab Arctic Heater Hard to Start.....	0098 00
Cab Arctic Heater Switches On and Off	
Repeatedly.....	0098 00
Cab Arctic Heater Turns Itself Off .....	0098 00
Cargo Area Arctic Heater Does Not Operate .....	0098 00
Cargo Area Arctic Heater Indicator Lamp	
Blinks Twice While Heater Is Running .....	0098 00
Cargo Area Arctic Heater Shuts Down	
Automatically .....	0098 00
Inlet Air Heater Does Not Operate .....	0080 00
Personnel Heater Control Illumination	
Does Not Operate .....	0080 00
Personnel Heater Fan Does Not Operate .....	0080 00

### High

Beam Indicator Does Not Illuminate .....	0080 00
One Or Both Headlight High Beams Do	
Not Illuminate.....	0080 00

### Hoist

M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Down Does Not Operate	
From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Hoist Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Hoist Up Lockout Does Not	
Activate .....	0080 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Swing, Telescope, Boom, and	
Hoist Do Not Operate .....	0099 00
M1089A1 Material Handling Crane (MHC)	
Hoist Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Hoist Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Lockout Does Not Activate .....	0080 00

# INDEX - Continued

Subject WP Sequence No.

## H – Continued

Horn Does Not Operate .....	0080 00
Hydraulic	
Dump Body Hydraulic System .....	0096 00
Loss of Hydraulic Pressure	
(Single Stage Pump) .....	0087 00
Loss of Hydraulic Pressure	
(Three Stage Pump) .....	0087 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hydraulic Functions	
Operate Slowly .....	0099 00
M1089A1 Pay-Out Hydraulic Motor	
Assembly Does Not Operate .....	0097 00
No Service or External Hydraulic Power	
From M1089A1 .....	0097 00
System .....	0087 00
System Troubleshooting .....	0087 00

## I

Illuminate	
Auxiliary Panel Does Not Illuminate .....	0080 00
Auxiliary Panel Switch Does Not	
Illuminate .....	0080 00
Auxiliary Panel, Personnel Heater, and	
Instrument Panel Do Not Illuminate .....	0080 00
Back-Up Light Does Not Illuminate .....	0080 00
Blackout Drive Light Does Not Illuminate .....	0080 00
All Blackout Marker Lights Do Not	
Illuminate .....	0080 00
Instrument Panel Gages Do Not	
Illuminate .....	0080 00
Instrument Panel Switch Does Not	
Illuminate .....	0080 00
LH Door and/or LH Front Marker Lights	
Do Not Illuminate .....	0080 00
M1088A1/M1089A1 (LH) Worklight Does	
Not Illuminate .....	0080 00
M1088A1/M1089A1(RH) Worklight Does	
Not Illuminate .....	0080 00
Worklights Do Not Illuminate .....	0080 00
M1088A1/M1089A1 Worklights Do Not	
Illuminate in Blackout Mode With	
Blackout Override Switch On .....	0080 00
Amber Warning Light Does Not Illuminate .....	0080 00
One or Both Composite Taillights Do Not	
Illuminate .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## I - Continued

### Illuminate (Continued)

One or Both Front Blackout Marker Lights	
Do Not Illuminate .....	0080 00
One Or Both Headlight High Beams Do	
Not Illuminate.....	0080 00
One Or Both Headlight Low Beams Do	
Not Illuminate.....	0080 00
One Or Both Headlights (High and Low	
Beam) Do Not Illuminate.....	0080 00
One Or Both Rear Blackout Marker Lights	
Do Not Illuminate .....	0080 00
One or More Cab Top Marker Lights Do	
Not Illuminate.....	0080 00
One or Both Blackout Stoplights Do Not	
Illuminate .....	0080 00
One Or Both Stoplights Do Not Illuminate .....	0080 00
Parking Lights Do Not Illuminate .....	0080 00
Rear Hazard Lights Do Not Illuminate .....	0080 00
RH Door and/or RH Front Marker Lights	
Do Not Illuminate .....	0080 00
Right Turn Signal Indicator Does Not	
Illuminate .....	0080 00
Side and/or Rear Marker Lights Do Not	
Illuminate .....	0080 00
Stoplights and Blackout Stoplights Do	
Not Illuminate.....	0080 00
Stoplights Do Not Illuminate When M1088	
Trailer Brakes Are Applied.....	0080 00
Trailer Blackout Marker Lights Do Not	
Illuminate .....	0080 00
Trailer Blackout Stoplights Do Not	
Illuminate .....	0080 00
Trailer Left Stop/Turn Light Does Not	
Illuminate .....	0080 00
Trailer Marker/Taillights Do Not	
Illuminate .....	0080 00
Trailer Right Stop/Turn Light Does Not	
Illuminate .....	0080 00
Two Steady Mode Lights Illuminate On	
Central Tire Inflation System (CTIS)	
ECU.....	0088 00
Illumination	
Personnel Heater Control Illumination	
Does Not Operate .....	0080 00
Indicator	
ABS Indicator Does Not Illuminate .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## I - Continued

### Indicator (Continued)

ABS Indicator Remains Illuminated .....	0084 00
Cargo Area Arctic Heater Indicator Lamp Blinks	
Twice While Heater Is Running .....	0098 00
Check Engine Indicator Does Not Illuminate .....	0080 00
Check Engine Indicator Remains Illuminated.....	0076 00
CHECK TRANS Indicator Does Not	
Illuminate .....	0080 00
CHECK TRANS Indicator Remains	
Illuminated.....	0081 00
CHEMICAL DETECT Indicator Does Not	
Illuminate .....	0080 00
COOLANT TEMP Indicator Does Not	
Illuminate .....	0080 00
COOLANT TEMP Indicator Illuminates .....	0080 00
CTIS OFF Indicator Does Not Illuminate .....	0080 00
CTIS OVERSPEED Indicator Does	
Not Illuminate.....	0080 00
CTIS OVERSPEED Indicator Remains	
Illuminated.....	0088 00
DUMP BODY UP Indicator Does Not	
Illuminate .....	0080 00
ENGINE OIL PRESSURE Indicator Does	
Not Illuminate.....	0080 00
ENGINE FAN OFF Indicator Does Not	
Illuminate .....	0080 00
Five Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Four Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Front and Rear Hazard Lights Do Not	
Illuminate .....	0080 00
Front And Rear Turn Signals Do Not	
Illuminate .....	0080 00
HIGH BEAM ON Indicator Does Not	
Illuminate .....	0080 00
INLET AIR INDICATOR Does Not Illuminate .....	0080 00
Intervehicular Left Turn Signal Does Not	
Illuminate .....	0080 00
Intervehicular Right Turn Signal Does Not	
Illuminate .....	0080 00
Intervehicular Stoplights Do Not	
Illuminate .....	0080 00
Left or Right Front Turn Signal Does Not	
Illuminate .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## I – Continued

### Indicator (Continued)

Left Turn Signal Indicator Does Not Illuminate .....	0080 00
Left Turn Signal Indicator Does Not Illuminate .....	0080 00
LOW FRONT AIR Indicator Does Not Illuminate (Vehicle S/N 18,549 or Lower) .....	0080 00
LOW REAR AIR Indicator Does Not Illuminate (Vehicle S/N 18,549 or Lower) .....	0080 00
PTO Indicator Does Not Illuminate .....	0080 00
Right Turn Signal Indicator Does Not Illuminate .....	0080 00
STOP ENGINE Indicator Does Not Illuminate .....	0080 00
STOP ENGINE Indicator Remains Illuminated.....	0076 00
TRANS TEMP Indicator Does Not Illuminate .....	0080 00
TRANS TEMP Indicator Remains Illuminated.....	0081 00

### Indicators

Central Tire Inflation System (CTIS) Repeatedly Resumes Cycling 30 Seconds After Indicator Lights Stop Flashing .....	0088 00
---	---------

Inspection.....	0103 00
-----------------	---------

### Instrument

Panel Gage Does Not Illuminate.....	0080 00
Panel Switch Does Not Illuminate .....	0080 00

### Intervehicle

Clearance Lights Do Not Illuminate .....	0080 00
Left Turn Signal Does Not Illuminate .....	0080 00
Right Turn Signal Does Not Illuminate .....	0080 00
Stoplights Do Not Illuminate .....	0080 00
Taillights Do Not Illuminate .....	0080 00

### Introduction

Maintenance Introduction .....	0104 00
PMCS Introduction .....	0103 00
Troubleshooting Introduction .....	0074 00

## J

### Joints

#### Propeller Shafts or Universal Joints

Unusually Noisy When Operating .....	0082 00
--------------------------------------	---------

# INDEX - Continued

Subject

WP Sequence No.

## K

### King

Excessive Movement of Trailer King Pin in  
Fifth Wheel ..... 0091 00

### Kit

Bumperette Kit Installation/Removal ..... 0114 00  
M1083A1/M1084A1 Troopseat Kit  
Installation/Removal ..... 0110 00  
M1085A1 Troopseat Kit Installation/  
Removal ..... 0111 00  
M1090A1 Troopseat Kit Installation/  
Removal ..... 0112 00

## L

### Lamp

Cargo Area Arctic Heater Indicator Lamp Blinks  
Twice While Heater Is Running ..... 0098 00  
Test 24 VDC Does Not Operate ..... 0080 00  
Test Ground Does Not Operate ..... 0080 00

### Large Quantity of Moisture Expelled From Air

Reservoirs ..... 0085 00

Leakage Definition ..... 0103 00

Leans to One Side or Rear of Vehicle Sags..... 0092 00

### Left

M1084A1/M1086A1 Material Handling  
Crane (MHC) Left Outrigger (Jack) Drifts  
or Does Not Operate ..... 0099 00  
M1089A1 Left 30K Winch Does Not Operate ..... 0097 00  
M1089A1 Left Stiffleg Drifts or Does Not  
Operate ..... 0097 00  
M1089A1 Material Handling Crane (MHC)  
Left or Right Outrigger (Jack) Drifts or  
Does Not Operate ..... 0097 00  
M1089A1 Stifflegs/Left 30K Winch/15K  
Self-Recovery Winch (SRW) Do Not  
Operate ..... 0097 00  
30K Winch Left or Right Freespool Function  
Does Not Operate From WRECKER  
CONTROL PANEL ..... 0080 00  
30K Winch Left or Right Speed Function  
Does Not Operate From WRECKER  
CONTROL PANEL ..... 0080 00  
Or Right Front Turn Signal Does Not  
Illuminate ..... 0080 00  
Trailer Left Stop/Turn Light Does Not  
Illuminate ..... 0080 00  
Turn Signal Indicator Does Not Illuminate..... 0080 00

# INDEX - Continued

Subject

WP Sequence No.

## L - Continued

### Left (Continued)

Wrecker Left or Right 30K Winch Cable	
Drum Tensioner Does Not Operate .....	0101 00
Wrecker Left or Right 30K Winch Freespool	
Does Not Operate .....	0101 00

### LH

Door and/or LH Front Marker Lights Do	
Not Illuminate.....	0080 00
M1088A1/M1089A1 (LH) Worklight Does	
Not Illuminate.....	0080 00

### Lift

M1089A1 Stinger/Telescopic Lift	
Cylinders/Fold Cylinder/Right 30K Winch	
Do Not Operate .....	0097 00

### Light

All Main Light Switch Functions Do Not	
Operate .....	0080 00
Amber Warning Light Does Not Illuminate .....	0080 00
Back-Up Light Does Not Illuminate .....	0080 00
Blackout Drive Light Does Not Illuminate .....	0080 00
Material Handling Crane Does Not	
Operate .....	0098 00
Material Handling Crane (LMHC) Hoist In	
Does Not Operate .....	0098 00
Trailer Left Stop/Turn Light Does Not	
Illuminate .....	0080 00
Trailer Right Stop/Turn Light Does Not	
Operate .....	0080 00

### Lights

All Blackout Marker Lights Do Not	
Illuminate .....	0080 00
All Marker Lights Do Not Illuminate In	
Normal Mode .....	0080 00
Blackout Marker Lights Do Not Illuminate	
and/or WTEC III Transmission Pushbutton	
Shift Selector (WTEC III TPSS)	
Does Not Dim .....	0080 00
Both Trailer Stop/Turn Lights Do Not	
Illuminate .....	0080 00
Central Tire Inflation System (CTIS) ECU	
Lights Operate But CTIS Fails To Inflate	
or Deflate .....	0088 00
Central Tire Inflation System (CTIS)	
Repeatedly Resumes Cycling 30 Seconds	
After Indicator Lights Stop Flashing .....	0088 00

**INDEX - Continued**

Subject

WP Sequence No.

**L – Continued**

Lights (Continued)

Five Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Four Central Tire Inflation System (CTIS)	
ECU Indicator Lights Flashing .....	0088 00
Front and Rear Hazard Lights Do Not	
Illuminate .....	0080 00
Intervehicular Clearance Lights Do Not	
Illuminate .....	0080 00
LH Door and/or LH Front Marker Lights Do	
Not Illuminate .....	0080 00
One or Both Front Blackout Marker Lights	
Do Not Illuminate .....	0080 00
One Or Both Rear Blackout Marker Lights	
Do Not Illuminate .....	0080 00
One or More Cab Top Marker Lights Do	
Not Illuminate .....	0080 00
Parking Lights Do Not Illuminate .....	0080 00
Rear Hazard Lights Do Not Illuminate .....	0080 00
RH Door and/or RH Front Marker Lights Do Not	
Illuminate .....	0080 00
Side and/or Rear Marker Lights Do Not	
Illuminate .....	0080 00
Trailer Blackout Marker Lights Do Not	
Illuminate .....	0080 00
Two Steady Mode Lights Illuminate On	
Central Tire Inflation System (CTIS)	
ECU .....	0088 00

Lockout

M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Lockout Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Lockout Does Not Activate .....	0080 00



# INDEX - Continued

Subject

WP Sequence No.

## L – Continued

### Lockout (Continued)

M1089A1Material Handling Crane (MHC)	
Hoist Up Lockout Does Not Activate .....	0080 00
M1089A1Material Handling Crane (MHC)	
Telescope Out Lockout Does Not	
Activate .....	0080 00

### Loss

Of Coolant .....	0079 00
Of Hydraulic Pressure (Single Stage	
Pump) .....	0087 00
Of Hydraulic Pressure (Three Stage	
Pump) .....	0087 00

### Low

No Air Pressure or Low Air Pressure	
Present at Rear Gladhands .....	0085 00
Engine Oil Pressure.....	0076 00

### Lower

Cab Does Not Raise or Lower Properly.....	0100 00
Dump Body Does Not Raise.....	0096 00
Dump Body Does Not Lower .....	0096 00
Dump Body Drifts Down from Raised Position.....	0096 00
Spare Tire Does Not Raise or Lower Properly .....	0100 00

### Lubrication

Coolant in Engine Lubrication Oil .....	0076 00
Service Intervals-Normal Conditions .....	0103 00
Service Intervals-Unusual Conditions .....	0103 00

## M

### M1083A1

/M1084A1 Troopseat Kit Installation/	
Removal .....	0110 00
Series Preventive Maintenance Checks	
and Services (PMCS) .....	0103 00

### M1084A1

M1083A1/M1084A1 Troopseat Kit	
Installation/Removal .....	0110 00
/M1086A1 Material Handling Crane	
(MHC) Boom Does Not Lift Up or Down	
or Hold Under Load.....	0099 00
/M1086A1 Material Handling Crane	
(MHC) Boom Does Not Telescope In or	
Out .....	0099 00
/M1086A1 Material Handling Crane	
(MHC) Boom Down Does Not Operate	
From REMOTE CONTROL UNIT.....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## M – Continued

### M1084A1 (Continued)

/M1086A1 Material Handling Crane (MHC)	
Boom Down Lockout Does Not Activate.....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Boom Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Boom Up Lockout Does Not Activate .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Does Not Operate .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Does Not Operate From Remote Control .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Hand Pump Does Not Operate .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Hoist Does Not Operate .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Hoist Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Hoist Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Hoist Up Lockout Does Not Activate .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Hydraulic Functions Operate Slowly .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Hydraulics Troubleshooting.....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Left Outrigger (Jack) Drifts or Does Not	
Operate .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Mast Does Not Erect.....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Overload Shutdown System Stays	
Activated .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Overload Shutdown System Does Not	
Activate .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Right Outrigger (Jack) Drifts or Does	
Not Operate .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Swing CCW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## M - Continued

M1084A1 (Continued)	
/M1086A1 Material Handling Crane (MHC)	
Swing CW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Swing Drive Assembly Does Not	
Operate .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Swing, Telescope, Boom, and Hoist Do	
Not Operate .....	0099 00
/M1086A1 Material Handling Crane (MHC)	
Telescope In Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Telescope Out Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
/M1086A1 Material Handling Crane (MHC)	
Telescope Out Does Not Activate .....	0080 00
M1085A1	
Troopseat Kit Installation/Removal .....	0111 00
M1086A1	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Does Not Lift Up or	
Down or Hold Under Load .....	0099 00
M1084A1/M1086A1 Material Handling Crane (MHC) Boom	
Does Not Telescope In or Out .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Lockout	
Does Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Does Not Operate	
From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Does Not Operate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hand Pump Does Not Operate .....	0099 00

# INDEX - Continued

Subject

WP Sequence No.

## M – Continued

### M1086A1 (Continued)

M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Up Does Not Operate	
From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Up Lockout Does	
Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hydraulic Functions	
Operate Slowly.....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hydraulics	
Troubleshooting .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Left Outrigger (Jack)	
Drifts or Does Not Operate.....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Mast Does Not Erect .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown	
System Stays Activated .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown System	
Does Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Right Outrigger (Jack)	
Drifts or Does Not Operate.....	0099 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Swing CCW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Swing CW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Swing Drive Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling Crane	
(MHC) Swing, Telescope, Boom, and	
Hoist Do Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope In Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## M – Continued

M1086A1 (Continued)	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Activate .....	0080 00
M1088A1	
/M1089A1 (LH) Worklight Does Not	
Illuminate .....	0080 00
/M1089A1 (RH) Worklight Does Not	
Illuminate .....	0080 00
/M1089A1 Worklights Do Not Illuminate	
in Blackout Mode With Blackout Over-	
ride Switch On .....	0080 00
Stoplights Do Not Illuminate When	
M1088A1 Trailer Brakes Are Applied.....	0080 00
Air System Troubleshooting .....	0101 00
Fold Cylinder Does Not Operate.....	0097 00
Left 30K Winch Does Not Operate .....	0097 00
Left Stiffleg Drifts or Does Not Operate .....	0097 00
M1088A1/M1089A1 (LH) Worklight Does	
Not Illuminate.....	0080 00
M1088A1/M1089A1(RH) Worklight Does	
Not Illuminate.....	0080 00
M1088A1/M1089A1 Worklights Do Not	
Illuminate in Blackout Mode With	
Blackout Override Switch On.....	0080 00
Material Handling Crane (MHC) Boom Does	
Not Lift Up or Down.....	0097 00
Material Handling Crane (MHC) Boom Does	
Not Telescope In or Out .....	0097 00
Material Handling Crane (MHC) Boom	
Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Boom	
Down Lockout Does Not Activate.....	0080 00
Material Handling Crane (MHC) Boom	
Swing Drive Assembly Does Not	
Operate .....	0097 00
Material Handling Crane (MHC) Boom Up	
Does Not Operate From REMOTE	
CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Boom Up	
Lockout Does Not Activate.....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## M - Continued

### M1089A1 (Continued)

Material Handling Crane (MHC) Does Not Operate .....	0080 00/0097 00
Material Handling Crane (MHC) Does Not Operate .....	0097 00
Material Handling Crane (MHC) Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Hand Pump Does Not Operate .....	0097 00
Material Handling Crane (MHC) Hoist Does Not Operate .....	0097 00
Material Handling Crane (MHC) Hoist Down Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Hoist Up Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Hoist Up Lockout Does Not Activate .....	0080 00
Material Handling Crane (MHC) Left or Right Outrigger (Jack) Drifts or Does Not Operate .....	0097 00
Material Handling Crane (MHC) Mast Does Not Erect or Stow .....	0097 00
Material Handling Crane (MHC) Outrigger Extension Cylinder Does Not Operate .....	0097 00
Material Handling Crane (MHC) Overload Shutdown System Does Not Activate .....	0080 00
Material Handling Crane (MHC) Overload Shutdown System Stays Activated .....	0080 00
Material Handling Crane (MHC) Swing CCW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Swing CW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Telescope In Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Telescope Out Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
Material Handling Crane (MHC) Telescope Out Lockout Does Not Activate .....	0080 00
No Service or External Hydraulic Power From M1089A1 .....	0097 00

**INDEX - Continued**

<u>Subject</u>	<u>WP Sequence No.</u>
<b>M – Continued</b>	
M1089A1 (Continued)	
Pay-Out Hydraulic Motor Assembly Does	
Not Operate .....	0097 00
Right 30K Winch Does Not Operate .....	0097 00
Right Stiffleg Drifts Or Does Not Operate .....	0097 00
Stiffleg(s) Does Not Operate Or	
Operates Slowly .....	0097 00
Stifflegs/Left 30K Winch/15K Self-	
Recovery Winch (SRW) Do Not Operate .....	0097 00
Stinger Does Not Operate .....	0097 00
Stinger/Telescopic Lift Cylinders/Fold	
Cylinder/Right 30K Winch Do Not	
Operate .....	0097 00
Underlift Telescopic Lift Cylinder(s) Does	
Not Operate .....	0097 00
M1090A1	
Tailgate Release Does Not Operate .....	0080 00
Troopseat Kit Installation/Removal .....	0112 00
Maintenance	
Introduction .....	0104 00
M1083A1 Series Preventive Maintenance	
Checks and Services (PMCS) .....	0103 00
Malfunction/Symptom Index.....	0074 00
Marker	
All Blackout Marker Lights Do Not	
Illuminate .....	0080 00
LH Door and/or LH Front Marker Lights Do	
Not Illuminate.....	0080 00
One or Both Front Blackout Marker Lights	
Do Not Illuminate .....	0080 00
One Or Both Rear Blackout Marker Lights	
Do Not Illuminate .....	0080 00
One or More Cab Top Marker Lights Do	
Not Illuminate.....	0080 00
RH Door and/or RH Front Marker Lights	
Do Not Illuminate .....	0080 00
Side and/or Rear Marker Lights Do Not	
Illuminate .....	0080 00
Trailer Blackout Marker Lights Do Not	
Illuminate .....	0080 00
Trailer Marker/Taillights Do Not	
Illuminate .....	0080 00
Mast	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Mast Does Not Erect .....	0099 00

# INDEX - Continued

Subject

WP Sequence No.

## M – Continued

Mast (Continued)

M1089A1 Material Handling Crane (MHC)

Mast Does Not Erect or Stow ..... 0097 00

Material

M1084A1/M1086A1 Material Handling

Crane (MHC) Boom Does Not Lift Up

or Down or Hold Under Load ..... 0099 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Boom Does Not Telescope

In or Out ..... 0099 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Boom Down Does Not

Operate From REMOTE CONTROL UNIT ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Boom Down Lockout

Does Not Activate ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Boom Up Does Not Operate

From REMOTE CONTROL UNIT ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Boom Up Lockout Does

Not Activate ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Does Not Operate

..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Does Not Operate From

REMOTE CONTROL UNIT ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Hand Pump Does Not

Operate ..... 0099 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Hoist Does Not Operate

..... 0099 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Hoist Down Does Not

Operate From REMOTE CONTROL UNIT ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Hoist Up Does Not Operate

From REMOTE CONTROL UNIT ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Hoist Up Lockout Does

Not Activate ..... 0080 00

M1084A1/M1086A1 Material Handling

Crane (MHC) Hydraulic Functions

Operate Slowly ..... 0099 00



# INDEX - Continued

Subject

WP Sequence No.

## M – Continued

### Material (Continued)

M1084A1/M1086A1 Material Handling	
Crane (MHC) Left Outrigger (Jack)	
Drifts or Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Mast Does Not Erect .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown System	
Stays Activated.....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown System	
Does Not Activate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Right Outrigger (Jack)	
Drifts or Does Not Operate.....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing CCW Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing CW Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing Drive Does Not	
Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing, Telescope, Boom,	
and Hoist Do Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope In Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Does Not Lift Up or Down.....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Does Not Telescope In or Out .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Lockout Does Not Activate.....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## M - Continued

### Material (Continued)

M1089A1 Material Handling Crane (MHC)	
Boom Swing Drive Assembly Does Not	
Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Boom Up Lockout Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate From REMOTE	
CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hand Pump Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Hoist Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Hoist Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Lockout Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Left or Right Outrigger (Jack) Drifts	
or Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Mast Does Not Erect or Stow .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Outrigger Extension Cylinder Does Not	
Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Does Not	
Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Stays	
Activated .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CCW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## M - Continued

### Material (Continued)

M1089A1 Material Handling Crane (MHC)	
Telescope In Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope Out Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope Out Lockout Does Not	
Activate .....	0080 00

### Mode

Two Steady Mode Lights Illuminate On	
Central Tire Inflation System (CTIS)	
ECU.....	0088 00

### Motor

M1089A1 Pay-Out Hydraulic Motor	
Assembly Does Not Operate.....	0097 00

## N

### No

Air Pressure or Low Air Pressure Present at	
Rear Gladhands.....	0085 00
Response When Turning Steering Wheel .....	0090 00
Service or External Hydraulic Power From	
M1089A1 .....	0097 00
Noisy Air Compressor Operation.....	0085 00

## O

### Oil

Coolant in Engine Lubrication Oil .....	0076 00
PRESS Gage Does Not Operate or Is	
Inaccurate .....	0080 00
Engine Oil Pressure Indicator Does Not	
Illuminate .....	0080 00
Excessive Engine Oil Consumption .....	0076 00
In Cooling System.....	0079 00
Low Engine Oil Pressure.....	0076 00
Transmission Auxiliary Oil Cooler Fan	
Does Not Operate .....	0080 00
Transmission Auxiliary Oil Cooler Fan(s)	
Run Constantly .....	0080 00

### One

Or Both Blackout Stoplights Do Not	
Illuminate .....	0080 00
Or Both Composite Taillights Do Not	
Illuminate .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## O - Continued

One (Continued)	
Or Both Front Blackout Marker Lights Do	
Not Illuminate.....	0080 00
Or Both Headlight High Beams Do Not	
Illuminate .....	0080 00
Or Both Headlight Low Beams Do Not	
Illuminate .....	0080 00
Or Both Headlights (High and Low Beam)	
Do Not Illuminate .....	0080 00
Or Both Rear Blackout Marker Lights Do	
Not Illuminate.....	0080 00
Or Both Stoplights Do Not Illuminate .....	0080 00
Or More Cab Top Marker Lights Do Not	
Illuminate .....	0080 00
Wrecker Function Does Not Operate From	
WRECKER REMOTE CONTROL.....	0080 00
Opening Battery Box/Testing Batteries .....	0108 00
Operate	
24 VDC Circuits Do Not Operate .....	0080 00
Air Dryer Heater Does Not Operate .....	0080 00
All Electrical Gages Do Not Operate .....	0080 00
All Windshield Wiper Speeds Do Not	
Operate .....	0080 00
All Wrecker Functions Do Not Operate	
From WRECKER CONTROL PANEL.....	0080 00
All Wrecker Functions Do Not Operate	
From WRECKER CONTROL PANEL and	
WRECKER REMOTE CONTROL.....	0080 00
Audible Alarm Does Not Operate .....	0080 00
Battery Tester Does Not Operate .....	0080 00
Cargo Area Arctic Heater Does Not Operate .....	0098 00
Cargo Area Arctic Override Switch Does Not	
Operate .....	0098 00
Chemical Alarm Does Not Operate.....	0080 00
Chemical Detector Does Not Operate .....	0080 00
Central Tire Inflation System (CTIS) Does	
Not Operate .....	0080 00
Differential Lock Solenoid Does Not Operate .....	0080 00
Dump Bed Down Does Not Operate.....	0080 00
Dump Bed Up Does Not Operate .....	0080 00
OIL PRESS GAGE Does Not Operate or Is	
Inaccurate .....	0080 00
Ether Start Does Not Operate.....	0080 00
Ether Starting Aid Does Not Operate .....	0077 00
Fifth Wheel Sliding Mechanism Does Not	
Operate .....	0091 00

# INDEX - Continued

Subject

WP Sequence No.

## O - Continued

### Operate (Continued)

FRONT BRAKE AIR Pressure Gage Does	
Not Operate or Is Inaccurate .....	0080 00
FUEL GAGE Does Not Operate or Is	
Inaccurate .....	0080 00
Horn Does Not Operate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Boom Up Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Does Not Operate .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Down Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hoist Up Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hydraulic Functions	
Operate Slowly .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Left Outrigger (Jack)	
Drifts or Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Right Outrigger (Jack) Drifts	
or Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing CCW Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing CW Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing Drive Does Not	
Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Swing, Telescope, Boom,	
and Hoist Do Not Operate .....	0099 00

# INDEX - Continued

Subject

WP Sequence No.

## O - Continued

### Operate (Continued)

M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope In Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Telescope Out Does Not	
Operate From REMOTE CONTROL UNIT .....	0080 00
Transmission Auxiliary Oil Cooler Fan	
Does Not Operate .....	0080 00
M1089A1 Fold Cylinder Does Not Operate .....	0097 00
M1089A1 Left 30K Winch Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC)	
Boom Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
Boom Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Does Not Operate From REMOTE	
CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Down Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Hoist Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CCW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope In Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope Out Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Right 30K Winch Does Not	
Operate .....	0097 00
M1089A1 Stiffleg(s) Does Not Operate	
Or Operates Slowly.....	0097 00
M1089A1 Stifflegs/Left 30K Winch/15K	
Self-Recovery Winch (SRW) Do	
Not Operate .....	0097 00

# INDEX - Continued

Subject

WP Sequence No.

## O - Continued

Operate (Continued)	
M1089A1 Stinger Does Not Operate.....	0097 00
M1089A1 Stinger/Telescopic Lift	
Cylinders/Fold Cylinder/Right 30K Winch	
Do Not Operate .....	0097 00
M1089A1 Underlift Telescopic Lift	
Cylinder(s) Does Not Operate.....	0097 00
M1090A1 Tailgate Release Does	
Not Operate .....	0080 00
30K Winch Left or Right Freespool	
Function Does Not Operate From	
WRECKER CONTROL PANEL .....	0080 00
30K Winch Left or Right Speed Function	
Does Not Operate From WRECKER	
CONTROL PANEL .....	0080 00
Light Material Handling Crane (LMHC)	
Does Not Operate .....	0098 00
One Wrecker Function Does Not Operate	
From WRECKER REMOTE CONTROL .....	0080 00
Personnel Heater Control Illumination	
Does Not Operate .....	0080 00
Personnel Heater Fan Does Not Operate .....	0080 00
PTO Does Not Operate .....	0080 00
Radio Does Not Operate .....	0080 00
REAR BRAKE AIR Pressure Gage Does Not	
Operate or Is Inaccurate .....	0080 00
Speedometer Does Not Operate or Is	
Inaccurate .....	0080 00
Troop Transport Alarm Does Not Operate .....	0098 00
VOLTS Gage Does Not Operate or Is	
Inaccurate .....	0080 00
WATER TEMP Gage Does Not Operate or	
Is Inaccurate .....	0080 00
Windshield Washer Does Not Operate.....	0080 00
Windshield Wiper Does Not Operate On	
High Speed .....	0080 00
Windshield Wiper Does Not Operate On	
Intermittent Speed.....	0080 00
Windshield Wiper Does Not Operate On	
Low Speed.....	0080 00
Wrecker Left or Right 30K Winch Cable	
Drum Tensioner Does Not Operate .....	0101 00
Wrecker Left or Right 30K Winch	
Freespool Does Not Operate .....	0101 00
Propeller Shafts or Universal Joints	
Unusually Noisy When Operating .....	0082 00

# **INDEX - Continued**

Subject

WP Sequence No.

## **O - Continued**

Operate (Continued)	
Transmission Unusually Noisy When	
Operating .....	0081 00
Operation	
Air System Loses Pressure During	
Operation/Slow Air Pressure Buildup .....	0085 00
Exhaust System Unusually Noisy or	
Vibrates Excessively During Engine	
Operation .....	0078 00
Noisy Air Compressor Operation.....	0085 00
Outrigger	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Left Outrigger (Jack) Drifts	
or Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Right Outrigger	
(Jack) Drifts or Does Not Operate .....	0099 00
M1089A1 Material Handling Crane	
(MHC) Left or Right Outrigger	
(Jack) Drifts or Does Not Operate .....	0097 00
M1089A1 Material Handling Crane	
(MHC) Outrigger Extension Cylinder	
Does Not Operate .....	0097 00
Overheat	
Front Brakes Overheat .....	0084 00
Rear Brakes Overheat .....	0084 00
Overheats	
Engine Overheats (Engine System	
Troubleshooting) .....	0076 00
Engine Overheats (Cooling System	
Troubleshooting) .....	0079 00
Overload	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown	
System Stays Activated .....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown	
System Does Not Activate .....	0080 00
M1089A1 Material Handling Crane	
(MHC) Overload Shutdown System	
Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Stays	
Activated .....	0080 00



# INDEX - Continued

Subject

WP Sequence No.

## O - Continued

### Override

Cargo Area Arctic Override Switch Does Not Operate .....	0098 00
M1088A1/M1089A1 Worklights Do Not Illuminate in Blackout Mode With Blackout Override Switch On .....	0080 00

### Overspeed

CTIS OVERSPEED Indicator Does Not Illuminate .....	0080 00
CTIS OVERSPEED Indicator Remains Illuminated .....	0088 00
Engine Overspeeds On Start .....	0076 00
CTIS Overspeed Pressure Does Not Operate .....	0088 00

## P

### Panel

30K Winch Left or Right Freespool Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
30K Winch Left or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL .....	0080 00
All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL .....	0080 00
Auxiliary Panel Does Not Illuminate .....	0080 00
Auxiliary Panel Switch Does Not Illuminate .....	0080 00
Auxiliary Panel, Personnel Heater, and Instrument Panel Do Not Illuminate .....	0080 00
Instrument Panel Gage Does Not Illuminate .....	0080 00
Instrument Panel Switch Does Not Illuminate .....	0080 00
Power Distribution Panel (PDP) Cover Removal/Installation .....	0113 00

### Parking

Brake(s) Do Not Release .....	0084 00
Brakes Do Not Apply .....	0084 00
Parking Lights Do Not Illuminate .....	0080 00

### Pay Out

15K Self-Recovery Winch (SRW) Does Not Pay Out .....	0080 00
--	---------

# **INDEX - Continued**

<u>Subject</u>	<u>WP Sequence No.</u>
<b>P - Continued</b>	
Pay Out (Continued)	
15K Self-Recovery Winch (SRW) Does	
Not Reel In or Pay Out.....	0080 00
M1089A1 Pay Out Hydraulic Motor	
Assembly Does Not Operate.....	0097 00
Pedal	
Accelerator Pedal Sticks .....	0077 00
Personnel	
Heater Control Illumination Does Not	
Operate .....	0080 00
Heater Fan Does Not Operate .....	0080 00
PMCS	
Introduction .....	0103 00
Procedures .....	0103 00
Power	
Distribution Panel (PDP) Cover	
Removal/Installation .....	0113 00
No Service or External Hydraulic Power	
From M1089A1.....	0097 00
Take-Off (PTO) Troubleshooting .....	0083 00
Preventive	
M1083A1 Series Preventive Maintenance	
Checks and Service (PMCS).....	0103 00
Procedures	
PMCS Procedures .....	0103 00
Servicing Air Filter (Emergency	
Procedure).....	0109 00
Troubleshooting Procedures .....	0075 00
Propeller	
Shaft.....	0082 00
Shaft Troubleshooting .....	0082 00
Shafts or Universal Joints Unusually	
Noisy When Operating.....	0082 00
PTO	
Does Not Engage .....	0083 00
Does Not Operate .....	0080 00
Indicator Does Not Illuminate .....	0080 00
Power Take-Off (PTO) .....	0083 00
Power Take-Off (PTO) Troubleshooting .....	0083 00
Pump	
Loss of Hydraulic Pressure (Single	
Stage Pump).....	0087 00
Loss of Hydraulic Pressure (Three	
Stage Pump).....	0087 00

# INDEX - Continued

Subject

WP Sequence No.

## P - Continued

Pump (Continued)	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hand Pump Does Not	
Operate .....	0099 00
M1089A1 Material Handling Crane (MHC)	
Hand Pump Does Not Operate .....	0097 00
Pushbutton	
Transmission Pushbutton Shift Selector	
Emits 8 Seconds of Beeps and/or	
Transmission Does Not Shift Gears .....	0081 00

## R

Radiator	
Engine Fan Does Not Turn Off Using	
Engine Fan Off Switch .....	0080 00
Rail Radio Does Not Operate .....	0080 00
Raise	
Cab Does Not Raise or Lower Properly .....	0100 00
Dump Body Does Not Raise or Lower .....	0096 00
Spare Tire Retainer Does Not Raise or	
Lower Properly .....	0100 00
Brake Air Pressure Gage Does Not Operate	
or Is Inaccurate .....	0080 00
Brakes Do Not Apply .....	0084 00
Brakes Overheat .....	0084 00
Front and Rear Hazard Lights Do Not	
Illuminate .....	0080 00
Front And Rear Turn Signals Do Not	
Illuminate .....	0080 00
Hazard Lights Do Not Illuminate .....	0080 00
Leans to One Side or Rear of Vehicle	
Sags .....	0092 00
No Air Pressure or Low Air Pressure	
Present at Rear Gladhands .....	0085 00
One Or Both Rear Blackout Marker Lights	
Do Not Illuminate .....	0080 00
Side and/or Rear Marker Lights Do Not	
Illuminate .....	0080 00
Reel	
15K Self-Recovery Winch (SRW) Does	
Not Reel In .....	0080 00
15K Self-Recovery Winch (SRW) Does	
Not Reel In or Pay Out .....	0080 00
References .....	0116 00

# INDEX - Continued

Subject

WP Sequence No.

## R - Continued

### Remote

All Wrecker Functions Do Not Operate From WRECKER CONTROL PANEL and WRECKER REMOTE CONTROL .....	0080 00
All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Boom Down Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Boom Up Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Hoist Down Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Hoist Up Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing CCW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing CW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Telescope In Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Telescope Out Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC) Boom Down Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC) Boom Up Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC) Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC) Hoist Down Does Not Operate From REMOTE CONTROL UNIT .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## R - Continued

### Remote (Continued)

M1089A1 Material Handling Crane (MHC)	
Hoist Up Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Swing CW Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane	
(MHC) Telescope In Does Not Operate	
From REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Telescope Out Does Not Operate From	
REMOTE CONTROL UNIT .....	0080 00
One Wrecker Function Does Not	
Operate From WRECKER REMOTE	
CONTROL .....	0080 00

### Reservoirs

Large Quantity of Moisture Expelled From	
Air Reservoirs .....	0085 00

### Retainer

Cab Tilt, Spare Tire Retainer, and	
Suspension Compression Do Not	
Operate .....	0095 00

### RH Door and/or RH Front Marker Lights Do

Not Illuminate .....	0080 00
----------------------	---------

### Right

Trailer Right Stop/Turn Light Does Not	
Illuminate .....	0080 00
Turn Signal Indicator Does Not Illuminate .....	0080 00
Wrecker Left or Right 30K Winch Cable	
Drum Tensioner Does Not Operate .....	0101 00
Wrecker Left or Right 30K Winch	
Freespool Does Not Operate .....	0101 00

## S

### Sags

Leans to One Side or Rear of Vehicle	
Sags .....	0092 00

### Self-Recovery (15K)

M1089A1 Stifflegs/Left 30K Winch/15K	
Self-Recovery Winch (SRW) Do Not	
Operate .....	0097 00
Winch Does Not Pay Out .....	0080 00
Winch Does Not Reel In .....	0080 00
Winch Does Not Reel In or Pay Out .....	0080 00
Winch Does Not Operate .....	0093 00

# **INDEX - Continued**

<u>Subject</u>	<u>WP Sequence No.</u>
<b>S - Continued</b>	
Self-Recovery (15K) (Continued)	
Winch Troubleshooting.....	0093 00
Service	
Lubrication Service Intervals-Normal	
Conditions.....	0103 00
Lubrication Service Intervals-Unusual	
Conditions.....	0103 00
No Service or External Hydraulic Power From	
M1089A1 .....	0097 00
Servicing	
Air Filter (Emergency Procedure) .....	0109 00
Tires .....	0106 00
Shafts	
Propeller Shafts or Universal Joints	
Unusually Noisy When Operating .....	0082 00
Shutdown	
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown System	
Stays Activated.....	0080 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Overload Shutdown System	
Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Does	
Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC)	
Overload Shutdown System Stays	
Activated .....	0080 00
Side	
Side and/or Rear Marker Lights Do Not	
Illuminate .....	0080 00
Signal	
Intervehicular Left Turn Signal Does Not	
Illuminate .....	0080 00
Signal (Continued)	
Intervehicular Right Turn Signal Does Not	
Illuminate .....	0080 00
Left or Right Front Turn Signal Does Not	
Illuminate .....	0080 00
Left Turn Signal Indicator Does Not	
Illuminate .....	0080 00
Right Turn Signal Indicator Does Not	
Illuminate .....	0080 00
Signals	
Front And Rear Turn Signals Do Not	
Illuminate .....	0080 00

# **INDEX - Continued**

<u>Subject</u>	<u>WP Sequence No.</u>
<b>S - Continued</b>	
Single	
Loss of Hydraulic Pressure (Single Stage Pump) .....	0087 00
Sliding	
Fifth Wheel Sliding Mechanism Does Not Operate .....	0091 00
Solenoid	
Differential Lock Solenoid Does Not Operate .....	0080 00
Spare	
Cab Tilt, Spare Tire Retainer, and Suspension Compression Do Not Operate .....	0095 00
Tire Does Not Raise or Lower Properly.....	0100 00
Special Purpose Kit	
Troubleshooting .....	0098 00
Speed	
30K Winch Left or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
Engine Speed Is Not Stable.....	0076 00
Windshield Wiper Does Not Operate On High Speed .....	0080 00
Windshield Wiper Does Not Operate On Intermittent Speed.....	0080 00
Windshield Wiper Does Not Operate On Low Speed.....	0080 00
Speedometer Does Not Operate or Is Inaccurate .....	0080 00
Springs	
Cab Leveling Air Springs Do Not Operate Properly.....	0095 00
Stage	
Loss of Hydraulic Pressure (Single Stage Pump) .....	0087 00
Loss of Hydraulic Pressure (Three Stage Pump) .....	0087 00
Stalls	
Engine Stalls at Low RPM .....	0076 00
Start	
Cab Arctic Heater Does Not Start.....	0098 00
Cab Arctic Heater Hard to Start.....	0098 00
Engine Cranks But Does Not Start (Engine System Troubleshooting) .....	0076 00
Engine Cranks But Does Not Start (Electrical System Troubleshooting).....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## S - Continued

### Start (Continued)

Engine Cranks But Does Not Start or	
Engine Stalls After Starting .....	0077 00
Engine Overspeeds On Start .....	0076 00
Ether Start Does Not Operate .....	0080 00

### Starts

Cab Arctic Heater Combustion Starts	
Immediately When Switched On .....	0098 00
Engine Starts But Misfires, Runs Rough,	
or Lacks Power .....	0076 00

### Starting

Engine Cranks But Does Not Start or	
Engine Stalls After Starting .....	0077 00
Ether Starting Aid Does Not Operate .....	0077 00

### Steering

Excessive Play When Turning Steering	
Wheel .....	0090 00
Hard or Does Not Operate .....	0094 00
Hydraulic System .....	0094 00
Hydraulic System Troubleshooting .....	0094 00
No Response When Turning Steering	
Wheel .....	0090 00
System Troubleshooting .....	0090 00

### Stiffleg

M1089A1 Left Stiffleg Drifts or Does	
Not Operate .....	0097 00
M1089A1 Right Stiffleg Drifts Or Does	
Not Operate .....	0097 00
M1089A1 Stiffleg(s) Does Not Operate	
Or Operates Slowly .....	0097 00

### Stifflegs

M1089A1 Stifflegs/Left 30K Winch/15K	
Self-Recovery Winch (SRW) Do Not	
Operate .....	0097 00

### Stinger

M1089A1 Stinger Does Not Operate .....	0097 00
M1089A1 Stinger/Telescopic Lift	
Cylinders/Fold Cylinder/Right 30K Winch	
Do Not Operate .....	0097 00

### Stop

STOP ENGINE Indicator Does Not	
Illuminate .....	0080 00
STOP ENGINE Indicator Remains	
Illuminated .....	0076 00
Trailer Left Stop/Turn Light Does Not	
Illuminate .....	0080 00



**INDEX - Continued**

Subject

WP Sequence No.

**S - Continued**

Stop (Continued)	
Trailer Right Stop/Turn Light Does Not Illuminate .....	0080 00
Stoplights	
And Blackout Stoplights Do Not Illuminate .....	0080 00
Do Not Illuminate When M1088A1 Trailer Brakes Are Applied .....	0080 00
Intervehicular Stoplights Do Not Illuminate .....	0080 00
One or Both Blackout Stoplights Do Not Illuminate .....	0080 00
One Or Both Stoplights Do Not Illuminate .....	0080 00
Trailer Blackout Stoplights Do Not Illuminate .....	0080 00
Stowage Location/Decal/Stencil Plate Guide .....	0120 00
Suspension	
Cab Tilt, Spare Tire Retainer, and Suspension Compression Do Not Operate .....	0095 00
Does Not Compress or Return To Normal Properly .....	0095 00
Suspension System.....	0092 00
System Troubleshooting.....	0092 00
Swing	
M1084A1/M1086A1 Material Handling Crane (MHC) Swing CCW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing CW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing Drive Does Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing, Telescope, Boom, and Hoist Do Not Operate .....	0099 00
M1089A1 Material Handling Crane (MHC) Boom Swing Drive Assembly Does Not Operate .....	0097 00
M1089A1 Material Handling Crane (MHC) Swing CCW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1089A1 Material Handling Crane (MHC) Swing CW Does Not Operate From REMOTE CONTROL UNIT .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## S - Continued

### Switch

All Main Light Switch Functions Do Not Operate .....	0080 00
Auxiliary Panel Switch Does Not Illuminate .....	0080 00
Cargo Area Arctic Override Switch Does Not Operate .....	0098 00
Engine Fan Does Not Turn Off Using Engine Fan Off Switch.....	0080 00
Instrument Panel Switch Does Not Illuminate .....	0080 00

### System

M1088A1/M1089A1 Worklights Do Not Illuminate in Blackout Mode With Blackout Override Switch On.....	0080 00
Air System (Troubleshooting) .....	0085 00
Air System Loses Pressure During Operation/Slow Air Pressure Buildup .....	0085 00
Air System Pressure Builds Up More Than 120 psi (827 kPa) (Compressor Fails To Unload) .....	0085 00
Air Transport System.....	0095 00
Brake System (Troubleshooting) .....	0084 00
Cooling System (Troubleshooting).....	0079 00
Dump Body Hydraulic System.....	0096 00
Electrical System Does Not Maintain A Charge .....	0080 00
Engine System .....	0076 00
Exhaust System.....	0078 00
Exhaust System Unusually Noisy or Vibrates Excessively During Engine Operation .....	0078 00
Fuel System (Troubleshooting) .....	0077 00
Hydraulic System.....	0087 00
M1084A1/M1086A1 Material Handling Crane (MHC) Overload Shutdown System Stays Activated .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Overload Shutdown System Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC) Overload Shutdown System Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC) Overload Shutdown System Stays Activated.....	0080 00

# **INDEX - Continued**

Subject

WP Sequence No.

## **S - Continued**

System (Continued)	
Oil In Cooling System.....	0079 00
Steering Hydraulic System.....	0094 00
Suspension System.....	0092 00
Transmission System.....	0081 00
Wrecker Hydraulic System.....	0097 00

## **T**

Tailgate	
M1090A1 Tailgate Release Does Not Operate .....	0080 00
Taillights	
Intervehicular Taillights Do Not Illuminate.....	0080 00
One or Both Composite Taillights Do Not Illuminate.....	0080 00
Trailer Marker/Taillights Do Not Illuminate .....	0080 00
Telescope	
M1084A1/M1086A1 Material Handling Crane (MHC) Boom Does Not Telescope In or Out.....	0099 00
M1084A1/M1086A1 Material Handling Crane (MHC) Swing, Telescope, Boom, and Hoist Do Not Operate .....	0099 00
M1084A1/M1086A1 Material Handling Crane (MHC) Telescope In Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Telescope Out Does Not Operate From REMOTE CONTROL UNIT .....	0080 00
M1084A1/M1086A1 Material Handling Crane (MHC) Telescope Out Does Not Activate .....	0080 00
M1089A1 Material Handling Crane (MHC) Boom Does Not Telescope In or Out.....	0097 00
M1089A1 Material Handling Crane (MHC) Telescope In Does Not Operate From REMOTE CONTROL UNIT.....	0080 00
M1089A1 Material Handling Crane (MHC) Telescope Out Does Not Operate From REMOTE CONTROL UNIT.....	0080 00
M1089A1 Material Handling Crane (MHC) Telescope Out Lockout Does Not Activate .....	0080 00

# INDEX - Continued

Subject

WP Sequence No.

## T - Continued

Telescope (Continued)	
M1089A1 Stinger/Telescopic Lift	
Cylinders/Fold Cylinder/Right 30K	
Winch Do Not Operate.....	0097 00
M1089A1 Underlift Telescopic Lift	
Cylinder(s) Does Not Operate.....	0097 00
Temp	
COOLANT TEMP Indicator Does Not	
Illuminate .....	0080 00
TRANS TEMP Indicator Does Not	
Illuminate .....	0080 00
TRANS TEMP Indicator Remains	
Illuminated.....	0081 00
WATER TEMP Gage Does Not Operate Or	
Is Inaccurate .....	0080 00
Tensioner	
Wrecker Left or Right 30K Winch Cable	
Drum Tensioner Does Not Operate .....	0101 00
Testing	
Opening Battery Box/Testing Batteries .....	0108 00
Three	
Loss of Hydraulic Pressure (Three	
Stage Pump).....	0087 00
Tire	
Cab Tilt, Spare Tire Retainer, and	
Suspension Compression Do	
Not Operate .....	0095 00
Changing Tire .....	0105 00
Spare Tire Retainer Does Not Raise or	
Lower Properly.....	0100 00
Tires	
Continue To Wear After Front End	
Alignment and/or Vehicle Drives	
Sideways Down Road.....	0102 00
Servicing Tires .....	0106 00
Wear Unevenly or Excessively .....	0086 00
Too Much Vibration In Engine .....	0076 00
Tractor	
Fifth Wheel Does Not Lock When Coupling	
Trailer to Tractor.....	0091 00
Fifth Wheel Does Not Unlock When	
Disconnecting Trailer From Tractor .....	0091 00
Trailer	
Blackout Marker Lights Do Not Illuminate .....	0080 00
Blackout Stoplights Do Not Illuminate .....	0080 00

# INDEX - Continued

Subject WP Sequence No.

## T - Continued

Trailer (Continued)	
Both Trailer Stop/Turn Lights Do Not Illuminate .....	0080 00
Excessive Movement of Trailer King Pin in Fifth Wheel .....	0091 00
Fifth Wheel Does Not Lock When Coupling Trailer to Tractor.....	0091 00
Fifth Wheel Does Not Unlock When Disconnecting Trailer From Tractor .....	0091 00
Left Stop/Turn Light Does Not Illuminate .....	0080 00
Marker/Taillights Do Not Illuminate .....	0080 00
Right Stop/Turn Light Does Not Illuminate .....	0080 00
Stoplights Do Not Illuminate When M1088A1 Trailer Brakes Are Applied.....	0080 00
Transmission	
Auxiliary Oil Cooler Fan Does Not Operate .....	0080 00
Auxiliary Oil Cooler Fan(s) Run Constantly.....	0080 00
Pushbutton Shift Selector Emits 8 Seconds of Beeps and/or Transmission Does Not Shift Gears.....	0081 00
System.....	0081 00
System Troubleshooting.....	0081 00
Unusually Noisy When Operating .....	0081 00
Troop Transport Alarm Does Not Operate .....	0098 00
Troopseat	
M1083A1/M1084A1 Troopseat Kit Installation/Removal .....	0110 00
M1085A1 Troopseat Kit Installation/ Removal .....	0111 00
M1090A1 Troopseat Kit Installation/ Removal .....	0112 00
Troubleshooting	
Air System Troubleshooting.....	0085 00
Air Transport System Troubleshooting.....	0095 00
Axle Troubleshooting .....	0089 00
Brake System Troubleshooting.....	0084 00
Cab Tilt and Spare Tire Retainer Troubleshooting .....	0100 00
Central Tire Inflation System (CTIS) Troubleshooting .....	0088 00
Cooling System Troubleshooting .....	0079 00
Dump Body Hydraulic System Troubleshooting .....	0096 00

# INDEX - Continued

Subject

WP Sequence No.

## T - Continued

Troubleshooting (Continued)	
Engine System Troubleshooting .....	0076 00
Exhaust System Troubleshooting.....	0078 00
Fifth Wheel Troubleshooting .....	0091 00
Frame Troubleshooting .....	0102 00
Fuel System Troubleshooting .....	0077 00
Hydraulic System Troubleshooting.....	0087 00
Introduction .....	0074 00
M1084A1/M1086A1 Material Handling	
Crane (MHC) Hydraulics	
Troubleshooting .....	0099 00
N1089A1 Air System Troubleshooting .....	0101 00
Power Take-Off (PTO) Troubleshooting .....	0083 00
Procedures .....	0075 00
Propeller Shaft Troubleshooting .....	0082 00
15K Self-Recovery Winch (SRW)	
Troubleshooting .....	0093 00
Special Purpose Kit Troubleshooting .....	0098 00
Steering Hydraulic System	
Troubleshooting .....	0094 00
Steering System Troubleshooting.....	0090 00
Suspension System Troubleshooting.....	0092 00
Transmission System Troubleshooting.....	0081 00
Wheel System Troubleshooting.....	0086 00
Wrecker Hydraulic System	
Troubleshooting .....	0097 00
Two Steady Mode Lights Illuminate On	
Central Tire Inflation System (CTIS)	
ECU.....	0088 00
Turn	
Front And Rear Turn Signals Do Not	
Illuminate .....	0080 00
Intervehicular Left Turn Signal Does Not	
Illuminate .....	0080 00
Intervehicular Right Turn Signal Does	
Not Illuminate.....	0080 00
Left or Right Front Turn Signal Does	
Not Illuminate.....	0080 00
Left Turn Signal Indicator Does Not	
Illuminate .....	0080 00
Right Turn Signal Indicator Does Not	
Illuminate .....	0080 00

# INDEX - Continued

<u>Subject</u>	<u>WP Sequence No.</u>
<b>U</b>	
Underlift	
M1089A1 Underlift Telescopic Lift	
Cylinder(s) Does Not Operate .....	0097 00
Universal	
Propeller Shafts or Universal Joints	
Unusually Noisy When Operating .....	0082 00
<b>V</b>	
Vehicle	
Brakes Unevenly, Brakes Pull To One	
Side or Grab .....	0084 00
Cleaning Vehicle .....	0107 00
VOLTS Gage Does Not Operate or is	
Inaccurate .....	0080 00
<b>W</b>	
Wanders	
Pulls To One Side, or Shimmies .....	0090 00
Pulls To One Side, or Shimmies .....	0092 00
Warning	
Amber Warning Light Does Not Illuminate .....	0080 00
Washer	
Horn, Windshield Wipers, and Windshield	
Washer Do Not Operate .....	0080 00
WATER	
TEMP Gage Does Not Operate or Is	
Inaccurate .....	0080 00
Wheel	
Excessive Movement of Trailer King Pin	
in Fifth Wheel.....	0091 00
Excessive Play When Turning Steering	
Wheel .....	0090 00
Fifth Wheel Does Not Lock When	
Coupling Trailer to Tractor .....	0091 00
Fifth Wheel Does Not Unlock When	
Disconnecting Trailer From Tractor .....	0091 00
Fifth Wheel Sliding Mechanism Does	
Not Operate .....	0091 00
No Response When Turning Steering	
Wheel .....	0090 00
Troubleshooting .....	0086 00
Wobbles or Shimmies .....	0086 00
White Exhaust Smoke .....	0076 00
Winch	
15K Self-Recovery Winch (SRW) Does	
Not Pay Out.....	0080 00

# INDEX - Continued

<u>Subject</u>	<u>WP Sequence No.</u>
<b>W - Continued</b>	
Winch (Continued)	
15K Self-Recovery Winch (SRW) Does	
Not Reel In.....	0080 00
15K Self-Recovery Winch (SRW) Does	
Not Reel In or Pay Out.....	0080 00
15K Self-Recovery Winch (SRW) Does	
Not Operate .....	0093 00
30K Winch Left or Right Freespool	
Function Does Not Operate From	
WRECKER CONTROL PANEL .....	0080 00
30K Winch Left or Right Speed Function	
Does Not Operate From WRECKER	
CONTROL PANEL .....	0080 00
M1089A1 Left 30K Winch Does Not	
Operate .....	0097 00
M1089A1 Right 30K Winch Does Not	
Operate .....	0097 00
M1089 Stifflegs/Left 30K Winch/15K	
Self-Recovery Winch (SRW) Do Not	
Operate .....	0097 00
M1089A1 Stinger/Telescopic Lift	
Cylinders/Fold Cylinder/Right 30K	
Winch Do Not Operate.....	0097 00
Wrecker Left or Right 30K Winch Cable	
Drum Tensioner Does Not Operate .....	0101 00
Wrecker Left or Right 30K Winch	
Freespool Does Not Operate .....	0101 00
Windshield	
All Windshield Wiper Speeds Do Not Operate .....	0080 00
Horn, Windshield Wipers, and Windshield	
Washer Do Not Operate .....	0080 00
Washer Does Not Operate .....	0080 00
Wiper Does Not Operate On High Speed .....	0080 00
Wiper Does Not Operate On Intermittent	
Speed .....	0080 00
Wiper Does Not Operate On Low Speed.....	0080 00
Worklight	
M1088A1/M1089A1 (LH) Worklight Does	
Not Illuminate.....	0080 00
M1088A1/M1089A1 (RH) Worklight Does	
Not Illuminate.....	0080 00
Worklights	
Worklights Do Not Illuminate .....	0080 00
M1088A1/M1089A1 Worklights Do Not	
Illuminate in Blackout Mode With	
Blackout Override Switch On.....	0080 00



**INDEX - Continued**

Subject

WP Sequence No.

**W - Continued**

Wrecker

30K Winch Left or Right Freespool Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
30K Winch Left or Right Speed Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00
All Wrecker Functions Do Not Operate From Wrecker Control Panel .....	0080 00
All Wrecker Functions Do Not Operate From Wrecker Control Panel and WRECKER REMOTE CONTROL .....	0080 00
All Wrecker Functions Do Not Operate From WRECKER REMOTE CONTROL .....	0080 00
Hydraulic System .....	0097 00
Hydraulic System Troubleshooting .....	0097 00
Left or Right 30K Winch Cable Drum Tensioner Does Not Operate .....	0101 00
Left or Right 30K Winch Freespool Does Not Operate .....	0101 00
One Wrecker Function Does Not Operate From WRECKER CONTROL PANEL .....	0080 00



By Order of the Secretary of the Army:

PETER J. SCHOOMAKER  
*General, United States Army*  
*Chief of Staff*

Official:



SANDRA R. RILEY  
*Administrative Assistant to the*  
*Secretary of the Army*  
0501305

By Order of the Secretary of the Air Force:

JOHN P. JUMPER  
*General, United States Air Force*  
*Chief of Staff*

Official:

GREGORY S. MARTIN  
*General, United States Air Force*  
*Commander, Air Force Materiel Command*

Distribution:

To be distributed in accordance with the initial distribution number (IDN) 381092,  
requirements for Family of Medium Tactical Vehicles (FMTVA1) TM 9-2320-392-10-2.







## METRIC CONVERSION CHART

### APPROXIMATE CONVERSION FACTORS

TO CHANGE	TO	MULTIPLY BY
Inches .....	Centimeters .....	2.540
Feet.....	Meters.....	0.305
Yards .....	Meters.....	0.914
Miles.....	Kilometers .....	1.609
Square Inches Square .....	Centimeters .....	6.451
Square Feet Square .....	Meters.....	0.093
Square Yards Square .....	Meters.....	0.836
Square Miles Square .....	Kilometers .....	2.590
Acres Square .....	Hectometers .....	0.405
Cubic Feet Cubic .....	Meters.....	0.028
Cubic Yards Cubic .....	Meters.....	0.765
Fluid Ounces .....	Milliliters .....	29.573
Pints.....	Liters.....	0.473
Quarts .....	Liters.....	0.946
Gallons .....	Liters.....	3.785
Ounces .....	Grams .....	28.35
Pounds .....	Kilograms .....	0.454
Short Tons .....	Metric Tons.....	0.907
Pound-Feet .....	Newton-Meters .....	1.356
Pounds per Square Inch.....	Kilopascals.....	6.895
Miles per Gallon .....	Kilometers per Liter .....	0.425
Miles per Hour .....	Kilometers per Hour .....	1.609

TO CHANGE	TO	MULTIPLY BY
Centimeters .....	Inches .....	0.394
Meters .....	Feet .....	3.280
Meters .....	Yards.....	1.094
Kilometers .....	Miles .....	0.621
Square Centimeters .....	Square Inches.....	0.155
Square Meters .....	Square Feet .....	10.764
Square Meters .....	Square Yards .....	1.196
Square Kilometers .....	Square Miles .....	0.386
Square Hectometers .....	Acres.....	2.471
Cubic Centimeters .....	Cubic Inch .....	0.060
Cubic Meters .....	Cubic Feet .....	35.315
Cubic Meters .....	Cubic Yards .....	1.308
Milliliters .....	Fluid Ounces.....	0.034
Liters .....	Pints.....	2.113
Liters .....	Quarts .....	1.057
Liters .....	Gallons .....	0.264
Grams .....	Ounces.....	0.035
Kilograms .....	Pounds .....	2.205
Metric Tons .....	Short Tons.....	1.102
Newton-Meters .....	Pound-Feet .....	0.738
Kilopascals .....	Pounds per Square Inch .....	0.145
Kilometers per Liter .....	Miles per Gallon .....	2.354
Kilometers per Hour .....	Miles per Hour .....	0.621

### TEMPERATURE CONVERSIONS

$$5/9 (^{\circ}\text{F}-32) = ^{\circ}\text{C}$$

212° Fahrenheit is equivalent to 100° Celsius

90° Fahrenheit is equivalent to 32.2° Celsius

32° Fahrenheit is equivalent to 0° Celsius

$$9/5 \text{ C}^{\circ} + 32 = \text{F}^{\circ}$$

